
TC-Python Documentation

Release 2026b

Thermo-Calc Software AB

Jun 24, 2026

CONTENTS

1	Installation Guide	1
1.1	What type of installation should I choose?	1
1.2	Using the Python-interpreter bundled to Thermo-Calc	1
1.2.1	Limitations	1
1.2.2	Step 1: Install an IDE (Integrated Development Environment)	2
1.2.3	Step 2: Configure PyCharm to use the bundled Python-interpreter	2
1.2.4	Step 3: Run a TC-Python Example	3
1.2.4.1	Open the TC-Python Project in PyCharm	3
1.3	Installing TC-Python into the Python-interpreter of your choice	4
1.3.1	Step 1: Install a Python Distribution	4
1.3.1.1	Install Anaconda	4
1.3.2	Step 2: Install Thermo-Calc and the TC-Python SDK	4
1.3.3	Step 3: Install TC-Python	4
1.3.4	Step 4: Install an IDE (Integrated Development Environment)	5
1.3.5	Step 5: Open the IDE and Run a TC-Python Example	5
1.3.5.1	Open the TC-Python Project in PyCharm	5
1.3.5.2	Fixing potential issues with the environment	6
1.4	Optional packages	6
1.5	Updating to a newer version	6
2	Configuring License	9
2.1	Environment variables	9
2.2	License activation	9
3	Setting Environment Variables	11
4	Architecture overview	13
4.1	TCPython	13
4.2	SystemBuilder and System	14
4.3	Calculation	15
4.3.1	Single equilibrium calculations	15
4.3.2	Batch equilibrium calculations	16
4.3.3	Precipitation calculations	17
4.3.4	Scheil calculations	17
4.3.5	Property diagram calculations	18
4.3.6	Phase diagram calculations	18
4.3.7	Diffusion calculations	19
4.3.8	Property Model calculations	19
4.3.9	Material to Material calculations	20
4.3.10	Process Metallurgy calculations	21

4.3.11	Additive Manufacturing calculations	23
4.4	Result	24
4.4.1	DiffusionResult	25
4.5	Property Model Framework	25
4.5.1	Property models vs. TC-Python	25
4.5.2	Architecture	26
4.5.3	Property Model directory	27
5	Best Practices	29
5.1	Re-use of the single equilibrium calculation state	29
5.2	Re-use and saving of results	30
5.3	All TC-Python objects are non-copyable	31
5.4	Python Virtual Environments	31
5.5	Using <i>with TCPython()</i> efficiently	31
5.6	Parallel calculations	32
5.7	Handling crashes of the calculation engine	33
5.8	Using TC-Python within a Jupyter Notebook or the Python console	34
5.9	Property Model Framework	35
5.9.1	Debugging Property Model code	35
5.9.2	Developing Property Models in several files	37
5.9.2.1	<i>side-by-side</i> modules	37
5.9.2.2	<i>common</i> modules	38
5.9.3	Alternative Python for Property Models	39
5.9.3.1	Default bundled Python interpreter	39
5.9.3.2	Configuring another Python interpreter	40
5.10	Process Metallurgy Calculations	40
5.10.1	Equilibrium calculations with changing elements between calculations	40
5.10.2	Zones	41
5.10.3	Applications	41
5.10.4	Implementation of practical process models	42
6	API Reference	43
6.1	Calculations	43
6.1.1	Module “single_equilibrium”	43
6.1.2	Module “batch_equilibrium”	58
6.1.3	Module “precipitation”	63
6.1.4	Module “scheil”	95
6.1.5	Module “step_or_map_diagrams”	111
6.1.6	Module “diffusion”	142
6.1.7	Module “propertymodel”	187
6.1.8	Module “material_to_material”	192
6.1.9	Package “process_metallurgy”	219
6.1.9.1	Module “base”	219
6.1.9.2	Module “equilibrium”	225
6.1.9.3	Module “process”	235
6.1.10	Module “additive_manufacturing”	255
6.2	Module “system”	307
6.3	Module “entities”	316
6.4	Module “server”	321
6.5	Module “quantity_factory”	329
6.6	Module “utils”	349
6.7	Module “propertymodel_sdk”	352
6.8	Module “propertymodel_factory”	375
6.9	Package “property_model_definitions”	379

6.9.1	Module “alloy_strength_ti”	379
6.9.2	Module “antiphase_boundary_energy_ni”	388
6.9.3	Module “argument_base_classes”	390
6.9.4	Module “bainite”	391
6.9.5	Module “cct_diagram”	393
6.9.6	Module “coarsening”	401
6.9.7	Module “coarsening_ni”	402
6.9.8	Module “columnar_to_equiaxed_transition”	406
6.9.9	Module “crack_susceptibility_coefficient”	410
6.9.10	Module “critical_transformation_temperatures”	417
6.9.11	Module “driving_force”	420
6.9.12	Module “equilibrium”	421
6.9.13	Module “equilibrium_with_freeze_in_temperature”	423
6.9.14	Module “equilibrium_with_freeze_in_temperature_ni”	428
6.9.15	Module “ferrite”	434
6.9.16	Module “interfacial_energy”	439
6.9.17	Module “liquidus_and_solidus_temperature”	440
6.9.18	Module “martensite_fractions”	443
6.9.19	Module “martensite_temperatures”	444
6.9.20	Module “martensite_temperatures_ti”	446
6.9.21	Module “martensitic_steel_strength”	448
6.9.22	Module “optical_properties_noble”	457
6.9.23	Module “pearlite”	465
6.9.24	Module “phase_transition”	468
6.9.25	Module “scheil”	471
6.9.26	Module “solvus_for_ordered_phase_ni”	477
6.9.27	Module “spinodal”	482
6.9.28	Module “strain_age_cracking_ni”	484
6.9.29	Module “ttt_diagram”	488
6.9.30	Module “t_zero_temperature”	495
6.9.31	Module “yield_strength”	498
6.9.32	Module “shared_definitions”	515
6.9.32.1	Submodule “homogenization_function”	515
6.9.32.2	Submodule “minimization_strategy”	515
6.9.32.3	Submodule “phase_selection_ni”	516
6.9.32.4	Submodule “temperatures”	517
6.10	Module “exceptions”	519
6.11	Module “abstract_base”	521
6.12	Module “license”	528
7	Troubleshooting	531
7.1	Diagnostics script	531
7.2	“No module named tc_python” error on first usage	533
7.3	“pip install” fails with “Failed to establish a new network connection” or similar	534
	Python Module Index	535

INSTALLATION GUIDE

This guide helps you to get a working TC-Python API installation.

Note: A license is required to run TC-Python, you can read up details in *Configuring License*.

1.1 What type of installation should I choose?

There are two possibilities to install TC-Python:

1. *Using the Python-interpreter bundled to Thermo-Calc:* This interpreter has TC-Python preinstalled together with some popular Python-packages. **This is the recommended option for new users to TC-Python, but it is limited to the preinstalled packages.**
2. *Installing TC-Python into the Python-interpreter of your choice:* **This is the recommended option for any more advanced usage and provides full flexibility.**

1.2 Using the Python-interpreter bundled to Thermo-Calc

Note: A Python-interpreter is bundled to Thermo-Calc beginning with version 2021a.

1.2.1 Limitations

The bundled Python 3 interpreter is containing the following major packages:

Package
colour-science
matplotlib
numpy
scikit-learn
scipy
pandas
pyvista
TC-Python
tmm

Please contact the Thermo-Calc support if you think that further packages might be useful in future releases.

Note: The following TC-Python examples are requiring additional packages that are not available in the bundled Python-interpreter, they can therefore not be run:

- `pyex_M_01_Input_from_file.py`
- `pyex_M_02_Output_to_file.py`

Warning: The Python-interpreter bundled to Thermo-Calc is also used for running the property models in Thermo-Calc. **Any changes to the interpreter packages can therefore break Thermo-Calc and should be avoided.** If the installation gets broken, it can be fixed by reinstalling Thermo-Calc after having removed it.

1.2.2 Step 1: Install an IDE (Integrated Development Environment)

Any editor can be used to write the Python code, but an IDE is recommended, e.g. PyCharm. These instructions are based on the use of PyCharm.

Use of an IDE will give you access to code completion, which is of great help when you use the API as it will give you the available methods on the objects you are working with.

1. Navigate to the PyCharm website: <https://www.jetbrains.com/pycharm/download>.
2. Click to choose your OS and then click **Download**. You can use the **Community** version of PyCharm.
3. Follow the instructions. It is recommended you keep all the defaults.

Note: For Mac installations, you also need to set some environment variables as described below in *Setting Environment Variables*.

1.2.3 Step 2: Configure PyCharm to use the bundled Python-interpreter

Open PyCharm and configure the interpreter:

1. Go the menu **File**→**Settings**.
2. Navigate in the tree to **Project: YourProjectName** and choose **Project Interpreter**.
3. Click on the settings symbol close to the **Project Interpreter** dropdown menu and choose **Add**.
4. Now choose **System Interpreter** and add the bundled Thermo-Calc Python 3 interpreter. It is located in different places depending on the operating system and if installed for all users or a single user:

Operating system	Path to the bundled Python-interpreter
Windows (all users)	C:\Program Files\Thermo-Calc\2026b\python\python.exe
Windows (single user)	C:\Users\UserName\AppData\Local\Programs\Thermo-Calc\2026b\python\python.exe
Linux	/home/UserName/Thermo-Calc/2026b/python/bin/python3
MacOS	/Applications/Thermo-Calc-2026b.app/Contents/Resources/python/bin/python3

5. Select your added interpreter and confirm.

1.2.4 Step 3: Run a TC-Python Example

Now you are ready to start working with TC-Python.

It is recommended that you open one or more of the included examples to both check that the installation has worked and to start familiarizing yourself with the code.

1.2.4.1 Open the TC-Python Project in PyCharm

When you first open the TC-Python project and examples, it can take a few moments for the Pycharm IDE to index before some of the options are available.

1. Open PyCharm and then choose **File**→**Open**. The first time you open the project you will need to navigate to the path of the TC-Python installation:

Operating system	Path to the TC-Python folder
Windows	C:\Users\UserName\Documents\Thermo-Calc\2026b\SDK\TC-Python
Linux	/home/UserName/Thermo-Calc/2026b/SDK/TC-Python
MacOS	/Users/Shared/Thermo-Calc/2026b/SDK/TC-Python

2. Click on the **Examples** folder and then click **OK**.
3. From any subfolder:
 - Double-click to open an example file to examine the code.
 - Right-click an example and choose **Run**.

Note: If you are not following the recommended approach and create a *new* project (**File**→**New Project...**), you need to consider that by default the options to choose the interpreter are hidden within the **Create Project** window. So click on **Project Interpreter: New Virtual Environment** and in most cases choose your *System Interpreter* containing the Python bundled to Thermo-Calc instead of the default *New Virtual Environment*.

1.3 Installing TC-Python into the Python-interpreter of your choice

1.3.1 Step 1: Install a Python Distribution

Skip this step if you already have a Python distribution installation.

These instructions are based on using the Anaconda platform for the Python distribution.

1.3.1.1 Install Anaconda

1. Navigate to the Anaconda website: <https://www.anaconda.com/download/>.
2. Click to choose your OS (operating system) and then click **Download**. Follow the instructions. It is recommended you keep all the defaults.

1.3.2 Step 2: Install Thermo-Calc and the TC-Python SDK

Note: TC-Python is available starting with Thermo-Calc version 2018a.

1. Install Thermo-Calc
2. When the installation is complete, open the TC-Python folder that includes the *.whl file needed for the next step. There is also an `Examples` folder with Python files you can use in the IDE to understand and work with TC-Python.

1.3.3 Step 3: Install TC-Python

On Windows, it is recommended that you use the Python distribution prompt (i.e. Anaconda, ...), especially if you have other Python installations. **Do not use Virtual Environments unless you have a good reason for that.**

1. Open the command line. For example, in Anaconda on a Windows OS, go to **Start**→**Anaconda**→**Anaconda Prompt**.
2. At the command line, enter the following. Make sure there are no spaces at the end of the string or in the folder name or it will not run:

```
pip install <path to the TC-Python folder>/TC_Python-<version>-py3-none-  
any.whl
```

Tip: Note that on Linux depending on the interpreter usually `pip3` is used.

Operating system	Path to the TC-Python folder
Windows	C:\Users\UserName\Documents\Thermo-Calc\2026b\SDK\TC-Python
Linux	/home/UserName/Thermo-Calc/2026b/SDK/TC-Python
MacOS	/Users/Shared/Thermo-Calc/2026b/SDK/TC-Python

3. Press <Enter>. When the process is completed, there is a confirmation that TC-Python is installed.

Note: If your computer is located behind a proxy-server, the default `pip`-command will fail with a network connection error. In that case you need to install the dependencies of TC-Python in a special configuration:

```
pip install -proxy user:password@proxy_ip:port py4j jproperties
```

See “*pip install*” fails with “*Failed to establish a new network connection*” or similar for detailed information.

1.3.4 Step 4: Install an IDE (Integrated Development Environment)

Any editor can be used to write the Python code, but an IDE is recommended, e.g. PyCharm. These instructions are based on the use of PyCharm.

Use of an IDE will give you access to code completion, which is of great help when you use the API as it will give you the available methods on the objects you are working with.

1. Navigate to the PyCharm website: <https://www.jetbrains.com/pycharm/download>.
2. Click to choose your OS and then click **Download**. You can use the **Community** version of PyCharm.
3. Follow the instructions. It is recommended you keep all the defaults.

Note: For Mac installations, you also need to set some environment variables as described below in *Setting Environment Variables*.

1.3.5 Step 5: Open the IDE and Run a TC-Python Example

After you complete all the software installations, you are ready to open the IDE to start working with TC-Python.

It is recommended that you open one or more of the included examples to both check that the installation has worked and to start familiarizing yourself with the code.

1.3.5.1 Open the TC-Python Project in PyCharm

When you first open the TC-Python project and examples, it can take a few moments for the Pycharm IDE to index before some of the options are available.

1. Open PyCharm and then choose **File**→**Open**. The first time you open the project you will need to navigate to the path of the TC-Python installation.

Operating system	Path to the TC-Python folder
Windows	C:\Users\UserName\Documents\Thermo-Calc\2026b\SDK\TC-Python
Linux	/home/UserName/Thermo-Calc/2026b/SDK/TC-Python
MacOS	/Users/Shared/Thermo-Calc/2026b/SDK/TC-Python

2. Click on the `Examples` folder and then click **OK**.

3. From any subfolder:
 - Double-click to open an example file to examine the code.
 - Right-click an example and choose **Run** .

1.3.5.2 Fixing potential issues with the environment

In most cases you should run TC-Python within your **global** Python 3 interpreter and not use Virtual Environments unless you have a good reason to do so. A common problem on first usage of TC-Python is the error message “**No module named tc_python**”. You can resolve this and other problems with the interpreter settings as follows:

1. Go the menu **File**→**Settings**.
2. Navigate in the tree to **Project: YourProjectName** and choose **Project Interpreter**.
3. Click on the settings symbol close to the **Project Interpreter** dropdown menu and choose **Add**.
4. Now choose **System Interpreter** and add your existing Python 3 interpreter.
5. Select your added interpreter and confirm.

Note: If you are not following the recommended approach and create a *new* project (**File**→**New Project...**), you need to consider that by default the options to choose the interpreter are hidden within the **Create Project** window. So click on **Project Interpreter: New Virtual Environment** and in most cases choose your *System Interpreter* instead of the default *New Virtual Environment*.

Note: If you really need to use a Virtual Environment, please consider the hints given in the *Python Virtual Environments* chapter.

1.4 Optional packages

Plotting results of Additive Manufacturing simulations requires the package *pyvista*. It is automatically installed if using the option *[am-plotting]* during the installation:

```
pip install <path to the TC-Python folder>/TC_Python-<version>-py3-none-any.  
↔whl[am-plotting]
```

The bundled interpreter contains *pyvista* by default.

1.5 Updating to a newer version

When updating to a newer version of Thermo-Calc, **you need to also install the latest version of TC-Python**. This is not necessary if are using the bundled Python-interpreter that has it automatically installed. It is not sufficient to run the installer of Thermo-Calc:

```
pip install <path to the TC-Python folder>/TC_Python-<version>-py3-none-any.whl
```

Tip: Note that on Linux depending on the interpreter usually *pip3* is used.

In case of problems you may wish to uninstall the previous version of TC-Python in advance:

```
pip uninstall TC-Python
pip install <path to the TC-Python folder>/TC_Python-<version>-py3-none-any.whl
```

However, that should normally not be required.

You can check the currently installed version of TC-Python by running:

```
pip show TC-Python
```


CONFIGURING LICENSE

TC-Python requires a license to run, you can obtain a license from the Thermo-Calc support support@thermocalc.com. If you have no valid license, an exception will be thrown that states: *NO LICENSE: No activated license for TC-Python*. Depending on the type of license, different steps are required to configure TC-Python to use it.

2.1 Environment variables

Some environment variables need to be set. On Windows this is normally done during the installation of Thermo-Calc, but on Linux and macOS this needs to be performed for each used IDE or terminal. Details are described in the chapter *Setting Environment Variables*.

2.2 License activation

Only required for licenses with user credentials.

You need to activate the TC-Python license once on your computer. *This license differs from that for the Thermo-Calc application and thus it is not sufficient to activate only the Thermo-Calc GUI.*

The activation is done with the methods in the class `tc_python.license.LicenseManager`. Depending on the type of license various methods are available, for example for online and offline activation.

It is recommended to simply run the example `Miscellaneous/pyex_M_04_license.py` to perform the activation and deactivation. By default an online activation is performed, but you can choose another method by activating another method among those being commented out at the end of the file.

Note: You need to deactivate the license if you want to use it on another computer.

SETTING ENVIRONMENT VARIABLES

In order to use TC-Python on macOS and Linux you need to set some environment variables.

```
TC26B_HOME=/Applications/Thermo-Calc-2026b.app/Contents/Resources
```

If you use a license server:

```
LSHOST=<name-of-the-license-server>
```

If you have a node-locked license:

```
LSHOST=NO-NET  
LSERVRC=/Users/Shared/Thermo-Calc/lserverc
```

If you have a license based on user credentials:

```
TC_LICENSE_SPRING=y
```

If running in the terminal they can be set using *export LSHOST=NO-NET*, etc.

In PyCharm, you can add environment variables in the configurations.

Select **Run**→**Edit Configurations** to open the **Run/Debug Configurations** window. Choose **Templates** and then **Python**. Enter the environment variable(s) by clicking the button to the right of the **Environment Variables** text field. Now the environment variable(s) will be set for each new configuration by default.

Note: Existing configurations need to be removed and recreated to obtain the environment variables in them.

The same way for configuring the environment variables can be used on other operating systems as if necessary.

ARCHITECTURE OVERVIEW

TC-Python contains classes of these types:

- **TCPython** – this is where you start with general settings.
- **SystemBuilder** and **System** – where you choose database and elements etc.
- **Calculation** – where you choose and configure the calculation.
- **Result** – where you get the results from a calculation you have run.

4.1 TcPython

This is the starting point for all TC-Python usage.

You can think of this as the start of a “wizard”.

You use it to select databases and elements. That will take you to the next step in the wizard, where you configure the system.

Example:

```
from tc_python import *

with TcPython() as start:
    start.select_database_and_elements(...)
    # e.t.c
# after with clause

# or like this
with TcPython():
    SetUp().select_database_and_elements(...)
    # e.t.c
# after with clause
```

Tip: If you use TC-Python from Jupyter Lab / Notebook, you should use TC-Python slightly different to be able to use multiple cells. See *Using TC-Python within a Jupyter Notebook or the Python console* for details.

Note: When your python script runs a row like this:

```
with TcPython() as start:
```

a process running a calculation server starts. Your code, via TC-Python, uses socket communication to send and receive messages to and from that server.

When your Python script has run as far as this row:

```
# after with clause
```

the calculation server automatically shuts down, and all temporary files are deleted. It is important to ensure that this happens by structuring your Python code using a `with()` clause as in the above example.

Note: To re-use results from previous calculations, set a folder where TC-Python saves results, and looks for previous results.

This is done with the function `set_cache_folder()`.

```
from tc_python import *

with TCPython() as start:
    start.set_cache_folder("cache")
```

This folder can be a network folder and shared by many users. If a previous TC-Python calculation has run with the same `cache_folder` and EXACTLY the same system and calculation settings, the calculation is not re-run. Instead the result is automatically loaded from disk.

It is also possible to explicitly save and load results.

```
from tc_python import *

with TCPython() as start:
    #... diffusion calculation (could be any calculation type)
    calculation_result.save_to_disk('path to folder')
    #...
    loaded_result = start.load_result_from_disk().diffusion('path to folder')
```

4.2 SystemBuilder and System

A **SystemBuilder** is returned when you have selected your database and elements in **TCPython**.

The **SystemBuilder** lets you further specify your system, for example the phases that should be part of your system.

Example:

```
from tc_python import *

with TCPython() as start:
    start.select_database_and_elements("ALDEMO", ["Al", "Sc"])
    # e.t.c
```

When all configuration is done, you call `get_system()` which returns an instance of a **System** class. The **System** class is fixed and cannot be changed. If you later want to change the database, elements or something else, change the **SystemBuilder** and call `get_system()` again, or create a new **SystemBuilder** and call `get_system()`.

From the **System** you can create one or more calculations, which is the next step in the “wizard”.

Note: You can use the same **System** object to create several calculations.

4.3 Calculation

The best way to see how a calculation can be used is in the TC-Python examples included with the Thermo-Calc installation.

Some calculations have many settings. Default values are used where it is applicable, and are overridden if you specify something different.

When you have configured your calculation you call `calculate()` to start the actual calculation. That returns a **Result**, which is the next step.

4.3.1 Single equilibrium calculations

In single equilibrium calculations you need to specify the correct number of conditions, depending on how many elements your **System** contains.

You do that by calling `set_condition()`.

An important difference from other calculations is that single equilibrium calculations have two functions to get result values.

The `calculate()` method, which gives a **SingleEquilibriumTempResult**, is used to get actual values. This result is “temporary”, meaning that if you run other calculations or rerun the current one, the resulting object no longer gives values corresponding to the first calculation.

This is different from how other calculations work. If you want a **Result** that you can use *after* running other calculations, you need to call `calculate_with_state()`, which returns a **SingleEquilibriumResult**.

Note: `calculate()` is the recommended function and works in almost all situations. Also it has *much* better performance than `calculate_with_state()`.

Example:

```
from tc_python import *

with TCPython() as start:
    gibbs_energy = (
        start.
            select_database_and_elements("FEDEMO", ["Fe", "Cr", "C"]).
            get_system().
            with_single_equilibrium_calculation().
                set_condition(ThermodynamicQuantity.temperature(), 2000.0).
                set_condition(ThermodynamicQuantity.mole_fraction_of_a_component("Cr"),
↳ 0.1).
                set_condition(ThermodynamicQuantity.mole_fraction_of_a_component("C"), 0.
↳ 01).
                calculate().
                get_value_of("G")
    )
```

4.3.2 Batch equilibrium calculations

Batch equilibrium calculations are used when you want to do many single equilibrium calculations and it is known from the beginning which result values are required from the equilibrium. This is a vectorized type of calculation that can reduce the overhead from Python and TC-Python similar to the approach used in *numpy*-functions for example.

Tip: The performance of batch equilibrium calculations can be significantly better than looping and using single equilibrium calculations **if the actual Thermo-Calc calculation is fast**. There is little advantage if the Thermo-Calc equilibrium calculations take a long time (typically for large systems and databases).

Example:

```
from tc_python import *

with TCPython() as start:
    calculation = (
        start
        .set_cache_folder(os.path.basename(__file__) + "_cache")
        .select_database_and_elements("NIDEMO", ["Ni", "Al", "Cr"])
        .get_system()
        .with_batch_equilibrium_calculation()
        .set_condition("T", 800.1)
        .set_condition("X(Al)", 1E-2)
        .set_condition("X(Cr)", 1E-2)
        .disable_global_minimization()
    )

    list_of_x_Al = [1, 2, 3, 4, 5, 6, 7, 8, 9, 10]
    list_of_x_Cr = [3, 5, 7, 9, 11, 13, 15]
    lists_of_conditions = []
    for x_Al in list_of_x_Al:
        for x_Cr in list_of_x_Cr:
            lists_of_conditions.append([
                ("X(Al)", x_Al / 100),
                ("X(Cr)", x_Cr / 100)])
    calculation.set_conditions_for_equilibria(lists_of_conditions)

    results = calculation.calculate(["BM", "VM"])

    masses = results.get_values_of("BM")
    volumes = results.get_values_of('VM')

print(masses)
print(volumes)
```

4.3.3 Precipitation calculations

All that can be configured in the *Precipitation Calculator* in Graphical Mode can also be done here in this calculation. However, you must at least enter a matrix phase, a precipitate phase, temperature, simulation time and compositions.

Example:

```
from tc_python import *

with TCPython() as start:
    precipitation_curve = (
        start.
            select_thermodynamic_and_kinetic_databases_with_elements("ALDEMO", "MALDEMO",
↪ ["Al", "Sc"]).
            get_system().
            with_isothermal_precipitation_calculation().
                set_composition("Sc", 0.18).
                set_temperature(623.15).
                set_simulation_time(1e5).
                with_matrix_phase(MatrixPhase("FCC_Al").
                    add_precipitate_phase(PrecipitatePhase("AL3X"))).
                calculate()
    )
```

4.3.4 Scheil calculations

All Scheil calculations available in Graphical Mode or Console Mode can also be done here in this calculation. The minimum you need to specify are the elements and compositions. Everything else is set to a default value.

Example:

```
from tc_python import *

with TCPython() as start:
    temperature_vs_mole_fraction_of_solid = (
        start.
            select_database_and_elements("FEDEMO", ["Fe", "C"]).
            get_system().
            with_scheil_calculation().
                set_composition("C", 0.3).
                calculate().
                get_values_of(ScheilQuantity.temperature(),
                    ScheilQuantity.mole_fraction_of_all_solid_phases())
    )
```

4.3.5 Property diagram calculations

For the property diagram (step) calculation, everything that you can configure in the *Equilibrium Calculator* when choosing *One axis* in Graphical Mode can also be configured in this calculation. In Console Mode the property diagram is created using the Step command. The minimum you need to specify are elements, conditions and the calculation axis. Everything else is set to default values, if you do not specify otherwise.

Example:

```
from tc_python import *

with TPython() as start:
    property_diagram = (
        start.
            select_database_and_elements("FEDEMO", ["Fe", "C"]).
            get_system().
            with_property_diagram_calculation().
                with_axis(CalculationAxis(ThermodynamicQuantity.temperature()).
                    set_min(500).
                    set_max(3000)).
                set_condition(ThermodynamicQuantity.mole_fraction_of_a_component("C"), 0.
↪01).
                calculate().
                get_values_grouped_by_stable_phases_of(ThermodynamicQuantity.
↪temperature(),
                                                    ThermodynamicQuantity.volume_
↪fraction_of_a_phase("ALL"))
    )
```

4.3.6 Phase diagram calculations

For the phase diagram (map) calculation, everything that you can configure in the *Equilibrium Calculator* when choosing *Phase diagram* in Graphical Mode can also be configured in this calculation. In Console Mode the phase diagram is created using the Map command. The minimum you need to specify are elements, conditions and two calculation axes. Everything else is set to default values, if you do not specify otherwise.

Example:

```
from tc_python import *

with TPython() as start:
    phase_diagram = (
        start.
            select_database_and_elements("FEDEMO", ["Fe", "C"]).
            get_system().
            with_phase_diagram_calculation().
                with_first_axis(CalculationAxis(ThermodynamicQuantity.temperature()).
                    set_min(500).
                    set_max(3000)).
                with_second_axis(CalculationAxis(ThermodynamicQuantity.mole_fraction_of_
↪a_component("C")).
                    set_min(0).
                    set_max(1)).
```

(continues on next page)

(continued from previous page)

```

        set_condition(ThermodynamicQuantity.mole_fraction_of_a_component("C"), 0.
↪ 01).
        calculate().
        get_values_grouped_by_stable_phases_of(ThermodynamicQuantity.mass_
↪ fraction_of_a_component("C"),
                                                ThermodynamicQuantity.
↪ temperature())
    )

```

4.3.7 Diffusion calculations

For diffusion calculations, everything that you can configure in the *Diffusion Calculator* can also be configured in this calculation. The minimum you need to specify are elements, temperature, simulation time, a region with a grid and width, a phase and an initial composition.

Example:

```

from tc_python import *

with TCPython() as start:
    diffusion_result = (
        start.
        select_thermodynamic_and_kinetic_databases_with_elements("FEDEMO", "MFEDEMO",
↪ ["Fe", "Ni"]).
        get_system().
        with_isothermal_diffusion_calculation().
        set_temperature(1400.0).
        set_simulation_time(108000.0).
        add_region(Region("Austenite").
        set_width(1E-4).
        with_grid(CalculatedGrid.linear().set_no_of_points(50)).
        with_composition_profile(CompositionProfile().
        add("Ni", ElementProfile.linear(10.0, 50.0))
        ).
        add_phase("FCC_A1")).
        calculate()

    distance, ni_fraction = diffusion_result.get_mass_fraction_of_component_at_time("Ni",
↪ 108000.0)

```

4.3.8 Property Model calculations

For Property Model calculations, everything that you can configure in the *Property Model Calculator* in Graphical Mode can also be configured in this calculation. The minimum you need to specify are elements, composition and which Property Model you want to use. Each property model has its own set of **definitions**: inputs and outputs used to configure the property model or gather specific results. Property model definitions include:

1. **Arguments**, used to set input values into property models,
2. **ArgumentOptions**, used for Arguments which require specific inputs to be selected, and
3. **Results**, used to gather output quantities from *PropertyModelResult* objects

Consult **Property model definitions** within the API Reference for specific information about all released property models.

Example:

```
from tc_python import *

with TCPython() as start:
    print("Available Property Models: {}".format(start.get_property_models()))
    # Initialize property_model calculation
    # Use PropertyModelSelection with the @classmethod of interest
    property_model = (
        start.
            select_database_and_elements("FEDEMO", ["Fe", "C"]).
            get_system().
            with_property_model_calculation(PropertyModelSelection.driving_force())

        property_model.set_composition("C", 1.0))

    property_model.set_argument(property_model.Arguments.PRECIPITATE_PHASE(0), "GRAPHITE
↪")

    print("Available arguments: {}".format(property_model.get_arguments()))
    result = property_model.calculate()

    print("Available result quantities: {}".format(result.get_result_quantities()))
    driving_force = result.get_value_of("normalizedDrivingForce")
```

4.3.9 Material to Material calculations

Material to Material calculations are generally regular single equilibrium, property diagram or phase diagram calculations but they are specialised to handle the mixture of two materials A and B. Everything that you can configure in the *Material to Material Calculator* in Graphical Mode can also be configured in this calculation. The minimum required configuration is shown below for a *Property diagram calculation for varying amount of material B*. The other calculators (single fraction of material B and phase diagram calculations) are configured in a similar way.

Example:

```
from tc_python import *

with TCPython() as start:
    material_to_material_property_diagram = (
        start.
            select_database_and_elements("FEDEMO", ["Fe", "Cr", "Ni", "C"]).
            get_system().
            with_material_to_material().
            with_property_diagram_calculation().
            set_material_a({"Cr": 10.0, "Ni": 15.0}, "Fe").
            set_material_b({"Cr": 15.0, "Ni": 10.0}, "Fe").
            set_activities({"C": 0.1}).
            with_constant_condition(ConstantCondition.temperature(800 + 273.15)).
            with_axis(MaterialToMaterialCalculationAxis.fraction_of_material_b(from_
↪fraction=0.0,
```

(continues on next page)

(continued from previous page)

```

↪fraction=1.0,
                                                    to_
↪fraction=0.5))
                                                    start_
    )

    result = material_to_material_property_diagram.calculate()
    data = result.get_values_grouped_by_quantity_of(MATERIAL_B_FRACTION,
                                                    ThermodynamicQuantity.volume_
↪fraction_of_a_phase(ALL_PHASES))

    for group in data.values():
        fractions_of_b = group.x
        volume_fractions_of_phase = group.y
        phase_name = group.label

```

4.3.10 Process Metallurgy calculations

Process Metallurgy calculations are specialized to support the convenient handling of component-based additions (i.e., slag compositions such as *50% Al₂O₃ - 30% CaO - 20% SiO₂*), provide tailor-made result quantities, a framework for developing kinetic process simulations, and more useful features.

There are two distinct types of calculations:

- `tc_python.process_metallurgy.equilibrium.EquilibriumCalculation`: isothermal and adiabatic equilibrium calculations
- `tc_python.process_metallurgy.process.ProcessSimulationCalculation`: a kinetic process simulation framework, based on an *Effective Equilibrium Reaction Zone* (EERZ) approach

Equilibrium calculation example:

Equilibrium calculations are useful in a large range of situations when considering the kinetics of a process is unnecessary.

```

from tc_python import *

with TCPython() as session:
    metal = EquilibriumAddition({"Fe": None, "C": 4.5, "Si": 1.0}, 100e3,
↪temperature=1650 + 273.15)
    slag = EquilibriumAddition({"CaO": 75, "Al2O3": 25}, 3e3, temperature=1600 + 273.15)
    gas = EquilibriumGasAddition({"O2": 100}, 1000, amount_unit=GasAmountUnit.NORM_CUBIC_
↪METER)
    calc = session.with_metallurgy().with_adiabatic_equilibrium_
↪calculation(ProcessDatabase.OXDEMO)

    (calc
     .add_addition(metal)
     .add_addition(slag)
     .add_addition(gas))

    result = calc.calculate()

```

(continues on next page)

(continued from previous page)

```
print(f"Stable phases: {result.get_stable_phases()}, temperature: {result.get_
↪temperature()} K")
```

Process simulation example:

TC-Python is providing a *framework* for modelling in principle any process in metallurgy, especially steel-making. It is up to the user to actually develop a concrete model for the process in question. The framework is in the current release limited to one reaction zone connecting two bulk zones. These bulk zones are typically the steel melt and the top slag, but not limited to that. The framework in its current version has proven to be useful to model industrial ladle furnaces, AOD- and VOD-converters and more. Process features such as heating and cooling, heat transfer between the bulk zones, inclusion formation and their flotation, etc., can be modelled.

This is a very simplified minimal but complete model mimicking a BOF process:

```
from tc_python import *

with TCPython() as session:
    calc = (session.with_metallurgy()
            .with_adiabatic_process_calculation(ProcessDatabase.OXDEMO)
            .set_end_time(15 * 60))

    steel_zone = MetalBulkZone(density=7800)
    slag_zone = SlagBulkZone(density=4500)

    steel_zone.add_addition(SingleTimeAddition({"Fe": None, "C": 4.5, "Si": 1.0}, 120e3,
                                                temperature=1600 + 273.15), time=0)
    slag_zone.add_addition(SingleTimeAddition({"CaO": 75, "SiO2": 25}, 1.2e3,
                                                temperature=1500 + 273.15,
                                                composition_unit=CompositionUnit.MOLE_
↪PERCENT), time=0)

    steel_zone.add_continuous_addition(ContinuousGasAddition({"O2": 100}, 1,
                                                            rate_unit=GasRateUnit.NORM_
↪CUBIC_METER_PER_SEC))

    calc.with_reaction_zone(ReactionZone(area=10.0,
                                        left_zone=steel_zone, mass_transfer_coefficient_
↪left=1.0e-5,
                                        right_zone=slag_zone, mass_transfer_coefficient_
↪right=1.0e-6))

    result = calc.calculate()

    print(f"Stable phases in the steel melt: {result.get_stable_phases(steel_zone)}")
    print(f"C-content in steel vs. time: {result.get_composition_of_phase_group(steel_
↪zone,
↪PhaseGroup.ALL_METAL)['C']}")
```

4.3.11 Additive Manufacturing calculations

For Additive Manufacturing calculations, everything that you can configure in the *AM Calculator* in Graphical Mode can also be configured in this calculation. In the minimal case, you do not need to specify any options (the material used by default is *IN625*).

```
from tc_python import *

with TCPython() as start:
    am_result = (start.with_additive_manufacturing()
                 .with_steady_state_calculation()
                 .calculate())

    print(f"Melt pool depth: {am_result.get_meltpool_depth()}")
    plotter, mesh = am_result.get_pyvista_plotter()
    plotter.add_mesh(mesh)
    plotter.show()
```

With several custom settings a basic calculation looks like this:

```
from tc_python import *

with TCPython() as start:
    am_result = (start.with_additive_manufacturing()
                 .with_steady_state_calculation()
                 .disable_fluid_flow_marangoni()
                 .disable_separate_materials()
                 .with_material_properties(MaterialProperties.from_library("IN718"))
                 .set_powder_density(90)
                 .set_ambient_temperature(15 + 273.15)
                 .set_base_plate_temperature(25 + 273.15)
                 .with_top_boundary_conditions(TopBoundaryConditions().set_radiation_
↪emissivity(0.2))
                 .with_heat_source(HeatSource.conical()
                                   .set_power(210)
                                   .set_absorptivity(80.0))
                 .calculate())

    print(f"Melt pool depth: {am_result.get_meltpool_depth()}")
    plotter, mesh = am_result.get_pyvista_plotter()
    plotter.add_mesh(mesh)
    plotter.show()
```

Tip: The graphical visualization and extraction of data from the 3D result dataset requires the package *pyvista*. More details are provided in the section *Optional packages*.

4.4 Result

All calculations have a method called `calculate()` that starts the calculations and when finished, returns a **Result**.

The **Result** classes have very different methods, depending on the type of calculation.

The **Result** is used to get numerical values from a calculation that has run.

The **Result** can be saved to disk by the method `save_to_disk()`.

Previously saved results can be loaded by the method `load_result_from_disk()` on the **SetUp** class.

Example:

```
# code above sets up the calculation
r = calculation.calculate()
time, meanRadius = r.get_mean_radius_of("AL3X")
```

The **Result** objects are completely independent from calculations done before or after they are created. The objects return valid values corresponding to the calculation they were created from, for their lifetime. The only exception is if you call `calculate()` and not `calculate_with_state()` on a single equilibrium calculation.

As in the following example you can mix different calculations and results, and use old results after another calculation has run.

Example:

```
# ...
# some code to set up a single equilibrium calculation
# ...

single_eq_result = single_eq_calculation.calculate_with_state()

# ...
# some code to set up a precipitation calculation
# ...

prec_result = precipitation_calculation.calculate()

# ...
# some code to set up a Scheil calculation
# ...

scheil_result = scheil_calculations.calculate()

# now it is possible to get results from the single equilibrium calculation,
# without having to re-run it (because it has been calculated with saving of the state)

gibbs = single_eq_result.get_value_of("G")
```

4.4.1 DiffusionResult

The `DiffusionResult` class, that is returned when calling `calculate()` on any `DiffusionCalculation`, has the possibility to create a `ContinuedDiffusionCalculation`, in addition to the “normal” functionality for results. This makes it possible to run a diffusion calculation and then, depending on the result, change some settings and continue.

Example:

```
# ...
# some code to set up a Diffusion calculation
# ...
first_diffusion_result = diffusion_calculation.calculate()

continued_calculation = first_diffusion_result.with_continued_calculation()

continued_calculation.set_simulation_time(110000.0)
continued_calculation.with_left_boundary_condition(BoundaryCondition.mixed_zero_flux_and_
↪activity()).set_activity_for_element('C', 1.0))
second_result = continued_calculation.calculate()
# ...
# Now you can use get second_result to get calculated values, just as normal.
# You can also use first_diffusion_result even after second_result is created.
# You can also use second_result (and even first_diffusion_result) to create a new_
↪ContinuedDiffusionCalculation by calling with_continued_calculation.
```

4.5 Property Model Framework

The *Python Property Model SDK* extends the Thermo-Calc software to enable you to create your own Property Models. A *Property Model* is a Python-based calculation that can use any TC-Python functionality (including diffusion and precipitation calculations) but is usable through the Graphical User Interface (UI) of Thermo-Calc in a more simple way. It is typically used to model material properties but by no means limited to that. Examples of Property Models provided by Thermo-Calc include Martensite and Pearlite formation in steel.

The Property Model Framework uses standard Python 3 beginning with Thermo-Calc 2021a and can access all TC-Python functionality and any Python package including *numpy*, *scipy*, *tensorflow*, etc. The actual calculation code is nearly identical, regardless if called from within a Property Model or from standard Python.

This is a complete rewrite of the original version of the framework that was based on Jython 2.7 and therefore had a number of limitations. **Property models written with the old Property Model Framework before Thermo-Calc 2021a are not compatible with the new framework.** However, the migration should be relatively easy because the syntax was changed as little as possible.

4.5.1 Property models vs. TC-Python

The main difference between a *Property Model* and regular *TC-Python code* is that a Property Model is directly integrated into the UI of Thermo-Calc via a plugin architecture while TC-Python code can only be accessed by programs and scripts written in Python.

The user should develop a Property Model if the functionality needs to be available from the Thermo-Calc UI, especially if it should be applied by other users not familiar to programming languages. Otherwise it is preferable to implement the functionality directly in a TC-Python program. If required, Property Models can as well be accessed from within TC-Python.

4.5.2 Architecture

Every Property Model needs to contain a class that implements the interface `tc_python.propertymodel_sdk.PropertyModel`. There are naming conventions that must to be fulfilled: the file name is required to follow the pattern `XYPythonModel.py` and the name of the class needs to match this. Additionally the file must be placed in a directory named `XYPython` within the Property Model directory. The content of the placeholder `XY` can be freely chosen.

A simple complete Property Model, saved in a file called `SimplePythonModel.py` in the directory `SimplePython`, looks like this:

```
from tc_python import *

class SimplePythonModel(PropertyModel):
    def provide_model_category(self) -> List[str]:
        return ["Demo"]

    def provide_model_name(self) -> str:
        return "My Demo Model"

    def provide_model_description(self) -> str:
        return "This is a demo model."

    def provide_ui_panel_components(self) -> List[UIComponent]:
        return [UIBooleanComponent("CHECKBOX", "Should this be checked?", "Simple_
↪checkbox", setting=False)]

    def provide_calculation_result_quantities(self) -> List[ResultQuantity]:
        return [create_general_quantity("RESULT", "A result")]

    def evaluate_model(self, context: CalculationContext):
        if context.get_ui_boolean_value("CHECKBOX"):
            self.logger.info("The checkbox is checked")

        # obtain the entered values from the GUI
        composition_as_mass_fraction = context.get_mass_fractions()
        temp_in_k = context.get_temperature()
        calc = context.system.with_single_equilibrium_calculation()
        # continue with a TC-Python calculation now ...

        context.set_result_quantity_value("RESULT", 5.0) # the value would normally_
↪have been calculated
```

The basic building blocks of the Property Model API are:

- `tc_python.propertymodel_sdk.ResultQuantity`: Defines a calculation result of a Property Model that will be provided to the UI after each model evaluation
- `tc_python.propertymodel_sdk.CalculationContext`: Provides access to the data from the UI (such as the entered composition and temperature) and to the current TC-Python system object which is the entrypoint for using TC-Python from within the Property Model
- `tc_python.propertymodel_sdk.UIComponent`: These are the UI-components that create the user interface of the Property Model within the model panel of the Thermo-Calc application UI. Different components are available (for example checkboxes, text fields and lists).

4.5.3 Property Model directory

The Property Model *py*-files need to be located within subdirectories of the *Property Model directory*, e.g. `PropertyModels/XYPython/XYPythonModel.py`. The default Property Model directory can be changed in the menu *Tools* -> *Options* in the graphical user interface.

Operating system	Default Property Model directory
Windows (all users)	<code>C:\Program Files\Thermo-Calc\2026b\PropertyModels</code>
Windows (single user)	<code>C:\Users\UserName\AppData\Local\Programs\Thermo-Calc\2026b\PropertyModels</code>
Linux (all users)	<code>/opt/Thermo-Calc/2026b/PropertyModels</code>
Linux (single user)	<code>/home/UserName/Thermo-Calc/2026b/PropertyModels</code>
MacOS	<code>/Applications/Thermo-Calc-2026b.app/Contents/Resources/PropertyModels</code>

Note: The Property Model directory location has been changed in the release 2023b.

BEST PRACTICES

5.1 Re-use of the single equilibrium calculation state

The Thermo-Calc core keeps an internal state containing the data from previously performed calculations (such as composition of sublattices, previously formed phases, ...). This will be used for start values of future calculations (if not explicitly overwritten) and can strongly influence their convergence and calculation time. It can be useful to save and restore later the core-state **in advanced use cases**, these include:

- Improving the convergence speed in case of very complicated equilibria if a similar equilibrium had been calculated already before. Similarity refers here primarily to composition, temperature and entered phase set. This case can occur for example with the Nickel-database TCNi.
- Convenient and fast switching between states that have changed a lot (for example regarding suspended phases, numerical settings, ...)

The mechanism of saving and restoring the state is called bookmarking and is controlled with the two methods `tc_python.single_equilibrium.SingleEquilibriumCalculation.bookmark_state()` and `tc_python.single_equilibrium.SingleEquilibriumCalculation.set_state_to_bookmark()`. The following short example demonstrates how to switch between two different states easily in practice:

```
from tc_python import *

with TCPython() as session:
    calc = (session.
            select_database_and_elements("FEDEMO", ["Fe", "C"]).
            get_system().
            with_single_equilibrium_calculation().
            set_condition(ThermodynamicQuantity.temperature(), 2000.0).
            set_condition("X(C)", 0.01))

    calc.calculate()
    bookmark_temp_condition = calc.bookmark_state()

    calc.set_phase_to_fixed("BCC", 0.5)
    calc.remove_condition(ThermodynamicQuantity.temperature())
    bookmark_fixed_phase_condition = calc.bookmark_state()

    result_temp = calc.set_state_to_bookmark(bookmark_temp_condition)
    print("Conditions do contain temperature: {}".format(result_temp.get_conditions()))
    # this calculation had already been performed
    print("Stable phases (do not contain BCC): {}".format(result_temp.get_stable_
    ↪phases()))
```

(continues on next page)

(continued from previous page)

```

    result_fixed_phase = calc.set_state_to_bookmark(bookmark_fixed_phase_condition)
    print("Conditions do not contain temperature: {}".format(result_fixed_phase.get_
↪conditions()))
    # this calculation had **not yet** been performed
    print("Stable phases (do contain BCC): {}".format(calc.calculate().get_stable_
↪phases()))

```

5.2 Re-use and saving of results

Before a calculation is run in TC-Python, a check is made to see if the exact same calculation has run before, and if that is the case, the result from the calculation can be loaded from disk instead of being re-calculated.

This functionality is always enabled within a script running TC-Python, but you can make it work the same way when re-running a script, or even when running a completely different script.

To use results from previous calculations, set a folder where TC-Python saves results, and looks for previous results.

This is controlled by the method `tc_python.server.Setup.set_cache_folder()`.

```

from tc_python import *

with TCPython() as start:
    start.set_cache_folder("cache")

```

This folder can be a network folder and shared by many users. The calculation is not re-run if there is a previous TC-Python calculation with the same cache folder and exactly the same settings; the result is instead loaded from disk.

Another possibility is to explicitly save the result to disk and reload it later:

```

from tc_python import *

with TCPython() as start:
    # ... the system and calculator are set up and the calculation is performed
    result = calculator.calculate()

    result.save_to_disk("./result_dir")

```

You can then load the result again in another session:

```

from tc_python import *

with TCPython() as start:
    result = Setup().load_result_from_disk().diffusion("./result_dir")
    x, frac = result.get_mole_fraction_of_component_at_time("Cr", 1000.0)

```

5.3 All TC-Python objects are non-copyable

Never create a copy of an instance of a class in TC-Python, neither by using the Python built-in function `deepcopy()` nor in any other way. All classes in TC-Python are proxies for classes in the underlying calculation server and normally hold references to result files. A copied class object in Python would consequently point to the same classes and result files in the calculation server.

Instead of making a copy, always create a new instance:

```
from tc_python import *

with TCPython() as start:
    system = start.select_database_and_elements("FEDEMO", ["Fe", "Cr"]).get_system()
    calculator = system.with_single_equilibrium_calculation()

    # *do not* copy the `calculator` object, create another one instead
    calculator_2 = system.with_single_equilibrium_calculation()

    # now you can use both calculators for different calculations ...
```

5.4 Python Virtual Environments

A Python installation can have several virtual environments. You can think of a virtual environment as a collection of third party packages that you have access to in your Python scripts. `tc_python` is such a package.

To run TC-Python, you need to **install it into the same virtual environment** as your Python scripts are running in. If your scripts fail on `import tc_python`, you need to execute the following command **in the terminal of the same Python environment** as your script is running in:

```
pip install TC_Python-<version>-py3-none-any.whl
```

If you use the PyCharm IDE, you should do that within the **Terminal** built into the IDE. This **Terminal** runs automatically within your actual (virtual) environment.

To prevent confusion, it is recommend in most cases to *install TC-Python within your global interpreter*, for example by running the `pip install` command within your default Anaconda prompt.

5.5 Using *with TCPython()* efficiently

Normally you should call *with TCPython()* only once within each process.

Note: When leaving the *with*-clause, the Java backend engine process is stopped and all temporary data is deleted. Finally when entering the next *with*-clause a new Java process is started. This can take several seconds.

If appropriate, it is safe to run *with TCPython()* in a loop. **Due to the time it takes this only makes sense if the calculation time per iteration is longer than a minute.**

To prevent calling *with TCPython()* multiple times and cleaning up temporary data, you can use the following pattern.

Example:

```

from tc_python import *

# ...

def calculation(calculator):
    # you could also pass the `session` or `system` object if more appropriate
    calculator.set_condition("W(Cr)", 0.1)
    # further configuration ...

    result = calculator.calculate()
    # ...
    result.invalidate() # if the temporary data needs to be cleaned up immediately

if __name__ == '__main__':
    with TCPython() as session:
        system = session.select_database_and_elements("FEDEMO", ["Fe", "Cr"]).get_
↪system()
        calculator = system.with_single_equilibrium_calculation()

        for i in range(50):
            calculation(calculator)

```

5.6 Parallel calculations

It is possible to perform parallel calculations with TC-Python **using multi-processing**.

Note: Please note that **multi-threading is not suitable** for parallelization of computationally intensive tasks in Python. Additionally the Thermo-Calc core is not thread-safe. Using suitable Python-frameworks it is also possible to dispatch the calculations on different computers of a cluster.

A general pattern that can be applied is shown below. This code snippet shows how to perform single equilibrium calculations for different compositions in parallel. In the same way all other calculators of Thermo-Calc can be used or combined. For performance reasons in a real application, probably *numpy* arrays instead of Python arrays should be used.

Example:

```

import concurrent.futures

from tc_python import *

def do_perform(parameters):
    # this function runs within an own process
    with TCPython() as start:
        elements = ["Fe", "Cr", "Ni", "C"]
        calculation = (start.select_database_and_elements("FEDEMO", elements).
            get_system().
            with_single_equilibrium_calculation()).

```

(continues on next page)

(continued from previous page)

```

        set_condition("T", 1100).
        set_condition("W(C)", 0.1 / 100).
        set_condition("W(Ni)", 2.0 / 100))

    phase_fractions = []
    cr_contents = range(parameters["cr_min"],
                        parameters["cr_max"],
                        parameters["delta_cr"])
    for cr in cr_contents:
        result = (calculation.
                 set_condition("W(Cr)", cr / 100).
                 calculate())

        phase_fractions.append(result.get_value_of("NPM(BCC_A2)"))

    return phase_fractions

if __name__ == "__main__":
    parameters = [
        {"index": 0, "cr_min": 10, "cr_max": 15, "delta_cr": 1},
        {"index": 1, "cr_min": 15, "cr_max": 20, "delta_cr": 1}
    ]

    bcc_phase_fraction = []
    num_processes = 2

    with concurrent.futures.ProcessPoolExecutor(num_processes) as executor:
        for result_from_process in zip(parameters, executor.map(do_perform, parameters)):
            # params can be used to identify the process and its parameters
            params, phase_fractions_from_process = result_from_process
            bcc_phase_fraction.extend(phase_fractions_from_process)

    # use the result in `bcc_phase_fraction`, for example for plotting

```

5.7 Handling crashes of the calculation engine

In some cases the Thermo-Calc calculation engine can crash. If batch calculations are performed, this brings down the complete batch. To handle this situation there is an exception you can use.

```
UnrecoverableCalculationException
```

That exception is thrown if the calculation server enters a state where no further calculations are possible. You should catch that exception outside of the `with TCPython()` clause and continue within a new `with`-clause.

Example:

```

from tc_python import *

for temperature in range(900, 1100, 10):
    try:

```

(continues on next page)

```

with TCPython() as start:
    diffusion_result = (
        start.
            select_thermodynamic_and_kinetic_databases_with_elements("FEDEMO",
↪ "MFEDEMO", ["Fe", "Ni"]).
            get_system().
            with_isothermal_diffusion_calculation().
                set_temperature(temperature).
                set_simulation_time(108000.0).
                add_region(Region("Austenite")).
                    set_width(1E-4).
                    with_grid(CalculatedGrid.linear().set_no_of_points(50)).
                    with_composition_profile(CompositionProfile().
                        add("Ni", ElementProfile.linear(10.0, 50.0))
                    ).
                add_phase("FCC_A1")).
            calculate()

        distance, ni_fraction = diffusion_result.get_mass_fraction_of_component_at_
↪ time("Ni", 108000.0)
        print(ni_fraction)

except UnrecoverableCalculationException as e:
    print('Could not calculate. Continuing with next...')

```

5.8 Using TC-Python within a Jupyter Notebook or the Python console

TC-Python can also be used from within an interactive Jupyter Notebook and a Python console as well as similar products. The main difference from a regular Python program is that it is not recommended to use a *with*-clause to manage the TC-Python resources. That is only possible within a single Jupyter Notebook cell. Instead the standalone functions `tc_python.server.start_api_server()` and `tc_python.server.stop_api_server()` should be used for manually managing the resources.

Note: The *resources* of TC-Python are primarily the Java-process running on the backend side that performs the actual calculations and the temporary-directory of TC-Python that can grow to a large size over time, especially if precipitation calculations are performed. If a *with*-clause is used, these resources are automatically cleared after use.

You need to make sure that you execute the two functions `tc_python.server.start_api_server()` and `tc_python.server.stop_api_server()` exactly once within the Jupyter Notebook session. If not stopping TC-Python, extra Java-processes might be present and the temporary disk-space is not cleared. However, these issues can be resolved manually.

The temporary directories of TC-Python are named, for example, TC_TMP4747588488953835507 that has a random ID. The temporary directory on different operating systems varies according to the pattern shown in the table.

Operating system	Temporary directory
Windows	C:\Users{UserName}\AppData\Local\Temp\TC_TMP4747588488953835507
MacOS	/var/folders/g7/7du81ti_b7mm84n184fn3k910000lg/T/ TC_TMP4747588488953835507
Linux	/tmp/TC_TMP4747588488953835507

In a Jupyter Notebook some features of an IDE such as auto-completion (*TAB-key*), available method lookup (press `.` and then *TAB*) and parameter lookup (set the cursor within the method-parenthesis and press *SHIFT + TAB* or *SHIFT + TAB + TAB* for the whole docstring) are also available.

Example using TC-Python with a Jupyter Notebook:

```

In [1]: from tc_python import *

In [2]: start_api_server()

In [3]: system = SetUp().select_database_and_elements("FEDEMO", ["Fe", "Ni", "Cr"]).get_system()
        calc = system.with_single_equilibrium_calculation()

In [4]: temp = 825 # in K
        ni_conc = 10.0 # in wt-%
        cr_conc = 8.0 # in wt-%

        calc. \
            set_condition(ThermodynamicQuantity.temperature(), temp). \
            set_condition(ThermodynamicQuantity.mass_fraction_of_a_component("Ni"), ni_conc / 100). \
            set_condition(ThermodynamicQuantity.mass_fraction_of_a_component("Cr"), cr_conc / 100)
        result = calc.calculate()

In [5]: result.get_value_of(ThermodynamicQuantity.mole_fraction_of_a_phase("FCC_A1"))
Out[5]: 0.3345580340424432

In [6]: stop_api_server()


```

5.9 Property Model Framework

5.9.1 Debugging Property Model code

You can debug property models while running them from Thermo-Calc.

- Start Thermo-Calc and create a Property Model calculator.
- Select the model you want to debug and check the debug checkbox in the lower right corner of the Python code tab.

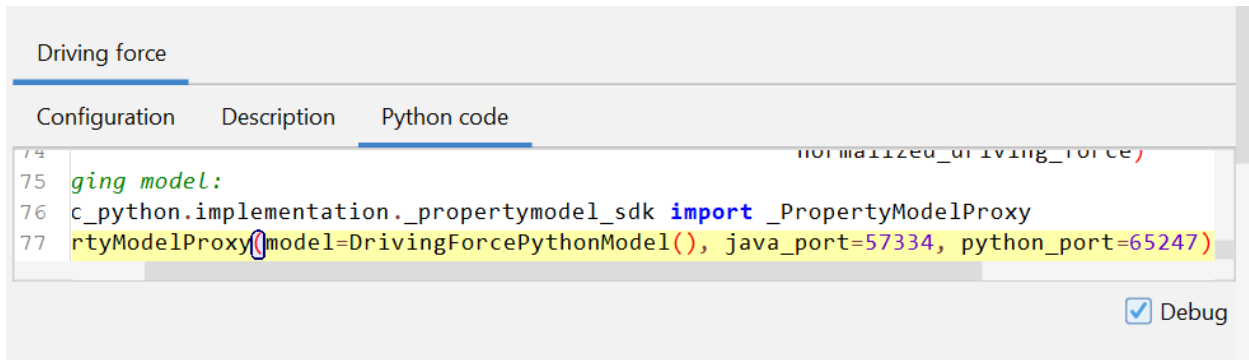


Now the model that you want to debug has been updated with code needed to connect with Thermo-Calc.

- Start debugging the model in the IDE of your choice.

Note: You must use a Python interpreter where TC-Python is installed.

In PyCharm it looks like this:

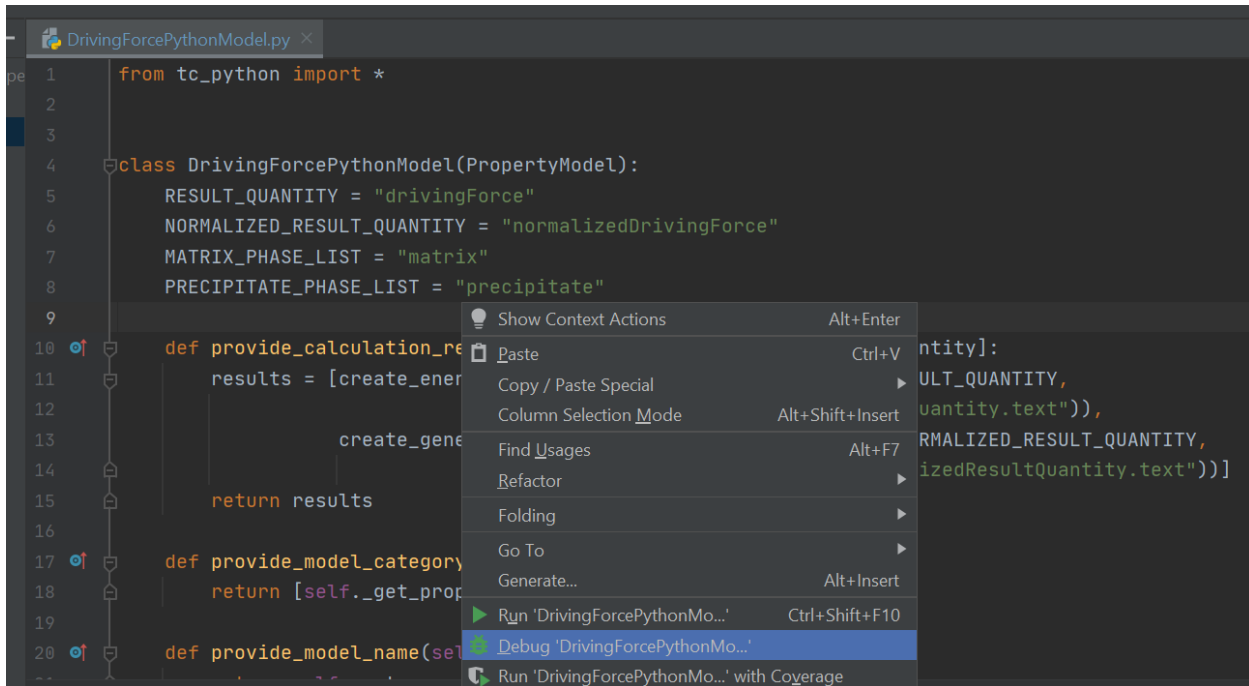

Note: When your IDE and Thermo-Calc have successfully connected, you will see this in the Thermo-Calc log:

```
10:34:42,170 INFO Waiting for developer(!) to start Python process in debugger...
↔DrivingForcePythonModel
10:34:42,171 INFO Connected successfully to the Python process for the model
↔'DrivingForcePythonModel' in DEBUG mode
```

You can stop the debug session in your IDE, change the model code, and start debugging again. The changes you made will take effect in Thermo-Calc without the need to restart. If you for instance changed the method `evaluate_model()`, the change will take effect the next time you press *Perform*.

It is also possible to start the models from TC-Python. The workflow is exactly the same as described above, except instead of starting Thermo-Calc graphical user interface, you start a Python script and use the parameter `debug_model=True` when selecting your model.

```

from tc_python import *

with TCPython() as start:
    property_model = (
        start.
            select_database_and_elements("FEDEMO", ["Fe", "C"]).
            get_system().
            with_property_model_calculation("my own Driving Force", debug_model=True).
            set_composition("C", 1.0).
        )
    property_model.calculate()

...

```

5.9.2 Developing Property Models in several files

You can split your Property Model code in several `.py` files, and there are two ways of doing that:

- *side-by-side* modules
- *common* modules

Side-by-side modules are Python files located in the same folder as the Property Model.

Common modules are Python files located in a folder outside of the Property Model folder, which makes it possible to share them with several models as a common library.

5.9.2.1 *side-by-side* modules

You are required to:

- Add a `__init__.py` file to your Property Model folder
- Add all imports of *side-by-side* modules in your main Property Model Python file also to the `__init__.py` file

Example:

`CriticalTemperaturesPythonModel.py` (The main Property Model file):

```

from CriticalTemperaturesPython import CriticalTemperatures
from tc_python import *
import numpy as np

class CriticalTemperaturesPythonModel(PropertyModel):
    ...

```


`__init__.py`:

```

from CriticalTemperaturesPython.critical_temperatures_library import CriticalTemperatures

```

If you are using PyCharm, the package name of the Property Model might be highlighted as an error, in this case you can mark the Property Model directory (i.e. the root of the present model directory) by right-clicking on it in the project window of PyCharm and marking it as *Sources Root*:

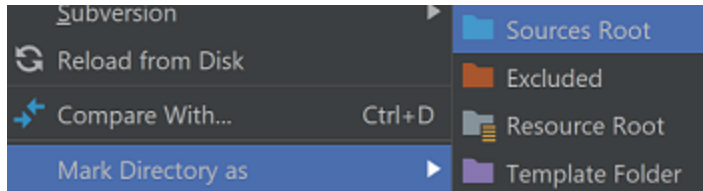

critical_temperatures_library.py:

```
from tc_python import *
import numpy as np
from scipy import optimize
from enum import Enum

class CriticalTemperatures(object):
    ...
```

Note: Modules installed in the Python interpreter such as *numpy*, *scipy*, etc can be imported as normal. This only concerns files imported as *side-by-side* modules.

5.9.2.2 common modules

common modules work very similar to *side-by-side* modules except the import statements are done in the “main” `__init__.py` file in *Property Model directory*.

You are required to:

- Add a `__init__.py` file to your property model folder.
- Add all imports of *common* modules in your main property model python file also to both the `__init__.py` file in *Property Model directory* AND the `__init__.py` of the property model.

Example:

CriticalTemperaturesPythonModel.py (The main Property Model file):

```
from PropertyModels import Martensite
from tc_python import *

class CriticalTemperaturesPythonModel(PropertyModel):
    ...
```

`__init__.py`: (The init file located in the property model folder)

```
from PropertyModels import Martensite
```

`__init__.py`: (The init file located in *Property Model directory*)

```
from PropertyModels.common.martensite_library import Martensite
```

The file `critical_temperatures_library.py` should in this example be located in a folder called `common` in the *Property Model directory*.

critical_temperatures_library.py:

```

from tc_python import *
import numpy as np
from scipy import optimize
from enum import Enum

class CriticalTemperatures(object):
    ...

```

Note: *common* modules must be located in folder called *common*.

5.9.3 Alternative Python for Property Models

5.9.3.1 Default bundled Python interpreter

Thermo-Calc is by default using a Python 3 interpreter bundled to the software for running the property models. It is containing the following major packages:

Package
colour-science
matplotlib
numpy
scikit-learn
scipy
pandas
pyvista
TC-Python
tmm

Warning: Any changes to the interpreter packages can therefore break Thermo-Calc and should be avoided. If the installation gets broken, it can be fixed by reinstalling Thermo-Calc after having removed it.

Please contact the Thermo-Calc support if you think that further packages might be useful in future releases. If these packages are insufficient for you, it is possible to use another Python-interpreter: [Configuring another Python interpreter](#).

The interpreter is located in different places depending on the platform:

Operating system	Path to the bundled Python-interpreter
Windows (all users)	C:\Program Files\Thermo-Calc\2026b\python\python.exe
Windows (single user)	C:\Users\UserName\AppData\Local\Programs\Thermo-Calc\2026b\python\python.exe
Linux	/home/UserName/Thermo-Calc/2026b/python/bin/python3
MacOS	/Applications/Thermo-Calc-2026b.app/Contents/Resources/python/bin/python3

5.9.3.2 Configuring another Python interpreter

If you require additional Python-packages or prefer to use your own interpreter installed on your system, you can change the interpreter used by Thermo-Calc to run the property models. Select **Tools**→**Options** in the Thermo-Calc GUI and modify the path to that of your Python 3 interpreter of choice:

Property model Python interpreter:

5.10 Process Metallurgy Calculations

5.10.1 Equilibrium calculations with changing elements between calculations

It is possible to add, change or remove additions after performing an equilibrium calculation using `tc_python.process_metallurgy.equilibrium.EquilibriumCalculation.calculate()`. This will change the elements being present in the system if the elements of the additions are differing. The Process Metallurgy Module will handle this situation by reloading the database with the latest set of elements. While this is an appropriate approach in most cases, there can be some disadvantages: reloading the database takes some time and the internal engine state is lost, which may lead to successive calculations failures in some situations.

To avoid the database reload, it is possible to **add the respective elements to additions being present in all calculations (with a zero-fraction)**:

```
from tc_python import *

with TCPython() as session:
    calc = session.with_metallurgy().with_adiabatic_equilibrium_
    ↪calculation(ProcessDatabase.OXDEMO)

    # add the element Al with zero-fraction already
    steel = EquilibriumAddition({'Fe': None, 'C': 4, 'Al': 0}, amount=100.0e3, ↪
    ↪temperature=1700 + 273.15)
    ↪slag = EquilibriumAddition({'CaO': 70, 'SiO2': 30}, amount=3.0e3, temperature=1700 ↪
    ↪273.15)

    al_addition = EquilibriumAddition({'Al': 100}, amount=1.0e3)

    (calc
     .add_addition(steel)
     .add_addition(slag))

    result_1 = calc.calculate()

    calc.add_addition(al_addition)

    result_2 = calc.calculate()
    # evaluate the result as required ...
```

Or to add a later addition already before the first call to `calculate()` with a zero amount:

```
from tc_python import *

with TCPython() as session:
```

(continues on next page)

(continued from previous page)

```

calc = session.with_metallurgy().with_adiabatic_equilibrium_
↪calculation(ProcessDatabase.OXDEMO)

steel = EquilibriumAddition({'Fe': None, 'C': 4}, amount=100.0e3, temperature=1700 +_
↪273.15)
slag = EquilibriumAddition({'CaO': 70, 'SiO2': 30}, amount=3.0e3, temperature=1700 +_
↪273.15)

# add the addition for now with zero-amount
al_addition = EquilibriumAddition({'Al': 100}, amount=0)

(calc
 .add_addition(al_addition)
 .add_addition(steel)
 .add_addition(slag))

result_1 = calc.calculate()

calc.update_addition(al_addition.set_amount(1.0e3))

result_2 = calc.calculate()
# evaluate the result as required ...

```

5.10.2 Zones

TC-Python is providing a *framework* for building time-dependent kinetic simulations of industrial and academic metallurgical processes where liquid phases are important. It is based on an *Effective Equilibrium Reaction Zone* (EERZ) approach which is separating a process into different zones. These zones have identical temperature and composition and are called *bulk zones*. Such zones can be in contact and react with each other by *reaction zones*. That means a *reaction zone* is modelling the interface between two *bulk zones*. One bulk zone is typically the steel melt and another bulk zone the top slag.

5.10.3 Applications

While this approach can in principle be extended to any number of zones, in the current release TC-Python is providing **only one reaction zone**. Practical work has however proven that this limitation is not critical for a lot of industrial processes, including ladle furnaces, AOD- and VOD-converters. Even more processes can be modelled with some limit of accuracy.

The reason for the power of the current implementation is that a number of important process features can be included:

- heating (`tc_python.process_metallurgy.process.Zone.add_power()`)
- cooling (`tc_python.process_metallurgy.process.Zone.add_power()`)
- heat transfer between bulk zones (`tc_python.process_metallurgy.process.ReactionZone.add_heat_transfer()`)
- inclusion formation
- inclusion flotation and other transfer of phase groups between bulk zones (`tc_python.process_metallurgy.process.ReactionZone.add_transfer_of_phase_group()`)

- addition of material and gas at any time in any zone (`tc_python.process_metallurgy.process.Zone.add_addition()` / `tc_python.process_metallurgy.process.Zone.add_continuous_addition()`)
- an exhaust gas zone collecting all formed gas (`tc_python.process_metallurgy.process.ProcessSimulationResult.get_exhaust_gas()`)
- time-dependent definition of most parameters (e.g., mass transfer coefficient, transfer of phase group, heating, etc.)

Please note that many of these features are called as well a *reaction zone* in other EERZ model implementations.

5.10.4 Implementation of practical process models

The Process Metallurgy Module has been successfully applied to a number of industrial processes.

Due to the broad range of industrial metallurgical processes, TC-Python is not providing ready-to-use models for certain processes. There are however examples available for common processes and this collection will be extended over time. The implementation of a model is an abstraction of the real process and should always be kept as simple as possible. Practical experience has proven that in many situations not more than one *reaction zone* is required.

The mass transfer coefficient is a fundamental parameter describing the kinetics in a *reaction zone* and is generally an empirical parameter. It depends however mostly on the geometry and stirring conditions in the process and not on the material compositions. Further on, the mass transfer coefficient has usually typical values for a given process - regardless of the actual furnace. That means that existing suggestions from the literature can be used as a starting point to derive the actual mass transfer coefficient for the process of interest.

6.1 Calculations

6.1.1 Module “single_equilibrium”

class `tc_python.single_equilibrium.AbstractSingleEquilibriumCalculation`(*calculator*)

Bases: *AbstractCalculation*

Abstract configuration required for a single equilibrium calculation.

Note: This is an abstract class that cannot be used directly.

disable_global_minimization()

Turns the global minimization completely off.

Returns

This *SingleEquilibriumCalculation* object

enable_global_minimization()

Turns the global minimization on (using the default settings).

Returns

This *SingleEquilibriumCalculation* object

get_components() → List[str]

Returns a list of components in the system (including all components auto-selected by the database(s)).

Returns

The components

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *SingleEquilibriumCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

set_component_to_entered(*component: str*)

Sets the specified component to the status ENTERED, that is the default state.

Parameters

component – The component name or *ALL_COMPONENTS*

Returns

This *SingleEquilibriumCalculation* object

set_component_to_suspended(*component: str, reset_conditions: bool = False*)

Sets the specified component to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

- **reset_conditions** – if ‘True’ also remove composition conditions for the component if they are defined
- **component** – The component name or *ALL_COMPONENTS*

Returns

This *SingleEquilibriumCalculation* object

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *SingleEquilibriumCalculation* object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *SingleEquilibriumCalculation* object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or *ALL_PHASES* for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This *SingleEquilibriumCalculation* object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This *SingleEquilibriumCalculation* object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *SingleEquilibriumCalculation* object

with_options(*options: SingleEquilibriumOptions*)

Sets the simulation options.

Parameters

options – The simulation options

Returns

This *SingleEquilibriumCalculation* object

with_reference_state(*component: str, phase: str = 'SER', temperature: float = -1.0, pressure: float = 100000.0*)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

Returns

This *SingleEquilibriumCalculation* object

with_system_modifications(*system_modifications*: SystemModifications)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *SingleEquilibriumCalculation* object

```
class tc_python.single_equilibrium.SingleEquilibriumCalculation(calculator)
```

Bases: *AbstractSingleEquilibriumCalculation*

Configuration for a single equilibrium calculation.

Note: Specify the conditions and possibly other settings, the calculation is performed with *calculate()*.

bookmark_state(*bookmark_id: str = ""*) → str

Puts a “bookmark” on the current calculation-state of the calculator allowing the program to return to this state later as needed.

By bookmarking a state, you can simplify the convergence of equilibria when they strongly depend on the starting conditions (i.e. the state). Also use it to improve performance by running a calculation, then bookmarking it, and later returning to it for other equilibria whose conditions are “close” to the bookmarked equilibrium.

This method is used in combination with the method `set_state_to_bookmark()`.

Parameters

bookmark_id – The bookmark id. If omitted a generated id is used and returned

Returns

The bookmark id

calculate() → *SingleEquilibriumTempResult*

Performs the calculation and provides a temporary result object that is only valid until something gets changed in the calculation state. The method `calculate()` is the default approach and should be used in most cases.

Returns

A new *SingleEquilibriumTempResult* object which can be used to get specific values from the calculated result. It is undefined behavior to use that object after the state of the calculation has been changed.

Warning: If the result object should be valid for the whole program lifetime, use `calculate_with_state()` instead.

calculate_with_state(*timeout_in_minutes: float = 0.0*) → *SingleEquilibriumResult*

Performs the calculation and provides a result object that reflects the present state of the calculation during the whole lifetime of the object.

Note: Because this method has performance and temporary disk space overhead (i.e. it is resource heavy), only use it when it is necessary to access the result object after the state is changed. In most cases you should use the method `calculate()`.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than `timeout_in_minutes`, a `UnrecoverableCalculationException` will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A new *SingleEquilibriumResult* object which can be used later at any time to get specific values from the calculated result.

disable_global_minimization()

Turns the global minimization completely off.

Returns

This *SingleEquilibriumCalculation* object

enable_global_minimization()

Turns the global minimization on (using the default settings).

Returns

This *SingleEquilibriumCalculation* object

get_components() → List[str]

Returns a list of components in the system (including all components auto-selected by the database(s)).

Returns

The components

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_interfacial_energy(*matrix_phase: str, precipitate_phases: List[str], zero_volume_elements: List[str] = ['C', 'N']*) → Dict[str, float]

Estimates the interfacial energy between a matrix phase and a precipitate phase using thermodynamic data from a CALPHAD database. The approximation model is based on Becker's bond energy approach.

Default: elements with no contribution to volume are C and N.

Parameters

- **matrix_phase** – The matrix phase.
- **precipitate_phases** – The list of precipitate phases for which interfacial energy between them and the matrix phase is to be calculated.
- **zero_volume_elements** – The elements that are assumed to not contribute to the volume.

Returns

A dictionary containing interfacial energy per precipitate phase.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as *.tdb-file.

Returns

The system data

remove_all_conditions()

Removes all set conditions.

Returns

This *SingleEquilibriumCalculation* object

remove_condition(*quantity: Union[ThermodynamicQuantity, str]*)

Removes the specified condition.

Parameters

quantity – the thermodynamic quantity to set as condition; a Console Mode syntax string can be used as an alternative (for example “X(Cr)”)

Returns

This *SingleEquilibriumCalculation* object

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *SingleEquilibriumCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

set_component_to_entered(*component: str*)

Sets the specified component to the status ENTERED, that is the default state.

Parameters

component – The component name or *ALL_COMPONENTS*

Returns

This *SingleEquilibriumCalculation* object

set_component_to_suspended(*component: str, reset_conditions: bool = False*)

Sets the specified component to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

- **reset_conditions** – if ‘True’ also remove composition conditions for the component if they are defined
- **component** – The component name or *ALL_COMPONENTS*

Returns

This *SingleEquilibriumCalculation* object

set_condition(*quantity: Union[ThermodynamicQuantity, str], value: float*)

Sets the specified condition.

Parameters

- **quantity** – The thermodynamic quantity to set as condition; a Console Mode syntax string can be used as an alternative (for example “X(Cr)”)
- **value** – The value of the condition

Returns

This *SingleEquilibriumCalculation* object

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *SingleEquilibriumCalculation* object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *SingleEquilibriumCalculation* object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or *ALL_PHASES* for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This *SingleEquilibriumCalculation* object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This *SingleEquilibriumCalculation* object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *SingleEquilibriumCalculation* object

set_state_to_bookmark(*bookmark_id: str*) → *SingleEquilibriumTempResult*

Resets the calculation state to a previously bookmarked state.

After calling this method, the calculation behaves exactly as it would after the bookmarked calculation ran.

This method is used in combination with the method *bookmark_state()*.

Parameters

bookmark_id – The bookmark id of the state to return to.

Returns

A new *SingleEquilibriumTempResult* object which can be used to get specific values from the calculated result. It is undefined behavior to use that object after the state of the calculation has been changed.

with_options(*options: SingleEquilibriumOptions*)

Sets the simulation options.

Parameters

options – The simulation options

Returns

This *SingleEquilibriumCalculation* object

with_reference_state(*component: str, phase: str = 'SER', temperature: float = -1.0, pressure: float = 100000.0*)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

Returns

This *SingleEquilibriumCalculation* object

with_system_modifications(*system_modifications*: SystemModifications)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *SingleEquilibriumCalculation* object

class tc_python.single_equilibrium.SingleEquilibriumOptions

Bases: object

General simulation conditions for the thermodynamic calculations.

disable_approximate_driving_force_for_metastable_phases()

Disables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use *disable_approximate_driving_force_for_metastable_phases* to force the calculation to converge for the metastable phases.

Returns

This *SingleEquilibriumOptions* object

disable_control_step_size_during_minimization()

Disables stepsize control during minimization (non-global).

Default: Enabled

Returns

This *SingleEquilibriumOptions* object

disable_force_positive_definite_phase_hessian()

Disables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This *SingleEquilibriumOptions* object

enable_approximate_driving_force_for_metastable_phases()

Enables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use `disable_approximate_driving_force_for_metastable_phases` to force the calculation to converge for the metastable phases.

Returns

This `SingleEquilibriumOptions` object

enable_control_step_size_during_minimization()

Enables stepsize control during normal minimization (non-global).

Default: Enabled

Returns

This `SingleEquilibriumOptions` object

enable_force_positive_definite_phase_hessian()

Enables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This `SingleEquilibriumOptions` object

set_global_minimization_max_grid_points (*max_grid_points: int = 2000*)

Sets the maximum number of grid points in global minimization. **Only applicable if global minimization is actually used.**

Default: 2000 points

Parameters

max_grid_points – The maximum number of grid points

Returns

This `SingleEquilibriumOptions` object

set_max_no_of_iterations (*max_no_of_iterations: int = 500*)

Set the maximum number of iterations.

Default: max. 500 iterations

Note: As some models give computation times of more than 1 CPU second/iteration, this number is also used to check the CPU time and the calculation stops if 500 CPU seconds/iterations are used.

Parameters

max_no_of_iterations – The max. number of iterations

Returns

This `SingleEquilibriumOptions` object

set_required_accuracy(*accuracy: float = 1e-06*)

Sets the required relative accuracy.

Default: 1.0E-6

Note: This is a relative accuracy, and the program requires that the relative difference in each variable must be lower than this value before it has converged. A larger value normally means fewer iterations but less accurate solutions. The value should be at least one order of magnitude larger than the machine precision.

Parameters

accuracy – The required relative accuracy

Returns

This *SingleEquilibriumOptions* object

set_smallest_fraction(*smallest_fraction: float = 1e-12*)

Sets the smallest fraction for constituents that are unstable.

It is normally only in the gas phase that you can find such low fractions.

The **default value** for the smallest site-fractions is 1E-12 for all phases except for IDEAL phase with one sublattice site (such as the GAS mixture phase in many databases) for which the default value is always as 1E-30.

Parameters

smallest_fraction – The smallest fraction for constituents that are unstable

Returns

This *SingleEquilibriumOptions* object

class `tc_python.single_equilibrium.SingleEquilibriumResult`(*result*)

Bases: *AbstractResult*

Result of a single equilibrium calculation, it can be evaluated using a Quantity or Console Mode syntax.

change_pressure(*pressure: float*)

Change the pressure and re-evaluate the results from the equilibrium without minimizing Gibbs energy, i.e. with higher performance. The properties are calculated at the new pressure using the phase amount, temperature and composition of phases from the initial equilibrium. Use *get_value_of()* to obtain them.

Parameters

pressure – The pressure [Pa]

Returns

This *SingleEquilibriumCalculation* object

change_temperature(*temperature: float*)

Change the temperature and re-evaluate the results from the equilibrium without minimizing Gibbs energy, i.e. with high performance. The properties are calculated at the new temperature using the phase amount, pressure and composition of phases from the initial equilibrium. Use *get_value_of()* to obtain them.

Note: This is typically used when calculating room temperature properties (e.g. density) for a material when it is assumed that the equilibrium phase amount and composition freeze-in at a higher temperature during cooling.

Parameters**temperature** – The temperature [K]**Returns**This *SingleEquilibriumCalculation* object**get_components()** → List[str]

Returns the names of the components selected in the system (including any components auto-selected by the database(s)).

Returns

The names of the selected components

get_conditions() → List[str]

Returns the conditions.

Returns

The selected conditions

get_phases() → List[str]Returns the phases present in the system due to its configuration. It also contains all phases that have been automatically added during the calculation, this is the difference to the method `System.get_phases_in_system()`.**Returns**

The names of the phases in the system including automatically added phases

get_stable_phases() → List[str]

Returns the stable phases (i.e. the phases present in the current equilibrium).

Returns

The names of the stable phases

get_value_of(*quantity*: Union[ThermodynamicQuantity, str]) → float

Returns a value from a single equilibrium calculation.

Parameters**quantity** – The thermodynamic quantity to get the value of; a Console Mode syntax strings can be used as an alternative (for example “NPM(FCC_A1)”)**Returns**

The requested value

run_poly_command(*command*: str)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine. This affects only the state of the result object.

Parameters**command** – The Thermo-Calc Console Mode command**Returns**This *SingleEquilibriumCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

save_to_disk(*path: str*)

Saves the result to disk. Note that the result is a folder, containing potentially many files. The result can later be loaded with `load_result_from_disk()`

Parameters

path – the path to the folder you want the result to be saved in. It can be relative or absolute.

Returns

this *SingleEquilibriumResult* object

class `tc_python.single_equilibrium.SingleEquilibriumTempResult`(*result*)

Bases: *AbstractResult*

Result of a single equilibrium calculation that is only valid until something gets changed in the calculation state. It can be evaluated using a Quantity or Console Mode syntax.

Warning: Note that it is undefined behavior to use that object after something has been changed in the state of the calculation, this will result in an `InvalidResultStateException` exception being raised.

change_pressure(*pressure: float*)

Change the pressure and re-evaluate the results from the equilibrium without minimizing Gibbs energy, i.e. with higher performance. The properties are calculated at the new pressure using the phase amount, temperature and composition of phases from the initial equilibrium. Use `get_value_of()` to obtain them.

Parameters

pressure – The pressure [Pa]

Returns

This *SingleEquilibriumCalculation* object

change_temperature(*temperature: float*)

Change the temperature and re-evaluate the results from the equilibrium without minimizing Gibbs energy, i.e. with high performance. The properties are calculated at the new temperature using the phase amount, pressure and composition of phases from the initial equilibrium. Use `get_value_of()` to obtain them.

Note: This is typically used when calculating room temperature properties (e.g. density) for a material when it is assumed that the equilibrium phase amount and composition freeze-in at a higher temperature during cooling.

Parameters

temperature – The temperature [K]

Returns

This *SingleEquilibriumCalculation* object

get_components() → List[str]

Returns the names of the components selected in the system (including any components auto-selected by the database(s)).

Returns

The names of the selected components

Raises

InvalidResultStateException – If something has been changed in the state of the calculation since that result object has been created

`get_conditions()` → List[str]

Returns the conditions.

Returns

List containing the selected conditions

Raises

InvalidResultStateException – If something has been changed in the state of the calculation since that result object has been created

`get_phases()` → List[str]

Returns the phases present in the system due to its configuration. It also contains all phases that have been automatically added during the calculation, this is the difference to the method `System.get_phases_in_system()`.

Returns

The names of the phases in the system including automatically added phases

Raises

InvalidResultStateException – If something has been changed in the state of the calculation since that result object has been created

`get_stable_phases()` → List[str]

Returns the stable phases (i.e. the phases present in the current equilibrium).

Returns

The names of the stable phases

Raises

InvalidResultStateException – If something has been changed in the state of the calculation since that result object has been created

`get_value_of(quantity: Union[ThermodynamicQuantity, str])` → float

Returns a value from a single equilibrium calculation.

Parameters

quantity – The thermodynamic quantity to get the value of; a Console Mode syntax strings can be used as an alternative (for example “NPM(FCC_A1)”)

Returns

The requested value

Raises

InvalidResultStateException – If something has been changed in the state of the calculation since that result object has been created

`run_poly_command(command: str)`

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *SingleEquilibriumCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

6.1.2 Module “batch_equilibrium”

`class tc_python.batch_equilibrium.BatchEquilibriumCalculation(calculator)`

Bases: *AbstractCalculation*

Configuration for a series of single equilibrium calculations performed in a vectorized fashion.

Note: Specify the conditions and call *calculate()*.

Tip: The performance of batch equilibrium calculations can be significantly better than looping and using *SingleEquilibriumCalculation* if the actual Thermo-Calc calculation is fast. There is little advantage if the Thermo-Calc equilibrium calculations take a long time (typically for large systems and databases).

calculate(quantities: List[Union[ThermodynamicQuantity, str]], logging_frequency: int = 10, timeout_in_minutes: float = 0.0) → *BatchEquilibriumResult*

Runs the batch equilibrium calculation. The calculated *BatchEquilibriumResult* can then be queried for the values of the quantities specified.

Example:

```
>>> quantities = ['G', 'X(BCC)']
```

Parameters

- **quantities** – A list of the quantities to be calculated.
- **logging_frequency** – Determines how often logging should be done.
- **timeout_in_minutes** – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *BatchEquilibriumResult* which later can be used to get specific values from the calculated result.

disable_global_minimization()

Turns the global minimization completely off.

Returns

This *BatchEquilibriumCalculation* object

enable_global_minimization()

Turns the global minimization on (using the default settings).

Returns

This *BatchEquilibriumCalculation* object

get_components() → List[str]

Returns a list of components in the system (including all components auto-selected by the database(s)).

Returns

The components

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as *.*tdb*-file.

Returns

The system data

remove_all_conditions()

Removes all set conditions.

Returns

This *BatchEquilibriumCalculation* object

remove_condition(*quantity: Union[ThermodynamicQuantity, str]*)

Removes the specified condition.

Parameters

quantity – the thermodynamic quantity to set as condition; a Console Mode syntax string can be used as an alternative (for example “X(Cr)”)

Returns

This *BatchEquilibriumCalculation* object

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *BatchEquilibriumCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

set_component_to_entered(*component: str*)

Sets the specified component to the status ENTERED, that is the default state.

Parameters

component – The component name or *ALL_COMPONENTS*

Returns

This *BatchEquilibriumCalculation* object

set_component_to_suspended(*component: str, reset_conditions: bool = False*)

Sets the specified component to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

- **reset_conditions** – if ‘True’ also remove composition conditions for the component if they are defined
- **component** – The component name or *ALL_COMPONENTS*

Returns

This *BatchEquilibriumCalculation* object

set_condition(*quantity: Union[ThermodynamicQuantity, str], value: float*)

Sets the specified condition.

Parameters

- **quantity** – The thermodynamic quantity to set as condition; a Console Mode syntax string can be used as an alternative (for example “X(Cr)”)
- **value** – The value of the condition

Returns

This *BatchEquilibriumCalculation* object

set_conditions_for_equilibria(*equilibria: List[List[Tuple[Union[ThermodynamicQuantity, str], float]]]*)

Set the conditions of the equilibria to be calculated.

This is done by sending a list of equilibria at once.

Each equilibrium itself is a list of conditions that will be changed for that equilibrium.

A condition is described by a tuple containing:

1. A Console Mode syntax string or a *ThermodynamicQuantity* instance,
2. A float value specifying the value of the condition.

Example:

```
>>> [[('T', 800), ('X(Cr)', 0.1)], [('T', 850), ('X(Cr)', 0.11)]]
```

You can use `ThermodynamicQuantity` instead of a Console Mode syntax string when specifying type of condition.

Example:

```
>>> [[(ThermodynamicQuantity.temperature(), 800), (ThermodynamicQuantity.mole_
↪fraction_of_a_component('Cr'), 0.1)], [(ThermodynamicQuantity.temperature(),
↪850), (ThermodynamicQuantity.mole_fraction_of_a_component('Cr'), 0.15)]]
```

Parameters

equilibria – The list of equilibria

Returns

This *BatchEquilibriumCalculation* object

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *BatchEquilibriumCalculation* object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *BatchEquilibriumCalculation* object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or *ALL_PHASES* for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This *BatchEquilibriumCalculation* object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This *BatchEquilibriumCalculation* object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *BatchEquilibriumCalculation* object

with_options(*options: SingleEquilibriumOptions*)

Sets the simulation options.

Parameters

options – The simulation options

Returns

This *BatchEquilibriumCalculation* object

with_reference_state(*component: str, phase: str = 'SER', temperature: float = -1.0, pressure: float = 100000.0*)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

Returns

This *BatchEquilibriumCalculation* object

with_system_modifications(*system_modifications*: SystemModifications)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *BatchEquilibriumCalculation* object

class tc_python.batch_equilibrium.BatchEquilibriumResult(*result*)

Bases: object

Result of a batch equilibrium calculation. This can be used to query for specific values.

get_values_of(*quantity*: Union[ThermodynamicQuantity, str]) → List[float]

Returns values from a batch equilibrium calculation.

Warning: The quantity must be one of the quantities specified for the *BatchEquilibriumCalculation* object that created the result object.

Example:

```
>>> batch_result = batch_calculation.calculate(quantities = ['G', 'X(BCC)'])
>>> batch_result.get_values_of('G')
```

Parameters

quantity – the thermodynamic quantity to get the value of; a Console Mode syntax strings can be used as an alternative (for example “NPM(FCC_A1)”)

invalidate()

Invalidates the object and frees the disk space used by it.

Note: This is only required if the disk space occupied by the object needs to be released during the calculation. No data can be retrieved from the object afterwards.

6.1.3 Module “precipitation”

class tc_python.precipitation.FixedGrainSize(*grain_radius*: float = 0.0001)

Bases: *GrainGrowthModel*

set_grain_aspect_ratio(*grain_aspect_ratio*: float = 1.0)

Enter a numerical value. **Default:** 1.0.

Parameters

grain_aspect_ratio – The grain aspect ratio [-]

class tc_python.precipitation.**GrainGrowth**(*grain_size_distribution*: GrainSizeDistribution)

Bases: *GrainGrowthModel*

disable_zener_pinning()

Disable Zener pinning to ignore the particle pinning effect on the grain growth. Zener pinning is by default disabled when no grain size distribution is defined, i.e. a single constant grain size is used. The setting is by default enabled when a grain size distribution is defined.

Returns

This *GrainSizeDistribution* object

enable_zener_pinning()

Enable Zener pinning to simulate the particle pinning effect on the grain growth. The setting is by default enabled when a grain size distribution is defined.

Returns

This *GrainSizeDistribution* object

set_grain_boundary_energy(*energy*: float = 0.5)

Set the energy of the grain boundary.

Parameters

energy – The grain boundary energy [J/m²]

Returns

This *GrainSizeDistribution* object

set_grain_boundary_mobility_activation_energy(*activation_energy*: float = 242000.0)

Set the grain boundary mobility activation energy where the mobility is defined by an Arrhenius type of equation.

Parameters

activation_energy – The mobility activation energy [J/mol]

Returns

This *GrainSizeDistribution* object

set_grain_boundary_mobility_pre_factor(*pre_factor*: float = 0.004)

Set the grain boundary mobility prefactor where the mobility is defined by an Arrhenius type of equation.

Parameters

pre_factor – The grain boundary mobility pre factor [m⁴/(J s)]

Returns

This *GrainSizeDistribution* object

class tc_python.precipitation.**GrainGrowthModel**

Bases: object

Factory class providing objects representing a grain growth model.

classmethod **fixed_grain_size**(*grain_radius*: float = 0.0001)

Fixed grain radius size. **Default:** 1.0E-4 m

Parameters

grain_radius – The grain radius / size [m]

classmethod **grain_growth**(*grain_size_distribution*: GrainSizeDistribution)

Sets the initial grain size distribution for the matrix. **Default:** If the initial grain size distribution is not explicitly provided, a constant average grains size will be used and no grain growth evaluated during the simulation.

Tip: Use this option if you want to study the further evolution of an existing microstructure.

Parameters

grain_size_distribution – grain size distribution

class tc_python.precipitation.**GrainSizeDistribution**

Bases: object

Represents the grain size distribution at a certain time.

add_radius_and_number_density(radius: float, number_density: float)

Adds a radius and number density pair to the grain size distribution.

Parameters

- **radius** – The radius [m]
- **number_density** – The number of grains per unit volume per unit length [m⁻⁴]

Returns

This *GrainSizeDistribution* object

class tc_python.precipitation.**GrowthRateModel**(value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None)

Bases: Enum

Choice of the used **growth rate model** for a precipitate.

The most efficient model is the *Simplified model*, which is the default and applicable to most alloy systems under the assumption that either the supersaturation is small, or the alloying elements have comparable diffusivity. If all alloying elements are substitutional but they have remarkable diffusivity difference, e.g. in Al-Zr system, or if the diffusivity is strongly composition-dependent, the *General model* is preferred. If the supersaturation is high, and meanwhile there are fast-diffusing interstitial elements such as C, the *Advanced model* is more appropriate to capture the NPLE mechanism.

ADVANCED = 3

The **advanced model** has been proposed by *Chen, Jeppsson, and Ågren (CJA) (2008)* and calculates the velocity of a moving phase interface in multicomponent systems by identifying the operating tie-line from the solution of the flux-balance equations. This model can treat both high supersaturation and cross-diffusion rigorously. Spontaneous transitions between different modes (LE and NPLE) of phase transformation can be captured without any ad-hoc treatment.

Note: Since it is not always possible to solve the flux-balance equations and it takes time, usage of a less rigorous but simple and efficient model is preferred if possible.

GENERAL = 5

The **general model** is based on the *Morral-Purdy* model, which follows the same quasi-steady state approximation as the *Simplified model*, but improves it by taking the cross-diffusion into account.

NPLE = 11

The **Non-Partitioning Local Equilibrium (NPLE) growth rate model** is only available for alloy systems where Fe is the major element and at least one interstitial element partitions into the precipitate phase. *This model is specifically designed to deal with the fast diffusion of interstitial elements (C, N, etc.) in Fe alloys.* Based on the *Simplified growth model*, it still holds a local equilibrium condition at the migrating interface. It chooses a tie-line under NPLE condition so that the u-fractions of all substitutional elements and minor

interstitial elements in the precipitate phase are the same as those in the far-field matrix phase (i.e. the overall instantaneous matrix composition).

PARA_EQ = 10

The **para-equilibrium model** is only available for alloy systems where *Fe* is the major element and *C* is the only interstitial element, which also partitions into the precipitate phase. The interstitial elements, e.g. *C*, *N*, etc., usually have remarkably faster diffusion rate than the substitutional elements. Meanwhile, they are assumed to have negligible volume contribution, and as a result the composition variables are replaced by u-fractions when interstitial elements are included in the system. *This model is specifically designed to address the fast diffusion of C in Fe alloys.* Based on the *Simplified growth rate model* it holds a para-equilibrium condition at the migrating interface. Contrary to the regular ortho-equilibrium condition state that assumes that all alloying elements are in equilibrium at the interface, the para-equilibrium assumes only equilibrium for *C*. The substitutional elements are immobile and thus have the same compositions (u-fractions) across the interface.

PE_AUTOMATIC = 12

The PE Automatic model enables the smooth transition from Paraequilibrium growth rate model to Simplified growth rate model. The rate of transition process is dependent on the relative differences in diffusion between *C* and substitutional elements, as well as the differences in driving force between paraequilibrium and ortho-equilibrium.

SIMPLIFIED = 2

The **simplified model** is based on the *advanced model* but avoids the difficulty of finding the operating tie-line and uses instead the tie-line across the bulk composition. **This is the default growth rate model.**

```
class tc_python.precipitation.InputEnergyOption(value, names=None, *, module=None,
                                                qualname=None, type=None, start=1,
                                                boundary=None)
```

Bases: Enum

Options for applying a Gibbs energy contribution to a precipitate phase.

JOULE_PER_MOLE_FORMULA_UNIT = 2

Sets the energy unit to Joules per mole formula unit of the phase.

JOULE_PER_MOLE_SUBSTITUTIONAL_ATOM = 1

Sets the energy unit to Joules per substitutional atom.

```
class tc_python.precipitation.MatrixPhase(matrix_phase_name: str)
```

Bases: object

The matrix phase in a precipitation calculation

```
add_precipitate_phase(precipitate_phase: PrecipitatePhase)
```

Adds a precipitate phase.

Parameters

precipitate_phase – The precipitate phase

```
set_dislocation_density(dislocation_density: float = 5000000000000.0)
```

Enter a numerical value. **Default:** 5.0E12 m⁻².

Parameters

dislocation_density – The dislocation density [m⁻²]

```
set_mobility_adjustment(element: str = 'all', prefactor: float = 1.0, activation_energy: float = 0.0)
```

A value that adds to the activation energy of mobility data from the database.

Parameters

- **element** – The element to apply the adjustment for. If “all” is given, adjustment will apply to all elements.
- **prefactor** – A parameter that multiplies to the mobility data from a database. This value scales the mobility by a constant amount. This can be useful, for example, when the material has a higher than normal vacancy concentration at the start of the precipitation simulation (e.g. from a prior solutionizing and quenching treatment).
- **activation_energy** – A value that adds to the activation energy of mobility data from a database. It scales the mobility by a temperature dependent amount. Similar usage as mobility adjustment prefactor. [J/mol]

set_molar_volume(*volume: float*)

Sets the molar volume of the phase.

Default: If not set, the molar volume is taken from the thermodynamic database (or set to $7.0e-6 \text{ m}^3/\text{mol}$ if the database contains no molar volume information).

Parameters

volume – The molar volume [m^3/mol]

with_elastic_properties_cubic(*c11: float, c12: float, c44: float*)

Sets the elastic properties to “cubic” and specifies the elastic stiffness tensor components. **Default:** if not chosen, the default is DISREGARD

Parameters

- **c11** – The stiffness tensor component c11 [GPa]
- **c12** – The stiffness tensor component c12 [GPa]
- **c44** – The stiffness tensor component c44 [GPa]

with_elastic_properties_disregard()

Set to disregard to ignore the elastic properties. **Default:** This is the default option

with_elastic_properties_isotropic(*shear_modulus: float, poisson_ratio: float*)

Sets elastic properties to isotropic. **Default:** if not chosen, the default is DISREGARD

Parameters

- **shear_modulus** – The shear modulus [GPa]
- **poisson_ratio** – The Poisson’s ratio [-]

with_grain_growth_model(*grain_growth_model: GrainGrowthModel*)

Sets the model for grain growth. Either fixed size or with a starting distribution

Default: Fixed grain radius size $1.0E-4 \text{ m}$

Parameters

grain_growth_model – the grain growth model

class tc_python.precipitation.NumericalParameters

Bases: object

Numerical parameters

disable_interpolation_scheme()

Configures the simulation not use *any interpolation scheme*. **Default:** To not use the interpolation scheme.

Note: The interpolation scheme can be switched on by using *with_linear_interpolation_scheme* or *with_logarithmic_interpolation_scheme*.

set_fraction_of_free_memory_to_use(*fraction: float*)

Sets the maximum fraction of free physical memory to be used by the interpolation scheme. **Default:** 1 / 10 of the free physical memory

Parameters

fraction – The maximum free physical memory fraction to be used

Returns

A new `numerical_parameters` object

set_max_overall_volume_change(*max_overall_volume_change: float = 0.001*)

This defines the maximum absolute (not ratio) change of the volume fraction allowed during one time step. **Default:** 0.001

Parameters

max_overall_volume_change – The maximum absolute (not ratio) change of the volume fraction allowed during one time step [-]

set_max_radius_points_per_magnitude(*max_radius_points_per_magnitude: float = 200.0*)

Sets the maximum number of grid points over one order of magnitude in radius. **Default:** 200.0

Parameters

max_radius_points_per_magnitude – The maximum number of grid points over one order of magnitude in radius [-]

set_max_rel_change_critical_radius(*max_rel_change_critical_radius: float = 0.1*)

Used to place a constraint on how fast the critical radius can vary, and thus put a limit on time step. **Default:** 0.1

Parameters

max_rel_change_critical_radius – The maximum relative change of the critical radius [-]

set_max_rel_change_nucleation_rate_log(*max_rel_change_nucleation_rate_log: float = 0.5*)

This parameter ensures accuracy for the evolution of effective nucleation rate. **Default:** 0.5

Parameters

max_rel_change_nucleation_rate_log – The maximum logarithmic relative change of the nucleation rate [-]

set_max_rel_radius_change(*max_rel_radius_change: float = 0.01*)

The maximum value allowed for relative radius change in one time step. **Default:** 0.01

Parameters

max_rel_radius_change – The maximum relative radius change in one time step [-]

set_max_rel_solute_composition_change(*max_rel_solute_composition_change: float = 0.01*)

Set a limit on the time step by controlling solute depletion or saturation, especially at isothermal stage. **Default:** 0.01

Parameters

max_rel_solute_composition_change – The limit for the relative solute composition change [-]

set_max_time_step(*max_time_step: float = 0.1*)

The maximum time step allowed for time integration as fraction of the simulation time. **Default:** 0.1

Parameters

max_time_step – The maximum time step as fraction of the simulation time [-]

set_max_time_step_during_heating(*max_time_step_during_heating: float = 1.0*)

The upper limit of the time step that has been enforced in the heating stages. **Default:** 1.0 s

Parameters

max_time_step_during_heating – The maximum time step during heating [s]

set_max_volume_fraction_dissolve_time_step(*max_volume_fraction_dissolve_time_step: float = 0.01*)

Sets the maximum volume fraction of subcritical particles allowed to dissolve in one time step. **Default:** 0.01

Parameters

max_volume_fraction_dissolve_time_step – The maximum volume fraction of subcritical particles allowed to dissolve in one time step [-]

set_memory_to_use(*memory_in_megabytes: float*)

Sets the maximum physical memory in megabytes to be used by the interpolation scheme. **Default:** 1000 MBytes of the free physical memory

Parameters

memory_in_megabytes – The maximum physical memory to be used

Returns

A new `numerical_parameters` object

set_min_radius_nucleus_as_particle(*min_radius_nucleus_as_particle: float = 5e-10*)

The cut-off lower limit of precipitate radius. **Default:** 5.0E-10 m

Parameters

min_radius_nucleus_as_particle – The minimum radius of a nucleus to be considered as a particle [m]

set_min_radius_points_per_magnitude(*min_radius_points_per_magnitude: float = 100.0*)

Sets the minimum number of grid points over one order of magnitude in radius. **Default:** 100.0

Parameters

min_radius_points_per_magnitude – The minimum number of grid points over one order of magnitude in radius [-]

set_pre_processing_option(*preprocessing_option: PreProcessingOption*)

Sets the option for enabling pre-processing equilibrium data as a function of temperature. This can be extended to include incipient melting where the incipient melting temperature is approximated for each phase. If the temperature exceeds the incipient melting temperature, the precipitates are removed from the system.

Parameters

preprocessing_option – Specifies if the preprocessing is either turned off, enabled, or enabled with incipient melting.

set_radius_points_per_magnitude(*radius_points_per_magnitude: float = 150.0*)

Sets the number of grid points over one order of magnitude in radius. **Default:** 150.0

Parameters

radius_points_per_magnitude – The number of grid points over one order of magnitude in radius [-]

set_rel_radius_change_class_collision(*rel_radius_change_class_collision: float = 0.5*)

Sets the relative radius change for avoiding class collision. **Default:** 0.5

Parameters

rel_radius_change_class_collision – The relative radius change for avoiding class collision [-]

with_linear_interpolation_scheme(*steps: int = 1000*)

Configures the simulation to use the *linear interpolation scheme*. **Default:** To use the *linear interpolation scheme* with 1000 discretization steps

Parameters

steps – The number of discretization steps in each dimension

Returns

A new `numerical_parameters` object

with_logarithmic_interpolation_scheme(*steps: int = 1000*)

Configures the simulation to use the *logarithmic interpolation scheme*. **Default:** To use the *logarithmic interpolation scheme* with 1000 discretization steps

Parameters

steps – The number of discretization steps in each dimension

Returns

A new `numerical_parameters` object

class `tc_python.precipitation.ParticleSizeDistribution`

Bases: `object`

Represents the state of a microstructure evolution at a certain time including its particle size distribution, composition and overall phase fraction.

add_radius_and_number_density(*radius: float, number_density: float*)

Adds a radius and number density pair to the particle size distribution.

Parameters

- **radius** – The radius [m]
- **number_density** – The number of particles per unit volume per unit length [m⁻⁴]

Returns

This `ParticleSizeDistribution` object

set_initial_composition(*element_name: str, composition_value: float*)

Sets the initial precipitate composition.

Parameters

- **element_name** – The name of the element
- **composition_value** – The composition value [composition unit defined for the calculation]

Returns

This `ParticleSizeDistribution` object

set_volume_fraction_of_phase_type(*volume_fraction_of_phase_type_enum*:
VolumeFractionOfPhaseType)

Sets the type of the phase fraction or percentage. **Default:** By default volume fraction is used.

Parameters

volume_fraction_of_phase_type_enum – Specifies if volume percent or fraction is used

Returns

This *ParticleSizeDistribution* object

set_volume_fraction_of_phase_value(*value*: float)

Sets the overall volume fraction of the phase (unit based on the setting of *set_volume_fraction_of_phase_type()*).

Parameters

value – The volume fraction 0.0 - 1.0 or percent value 0 - 100

Returns

This *ParticleSizeDistribution* object

class tc_python.precipitation.**PreProcessingOption**(*value*, *names=None*, *, *module=None*,
qualname=None, *type=None*, *start=1*,
boundary=None)

Bases: Enum

Options for preprocessing.

OFF = 0

By default, the equilibrium properties are not characterized prior to a simulation.

ON = 1

The equilibrium properties are characterized as a function of temperature prior to the simulation.

ON_WITH_INCIPIENT_MELTING = 2

The equilibrium properties are characterized as a function of temperature, and the approximate incipient melting temperatures are determined for each precipitate phase.

class tc_python.precipitation.**PrecipitateElasticProperties**

Bases: object

Represents the elastic transformation strain of a certain precipitate class.

Note: This class is only relevant if the option *TransformationStrainCalculationOption.USER_DEFINED* has been chosen using *PrecipitatePhase.set_transformation_strain_calculation_option()*. The elastic strain can only be considered for non-spherical precipitates.

set_e11(*e11*: float)

Sets the elastic strain tensor component e11. **Default:** 0.0

Parameters

e11 – The elastic strain tensor component e11

Returns

This *PrecipitateElasticProperties* object

set_e12(*e12*: float)

Sets the strain tensor component e12. **Default:** 0.0

Parameters

e12 – The elastic strain tensor component e12

Returns

This *PrecipitateElasticProperties* object

set_e13(*e13*: float)

Sets the elastic strain tensor component e13. **Default:** 0.0

Parameters

e13 – The elastic strain tensor component e13

Returns

This *PrecipitateElasticProperties* object

set_e22(*e22*: float)

Sets the elastic strain tensor component e22. **Default:** 0.0

Parameters

e22 – The elastic strain tensor component e22

Returns

This *PrecipitateElasticProperties* object

set_e23(*e23*: float)

Sets the elastic strain tensor component e23. **Default:** 0.0

Parameters

e23 – The elastic strain tensor component e23

Returns

This *PrecipitateElasticProperties* object

set_e33(*e33*: float)

Sets the elastic strain tensor component e33. **Default:** 0.0

Parameters

e33 – The elastic strain tensor component e33

Returns

This *PrecipitateElasticProperties* object

```
class tc_python.precipitation.PrecipitateMorphology(value, names=None, *, module=None,
qualname=None, type=None, start=1,
boundary=None)
```

Bases: Enum

Available precipitate morphologies.

CUBOID = 3

Cuboidal precipitates, only available for bulk nucleation.

NEEDLE = 1

Needle-like precipitates, only available for bulk nucleation.

PLATE = 2

Plate-like precipitates, only available for bulk nucleation.

SPHERE = 0

Spherical precipitates, **this is the default morphology.**

class `tc_python.precipitation.PrecipitatePhase`(*precipitate_phase_name: str*)

Bases: `object`

Represents a certain precipitate class (i.e. a group of precipitates with the same phase and settings).

disable_calculate_aspect_ratio_from_elastic_energy()

Disables the automatic calculation of the aspect ratio from the elastic energy of the phase.

Returns

This `PrecipitatePhase` object

Note: If you use this method, you are required to set the aspect ratio explicitly using the method `set_aspect_ratio_value()`.

Default: This is the default setting (with an aspect ratio of 1.0).

disable_driving_force_approximation()

Disables driving force approximation for this precipitate class. **Default:** Driving force approximation is disabled.

Returns

This `PrecipitatePhase` object

enable_calculate_aspect_ratio_from_elastic_energy()

Enables the automatic calculation of the aspect ratio from the elastic energy of the phase. **Default:** The aspect ratio is set to a value of 1.0.

Returns

This `PrecipitatePhase` object

enable_driving_force_approximation()

Enables driving force approximation for this precipitate class. This approximation is often required when simulating precipitation of multiple particles that use the same phase description. E.g. simultaneous precipitation of a Metal-Carbide(MC) and Metal-Nitride(MN) if configured as different composition sets of the same phase FCC_A1. **Default:** Driving force approximation is disabled.

Returns

This `PrecipitatePhase` object

Tip: Use this if simulations with several compositions sets of the same phase cause problems.

set_alias(*alias: str*)

Sets an alias string that can later be used to get values from a calculated result. Typically used when having the same phase for several precipitates, but with different nucleation sites. For example two precipitates of the phase M7C3 with nucleation sites in 'Bulk' and at 'Dislocations'. The alias can be used instead of the phase name when retrieving simulated results.

Parameters

alias – The alias string for this class of precipitates

Returns

This `PrecipitatePhase` object

Note: Typically used when having using the same precipitate phase, but with different settings in the same calculation.

set_aspect_ratio_value(*aspect_ratio_value*: float)

Sets the aspect ratio of the phase. **Default:** An aspect ratio of 1.0.

Parameters

aspect_ratio_value – The aspect ratio value

Returns

This *PrecipitatePhase* object

Note: Only relevant if *disable_calculate_aspect_ratio_from_elastic_energy()* is used (which is the default).

set_energy_addition(*gibbs_energy_addition*: float, *gibbs_energy_addition_unit_enum*:
InputEnergyOption =
InputEnergyOption.JOULE_PER_MOLE_FORMULA_UNIT)

Sets the Gibbs free energy addition and defines the units for the energy addition to the precipitate phase.

Default: 0,0 J/mol and *InputEnergyOption.JOULE_PER_MOLE_FORMULA_UNIT*

Parameters

- **gibbs_energy_addition** – The Gibbs energy addition [J/mol]
- **gibbs_energy_addition_unit_enum** – The chosen option.

Returns

This *PrecipitatePhase* object

set_gibbs_energy_addition(*gibbs_energy_addition*: float)

Sets a Gibbs energy addition per substitutional atom to the Gibbs energy of the phase. **Default:** 0,0 J/mol

Parameters

gibbs_energy_addition – The Gibbs energy addition [J/mol]

Returns

This *PrecipitatePhase* object

set_interfacial_energy(*interfacial_energy*: *Union[str, float]*)

Sets the interfacial energy. **Default:** If the interfacial energy is not set, it is automatically calculated using a broken-bond model.

Parameters

interfacial_energy – A float for the interfacial energy [J/m²] or a string containing a particle size and/or temperature dependent function.

Returns

This *PrecipitatePhase* object

Note: If this method is not called, the calculated interfacial energy shall be used. The calculation of the interfacial energy using a broken-bond model is based on the assumption of an interface between a bcc- and a fcc-crystal structure with (110) and (111) lattice planes regardless of the actual phases.

A constant float value can be entered. Alternatively, a string can be given describing a function capturing the desired dependency on size and/or temperature. The size is given in terms of radius “r” with units of meters. Temperature is defined by “T” and has units of Kelvin.

For example, a smooth step function from 0.05 to 0.11 with the transition at 3nm, this is the function:
“(0.05+0.03) + 0.03*erf((r-3E-9)/1e-9)”

Search the Thermo-Calc help for “Operators and Functions” for a list of operators you can use.

set_interfacial_energy_estimation_prefactor(*interfacial_energy_estimation_prefactor: float*)

Sets the interfacial energy prefactor. **Default:** Prefactor of 1.0 (only relevant if the interfacial energy is automatically calculated).

Parameters

interfacial_energy_estimation_prefactor – The prefactor for the calculated interfacial energy

Returns

This *PrecipitatePhase* object

Note: The interfacial energy prefactor is an amplification factor for the automatically calculated interfacial energy. Example: *interfacial_energy_estimation_prefactor = 2.5 => 2.5 * calculated interfacial energy*

set_molar_volume(*volume: float*)

Sets the molar volume of the precipitate phase. **Default:** The molar volume obtained from the database. If no molar volume information is present in the database, a value of 7.0e-6 m³/mol is used.

Parameters

volume – The molar volume [m³/mol]

Returns

This *PrecipitatePhase* object

set_nucleation_at_dislocations(*number_density=-1*)

Activates nucleation at dislocations for this class of precipitates. Calling the method overrides any other nucleation setting for this class of precipitates. **Default:** If not set, by default bulk nucleation is chosen.

Parameters

number_density – Number density of nucleation sites. If not set, the value is calculated based on the matrix settings (grain size, dislocation density) [m⁻³].

Returns

This *PrecipitatePhase* object

set_nucleation_at_grain_boundaries(*wetting_angle: float = 90.0, number_density: float = -1*)

Activates nucleation at grain boundaries for this class of precipitates. Calling the method overrides any other nucleation setting for this class of precipitates. **Default:** If not set, by default bulk nucleation is chosen.

Parameters

- **wetting_angle** – If not set, a default value of 90 degrees is used
- **number_density** – Number density of nucleation sites. If not set, the value is calculated based on the matrix settings (grain size) [m⁻³].

Returns

This *PrecipitatePhase* object

set_nucleation_at_grain_corners(*wetting_angle: float = 90, number_density: float = -1*)

Activates nucleation at grain corners for this class of precipitates. Calling the method overrides any other nucleation setting for this class of precipitates. **Default:** If not set, by default bulk nucleation is chosen.

Parameters

- **wetting_angle** – If not set, a default value of 90 degrees is used]

- **number_density** – Number density of nucleation sites. If not set, the value is calculated based on the matrix settings (grain size) [m⁻³].

Returns

This *PrecipitatePhase* object

set_nucleation_at_grain_edges(*wetting_angle=90, number_density=-1*)

Activates nucleation at the grain edges for this class of precipitates. Calling the method overrides any other nucleation setting for this class of precipitates. **Default:** If not set, by default bulk nucleation is chosen.

Parameters

- **wetting_angle** – If not set, a default value of 90 degrees is used
- **number_density** – Number density of nucleation sites. If not set, the value is calculated based on the matrix settings (grain size) [m⁻³].

Returns

This *PrecipitatePhase* object

set_nucleation_in_bulk(*number_density: float = -1.0*)

Activates nucleation in the bulk for this class of precipitates. Calling the method overrides any other nucleation setting for this class of precipitates. **Default:** This is the default setting (with an automatically calculated number density).

Parameters

number_density – Number density of nucleation sites. If not set, the value is calculated based on the matrix settings (molar volume) [m⁻³]

Returns

This *PrecipitatePhase* object

set_nucleation_upon_precipitates(*inoculant_precipitate: PrecipitatePhase, sites_per_particle=1.0, inoculant_wetting_angle=120.0*)

Activates nucleation upon the provided inoculant precipitate phase class entered into the method. The inoculant phase class should have the nucleation site location defined before calling this method. Calling the method overrides any other nucleation setting for this class of precipitates. **Default:** If not set, by default bulk nucleation is chosen.

Parameters

- **inoculant_precipitate** – An instance of the *PrecipitatePhase* class defining the inoculant particle.
- **sites_per_particle** – The number of nucleation sites per inoculant particle.
- **inoculant_wetting_angle** – Defines the angle between the interfaces of the inoculant and nucleating particles. Set to 180 degrees if the interfaces do not touch.

Returns

This *PrecipitatePhase* object

set_phase_boundary_mobility(*phase_boundary_mobility: float*)

Sets the phase boundary mobility. **Default:** 10.0 m⁴/(Js).

Parameters

phase_boundary_mobility – The phase boundary mobility [m⁴/(Js)]

Returns

This *PrecipitatePhase* object

set_precipitate_morphology(*precipitate_morphology_enum*: `PrecipitateMorphology`)

Sets the precipitate morphology. **Default:** `PrecipitateMorphology.SPHERE`

Parameters

precipitate_morphology_enum – The precipitate morphology

Returns

This `PrecipitatePhase` object

set_trans_interface_mobility_adjustment(*element*: *str* = 'all', *prefactor*: *float* = 1.0, *activation_energy*: *float* = 0.0)

Trans-interface mobility adjustment Only relevant when growth rate model is PE Automatic A value that adds to the activation energy of mobility data from the database.

Parameters

- **element** – The element to apply the adjustment for. If “all” is given, adjustment will apply to all elements.
- **prefactor** – A parameter that multiplies to the mobility data from a database. The value scales the mobility by a constant amount. This results in the trans-interface mobility that controls the kinetics of Para-Equilibrium to Ortho-Equilibrium transition.
- **activation_energy** – A value that adds to the activation energy of mobility data from a database. It scales the mobility by a temperature dependent amount. Similar usage as trans-interface mobility adjustment prefactor. [J/mol]

set_transformation_strain_calculation_option(*transformation_strain_calculation_option_enum*: `TransformationStrainCalculationOption`)

Sets the transformation strain calculation option. **Default:** `TransformationStrainCalculationOption.DISREGARD`.

Parameters

transformation_strain_calculation_option_enum – The chosen option

Returns

This `PrecipitatePhase` object

set_zener_pinning_parameters(*cutoff_size*: *float* = 7e-07, *kinetic_prefactor*: *float* = 0.5, *exponent*: *float* = 0.93)

These parameters are only relevant when zener pinning is enabled in the matrix phase

Parameters

- **cutoff_size** – Precipitates with radius smaller than this value are neglected in pinning force calculation.
- **kinetic_prefactor** – Dimensionless kinetic coefficient in Zener equation.
- **exponent** – Exponent of precipitate volume fraction in Zener equation.

Returns

This `PrecipitatePhase` object

with_elastic_properties(*elastic_properties*: `PrecipitateElasticProperties`)

Sets the elastic properties. **Default:** The elastic transformation strain is disregarded by default.

Parameters

elastic_properties – The elastic properties object

Returns

This `PrecipitatePhase` object

Note: This method has only an effect if the option *TransformationStrainCalculationOption.USER_DEFINED* is chosen using the method *set_transformation_strain_calculation_option()*.

with_growth_rate_model(*growth_rate_model_enum*: *GrowthRateModel*)

Sets the growth rate model for the class of precipitates. **Default:** *GrowthRateModel.SIMPLIFIED*

Parameters

growth_rate_model_enum – The growth rate model

Returns

This *PrecipitatePhase* object

with_particle_size_distribution(*particle_size_distribution*: *ParticleSizeDistribution*)

Sets the initial particle size distribution for this class of precipitates. **Default:** If the initial particle size distribution is not explicitly provided, the simulation will start from a supersaturated matrix.

Parameters

particle_size_distribution – The initial particle size distribution object

Returns

This *PrecipitatePhase* object

Tip: Use this option if you want to study the further evolution of an existing microstructure.

class `tc_python.precipitation.PrecipitationCCTCalculation`(*calculation*)

Bases: *AbstractCalculation*

Configuration for a Continuous-Cooling-Time (CCT) precipitation calculation.

calculate(*timeout_in_minutes*: *float* = 0.0) → *PrecipitationCalculationTTTorCCTResult*

Runs the CCT diagram calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *PrecipitationCalculationTTTorCCTResult* which later can be used to get specific values from the calculated result

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

set_composition(*element_name*: *str*, *value*: *float*)

Sets the composition of the elements. The unit for the composition can be changed using *set_composition_unit()*. **Default:** Mole percent (*CompositionUnit.MOLE_PERCENT*)

Parameters

- **element_name** – The element
- **value** – The composition (fraction or percent depending on the composition unit)

Returns

This *PrecipitationCCTCalculation* object

set_composition_unit(*unit_enum*: *CompositionUnit*)

Sets the composition unit. **Default:** Mole percent (*CompositionUnit.MOLE_PERCENT*).

Parameters

unit_enum – The new composition unit

Returns

This *PrecipitationCCTCalculation* object

set_cooling_rates(*cooling_rates*: *List[float]*)

Sets all cooling rates for which the CCT diagram should be calculated.

Parameters

cooling_rates – A list of cooling rates [K/s]

Returns

This *PrecipitationCCTCalculation* object

set_max_temperature(*max_temperature*: *float*)

Sets maximum temperature of the CCT diagram.

Parameters

max_temperature – the maximum temperature [K]

Returns

This *PrecipitationCCTCalculation* object

set_min_temperature(*min_temperature*: *float*)

Sets the minimum temperature of the CCT diagram.

Parameters

min_temperature – the minimum temperature [K]

Returns

This *PrecipitationCCTCalculation* object

stop_at_volume_fraction_of_phase(*stop_criterion_value*: *float*)

Sets the stop criterion as a volume fraction of the phase. This setting is applied to all phases.

Parameters

stop_criterion_value – the volume fraction of the phase (a value between 0 and 1)

Returns

This *PrecipitationCCTCalculation* object

with_matrix_phase(*matrix_phase*: *MatrixPhase*)

Sets the matrix phase.

Parameters

matrix_phase – The matrix phase

Returns

This *PrecipitationCCTCalculation* object

with_numerical_parameters(*numerical_parameters*: [NumericalParameters](#))

Sets the numerical parameters. If not specified, reasonable defaults are be used.

Parameters

numerical_parameters – The parameters

Returns

This [PrecipitationCCTCalculation](#) object

with_system_modifications(*system_modifications*: [SystemModifications](#))

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This [PrecipitationCCTCalculation](#) object

class `tc_python.precipitation.PrecipitationCalculationResult`(*result*)

Bases: [AbstractResult](#)

Result of a precipitation calculation. This can be used to query for specific values.

save_to_disk(*path*: *str*)

Saves the result to disc. Note that a result is a folder, containing potentially many files. The result can later be loaded with `load_result_from_disk()`

Parameters

path – the path to the folder you want the result to be saved in. It can be relative or absolute.

Returns

this [PrecipitationCalculationResult](#) object

class `tc_python.precipitation.PrecipitationCalculationSingleResult`(*result*)

Bases: [PrecipitationCalculationResult](#)

Result of a isothermal or non-isothermal precipitation calculation. This can be used to query for specific values.

Search the Thermo-Calc help for definitions of the axis variables, e.g. search *isothermal variables* or *non-isothermal variables*.

get_aspect_ratio_distribution_for_particle_length_of(*precipitate_id*: *str*, *time*: *float*) →
[List[float], List[float]]

Returns the aspect ratio distribution of a precipitate in dependency of its mean particle length at a certain time.

Only available if the morphology is set to [PrecipitateMorphology.NEEDLE](#) or [PrecipitateMorphology.PLATE](#).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (mean particle length [m], aspect ratio)

get_aspect_ratio_distribution_for_radius_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the aspect ratio distribution of a precipitate in dependency of its mean radius at a certain time.

Only available if the morphology is set to *PrecipitateMorphology.NEEDLE* or *PrecipitateMorphology.PLATE*.

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (mean radius [m], aspect ratio)

get_conventional_mean_radius_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the conventional mean radius of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be phase name or alias

Returns

A tuple of two lists of floats (time [s], conventional mean radius [m])

get_critical_radius_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the critical radius of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be phase name or alias

Returns

A tuple of two lists of floats (time [s], critical radius [m])

get_cubic_factor_distribution_for_particle_length_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the cubic factor distribution of a precipitate in dependency of its mean particle length at a certain time.

Only available if the morphology is set to *PrecipitateMorphology.CUBOID*.

Parameters

- **time** – The time in seconds
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (particle length [m], cubic factor)

get_cubic_factor_distribution_for_radius_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the cubic factor distribution of a precipitate in dependency of its mean radius at a certain time. Only available if the morphology is set to *PrecipitateMorphology.CUBOID*.

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (radius [m], cubic factor)

get_driving_force_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the (by $R * T$) normalized driving force of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (time [s], normalized driving force)

get_grain_conventional_mean_radius() → [List[float], List[float]]

Returns the conventional mean grain size of the matrix phase in dependency of the time.

Returns

A tuple of two lists of floats (time [s], conventional mean radius [m])

get_grain_critical_radius() → [List[float], List[float]]

Returns the critical radius of grains in dependency of the time.

Returns

A tuple of two lists of floats (time [s], critical radius [m])

get_grain_mean_radius() → [List[float], List[float]]

Returns the mean grain size of the matrix phase in dependency of the time.

Returns

A tuple of two lists of floats (time [s], mean radius [m])

get_grain_number_density() → [List[float], List[float]]

Returns the grain number density (concentration) in dependency of the time.

Returns

A tuple of two lists of floats (time [s], grain number density [m^{-3}])

get_grain_number_density_distribution_for_length(*time: float*) → [List[float], List[float]]

Returns the number density distribution of grains in terms of length at the requested time(s).

Parameters

time – The time [s]

Returns

A tuple of two lists of floats (grain length[m], number of grains per unit volume in a size class [m^{-3}])

get_grain_number_density_distribution_for_radius(*time: float*) → [List[float], List[float]]

Returns the number density distribution of a grains in terms of grain radius at the requested time(s).

Parameters

time – The time [s]

Returns

A tuple of two lists of floats (radius [m], number of grains per unit volume in a size class [m^{-3}])

get_grain_size_distribution(*time: float*) → [List[float], List[float]]

Returns the size distribution of the matrix phase in dependency of its grain radius at the requested time(s).

Parameters

time – The time [s]

Returns

A tuple of two lists of floats (grain radius[m], number density of grains[m⁻⁴])

get_matrix_composition_in_mole_fraction_of(*element_name: str*) → [List[float], List[float]]

Returns the matrix composition (as mole fractions) of a certain element in dependency of the time.

Parameters

element_name – The element

Returns

A tuple of two lists of floats (time [s], mole fraction)

get_matrix_composition_in_weight_fraction_of(*element_name: str*) → [List[float], List[float]]

Returns the matrix composition (as weight fraction) of a certain element in dependency of the time.

Parameters

element_name – The element

Returns

A tuple of two lists of floats (time [s], weight fraction)

get_mean_aspect_ratio_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the mean aspect ratio of a precipitate in dependency of the time.

Only available if the morphology is set to *PrecipitateMorphology.NEEDLE* or *PrecipitateMorphology.PLATE*.

Parameters

precipitate_id – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (time [s], mean aspect ratio)

get_mean_cubic_factor_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the mean cubic factor of a precipitate in dependency of the time. Only available if the morphology is set to *PrecipitateMorphology.CUBOID*.

Parameters

precipitate_id – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (time [s], mean cubic factor)

get_mean_particle_length_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the mean particle length of a precipitate in dependency of the time.

Only available if the morphology is set to *PrecipitateMorphology.NEEDLE* or *PrecipitateMorphology.PLATE*.

Parameters

precipitate_id – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (time [s], mean particle length [m])

get_mean_radius_2d_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the mean radius of cross-sections taken through the dispersion in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be phase name or alias

Returns

A tuple of two lists of floats (time [s], mean radius [m])

get_mean_radius_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the mean radius of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be phase name or alias

Returns

A tuple of two lists of floats (time [s], mean radius [m])

get_normalized_grain_size_distribution(*time: float*) → [List[float], List[float]]

Returns the normalized number density distribution with the grain radius normalized by the mean radius, for the requested time(s).

Parameters

time – The time [s]

Returns

A tuple of two lists of floats (Normalized size, Probability)

get_normalized_number_density_distribution_2d_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the normalized number density distribution of a precipitate in terms of the radius of cross-sections created by taking a plane through the dispersion, normalized by the mean radius of the cross-section, for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (Normalized size, Probability)

get_normalized_number_density_distribution_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the normalized number density distribution with the particle radius normalized by the mean radius, for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (Normalized size, Probability)

get_nucleation_rate_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the nucleation rate of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (time [s], nucleation rate [m⁻³ s⁻¹])

get_number_density_distribution_2d_for_particle_length_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the number density distribution of a precipitate considering the radius of cross-sections created by taking a plane through the dispersion, approximating the particles as spherical, for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (particle length[m], number of particles per unit area within a size class [m⁻²])

get_number_density_distribution_2d_for_radius_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the number density distribution of a precipitate considering the radius of cross-sections created by taking a plane through the dispersion for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (radius [m], number of particles per unit area within a size class [m⁻²])

get_number_density_distribution_for_particle_length_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the number density distribution of a precipitate in terms of length for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (particle length[m], number of particles in the size class per unit volume [m⁻³])

get_number_density_distribution_for_radius_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the number density distribution of a precipitate in terms of radius for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (radius [m], number of particles in the size class per unit volume [m⁻³])

get_number_density_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the particle number density (concentration) of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be phase name or alias

Returns

A tuple of two lists of floats (time [s], particle number density [m⁻³])

get_precipitate_composition_in_mole_fraction_of(*precipitate_id: str, element_name: str*) → [List[float], List[float]]

Returns the precipitate composition (as mole fractions) of a certain element in dependency of the time.

Parameters

- **precipitate_id** – The id of a precipitate can either be phase name or alias
- **element_name** – The element

Returns

A tuple of two lists of floats (time [s], mole fraction)

get_precipitate_composition_in_weight_fraction_of(*precipitate_id: str, element_name: str*) → [List[float], List[float]]

Returns the precipitate composition (as weight fraction) of a certain element in dependency of the time.

Parameters

- **precipitate_id** – The id of a precipitate can either be phase name or alias
- **element_name** – The element

Returns

A tuple of two lists of floats (time [s], weight fraction)

get_size_distribution_2d_for_particle_length_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the size distribution of a precipitate considering the radius of cross-sections created by taking a plane through the dispersion, approximating the particles as spherical, for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (particle length[m], number of particles per unit area per unit length [m⁻³])

get_size_distribution_2d_for_radius_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the 2d size distribution of a precipitate considering the radius of cross-sections created by taking a plane through the dispersion for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (radius [m], number of particles per unit area per unit length [m⁻³])

get_size_distribution_for_particle_length_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the size distribution of a precipitate in terms of length for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (particle length[m], number of particles per unit volume per unit length [m⁻⁴])

get_size_distribution_for_radius_of(*precipitate_id: str, time: float*) → [List[float], List[float]]

Returns the size distribution of a precipitate in terms of radius for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (radius [m], number of particles per unit volume per unit length [m⁻⁴])

get_split_conventional_mean_radius_of(*precipitate_id: str, isSectioned: bool*)

Returns the conventional mean radius of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be phase name or alias

Returns

A tuple of two lists of floats (time [s], split conventional mean radius [m])

get_split_mean_radius_of(*precipitate_id: str, isSectioned: bool*)

Returns the mean radius of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be phase name or alias

Returns

A tuple of two lists of floats (time [s], mean radius [m])

get_split_number_density_of(*precipitate_id: str, isSectioned: bool*)

Returns the mean radius of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be phase name or alias

Returns

A tuple of two lists of floats (time [s], mean radius [m])

get_split_size_distribution_for_radius_of(*precipitate_id: str, time: float, isSectioned: bool*)

Returns the size distribution of a precipitate in terms of radius for the requested time(s).

Parameters

- **time** – The time [s]
- **precipitate_id** – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (radius [m], number of particles per unit volume per unit length [m⁻⁴])

get_split_volume_or_area_fraction_of(*precipitate_id: str, isSectioned: bool*)

Returns the mean radius of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be phase name or alias

Returns

A tuple of two lists of floats (time [s], mean radius [m])

get_volume_fraction_of(*precipitate_id: str*) → [List[float], List[float]]

Returns the volume fraction of a precipitate in dependency of the time.

Parameters

precipitate_id – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (time [s], volume fraction)

class tc_python.precipitation.PrecipitationCalculationTTTorCCTResult(*result*)

Bases: *PrecipitationCalculationResult*

Result of a TTT or CCT precipitation calculation.

get_result_for_precipitate(*precipitate_id: str*) → [List[float], List[float]]

Returns the calculated data of a TTT or CCT diagram for a certain precipitate.

Parameters

precipitate_id – The id of a precipitate can either be the phase name or an alias

Returns

A tuple of two lists of floats (time [s], temp [K])

class tc_python.precipitation.PrecipitationIsoThermalCalculation(*calculation*)

Bases: *AbstractCalculation*

Configuration for an isothermal precipitation calculation.

calculate(*timeout_in_minutes: float = 0.0*) → *PrecipitationCalculationSingleResult*

Runs the isothermal precipitation calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *PrecipitationCalculationSingleResult* which later can be used to get specific values from the calculated result

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

set_composition(*element_name: str, value: float*)

Sets the composition of the elements. The unit for the composition can be changed using *set_composition_unit()*. **Default:** Mole percent (*CompositionUnit.MOLE_PERCENT*)

Parameters

- **element_name** – The element
- **value** – The composition (fraction or percent depending on the composition unit)

Returns

This *PrecipitationIsoThermalCalculation* object

set_composition_unit(*unit_enum*: *CompositionUnit* = *CompositionUnit.MOLE_PERCENT*)

Sets the composition unit. **Default:** Mole percent (*CompositionUnit.MOLE_PERCENT*).

Parameters

unit_enum – The new composition unit

Returns

This *PrecipitationIsoThermalCalculation* object

set_simulation_time(*simulation_time*: *float*)

Sets the simulation time.

Parameters

simulation_time – The simulation time [s]

Returns

This *PrecipitationIsoThermalCalculation* object

set_temperature(*temperature*: *float*)

Sets the temperature for the isothermal simulation.

Parameters

temperature – the temperature [K]

Returns

This *PrecipitationIsoThermalCalculation* object

with_matrix_phase(*matrix_phase*: *MatrixPhase*)

Sets the matrix phase.

Parameters

matrix_phase – The matrix phase

Returns

This *PrecipitationIsoThermalCalculation* object

with_numerical_parameters(*numerical_parameters*: *NumericalParameters*)

Sets the numerical parameters. If not specified, reasonable defaults are be used.

Parameters

numerical_parameters – The parameters

Returns

This *PrecipitationIsoThermalCalculation* object

with_save_parameters(*save_parameters*: *SaveParameters*)

Sets the save parameters. If not specified, the medium option is used.

Parameters

save_parameters – The save parameters

Returns

This *PrecipitationIsoThermalCalculation* object

with_system_modifications(*system_modifications*: [SystemModifications](#))

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This [PrecipitationIsoThermalCalculation](#) object

class `tc_python.precipitation.PrecipitationNonIsoThermalCalculation`(*calculation*)

Bases: [AbstractCalculation](#)

Configuration for a non-isothermal precipitation calculation.

calculate(*timeout_in_minutes*: *float = 0.0*) → [PrecipitationCalculationSingleResult](#)

Runs the non-isothermal precipitation calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a `UnrecoverableCalculationException` will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A [PrecipitationCalculationSingleResult](#) which later can be used to get specific values from the calculated result

get_system_data() → [SystemData](#)

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using [with_system_modifications\(\)](#).

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as *.tdb-file.

Returns

The system data

set_composition(*element_name*: *str*, *value*: *float*)

Sets the composition of the elements. The unit for the composition can be changed using [set_composition_unit\(\)](#). **Default:** Mole percent (`CompositionUnit.MOLE_PERCENT`)

Parameters

- **element_name** – The element
- **value** – The composition (fraction or percent depending on the composition unit)

Returns

This [PrecipitationIsoThermalCalculation](#) object

set_composition_unit(*unit_enum*: [CompositionUnit](#))

Sets the composition unit. **Default:** Mole percent ([CompositionUnit.MOLE_PERCENT](#)).

Parameters

unit_enum – The new composition unit

Returns

This [PrecipitationIsoThermalCalculation](#) object

set_simulation_time(*simulation_time*: *float*)

Sets the simulation time.

Parameters

simulation_time – The simulation time [s]

Returns

This [PrecipitationNonThermalCalculation](#) object

with_matrix_phase(*matrix_phase*: [MatrixPhase](#))

Sets the matrix phase.

Parameters

matrix_phase – The matrix phase

Returns

This [PrecipitationIsoThermalCalculation](#) object

with_numerical_parameters(*numerical_parameters*: [NumericalParameters](#))

Sets the numerical parameters. If not specified, reasonable defaults are be used.

Parameters

numerical_parameters – The parameters

Returns

This [PrecipitationIsoThermalCalculation](#) object

with_save_parameters(*save_parameters*: [SaveParameters](#))

Sets the save parameters. If not specified, the MEDIUM save option is used, unless grain growth is modelled, where the original algorithm is used.

Parameters

save_parameters – The save parameters

Returns

This [PrecipitationIsoThermalCalculation](#) object

with_system_modifications(*system_modifications*: [SystemModifications](#))

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This [PrecipitationNonThermalCalculation](#) object

with_temperature_profile(*temperature_profile*: [TemperatureProfile](#))

Sets the temperature profile to use with this calculation.

Parameters

temperature_profile – the temperature profile object (specifying time / temperature points)

Returns

This [PrecipitationNonThermalCalculation](#) object

class `tc_python.precipitation.PrecipitationTTTCalculation`(*calculation*)

Bases: [AbstractCalculation](#)

Configuration for a TTT (Time-Temperature-Transformation) precipitation calculation.

calculate(*timeout_in_minutes*: *float = 0.0*) → [PrecipitationCalculationTTTCCTResult](#)

Runs the TTT diagram calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than `timeout_in_minutes`, a `UnrecoverableCalculationException` will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A [PrecipitationCalculationTTTCCTResult](#) which later can be used to get specific values from the calculated result.

get_system_data() → [SystemData](#)

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using [with_system_modifications](#)()

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

set_composition(*element_name*: *str*, *value*: *float*)

Sets the composition of the elements. The unit for the composition can be changed using [set_composition_unit](#)(). **Default:** Mole percent (`CompositionUnit.MOLE_PERCENT`)

Parameters

- **element_name** – The element
- **value** – The composition (fraction or percent depending on the composition unit)

Returns

This [PrecipitationTTTCalculation](#) object

set_composition_unit(*unit_enum*: [CompositionUnit](#))

Sets the composition unit. **Default:** Mole percent (`CompositionUnit.MOLE_PERCENT`).

Parameters

unit_enum – The new composition unit

Returns

This [PrecipitationTTTCalculation](#) object

set_max_annealing_time(*max_annealing_time: float*)

Sets the maximum annealing time, i.e. the maximum time of the simulation if the stopping criterion is not reached.

Parameters

max_annealing_time – the maximum annealing time [s]

Returns

This *PrecipitationTTTCalculation* object

set_max_temperature(*max_temperature: float*)

Sets the maximum temperature for the TTT diagram.

Parameters

max_temperature – the maximum temperature [K]

Returns

This *PrecipitationTTTCalculation* object

set_min_temperature(*min_temperature: float*)

Sets the minimum temperature for the TTT diagram.

Parameters

min_temperature – the minimum temperature [K]

Returns

This *PrecipitationTTTCalculation* object

set_temperature_step(*temperature_step: float*)

Sets the temperature step for the TTT diagram. If not set, the default value is 10 K.

Parameters

temperature_step – the temperature step [K]

Returns

This *PrecipitationTTTCalculation* object

stop_at_percent_of_equilibrium_fraction(*percentage: float*)

Sets the stop criterion to a percentage of the overall equilibrium phase fraction, alternatively a required volume fraction can be specified (using *stop_at_volume_fraction_of_phase()*).

Parameters

percentage – the percentage to stop at (value between 0 and 100)

Returns

This *PrecipitationTTTCalculation* object

stop_at_volume_fraction_of_phase(*volume_fraction: float*)

Sets the stop criterion as a volume fraction of the phase, alternatively a required percentage of the equilibrium phase fraction can be specified (using *stop_at_percent_of_equilibria_fraction()*). Stopping at a specified volume fraction is the default setting.

This setting is applied to all phases.

Parameters

volume_fraction – the volume fraction to stop at (a value between 0 and 1)

Returns

This *PrecipitationTTTCalculation* object

with_matrix_phase(*matrix_phase*: [MatrixPhase](#))

Sets the matrix phase.

Parameters

matrix_phase – The matrix phase

Returns

This [PrecipitationTTTCalculation](#) object

with_numerical_parameters(*numerical_parameters*: [NumericalParameters](#))

Sets the numerical parameters. If not specified, reasonable defaults are be used.

Parameters

numerical_parameters – The parameters

Returns

This [PrecipitationTTTCalculation](#) object

with_system_modifications(*system_modifications*: [SystemModifications](#))

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This [PrecipitationTTTCalculation](#) object

class `tc_python.precipitation.SaveOption`(*value*, *names=None*, *, *module=None*, *qualname=None*, *type=None*, *start=1*, *boundary=None*)

Bases: `Enum`

Save options, by default “MEDIUM” is selected. The original save approach is needed when modelling grain growth.

HIGH = 1

A higher frequency of save events.

LAST_RESULT = 4

Only the last result is saved. This option may be of interest for high-throughput calculations with the goal of minimising file size.

LOW = 3

A low frequency of save events.

MEDIUM = 2

A moderate frequency of save events.

ORIGINAL = 0

The previous method for saving and plotting data.

class `tc_python.precipitation.SaveParameters`

Bases: `object`

Save parameters

set_save_option(*save_option_enum*: SaveOption)

Sets the save option. **Default:** *SaveOption.MEDIUM*

Parameters

save_option_enum – The chosen save option

Returns

This *SaveParameters* object

```
class tc_python.precipitation.TransformationStrainCalculationOption(value, names=None, *,
                                                                    module=None,
                                                                    qualname=None,
                                                                    type=None, start=1,
                                                                    boundary=None)
```

Bases: Enum

Options for calculating the transformation strain.

CALCULATE_FROM_MOLAR_VOLUME = 2

Calculates the transformation strain from the molar volume, obtains a purely dilatational strain.

DISREGARD = 1

Ignores the transformation strain, **this is the default setting.**

USER_DEFINED = 3

Transformation strain to be specified by the user.

```
class tc_python.precipitation.VolumeFractionOfPhaseType(value, names=None, *, module=None,
                                                         qualname=None, type=None, start=1,
                                                         boundary=None)
```

Bases: Enum

Unit of the volume fraction of a phase.

VOLUME_FRACTION = 6

Volume fraction (0 - 1), **this is the default.**

VOLUME_PERCENT = 5

Volume percent (0% - 100%).

6.1.4 Module “scheil”

```
class tc_python.scheil.CalculateSecondaryDendriteArmSpacing
```

Bases: *ScheilBackDiffusion*

Configures a secondary dendrite arm spacing calculation used by Scheil *with back diffusion*. The used equation is $c * \text{cooling_rate}^{-n}$ with c and n being provided either by the user or taken from the defaults.

disable_delta_ferrite_to_austenite_transition()

Turns off the delta ferrite BCC to austenite FCC transition.

Default: Delta ferrite to austenite transition is off. :return: This *CalculateSecondaryDendriteArmSpacing* object

enable_delta_ferrite_to_austenite_transition()

Turns on the delta ferrite BCC to austenite FCC transition.

Default: Delta ferrite to austenite transition is off. :return: This *CalculateSecondaryDendriteArmSpacing* object

set_c(*c*: float = 5e-05)

Sets the scaling factor *c* in the governing equation $c * \text{cooling_rate}^{-n}$.

Default: 50 μm

Parameters

c – The scaling factor [m]

Returns

This *CalculateSecondaryDendriteArmSpacing* object

set_cooling_rate(*cooling_rate*: float = 1.0)

Sets the cooling rate.

Default: 1.0 K/s

An increased value moves the result from equilibrium toward a Scheil-Gulliver calculation.

Parameters

cooling_rate – The cooling rate [K/s]

Returns

This *CalculateSecondaryDendriteArmSpacing* object

set_fast_diffusing_elements(*element_names*: List[str])

Sets elements as fast diffusing. This allows redistribution of these elements in both the solid and liquid parts of the alloy.

Default: No fast-diffusing elements.

Parameters

element_names – The elements

Returns

This *CalculateSecondaryDendriteArmSpacing* object

set_n(*n*: float = 0.33)

Sets the exponent *n* in the governing equation $c * \text{cooling_rate}^{-n}$.

Default: 0.33

Parameters

n – The exponent [-]

Returns

This *CalculateSecondaryDendriteArmSpacing* object

set_primary_phasename(*primary_phase_name*: str = 'AUTOMATIC')

Sets the name of the primary phase.

The primary phase is the phase where the back diffusion takes place. If *AUTOMATIC* is selected, the program tries to find the phase which will give the most back diffusion. That behavior can be overridden by selecting a specific primary phase.

Default: *AUTOMATIC*

Parameters

primary_phase_name – The phase name (or *AUTOMATIC*)

Returns

This *CalculateSecondaryDendriteArmSpacing* object

```
class tc_python.scheil.ConstantSecondaryDendriteArmSpacing(secondary_dendrite_arm_spacing:
                                                         float = 5e-05)
```

Bases: *ScheilBackDiffusion*

Configures a constant secondary dendrite arm spacing used by Scheil *with back diffusion*. The secondary dendrite arm spacing can either be provided by the user or taken from the defaults.

disable_delta_ferrite_to_austenite_transition()

Turns off the delta ferrite BCC to austenite FCC transition.

Default: Delta ferrite to austenite transition is off. :return: This *ConstantSecondaryDendriteArmSpacing* object

enable_delta_ferrite_to_austenite_transition()

Turns on the delta ferrite BCC to austenite FCC transition.

Default: Delta ferrite to austenite transition is off. :return: This *ConstantSecondaryDendriteArmSpacing* object

set_cooling_rate(cooling_rate: float = 1.0)

Sets the cooling rate.

Default: 1.0 K/s

An increased value moves the result from equilibrium toward a Scheil-Gulliver calculation.

Parameters

cooling_rate – The cooling rate [K/s]

Returns

This *ConstantSecondaryDendriteArmSpacing* object

set_fast_diffusing_elements(element_names: List[str])

Sets elements as fast diffusing. This allows redistribution of these elements in both the solid and liquid parts of the alloy.

Default: No fast-diffusing elements.

Parameters

element_names – The elements

Returns

This *ConstantSecondaryDendriteArmSpacing* object

set_primary_phasename(primary_phase_name: str = 'AUTOMATIC')

Sets the name of the primary phase.

The primary phase is the phase where the back diffusion takes place. If *AUTOMATIC* is selected, the program tries to find the phase which will give the most back diffusion. That behavior can be overridden by selecting a specific primary phase.

Default: *AUTOMATIC*

Parameters

primary_phase_name – The phase name (or *AUTOMATIC*)

Returns

This *ConstantSecondaryDendriteArmSpacing* object

```
class tc_python.scheil.InterfaceDrivingForceModel(value, names=None, *, module=None,
                                                  qualname=None, type=None, start=1,
                                                  boundary=None)
```

Bases: Enum

The interface driving force model (free energy change at the liquid/primary solid interface) that is used to evaluate the migration speed in comparison with the maximum velocity.

DRIVING_ENERGY = 0

Using the overall free energy change. **This is the default.**

MIGRATION_ENERGY = 1

Uses free energy change due to migration, i.e. the overall free energy change excluding that contributes to diffusion.

class `tc_python.scheil.ScheilBackDiffusion`

Bases: *ScheilCalculationType*

Configuration for *back diffusion in the solid primary phase*.

Warning: This feature has only effect on systems with diffusion data (typically a mobility database). If used for a system without diffusion data, a normal Scheil calculation is done.

classmethod `calculate_secondary_dendrite_arm_spacing()`

Calculate the secondary dendrite arm spacing based on the following equation: $c * \text{cooling_rate}^{(-n)}$ with c and n being provided either by the user or taken from the defaults.

Use the methods provide by *CalculateSecondaryDendriteArmSpacing* to configure the parameters.

Returns

A *CalculateSecondaryDendriteArmSpacing*

classmethod `constant_secondary_dendrite_arm_spacing(secondary_dendrite_arm_spacing: float = 5e-05)`

Assuming constant secondary dendrite arm spacing, provided either by the user or taken from the defaults.

Default: 50 μm

Parameters

secondary_dendrite_arm_spacing – The dendrite arm spacing [m]

Returns

A *ConstantSecondaryDendriteArmSpacing*

class `tc_python.scheil.ScheilCalculation(calculator)`

Bases: *AbstractCalculation*

Configuration for a Scheil solidification calculation.

Note: Specify the settings, the calculation is performed with *calculate()*.

calculate(*timeout_in_minutes: float = 0.0*) \rightarrow *ScheilCalculationResult*

Runs the Scheil calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *ScheilCalculationResult* which later can be used to get specific values from the simulation.

disable_global_minimization()

Disables global minimization.

Default: Enabled

Note: When enabled, a global minimization test is performed when an equilibrium is reached. This costs more computer time but the calculations are more robust.

Returns

This *ScheilCalculation* object

enable_global_minimization()

Enables global minimization.

Default: Enabled

Note: When enabled, a global minimization test is performed when an equilibrium is reached. This costs more computer time but the calculations are more robust.

Returns

This *ScheilCalculation* object

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

set_composition(component_name: str, value: float)

Sets the composition of a component. The unit for the composition can be changed using *set_composition_unit()*.

Default: Mole percent (`CompositionUnit.MOLE_PERCENT`)

Parameters

- **component_name** – The component
- **value** – The composition value [composition unit defined for the calculation]

Returns

This *ScheilCalculation* object

set_composition_unit(*unit_enum*: `CompositionUnit` = `CompositionUnit.MOLE_PERCENT`)

Sets the composition unit.

Default: Mole percent (`CompositionUnit.MOLE_PERCENT`).

Parameters

unit_enum – The new composition unit

Returns

This *ScheilCalculation* object

set_start_temperature(*temperature_in_kelvin*: `float` = `2500.0`)

Sets the start temperature.

Warning: The start temperature needs to be higher than the liquidus temperature of the alloy.

Default: 2500.0 K

Parameters

temperature_in_kelvin – The temperature [K]

Returns

This *ScheilCalculation* object

with_calculation_type(*scheil_calculation_type*: `ScheilCalculationType`)

Chooses a specific Scheil calculation.

- *ClassicScheil* for only setting fast diffusers.
- *ScheilBackDiffusion* enables back diffusion in the solid primary phase and optionally fast diffusers in all solid phases.
- *ScheilSoluteTrapping* enables solute trapping in the solid primary phase.

Parameters

scheil_calculation_type – Type of Scheil calculation, either *ScheilClassic*, *ScheilBackDiffusion* or *ScheilSoluteTrapping*

Returns

This *ScheilCalculation* object

with_options(*options*: `ScheilOptions`)

Sets the Scheil simulation options.

Parameters

options – The Scheil simulation options

Returns

This *ScheilCalculation* object

with_system_modifications(*system_modifications*: `SystemModifications`)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *ScheilCalculation* object

```
class tc_python.scheil.ScheilCalculationResult(result)
```

Bases: *AbstractResult*

Result of a Scheil calculation.

```
get_solid_phase_with_largest_mole_fraction() → str
```

Returns the name of the solid phase with the largest amount in terms of mole fraction at the end of the Scheil simulation.

Returns

Phase name

```
get_stable_phases() → List[str]
```

Returns all phases that were stable during a Scheil simulation.

Returns

The list of stable phases

```
get_values_grouped_by_quantity_of(x_quantity: Union[ScheilQuantity, str], y_quantity:
    Union[ScheilQuantity, str], sort_and_merge: bool = True) →
    Dict[str, ResultValueGroup]
```

Returns x-y-line data grouped by the multiple datasets of the specified quantities (for example in dependency of phases or components). Use *get_values_of()* instead if you need no separation. The available quantities can be found in the documentation of the factory class *ScheilQuantity*.

Note: The different datasets might contain *NaN*-values between different subsections and might not be sorted **even if the flag `sort_and_merge` has been set** (because they might be unsortable due to their nature).

Parameters

- **x_quantity** – The first Scheil quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example “T”)
- **y_quantity** – The second Scheil quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example “NV”)
- **sort_and_merge** – If *True*, the data is sorted and merged into as few subsections as possible (divided by *NaN*)

Returns

Containing the *ResultValueGroup* dataset objects with their *quantity labels* as keys

```
get_values_grouped_by_stable_phases_of(x_quantity: Union[ScheilQuantity, str], y_quantity:
    Union[ScheilQuantity, str], sort_and_merge: bool = True)
    → Dict[str, ResultValueGroup]
```

Returns x-y-line data grouped by the sets of “stable phases” (for example “LIQUID” or “LIQUID + FCC_A1”). Use *get_values_of()* instead if you need no separation. The available quantities can be found in the documentation of the factory class *ScheilQuantity*.

Note: The different datasets might contain *NaN*-values between different subsections and might not be sorted **even if the flag ``sort_and_merge`` has been set** (because they might be unsortable due to their nature).

Parameters

- **x_quantity** – The first Scheil quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example “T”)
- **y_quantity** – The second Scheil quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example “NV”)
- **sort_and_merge** – If *True*, the data will be sorted and merged into as few subsections as possible (divided by *NaN*)

Returns

Containing the `ResultValueGroup` dataset objects with their “*stable phases*” labels as keys

`get_values_of(x_quantity: Union[ScheilQuantity, str], y_quantity: Union[ScheilQuantity, str]) → [List[float], List[float]]`

Returns sorted x-y-line data without any separation. Use `get_values_grouped_by_quantity_of()` or `get_values_grouped_by_stable_phases_of()` instead if you need such a separation. The available quantities can be found in the documentation of the factory class `ScheilQuantity`.

Note: This method will always return sorted data without any *NaN*-values. In case of ambiguous quantities (for example: `CompositionOfPhaseAsWeightFraction(“FCC_A1”, “All”)`) that can give data that is hard to interpret. In such a case you need to choose the quantity in another way or use one of the other methods.

Parameters

- **x_quantity** – The first Scheil quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example “T”)
- **y_quantity** – The second Scheil quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example “NV”)

Returns

A tuple containing the x- and y-data in lists

`save_to_disk(path: str)`

Saves the result to disc. Note that a result is a folder, containing potentially many files. The result can later be loaded with `load_result_from_disk()`

Parameters

path – the path to the folder you want the result to be saved in.

Returns

this `ScheilCalculationResult` object

`class tc_python.scheil.ScheilCalculationType`

Bases: object

Specific configuration for the different Scheil calculation types

classmethod `scheil_back_diffusion()`

Configuration for *back diffusion in the solid primary phase*.

Warning: This feature has only effect on systems with diffusion data (typically a mobility database). If used for a system without diffusion data, a normal Scheil calculation is done.

Returns

A *ScheilBackDiffusion*

classmethod `scheil_classic()`

Configuration for Classic Scheil with fast diffusers.

Returns

A *ScheilClassic*

classmethod `scheil_solute_trapping()`

Configures the Scheil solute trapping settings. The used solidification speed equation is *Scanning speed * cos(angle)* with *Scanning speed* and *angle* being provided either by the user or taken from the defaults.

Returns

A *ScheilSoluteTrapping*

class `tc_python.scheil.ScheilClassic`

Bases: *ScheilCalculationType*

Configuration for Classic Scheil with fast diffusers.

disable_delta_ferrite_to_austenite_transition()

Turns off the delta ferrite BCC to austenite FCC transition.

Default: Delta ferrite to austenite transition is off. :return: This *ScheilClassic* object

enable_delta_ferrite_to_austenite_transition()

Turns on the delta ferrite BCC to austenite FCC transition.

Default: Delta ferrite to austenite transition is off. :return: This *ScheilClassic* object

set_fast_diffusing_elements(*element_names: List[str]*)

Sets elements as fast diffusing. This allows redistribution of these elements in both the solid and liquid parts of the alloy.

Default: No fast-diffusing elements.

Parameters

element_names – The elements

Returns

This *ScheilClassic* object

class `tc_python.scheil.ScheilOptions`

Bases: `object`

Options for the Scheil simulation.

calculate_from_gas()

Calculates the evaporation temperature if a gas phase is selected in the system, and then calculates equilibria in the gas+liquid and liquid regions until liquidus temperature is reached.

Default: Calculation starts from liquidus temperature.

Returns

This *ScheilOptions* object

calculate_from_liquidus()

Solidification calculation starting from the liquidus temperature. Liquid properties between start temperature and liquidus are not obtainable.

Default: Calculation starts from liquidus temperature.

Returns

This *ScheilOptions* object

calculate_from_start_temperature()

Calculation of equilibria from start temperature at 50 K intervals until liquidus temperature is reached, using the temperature defined with *ScheilCalculation.set_start_temperature()*. This option makes it possible to obtain properties of the liquid phase before the solidification starts.

Default: Calculation starts from liquidus temperature.

Returns

This *ScheilOptions* object

calculate_to_end_of_scheil()

Stops the calculation when the Scheil calculation is finished.

Default: Calculation stops when the Scheil calculation is finished.

Returns

This *ScheilOptions* object

calculate_to_temperature_below_solidus(*number_of_steps*: int = 50, *final_temperature*: float = 298.15)

Calculates properties in the solid state, for the phase compositions and fractions at the end of the Scheil calculation.

Default: Calculation stops when the Scheil calculation is finished.

Parameters

- **number_of_steps** – Calculates properties for the given number of temperatures, down to the final temperature.
- **final_temperature** – The final (lowest) temperature where the calculation is performed.

Returns

This *ScheilOptions* object

disable_approximate_driving_force_for_metastable_phases()

Disables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use *disable_approximate_driving_force_for_metastable_phases* to force the calculation to converge for the metastable phases.

Returns

This *ScheilOptions* object

disable_control_step_size_during_minimization()

Disables stepsize control during minimization (non-global).

Default: Enabled

Returns

This *ScheilOptions* object

disable_equilibrium_solidification_calculation()

Skips the property (one axis) diagram calculation of solidification under equilibrium conditions, before the Scheil solidification calculation starts.

In general it is not necessary to perform this calculation.

Default: Disabled. The equilibrium solidification calculation is skipped.

Returns

This *ScheilOptions* object

disable_evaporation_property_calculation()

Disables calculation of evaporation properties.

Default: Disabled. The evaporation properties are not calculated.

Returns

This *ScheilOptions* object

disable_force_positive_definite_phase_hessian()

Disables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This *ScheilOptions* object

enable_approximate_driving_force_for_metastable_phases()

Enables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use *disable_approximate_driving_force_for_metastable_phases()* to force the calculation to converge for the metastable phases.

Returns

This *ScheilOptions* object

enable_control_step_size_during_minimization()

Enables stepsize control during normal minimization (non-global).

Default: Enabled

Returns

This *ScheilOptions* object

enable_equilibrium_solidification_calculation()

Performs a property (one axis) diagram calculation of solidification under equilibrium conditions, before the Scheil solidification calculation starts, in the same way as is typically done in graphical and console mode.

In general it is not necessary to perform this calculation.

Default: Disabled. The equilibrium solidification calculation is skipped.

Returns

This *ScheilOptions* object

enable_evaporation_property_calculation()

Enables calculation of the properties molar mass of gas, driving force for evaporation and evaporation enthalpy. The calculation requires the gas phase to be selected.

Default: Disabled. The evaporation properties are not calculated.

Returns

This *ScheilOptions* object

enable_force_positive_definite_phase_hessian()

Enables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This *ScheilOptions* object

set_gas_phase(*phase_name: str = 'GAS'*)

Sets the phase used as the gas phase.

Default: The phase “GAS”.

Parameters

phase_name – The phase name

Returns

This *ScheilOptions* object

set_global_minimization_max_grid_points(*max_grid_points: int = 2000*)

Sets the maximum number of grid points in global minimization. **** Only applicable if global minimization is actually used**.**

Default: 2000 points

Parameters

max_grid_points – The maximum number of grid points

Returns

This *ScheilOptions* object

set_global_minimization_test_interval(*global_test_interval: int = 10*)

Sets the interval for the global test.

Default: 10

Parameters

global_test_interval – The global test interval

Returns

This *ScheilOptions* object

set_liquid_phase(*phase_name: str = 'LIQUID'*)

Sets the phase used as the liquid phase.

Default: The phase “LIQUID”.

Parameters

phase_name – The phase name

Returns

This *ScheilOptions* object

set_max_no_of_iterations(*max_no_of_iterations: int = 500*)

Set the maximum number of iterations.

Default: max. 500 iterations

Note: As some models give computation times of more than 1 CPU second/iteration, this number is also used to check the CPU time and the calculation stops if 500 CPU seconds/iterations are used.

Parameters

max_no_of_iterations – The max. number of iterations

Returns

This *ScheilOptions* object

set_required_accuracy(*accuracy: float = 1e-06*)

Sets the required relative accuracy.

Default: 1.0E-6

Note: This is a relative accuracy, and the program requires that the relative difference in each variable must be lower than this value before it has converged. A larger value normally means fewer iterations but less accurate solutions. The value should be at least one order of magnitude larger than the machine precision.

Parameters

accuracy – The required relative accuracy

Returns

This *ScheilOptions* object

set_smallest_fraction(*smallest_fraction: float = 1e-12*)

Sets the smallest fraction for constituents that are unstable.

It is normally only in the gas phase that you can find such low fractions.

The **default value** for the smallest site-fractions is 1E-12 for all phases except for IDEAL phase with one sublattice site (such as the GAS mixture phase in many databases) for which the default value is always as 1E-30.

Parameters

smallest_fraction – The smallest fraction for constituents that are unstable

Returns

This *ScheilOptions* object

set_temperature_step(*temperature_step_in_kelvin: float = 1.0*)

Sets the temperature step. Decreasing the temperature step increases the accuracy, but the default value is usually adequate.

Default step: 1.0 K

Parameters

temperature_step_in_kelvin – The temperature step [K]

Returns

This *ScheilOptions* object

terminate_on_fraction_of_liquid_phase(*fraction_to_terminate_at: float = 0.01*)

Sets the termination condition to a specified remaining fraction of liquid phase.

Default: Terminates at 0.01 fraction of liquid phase.

Note: Either the termination criterion is set to a temperature or fraction of liquid limit, both together are not possible.

Parameters

fraction_to_terminate_at – the termination fraction of liquid phase (value between 0 and 1)

Returns

This *ScheilOptions* object

terminate_on_temperature(*temperature_in_kelvin: float*)

Sets the termination condition to a specified temperature.

Default: Terminates at 0.01 fraction of liquid phase, i.e. not at a specified temperature.

Note: Either the termination criterion is set to a temperature or fraction of liquid limit, both together are not possible.

Parameters

temperature_in_kelvin – the termination temperature [K]

Returns

This *ScheilOptions* object

class `tc_python.scheil.ScheilSoluteTrapping`

Bases: *ScheilCalculationType*

Configures the Scheil solute trapping settings. The used solidification speed equation is *Scanning speed * cos(angle)* with *Scanning speed* and *angle* being provided either by the user or taken from the defaults.

set_angle(*alpha: float = 45.0*)

Sets the transformation angle alpha between the solid/liquid boundary and laser scanning direction.

Default: 45.0

Parameters

alpha – The transformation angle [degree]

Returns

This *ScheilSoluteTrapping* object

set_interface_driving_force_model(*model*: *InterfaceDrivingForceModel* = *InterfaceDrivingForceModel.DRIVING_ENERGY*)

Sets the interface driving force model (free energy change at the liquid/primary solid interface) that is used to evaluate the migration speed in comparison with the maximum velocity.

It can be the *DRIVING_ENERGY* or *MIGRATION_ENERGY* model.

Default: *DRIVING_ENERGY*

Parameters

model – The interface driving force model

Returns

This *ScheilSoluteTrapping* object

set_maximum_velocity_for_infinite_driving_force(*maximum_velocity*: *float* = 2000)

Sets the maximum migration speed of the liquid/primary solid interface when the driving force is infinite.

Default: 2000 m/s

Parameters

maximum_velocity – The maximum migration speed [m/s]

Returns

This *ScheilSoluteTrapping* object

set_primary_phasename(*primary_phase_name*: *str* = 'AUTOMATIC')

Sets the name of the primary phase.

The primary phase is the phase where solute trapping takes place. A necessary condition for this phase is that the phase definition contains all of the elements that are chosen in the system. When *AUTOMATIC* is selected, the program tries to find a suitable primary phase that fills this condition.

Default: *AUTOMATIC*

Parameters

primary_phase_name – The phase name (or *AUTOMATIC*)

Returns

This *ScheilSoluteTrapping* object

set_scanning_speed(*scanning_speed*: *float* = 1.0)

Sets the scanning speed.

Default: 1 m/s

Parameters

scanning_speed – The scaling factor [m/s]

Returns

This *ScheilSoluteTrapping* object

set_solute_trapping_model(*model*: *SoluteTrappingModel* = *SoluteTrappingModel.AZIZ*)

Sets the solute trapping model for the Scheil calculation.

The model is used to calculate the relation between migration speed and solute partitioning at the liquid/primary solid interface, developed by either Aziz or Hillert.

Default: *AZIZ*

Parameters**model** – The solute trapping model**Returns**This *ScheilSoluteTrapping* object

set_trans_interface_diffusivity_for(*element: str, pre_factor: float = 5e-09, activation_energy: float = 0.0*)

Sets the solute diffusivity across the interface between liquid and primary dendrite phase **for a specified element**, defined by an Arrhenius-type equation.

Default: $5.0e-9 \text{ m}^2/\text{s}$ for the pre-factor and 0 J/mol for the activation energy

Note: If the trans-interface diffusivity had previously been set for *all* elements, this setting will be completely removed.

Parameters

- **element** – The element for which the trans-interface diffusivity is to be set
- **pre_factor** – The pre-exponential factor in the Arrhenius equation for the trans-interface diffusivity [m^2/s]
- **activation_energy** – The activation energy in the Arrhenius equation for the trans-interface diffusivity [J/mol]

ReturnsThis *ScheilSoluteTrapping* object

set_trans_interface_diffusivity_for_all_elements(*pre_factor: float = 5e-09, activation_energy: float = 0.0*)

Sets the solute diffusivity across the interface between liquid and primary dendrite phase **for all elements**, defined by an Arrhenius-type equation.

Default: $5.0e-9 \text{ m}^2/\text{s}$ for the pre-factor and 0 J/mol for the activation energy

Parameters

- **pre_factor** – The pre-exponential factor in the Arrhenius equation for the trans-interface diffusivity [m^2/s].
- **activation_energy** – The activation energy in the Arrhenius equation for the trans-interface diffusivity [J/mol].

ReturnsThis *ScheilSoluteTrapping* object

class `tc_python.scheil.SoluteTrappingModel`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

The solute trapping model to calculate the relation between migration speed and solute partitioning at the liquid/primary solid interface.

AZIZ = 0

The solute trapping model developed by Aziz. **This is the default.**

HILLERT = 1

The solute trapping model developed by Hillert model.

6.1.5 Module “step_or_map_diagrams”

class `tc_python.step_or_map_diagrams.AbstractAxisType`

Bases: `object`

The abstract base class for all axis types.

class `tc_python.step_or_map_diagrams.AbstractPhaseDiagramCalculation(calculator)`

Bases: `AbstractCalculation`

Abstract configuration required for a property diagram calculation.

Note: This is an abstract class that cannot be used directly.

add_initial_equilibrium(*initial_equilibrium*: `InitialEquilibrium`)

Add initial equilibrium start points from which a phase diagram is calculated.

Scans along the axis variables and generates start points when the scan procedure crosses a phase boundary.

It may take a little longer to execute than using the minimum number of start points, as some lines may be calculated more than once. But the core remembers all node points and subsequently stops calculations along a line when it finds a known node point.

It is also possible to create a sequence of start points from one initial equilibria.

Parameters

initial_equilibrium – The initial equilibrium

Returns

This `PhaseDiagramCalculation` object

abstract calculate(*keep_previous_results*: `bool = False`, *timeout_in_minutes*: `float = 0.0`) → `PhaseDiagramResult`

disable_global_minimization()

Disables global minimization.

Default: Enabled

Returns

This `PhaseDiagramCalculation` object

dont_keep_default_equilibria()

Do not keep the initial equilibria added by default.

This is only relevant in combination with `add_initial_equilibrium()`.

This is the default behavior.

Returns

This `PhaseDiagramCalculation` object

enable_global_minimization()

Enables global minimization.

Default: Enabled

Returns

This `PhaseDiagramCalculation` object

get_components() → List[str]

Returns the names of the components in the system (including all components auto-selected by the database(s)).

Returns

The component names

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as *.tdb-file.

Returns

The system data

keep_default_equilibria()

Keep the initial equilibria added by default. This is only relevant in combination with *add_initial_equilibrium()*.

Default behavior is to not keep default equilibria.

Returns

This *PhaseDiagramCalculation* object

remove_all_initial_equilibria()

Removes all previously added initial equilibria.

Returns

This *PhaseDiagramCalculation* object

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *PhaseDiagramCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *PhaseDiagramCalculation* object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *PhaseDiagramCalculation* object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or *ALL_PHASES* for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This *PhaseDiagramCalculation* object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This *PhaseDiagramCalculation* object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *PhaseDiagramCalculation* object

with_options(*options*: [PhaseDiagramOptions](#))

Sets the simulation options.

Parameters

options – The simulation options

Returns

This [PhaseDiagramCalculation](#) object

with_reference_state(*component*: *str*, *phase*: *str* = 'SER', *temperature*: *float* = -1.0, *pressure*: *float* = 100000.0)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

Returns

This [PhaseDiagramCalculation](#) object

with_system_modifications(*system_modifications*: [SystemModifications](#))

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *PhaseDiagramCalculation* object

class `tc_python.step_or_map_diagrams.AbstractPropertyDiagramCalculation(calculator)`

Bases: *AbstractCalculation*

Abstract configuration required for a property diagram calculation.

Note: This is an abstract class that cannot be used directly.

abstract calculate(*keep_previous_results: bool = False, timeout_in_minutes: float = 0.0*)

disable_global_minimization()

Disables global minimization.

Default: Enabled

Returns

This *PropertyDiagramCalculation* object

disable_step_separate_phases()

Disables *step separate phases*. This is the **default** setting.

Returns

This *PropertyDiagramCalculation* object

enable_global_minimization()

Enables global minimization.

Default: Enabled

Returns

This *PropertyDiagramCalculation* object

enable_step_separate_phases()

Enables *step separate phases*.

Default: By default separate phase stepping is *disabled*

Note: This is an advanced option, it is used mostly to calculate how the Gibbs energy for a number of phases varies for different compositions. This is particularly useful to calculate Gibbs energies for complex phases with miscibility gaps and for an ordered phase that is never disordered (e.g. SIGMA-phase, G-phase, MU-phase, etc.).

Returns

This *PropertyDiagramCalculation* object

get_components() → List[str]

Returns the names of the components in the system (including all components auto-selected by the database(s)).

Returns

The component names

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as *.*tdb*-file.

Returns

The system data

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *PropertyDiagramCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *PropertyDiagramCalculation* object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *PropertyDiagramCalculation* object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or *ALL_PHASES* for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This *PropertyDiagramCalculation* object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This *PropertyDiagramCalculation* object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *PropertyDiagramCalculation* object

with_options(*options: PropertyDiagramOptions*)

Sets the simulation options.

Parameters

options – The simulation options

Returns

This *PropertyDiagramCalculation* object

with_reference_state(*component: str, phase: str = 'SER', temperature: float = -1.0, pressure: float = 100000.0*)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

Returns

This *PropertyDiagramCalculation* object

with_system_modifications(*system_modifications*: *SystemModifications*)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *PropertyDiagramCalculation* object

class `tc_python.step_or_map_diagrams.AxisType`

Bases: *AbstractAxisType*

Factory class providing objects for configuring a logarithmic or linear axis by using *AxisType.linear()* or *AxisType.logarithmic()*.

classmethod `linear()`

Creates an object for configuring a linear calculation axis.

Default: A minimum number of 40 steps.

Note: The returned object can be configured regarding the maximum step size *or* the minimum number of steps on the axis.

Returns

A new *Linear* object

classmethod logarithmic()

Creates an object for configuring a logarithmic calculation axis.

Default: A scale factor of 1.1

Note: The returned object can be configured regarding the scale factor.

Returns

A new *Logarithmic* object

class `tc_python.step_or_map_diagrams.CalculationAxis`(*quantity: Union[ThermodynamicQuantity, str]*)

Bases: object

A calculation axis used for property and phase diagram calculations.

Note: A calculation axis is defining the varied condition and the range of variation. It is the same concept as in Thermo-Calc *Graphical Mode* or *Console Mode*.

Default: A *Linear* axis with a *minimum number of 40 steps*

set_max(*max: float*)

Sets the maximum quantity value of the calculation axis.

There is no default value set, it always needs to be defined.

Parameters

max – The maximum quantity value of the axis [unit according to the axis quantity]

Returns

This *CalculationAxis* object

set_min(*min: float*)

Sets the minimum quantity value of the calculation axis.

There is no default value set, it always needs to be defined.

Parameters

min – The minimum quantity value of the axis [unit according to the axis quantity]

Returns

This *CalculationAxis* object

set_start_at(*at: float*)

Sets the starting point of the calculation on the axis.

Default: The default starting point is the center between the minimum and maximum quantity value

Parameters

at – The starting point on the axis [unit according to the axis quantity]

Returns

This *CalculationAxis* object

with_axis_type(*axis_type*: *AxisType*)

Sets the type of the axis.

Default: A *Linear* axis with a *minimum number of 40 steps*

Parameters

axis_type – The axis type (linear or logarithmic)

Returns

This *CalculationAxis* object

```
class tc_python.step_or_map_diagrams.Direction(value, names=None, *, module=None,
qualname=None, type=None, start=1,
boundary=None)
```

Bases: Enum

Direction along which axes are advanced in step-or-map diagrams.

Members: - INCREASE_FIRST_AXIS: Increase along the first axis. - INCREASE_SECOND_AXIS: Increase along the second axis. - DECREASE_FIRST_AXIS: Decrease along the first axis. - DECREASE_SECOND_AXIS: Decrease along the second axis.

DECREASE_FIRST_AXIS = 3

DECREASE_SECOND_AXIS = 4

INCREASE_FIRST_AXIS = 0

INCREASE_SECOND_AXIS = 1

```
class tc_python.step_or_map_diagrams.InitialEquilibrium(first_axis: float, second_axis: float)
```

Bases: object

add_equilibria_at_all_phase_changes()

This generates one start point for each set of phase change in the chosen direction of the specified axis This ensures finding all possible phase boundary lines (not just the first one) along such an axis direction.

Default behavior is to only generate one start point at the first phase change.

Returns

This *InitialEquilibrium* object

add_equilibria_at_first_phase_change()

This generates one start point at the first phase change.

This is the default behavior.

Returns

This *InitialEquilibrium* object

set_direction(*direction_enum*: *Direction*)

Specifies along which axes the initial equilibria should be added.

The default direction is INCREASE_FIRST_AXIS.

Parameters

direction_enum –

Returns

This *InitialEquilibrium* object

class `tc_python.step_or_map_diagrams.Linear`

Bases: *AxisType*

Represents a linear axis.

get_type() → str

Convenience method for getting axis type.

Returns

The type

set_max_step_size(*max_step_size: float*)

Sets the axis to use the *maximum step size* configuration.

Default: This is not the default which is *minimum number of steps*

Note: Either *maximum step size* or *minimum number of steps* can be used but not both at the same time.

Parameters

max_step_size – The maximum step size [unit according to the axis quantity]

Returns

This *Linear* object

set_min_nr_of_steps(*min_nr_of_steps: float = 40*)

Sets the axis to use the *minimum number of steps* configuration.

Default: This is the default option (with a *minimum number of steps* of 40)

Note: Either *maximum step size* or *minimum number of steps* can be used but not both at the same time.

Parameters

min_nr_of_steps – The minimum number of steps

Returns

This *Linear* object

class `tc_python.step_or_map_diagrams.Logarithmic`(*scale_factor: float = 1.1*)

Bases: *AxisType*

Represents a logarithmic axis.

Note: A logarithmic axis is useful for low fractions like in a gas phase where 1E-7 to 1E-2 might be an interesting range. For the pressure a logarithmic axis is often also useful.

get_type() → str

Convenience method for getting axis type.

Returns

The type

set_scale_factor(*scale_factor: float = 1.1*)

Sets the scale factor.

Default: 1.1

Parameters

scale_factor – The scale factor setting the maximum factor between two calculated values, must be larger than 1.0

Returns

This *Logarithmic* object

class `tc_python.step_or_map_diagrams.PhaseDiagramCalculation`(*calculator*)

Bases: *AbstractPhaseDiagramCalculation*

Configuration for a phase diagram calculation.

Note: Specify the conditions, the calculation is performed with *calculate()*.

add_initial_equilibrium(*initial_equilibrium: InitialEquilibrium*)

Add initial equilibrium start points from which a phase diagram is calculated.

Scans along the axis variables and generates start points when the scan procedure crosses a phase boundary.

It may take a little longer to execute than using the minimum number of start points, as some lines may be calculated more than once. But the core remembers all node points and subsequently stops calculations along a line when it finds a known node point.

It is also possible to create a sequence of start points from one initial equilibria.

Parameters

initial_equilibrium – The initial equilibrium

Returns

This *PhaseDiagramCalculation* object

calculate(*keep_previous_results: bool = False, timeout_in_minutes: float = 0.0*) → *PhaseDiagramResult*

Performs the phase diagram calculation.

<p>Warning: If you use <i>keep_previous_results=True</i>, you must not use another calculator or even get results in between the calculations using <i>calculate()</i>. Then the previous results will actually be lost.</p>

Parameters

- **keep_previous_results** – If True, results from any previous call to this method are appended. This can be used to combine calculations with multiple start points if the mapping fails at a certain condition.
- **timeout_in_minutes** – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current *TCPython-block* will be unusable and a new *TCPython* block must be created for further calculations.

Returns

A new *PhaseDiagramResult* object which later can be used to get specific values from the calculated result.

disable_global_minimization()

Disables global minimization.

Default: Enabled

Returns

This *PhaseDiagramCalculation* object

dont_keep_default_equilibria()

Do not keep the initial equilibria added by default.

This is only relevant in combination with *add_initial_equilibrium()*.

This is the default behavior.

Returns

This *PhaseDiagramCalculation* object

enable_global_minimization()

Enables global minimization.

Default: Enabled

Returns

This *PhaseDiagramCalculation* object

get_components() → List[str]

Returns the names of the components in the system (including all components auto-selected by the database(s)).

Returns

The component names

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

keep_default_equilibria()

Keep the initial equilibria added by default. This is only relevant in combination with *add_initial_equilibrium()*.

Default behavior is to not keep default equilibria.

Returns

This *PhaseDiagramCalculation* object

remove_all_conditions()

Removes all set conditions.

Returns

This *PhaseDiagramCalculation* object

remove_all_initial_equilibria()

Removes all previously added initial equilibria.

Returns

This *PhaseDiagramCalculation* object

remove_condition(*quantity: Union[ThermodynamicQuantity, str]*)

Removes the specified condition.

Parameters

quantity – The thermodynamic quantity to set as condition; a Console Mode syntax string can be used as an alternative (for example $X(Cr)$)

Returns

This *ThermodynamicCalculation* object

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *PhaseDiagramCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

<p>Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).</p>
--

set_condition(*quantity: Union[ThermodynamicQuantity, str], value: float*)

Sets the specified condition.

Parameters

- **quantity** – The thermodynamic quantity to set as condition; a Console Mode syntax string can be used as an alternative (for example $X(Cr)$)
- **value** – The value of the condition

Returns

This *PhaseDiagramCalculation* object

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *PhaseDiagramCalculation* object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *PhaseDiagramCalculation* object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or *ALL_PHASES* for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This *PhaseDiagramCalculation* object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This *PhaseDiagramCalculation* object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *PhaseDiagramCalculation* object

with_first_axis(*axis: CalculationAxis*)

Sets the first calculation axis.

Parameters

axis – The axis

Returns

This *PhaseDiagramCalculation* object

with_options(*options*: [PhaseDiagramOptions](#))

Sets the simulation options.

Parameters

options – The simulation options

Returns

This [PhaseDiagramCalculation](#) object

with_reference_state(*component*: str, *phase*: str = 'SER', *temperature*: float = -1.0, *pressure*: float = 100000.0)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

Returns

This [PhaseDiagramCalculation](#) object

with_second_axis(*axis*: [CalculationAxis](#))

Sets the second calculation axis.

Parameters

axis – The axis

Returns

This [PhaseDiagramCalculation](#) object

with_system_modifications(*system_modifications*: [SystemModifications](#))

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *PhaseDiagramCalculation* object

class `tc_python.step_or_map_diagrams.PhaseDiagramOptions`

Bases: object

Simulation options for phase diagram calculations.

disable_approximate_driving_force_for_metastable_phases()

Disables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use *disable_approximate_driving_force_for_metastable_phases()* to force the calculation to converge for the metastable phases.

Returns

This *PhaseDiagramOptions* object

disable_control_step_size_during_minimization()

Disables stepsize control during minimization (non-global).

Default: Enabled

Returns

This *PhaseDiagramOptions* object

disable_force_positive_definite_phase_hessian()

Disables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This *PhaseDiagramOptions* object

dont_use_auto_start_points()

Switches the usage of automatic starting points for the mapping off.

Default: Switched on

Returns

This *PhaseDiagramOptions* object

dont_use_inside_mesh_points()

Switches the usage of inside meshing points for the mapping off.

Default: Switched off

Returns

This *PhaseDiagramOptions* object

enable_approximate_driving_force_for_metastable_phases()

Enables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use *disable_approximate_driving_force_for_metastable_phases()* to force the calculation to converge for the metastable phases.

Returns

This *PhaseDiagramOptions* object

enable_control_step_size_during_minimization()

Enables stepsize control during normal minimization (non-global).

Default: Enabled

Returns

This *PhaseDiagramOptions* object

enable_force_positive_definite_phase_hessian()

Enables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This *PhaseDiagramOptions* object

set_global_minimization_max_grid_points(*max_grid_points: int = 2000*)

Sets the maximum number of grid points in global minimization. **** Only applicable if global minimization is actually used**.**

Default: 2000 points

Parameters

max_grid_points – The maximum number of grid points

Returns

This *PhaseDiagramOptions* object

set_global_minimization_test_interval(*global_test_interval: int = 0*)

Sets the interval for the global test.

Default: 0

Parameters

global_test_interval – The global test interval

Returns

This *PhaseDiagramOptions* object

set_max_no_of_iterations(*max_no_of_iterations: int = 500*)

Set the maximum number of iterations.

Default: max. 500 iterations

Note: As some models give computation times of more than 1 CPU second/iteration, this number is also used to check the CPU time and the calculation stops if 500 CPU seconds/iterations are used.

Parameters

max_no_of_iterations – The max. number of iterations

Returns

This *PhaseDiagramOptions* object

set_no_of_mesh_along_axis(*no_of_mesh_along_axis: int = 3*)

Sets the number of meshes along an axis for the mapping.

Default: 3

Parameters

no_of_mesh_along_axis – The number of meshes

Returns

This *PhaseDiagramOptions* object

set_required_accuracy(*accuracy: float = 1e-06*)

Sets the required relative accuracy.

Default: 1.0E-6

Note: This is a relative accuracy, and the program requires that the relative difference in each variable must be lower than this value before it has converged. A larger value normally means fewer iterations but less accurate solutions. The value should be at least one order of magnitude larger than the machine precision.

Parameters

accuracy – The required relative accuracy

Returns

This *PhaseDiagramOptions* object

set_smallest_fraction(*smallest_fraction: float = 1e-12*)

Sets the smallest fraction for constituents that are unstable.

It is normally only in the gas phase that you can find such low fractions.

The **default value** for the smallest site-fractions is 1E-12 for all phases except for IDEAL phase with one sublattice site (such as the GAS mixture phase in many databases) for which the default value is always as 1E-30.

Parameters

smallest_fraction – The smallest fraction for constituents that are unstable

Returns

This *PhaseDiagramOptions* object

use_auto_start_points()

Switches the usage of automatic starting points for the mapping on.

Default: Switched on

Returns

This *PhaseDiagramOptions* object

use_inside_mesh_points()

Switches the usage of inside meshing points for the mapping off.

Default: Switched off

Returns

This *PhaseDiagramOptions* object

class `tc_python.step_or_map_diagrams.PhaseDiagramResult`(*result*)

Bases: *AbstractResult*

Result of a phase diagram calculation, it can be evaluated using quantities or Console Mode syntax.

add_coordinate_for_phase_label(*x: float, y: float*)

Sets a coordinate in the result plot for which the stable phases will be evaluated and provided in the result data object. This can be used to plot the phases of a region into the phase diagram or just to programmatically evaluate the phases in certain regions.

Warning: This method takes coordinates of the **plot** axes and not of the calculation axis.

Parameters

- **x** – The coordinate of the first **plot** axis (“x-axis”) [unit of the **plot** axis]
- **y** – The coordinate of the second **plot** axis (“y-axis”) [unit of the **plot** axis]

Returns

This *PhaseDiagramResult* object

get_values_grouped_by_quantity_of(*x_quantity: Union[ThermodynamicQuantity, str], y_quantity: Union[ThermodynamicQuantity, str]*) → *PhaseDiagramResultValues*

Returns x-y-line data grouped by the multiple datasets of the specified quantities (for example in dependency of components). The available quantities can be found in the documentation of the factory class `ThermodynamicQuantity`. Usually the result data represents the phase diagram.

Note: The different datasets will contain *NaN*-values between different subsections and are not sorted (because they are unsortable due to their nature).

Note: Its possible to use functions as axis variables, either by using *ThermodynamicQuantity.user_defined_function*, or by using an expression that contains ‘=’.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example ‘*T*’), or even a function (for example ‘*f=T*1.01*’)
- **y_quantity** – The second quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example ‘*NV*’), or even a function (for example ‘*CP=HM.T*’)

Returns

The phase diagram data

get_values_grouped_by_stable_phases_of(*x_quantity*: Union[ThermodynamicQuantity, str],
y_quantity: Union[ThermodynamicQuantity, str]) →
PhaseDiagramResultValues

Returns x-y-line data grouped by the sets of “stable phases” (for example “LIQUID” or “LIQUID + FCC_A1”). The available quantities can be found in the documentation of the factory class `ThermodynamicQuantity`. Usually the result data represents the phase diagram.

Note: The different datasets will contain *NaN*-values between different subsections and are not sorted (because they are unsortable due to their nature).

Note: Its possible to use functions as axis variables, either by using *ThermodynamicQuantity.user_defined_function*, or by using an expression that contains ‘=’.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example ‘*T*’), or even a function (for example ‘*f=T*1.01*’)
- **y_quantity** – The second quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example ‘*NV*’), or even a function (for example ‘*CP=HM.T*’)

Returns

The phase diagram data

remove_phase_labels()

Erases all added coordinates for phase labels.

Returns

This *PhaseDiagramResult* object

save_to_disk(*path*: str)

Saves the result to disc. Note that a result is a folder, containing potentially many files. The result can later be loaded with `load_result_from_disk()`

Parameters

path – the path to the folder you want the result to be saved in. It can be relative or absolute.

Returns

this *PhaseDiagramResult* object

set_phase_name_style(*phase_name_style_enum*: `PhaseNameStyle = PhaseNameStyle.NONE`)

Sets the style of the phase name labels that will be used in the result data object (constitution description, ordering description, ...).

Default: `PhaseNameStyle.NONE`

Parameters

phase_name_style_enum – The phase name style

Returns

This `PhaseDiagramResult` object

class `tc_python.step_or_map_diagrams.PhaseDiagramResultValues`(*phase_diagram_values_java*)

Bases: `object`

Represents the data of a phase diagram.

get_invariants() → `ResultValueGroup`

Returns the x- and y-datasets of all invariants in the phase diagram.

Note: The datasets will normally contain different sections separated by *NaN*-values.

Returns

The invariants dataset object

get_lines() → `Dict[str, ResultValueGroup]`

Returns the x- and y-datasets of all phase boundaries in the phase diagram.

Note: The datasets will normally contain different sections separated by *NaN*-values.

Returns

Containing the phase boundary datasets with the *quantities* or *stable phases* as keys (depending on the used method to get the values)

get_phase_labels() → `List[PhaseLabel]`

Returns the phase labels added for certain coordinates using `PhaseDiagramResult.add_coordinate_for_phase_label()`.

Returns

The list with the phase label data (that contains plot coordinates and stable phases)

get_tie_lines() → `ResultValueGroup`

Returns the x- and y-datasets of all tie-lines in the phase diagram.

Note: The datasets will normally contain different sections separated by *NaN*-values.

Returns

The tie-line dataset object

class `tc_python.step_or_map_diagrams.PhaseLabel`(*phase_label_java*)

Bases: `object`

Represents a *phase label at a plot coordinate*, i.e. the stable phases that are present at that *plot* coordinate.

get_text() → `str`

Accessor for the phase label :return: the phase label

get_x() → `List[float]`

Accessor for the x-value :return: the x value

get_y() → `List[float]`

Accessor for the y-value :return: the y value

class `tc_python.step_or_map_diagrams.PhaseNameStyle`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: `Enum`

The style of the phase names used in the labels.

ALL = 1

Adding ordering and constitution description.

COMMON_PHASE_NAME = 2

Adding “common name” description.

CONSTITUTION_DESCRIPTION = 3

Adding only constitution description.

NONE = 0

Only the database phase names.

ORDERING_DESCRIPTION = 4

Adding only ordering description.

class `tc_python.step_or_map_diagrams.PropertyDiagramCalculation`(*calculator*)

Bases: `AbstractPropertyDiagramCalculation`

calculate(*keep_previous_results: bool = False, timeout_in_minutes: float = 0.0*) → `PropertyDiagramResult`

Performs the property diagram calculation.

Warning: If you use `keep_previous_results=True`, you must not use another calculator or even get results in between the calculations using `calculate()`. Then the previous results will actually be lost.

Parameters

- **keep_previous_results** – If `True`, results from any previous call to this method are appended. This can be used to combine calculations with multiple start points if the stepping fails at a certain condition.
- **timeout_in_minutes** – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than `timeout_in_minutes`, a `UnrecoverableCalculationException` will be thrown, the current `TCPython-block` will be unusable and a new `TCPython` block must be created for further calculations.

Returns

A new *PropertyDiagramResult* object which later can be used to get specific values from the calculated result

disable_global_minimization()

Disables global minimization.

Default: Enabled

Returns

This *PropertyDiagramCalculation* object

disable_step_separate_phases()

Disables *step separate phases*. This is the **default** setting.

Returns

This *PropertyDiagramCalculation* object

enable_global_minimization()

Enables global minimization.

Default: Enabled

Returns

This *PropertyDiagramCalculation* object

enable_step_separate_phases()

Enables *step separate phases*.

Default: By default separate phase stepping is *disabled*

Note: This is an advanced option, it is used mostly to calculate how the Gibbs energy for a number of phases varies for different compositions. This is particularly useful to calculate Gibbs energies for complex phases with miscibility gaps and for an ordered phase that is never disordered (e.g. SIGMA-phase, G-phase, MU-phase, etc.).

Returns

This *PropertyDiagramCalculation* object

get_components() → List[str]

Returns the names of the components in the system (including all components auto-selected by the database(s)).

Returns

The component names

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

remove_all_conditions()

Removes all set conditions.

Returns

This *PropertyDiagramCalculation* object

remove_condition() (*quantity: Union[ThermodynamicQuantity, str]*)

Removes the specified condition.

Parameters

quantity – The thermodynamic quantity to set as condition; a Console Mode syntax string can be used as an alternative (for example *X(Cr)*)

Returns

This *PropertyDiagramCalculation* object

run_poly_command() (*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *PropertyDiagramCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

<p>Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).</p>
--

set_condition() (*quantity: Union[ThermodynamicQuantity, str], value: float*)

Sets the specified condition.

Parameters

- **quantity** – The thermodynamic quantity to set as condition; a Console Mode syntax string can be used as an alternative (for example *X(Cr)*)
- **value** – The value of the condition

Returns

This *PropertyDiagramCalculation* object

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *PropertyDiagramCalculation* object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *PropertyDiagramCalculation* object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or *ALL_PHASES* for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This *PropertyDiagramCalculation* object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This *PropertyDiagramCalculation* object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *PropertyDiagramCalculation* object

with_axis(*axis: CalculationAxis*)

Sets the calculation axis.

Parameters**axis** – The axis**Returns**This *PropertyDiagramCalculation* object**with_options**(*options*: *PropertyDiagramOptions*)

Sets the simulation options.

Parameters**options** – The simulation options**Returns**This *PropertyDiagramCalculation* object**with_reference_state**(*component*: *str*, *phase*: *str* = 'SER', *temperature*: *float* = -1.0, *pressure*: *float* = 100000.0)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

ReturnsThis *PropertyDiagramCalculation* object**with_system_modifications**(*system_modifications*: *SystemModifications*)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *PropertyDiagramCalculation* object

```
class tc_python.step_or_map_diagrams.PropertyDiagramOptions
```

Bases: object

Simulation options for the property diagram calculations.

```
disable_approximate_driving_force_for_metastable_phases()
```

Disables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use *disable_approximate_driving_force_for_metastable_phases* to force the calculation to converge for the metastable phases.

Returns

This *PropertyDiagramOptions* object

```
disable_control_step_size_during_minimization()
```

Disables stepsize control during minimization (non-global).

Default: Enabled

Returns

This *PropertyDiagramOptions* object

```
disable_force_positive_definite_phase_hessian()
```

Disables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This *PropertyDiagramOptions* object

```
enable_approximate_driving_force_for_metastable_phases()
```

Enables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use *disable_approximate_driving_force_for_metastable_phases* to force the calculation to converge for the metastable phases.

Returns

This *PropertyDiagramOptions* object

enable_control_step_size_during_minimization()

Enables stepsize control during normal minimization (non-global).

Default: Enabled

Returns

This *PropertyDiagramOptions* object

enable_force_positive_definite_phase_hessian()

Enables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This *PropertyDiagramOptions* object

set_global_minimization_max_grid_points(*max_grid_points: int = 2000*)

Sets the maximum number of grid points in global minimization. **Only applicable if global minimization is actually used.**

Default: 2000 points

Parameters

max_grid_points – The maximum number of grid points

Returns

This *PropertyDiagramOptions* object

set_global_minimization_test_interval(*global_test_interval: int = 0*)

Sets the interval for the global test.

Default: 0

Parameters

global_test_interval – The global test interval

Returns

This *PropertyDiagramOptions* object

set_max_no_of_iterations(*max_no_of_iterations: int = 500*)

Set the maximum number of iterations.

Default: max. 500 iterations

Note: As some models give computation times of more than 1 CPU second/iteration, this number is also used to check the CPU time and the calculation stops if 500 CPU seconds/iterations are used.

Parameters

max_no_of_iterations – The max. number of iterations

Returns

This *PropertyDiagramOptions* object

set_required_accuracy(*accuracy: float = 1e-06*)

Sets the required relative accuracy.

Default: 1.0E-6

Note: This is a relative accuracy, and the program requires that the relative difference in each variable must be lower than this value before it has converged. A larger value normally means fewer iterations but less accurate solutions. The value should be at least one order of magnitude larger than the machine precision.

Parameters

accuracy – The required relative accuracy

Returns

This *PropertyDiagramOptions* object

set_smallest_fraction(*smallest_fraction*: float = 1e-12)

Sets the smallest fraction for constituents that are unstable.

It is normally only in the gas phase that you can find such low fractions.

The **default value** for the smallest site-fractions is 1E-12 for all phases except for IDEAL phase with one sublattice site (such as the GAS mixture phase in many databases) for which the default value is always as 1E-30.

Parameters

smallest_fraction – The smallest fraction for constituents that are unstable

Returns

This *PropertyDiagramOptions* object

class tc_python.step_or_map_diagrams.**PropertyDiagramResult**(*result*)

Bases: *AbstractResult*

Result of a property diagram. This can be used to query for specific values.

get_values_grouped_by_quantity_of(*x_quantity*: Union[*ThermodynamicQuantity*, str], *y_quantity*: Union[*ThermodynamicQuantity*, str], *sort_and_merge*: bool = True) → Dict[str, *ResultValueGroup*]

Returns x-y-line data grouped by the multiple datasets of the specified quantities (typically the phases). The available quantities can be found in the documentation of the factory class *ThermodynamicQuantity*.

Note: The different datasets might contain *NaN*-values between different subsections and might not be sorted **even if the flag `sort_and_merge` has been set** (because they might be unsortable due to their nature).

Note: Its possible to use functions as axis variables, either by using *ThermodynamicQuantity.user_defined_function*, or by using an expression that contains '='.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example 'T'), or even a function (for example 'f=T*I.OI')

- **y_quantity** – The second quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example ‘NV’), or even a function (for example ‘CP=HM.T’)
- **sort_and_merge** – If *True*, the data is sorted and merged into as few subsections as possible (divided by *NaN*)

Returns

Containing the datasets with the quantities as their keys

```
get_values_grouped_by_stable_phases_of(x_quantity: Union[ThermodynamicQuantity, str],
                                         y_quantity: Union[ThermodynamicQuantity, str],
                                         sort_and_merge: bool = True) → Dict[str,
                                         ResultValueGroup]
```

Returns x-y-line data grouped by the sets of “stable phases” (for example “LIQUID” or “LIQUID + FCC_A1”). The available quantities can be found in the documentation of the factory class `ThermodynamicQuantity`.

Note: The different datasets might contain *NaN*-values between different subsections and different lines of an ambiguous dataset. They might not be sorted **even if the flag ‘sort_and_merge’ has been set** (because they might be unsortable due to their nature).

Note: Its possible to use functions as axis variables, either by using `ThermodynamicQuantity.user_defined_function`, or by using an expression that contains ‘=’.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example ‘T’), or even a function (for example ‘f=T*1.01’)
- **y_quantity** – The second quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example ‘NV’), or even a function (for example ‘CP=HM.T’)
- **sort_and_merge** – If *True*, the data will be sorted and merged into as few subsections as possible (divided by *NaN*)

Returns

Containing the datasets with the quantities as their keys

```
get_values_of(x_quantity: Union[ThermodynamicQuantity, str], y_quantity:
              Union[ThermodynamicQuantity, str]) → [List[float], List[float]]
```

Returns sorted x-y-line data without any separation. Use `get_values_grouped_by_quantity_of()` or `get_values_grouped_by_stable_phases_of()` instead if you need such a separation. The available quantities can be found in the documentation of the factory class `ThermodynamicQuantity`.

Note: This method will always return sorted data without any *NaN*-values. If it is unsortable that might give data that is hard to interpret. In such a case you need to choose the quantity in another way or use one of the other methods. One example of this is to use quantities with *All*-markers, for example `MassFractionOfAComponent("All")`.

Note: Its possible to use functions as axis variables, either by using *ThermodynamicQuantity.user_defined_function*, or by using an expression that contains '='.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first Thermodynamic quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example ‘T’) or even a function (for example ‘f=T*1.01’)
- **y_quantity** – The second Thermodynamic quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example ‘NV’), or even a function (for example ‘CP=HM.T’)

Returns

A tuple containing the x- and y-data in lists

save_to_disk(path: str)

Saves the result to disc. Note that a result is a folder, containing potentially many files. The result can later be loaded with `load_result_from_disk()`

Parameters

path – the path to the folder you want the result to be saved in. It can be relative or absolute.

Returns

this *PropertyDiagramResult* object

set_phase_name_style(phase_name_style_enum: PhaseNameStyle = PhaseNameStyle.NONE)

Sets the style of the phase name labels that will be used in the result data object (constitution description, ordering description, ...).

Default: `PhaseNameStyle.NONE`

Parameters

phase_name_style_enum – The phase name style

Returns

This *PropertyDiagramResult* object

6.1.6 Module “diffusion”

class `tc_python.diffusion.AbstractBoundaryCondition`

Bases: `object`

The abstract base class for all boundary conditions.

class `tc_python.diffusion.AbstractCalculatedGrid`

Bases: *AbstractGrid*

The abstract base class for calculated grids.

class `tc_python.diffusion.AbstractElementProfile`

Bases: `object`

The abstract base class for all initial composition profile types.

class `tc_python.diffusion.AbstractGrid`

Bases: `object`

The abstract base class for all grids.

class `tc_python.diffusion.AbstractSolver`

Bases: `object`

Abstract base class for the solvers (Classic, Homogenization and Automatic).

class `tc_python.diffusion.ActivityFluxFunction`

Bases: `BoundaryCondition`

get_type() → `str`

The type of the boundary condition.

Returns

The type

set_flux_function(*element_name*: `str`, *f*: `str = '0'`, *g*: `str = '1'`, *n*: `float = 1.0`, *to_time*: `float = 1.7976931348623157e+308`)

The flux for the independent components must be given in the format:

$$J = f(T,P,TIME) * (ACTIVITY^N - g(T,P,TIME))$$

where *f* and *g* may be functions of time (TIME), temperature (T), and pressure (P), and N is an integer.

f and *g* must be expressed in DICTRA Console Mode syntax.

Parameters

- **element_name** – The name of the element
- **f** – the function *f* in the formula above
- **g** – the function *g* in the formula above
- **n** – the constant N in the formula above
- **to_time** – The max-time for which the flux function is used.

class `tc_python.diffusionAutomaticGrid`

Bases: `CalculatedGrid`

Represents an automatic grid.

get_type() → `str`

Type of the grid.

Returns

The type

with_coarse_grid()

Configures this automatic grid as COARSE and returns the object to allow method chaining.

Returns

This `AutomaticGrid` object (configured as COARSE).

with_custom_grid(*max_number_points*: `int = 50`, *max_geometric_factor*: `float = 1.2`)

Configures this automatic grid as CUSTOM and optionally sets max number points and max geometric factor.

Parameters

- **max_number_points** – (Optional) Max number of points for the CUSTOM grid. Default is 50.
- **max_geometric_factor** – (Optional) Max geometric factor for the CUSTOM grid. Default is 1.2.

Returns

This *AutomaticGrid* object (configured as CUSTOM).

Raises

ValueError – If max_number_points is not greater than 1.

with_fine_grid()

Configures this automatic grid as FINE and returns the object to allow method chaining.

Returns

This *AutomaticGrid* object (configured as FINE).

with_medium_grid()

Configures this automatic grid as MEDIUM and returns the object to allow method chaining.

Returns

This *AutomaticGrid* object (configured as MEDIUM).

```
class tc_python.diffusion.AutomaticGridType(value, names=None, *, module=None, qualname=None,
                                             type=None, start=1, boundary=None)
```

Bases: Enum

An enumeration representing the types of automatic grid.

Attributes: COARSE: Represents a coarse grid. MEDIUM: Represents a medium grid. FINE: Represents a fine grid. CUSTOM: Represents a CUSTOM grid.

COARSE = 'COARSE'

CUSTOM = 'CUSTOM'

FINE = 'FINE'

MEDIUM = 'MEDIUM'

```
class tc_python.diffusion.AutomaticSolver
```

Bases: *Solver*

Solver using the *homogenization model* if any region has more than one phase, otherwise using the *classic model*.

Note: This is the **default solver** and recommended for most applications.

```
get_type() → str
```

The type of the solver.

Returns

The type

```
set_flux_balance_equation_accuracy(accuracy: float = 1e-16)
```

Only valid if the :class:`ClassicSolver` is actually used (i.e. not more than one phase in each region).

Sets the required accuracy during the solution of the flux balance equations. **Default:** 1.0e-16

Parameters

accuracy – The required accuracy

Returns

A new *AutomaticSolver* object

set_tieline_search_variable_to_activity()

Only valid if the :class:`ClassicSolver` is actually used (i.e. not more than one phase in each region).

Configures the solver to use the *activity of a component* to find the correct tie-line at the phase interface. Either activity or chemical potential are applied to reduce the degrees of freedom at the local equilibrium.

Default: This is the default setting

Returns

A new *AutomaticSolver* object

set_tieline_search_variable_to_potential()

Only valid if the :class:`ClassicSolver` is actually used (i.e. not more than one phase in each region).

Configures the solver to use the *chemical potential of a component* to find the correct tie-line at the phase interface. Either activity or chemical potential are applied to reduce the degrees of freedom at the local equilibrium. **Default:** To use the activity

Returns

A new *AutomaticSolver* object

class tc_python.diffusion.BoundaryCondition

Bases: *AbstractBoundaryCondition*

Contains factory methods for the the different boundary conditions available.

classmethod activity_flux_function()

Factory method that creates a **new** activity-flux-function boundary condition.

This type of boundary condition is used to take into account the finite rate of a surface reaction.

The flux for the independent components must be given in the format:

$$J = f(T,P,TIME) * (ACTIVITY^N - g(T,P,TIME))$$

where f and g may be functions of time (TIME), temperature (T), and pressure (P), and N is an integer.

f and g must be expressed in DICTRA Console Mode syntax.

Note: The activities are those with user-defined reference states. The function mass transfer coefficient is the mass transfer coefficient, activity of the corresponding species in the gas is the activity of the corresponding species in the gas and N is a stoichiometric coefficient.

Note: For more details see L. Sproge and J. Ågren, "Experimental and theoretical studies of gas consumption in the gas carburizing process" J. Heat Treat. 6, 9–19 (1988).

Returns

A new *ActivityFluxFunction* object

classmethod closed_system()

Factory method that creates a **new** closed-system boundary condition.

Returns

A new *ClosedSystem* object

classmethod `fix_flux_value()`

Factory method that creates a **new** fix-flux-value boundary condition.

This type of boundary condition makes it possible to enter functions that yield the flux times the molar volume for the independent components. May be a function of time, temperature and pressure: $J(T,P,TIME)$.

Returns

A new *FixFluxValue* object

classmethod `fixed_compositions(unit_enum: Unit = Unit.MASS_PERCENT)`

Factory method that creates a **new** fixed-composition boundary condition.

Parameters

unit_enum – The composition unit

Returns

A new *FixedCompositions* object

classmethod `mixed_zero_flux_and_activity()`

Factory method that creates a **new** mixed zero-flux and activity boundary condition

Returns

A new *MixedZeroFluxAndActivity* object

class `tc_python.diffusion.CalculatedGrid`

Bases: *AbstractCalculatedGrid*

Factory class for grids generated by a mathematical series (automatic, linear, geometric, ...). Use *tc_python.diffusion.PointByPointGrid* instead if you want to use an existing grid from experimental data or a previous calculation.

Note: A region must contain a number of grid points. The composition is only known at these grid points and the software assumes that the composition varies linearly between them. The amount and composition of all the phases present at a single grid point in a certain region are those given by thermodynamic equilibrium keeping the over-all composition at the grid point fixed.

classmethod `automatic()`

Factory method that creates a **new** automatic grid with MEDIUM grid type, as default.

Returns

A new *AutomaticGrid* object

classmethod `double_geometric(no_of_points: int = 50, lower_geometrical_factor: float = 1.1, upper_geometrical_factor: float = 0.9)`

Factory method that creates a **new** double geometric grid.

Note: Double geometric grids have a high number of grid points in the middle or at both ends of a region. One geometrical factor for the lower (left) and upper (right) half of the region need to be specified. In both cases a geometrical factor of larger than one yields a higher density of grid points at the lower end of the half and vice versa for a factor smaller than one.

Parameters

- **no_of_points** – The number of points
- **lower_geometrical_factor** – The geometrical factor for the left half

- **upper_geometrical_factor** – The geometrical factor for the right half

Returns

A new *DoubleGeometricGrid* object

classmethod `geometric`(*no_of_points*: int = 50, *geometrical_factor*: float = 1.1)

Factory method that creates a **new** geometric grid.

Note: A grid that yields a varying density of grid points in the region. A geometrical factor larger than one yields a higher density of grid points at the lower end of the region and a factor smaller than one yields a higher density of grid points at the upper end of the region.

Parameters

- **no_of_points** – The number of points
- **geometrical_factor** – The geometrical factor

Returns

A new *GeometricGrid* object

classmethod `linear`(*no_of_points*: int = 50)

Factory method that creates a **new** equally spaced grid.

Parameters

- **no_of_points** – The number of points

Returns

A new *LinearGrid* object

class `tc_python.diffusion.ClassicSolver`

Bases: *Solver*

Solver using the *Classic model*.

Note: This solver **never switches** to the homogenization model even if it fails to converge. Use the *tc_python.diffusionAutomaticSolver* if necessary instead.

`get_type()` → str

Convenience method for getting the type of the solver.

Returns

The type of the solver

set_flux_balance_equation_accuracy(*accuracy*: float = 1e-16)

Sets the required accuracy during the solution of the flux balance equations. **Default:** 1.0e-16

Parameters

- **accuracy** – The required accuracy

Returns

A new *ClassicSolver* object

set_tieline_search_variable_to_activity()

Configures the solver to use the *activity of a component* to find the correct tie-line at the phase interface. Either activity or chemical potential are applied to reduce the degrees of freedom at the local equilibrium.

Default: This is the default setting

set_tieline_search_variable_to_potential()

Configures the solver to use the *chemical potential of a component* to find the correct tie-line at the phase interface. Either activity or chemical potential are applied to reduce the degrees of freedom at the local equilibrium. **Default:** To use the activity

Returns

A new *ClassicSolver* object

class tc_python.diffusion.ClosedSystem

Bases: *BoundaryCondition*

Represents a boundary for a closed system.

get_type() → str

Convenience method for getting the type of the boundary condition.

Returns

The type of the boundary condition

class tc_python.diffusion.CompositionProfile(*unit_enum: Unit = Unit.MASS_PERCENT*)

Bases: object

Contains initial concentration profiles for the elements.

add(*element_name: str, profile: ElementProfile*)

Adds a concentration profile for the specified element.

Parameters

- **element_name** – The name of the element
- **profile** – The initial concentration profile

Returns

A *CompositionProfile* object

class tc_python.diffusion.ConstantProfile(*value: float*)

Bases: *ElementProfile*

Represents a constant initial concentration profile.

get_type() → str

The type of the element profile.

Returns

The type

class tc_python.diffusion.ContinuedDiffusionCalculation(*calculation*)

Bases: *AbstractCalculation*

Configuration for a diffusion calculation that is a continuation of a previous isothermal or non-isothermal diffusion calculation. It contains a subset of the settings possible in the original calculation.

Use *set_simulation_time()* to set a simulation time that is higher than the original calculation.

calculate(*timeout_in_minutes: float = 0.0*) → *DiffusionCalculationResult*

Runs the diffusion calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *DiffusionCalculationResult* which later can be used to get specific values from the calculated result

set_simulation_time(*simulation_time*: float)

Sets the simulation time.

Parameters

simulation_time – The simulation time [s]

Returns

This *DiffusionIsoThermalCalculation* object

with_left_boundary_condition(*boundary_condition*: BoundaryCondition, *to*: float = 1.7976931348623157e+308)

Defines the boundary condition on the left edge of the system.

Default: A closed-system boundary condition.

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Note: You can specify time-dependent boundary conditions by calling *with_left_boundary_condition()* many times, with different values of the “to” parameter.

Examples:

- *with_left_boundary_condition(BoundaryCondition.closed_system(), to=100)*
- *with_left_boundary_condition(BoundaryCondition.mixed_zero_flux_and_activity().set_activity_for_element("C", surface_activity), to=500)*
- *with_left_boundary_condition(BoundaryCondition.closed_system())*

This example sets an closed-system-boundary-condition from start up to 100s and a activity-boundary-condition from 100s to 500s and finally a closed-system-boundary-condition from 500s to the end of simulation.

Parameters

- **boundary_condition** – The boundary condition
- **to** – The upper time-limit for boundary_condition.

Returns

This *DiffusionIsoThermalCalculation* object

with_options(*options*: Options, *to*: float = 1.7976931348623157e+308)

Sets the general simulation conditions.

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Parameters

- **options** – The general simulation conditions
- **to** – The upper time-limit for options.

Returns

This *DiffusionIsoThermalCalculation* object

with_right_boundary_condition(*boundary_condition*: [BoundaryCondition](#), *to*: float = 1.7976931348623157e+308)

Defines the boundary condition on the right edge of the system.

Default: A closed-system boundary condition

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Note: You can specify time-dependent boundary conditions by calling [with_right_boundary_condition\(\)](#) many times, with different values of the “to” parameter.

Examples:

- `with_right_boundary_condition(BoundaryCondition.closed_system(), to=100)`
- `with_right_boundary_condition(BoundaryCondition.mixed_zero_flux_and_activity().set_activity_for_element("C", surface_activity), to=500)`
- `with_right_boundary_condition(BoundaryCondition.closed_system())`

This example sets an closed-system-boundary-condition from start up to 100s and a activity-boundary-condition from 100s to 500s and finally a closed-system-boundary-condition from 500s to the end of simulation.

Parameters

- **boundary_condition** – The boundary condition
- **to** – The upper time-limit for boundary_condition.

Returns

This [DiffusionIsoThermalCalculation](#) object

with_solver(*solver*: [Solver](#), *to*: float = 1.7976931348623157e+308)

Sets the solver to use (*Classic*, *Homogenization* or *Automatic*). **Default is Automatic.**

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Parameters

- **solver** – The solver to use
- **to** – The upper time-limit for solver.

Returns

This [DiffusionIsoThermalCalculation](#) object

with_timestep_control(*timestep_control*: [TimestepControl](#), *to*: float = 1.7976931348623157e+308)

Sets the timestep control options.

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Parameters

- **timestep_control** – The new timestep control options
- **to** – The upper time-limit for timestep_control.

Returns

This *DiffusionIsoThermalCalculation* object

```
class tc_python.diffusion.DiffusionCalculationResult(result)
```

Bases: *AbstractResult*

Result of a diffusion calculation. This can be used to query for specific values. For details of the axis variables, search the Thermo-Calc help.

```
get_mass_fraction_at_lower_interface(region: str, component: str) → [List[float], List[float]]
```

Returns the mass fraction of the specified component at the lower boundary of the specified region, in dependency of time.

Parameters

- **region** – The name of the region
- **component** – The name of the component

Returns

A tuple of two lists of floats (time [s], mass fraction of the specified component)

```
get_mass_fraction_at_upper_interface(region: str, component: str) → [List[float], List[float]]
```

Returns the mass fraction of the specified component at the upper boundary of the specified region, in dependency of time.

Parameters

- **region** – The name of the region
- **component** – The name of the component

Returns

A tuple of two lists of floats (time [s], mass fraction of the specified component)

```
get_mass_fraction_of_component_at_time(component: str, time: Union[SimulationTime, float]) → [List[float], List[float]]
```

Returns the mass fraction of the specified component at the specified time.

Note: Use the enum *tc_python.diffusion.SimulationTime* to choose the first or the last timepoint of the simulation. A timepoint close to the last one should never be specified manually because the actual end of the simulation can slightly deviate.

Parameters

- **component** – The name of the component
- **time** – The time [s]

Returns

A tuple of two lists of floats (distance [m], mass fraction of component at the specified time)

```
get_mass_fraction_of_phase_at_time(phase: str, time: Union[SimulationTime, float]) → [List[float], List[float]]
```

Returns the mass fraction of the specified phase.

Note: Use the enum `tc_python.diffusion.SimulationTime` to choose the first or the last timepoint of the simulation. A timepoint close to the last one should never be specified manually because the actual end of the simulation can slightly deviate.

Parameters

- **phase** – The name of the phase
- **time** – The time [s]

Returns

A tuple of two lists of floats (distance [m], mass fraction of hte phase at the specified time)

get_mole_fraction_at_lower_interface(*region: str, component: str*) → [List[float], List[float]]

Returns the mole fraction of the specified component at the lower boundary of the specified region, in dependency of time.

Parameters

- **region** – The name of the region
- **component** – The name of the component

Returns

A tuple of two lists of floats (time [s], mole fraction of the specified component)

get_mole_fraction_at_upper_interface(*region: str, component: str*) → [List[float], List[float]]

Returns the mole fraction of the specified component at the upper boundary of the specified region, in dependency of time.

Parameters

- **region** – The name of the region
- **component** – The name of the component

Returns

A tuple of two lists of floats (time [s], mole fraction of the specified component)

get_mole_fraction_of_component_at_time(*component: str, time: Union[SimulationTime, float]*) → [List[float], List[float]]

Returns the mole fraction of the specified component at the specified time.

Note: Use the enum `tc_python.diffusion.SimulationTime` to choose the first or the last timepoint of the simulation. A timepoint close to the last one should never be specified manually because the actual end of the simulation can slightly deviate.

Parameters

- **component** – The name of the component
- **time** – The time [s]

Returns

A tuple of two lists of floats (distance [m], mole fraction of component at the specified time)

get_mole_fraction_of_phase_at_time(*phase: str, time: Union[SimulationTime, float]*) → [List[float], List[float]]

Returns the mole fraction of the specified phase.

Note: Use the enum `tc_python.diffusion.SimulationTime` to choose the first or the last timepoint of the simulation. A timepoint close to the last one should never be specified manually because the actual end of the simulation can slightly deviate.

Parameters

- **phase** – The name of the phase
- **time** – The time [s]

Returns

A tuple of two lists of floats (distance [m], mole fraction of the phase at the specified time)

get_position_of_lower_boundary_of_region(*region: str*) → [List[float], List[float]]

Returns the position of the lower boundary of the specified region in dependency of time.

Parameters

region – The name of the region

Returns

A tuple of two lists of floats (time [s], position of lower boundary of region [m])

get_position_of_upper_boundary_of_region(*region: str*) → [List[float], List[float]]

Returns the position of the upper boundary of the specified region in dependency of time.

Parameters

region – The name of the region

Returns

A tuple of two lists of floats (time [s], position of upper boundary of region [m])

get_regions() → List[str]

Returns the regions of the diffusion simulation.

Note: Automatically generated regions (`R_###`) are included in the list.

Returns

The region names

get_time_steps() → List[float]

Returns the timesteps of the diffusion simulation.

Returns

The timesteps [s]

get_total_mass_fraction_of_component(*component: str*) → [List[float], List[float]]

Returns the total mass fraction of the specified component in dependency of time.

Parameters

component – The name of the component

Returns

A tuple of two lists of floats (time [s], total mass fraction of the component)

get_total_mass_fraction_of_component_in_phase(*component: str, phase: str*) → [List[float], List[float]]

Returns the total mass fraction of the specified component in the specified phase in dependency of time.

Parameters

- **component** – The name of the component
- **phase** – The name of the phase

Returns

A tuple of two lists of floats (time [s], total mass fraction of the component in the phase)

get_total_mass_fraction_of_phase(*phase: str*) → [List[float], List[float]]

Returns the total mass fraction of the specified phase in dependency of the time.

Parameters

phase – The name of the phase

Returns

A tuple of two lists of floats (time [s], total mass fraction of the phase)

get_total_mole_fraction_of_component(*component: str*) → [List[float], List[float]]

Returns the total mole fraction of the specified component in dependency of time.

Parameters

component – The name of the component

Returns

A tuple of two lists of floats (time [s], total mole fraction of the component)

get_total_mole_fraction_of_component_in_phase(*component: str, phase: str*) → [List[float], List[float]]

Returns the total mole fraction of the specified component in the specified phase in dependency of time.

Parameters

- **component** – The name of the component
- **phase** – The name of the phase

Returns

A tuple of two lists of floats (time [s], total mole fraction of the component in the phase)

get_total_mole_fraction_of_phase(*phase: str*) → [List[float], List[float]]

Returns the total mole fraction of the specified phase in dependency of time.

Parameters

phase – The name of the phase

Returns

A tuple of two lists of floats (time [s], total mole fraction of the phase)

get_total_volume_fraction_of_phase(*phase: str*) → [List[float], List[float]]

Returns the total volume fraction of the specified phase in dependency of the time.

Parameters

phase – The name of the phase

Returns

A tuple of two lists of floats (time [s], total volume fraction of the phase)

get_values_of(*x_axis*: Union[DiffusionQuantity, str], *y_axis*: Union[DiffusionQuantity, str],
plot_condition: Union[PlotCondition, str] = "", *independent_variable*:
 Union[IndependentVariable, str] = "") → [List[float], List[float]]

Returns the specified result from the simulation, allows all possible settings.

Note: As an alternative, DICTRA Console Mode syntax can be used as well for each quantity and condition.

Warning: This is an advanced mode that is equivalent to the possibilities in the DICTRA Console Mode. Not every combination of settings will return a result.

Parameters

- **x_axis** – The first result quantity
- **y_axis** – The second result quantity
- **plot_condition** – The plot conditions
- **independent_variable** – The independent variable

Returns

A tuple of two lists of floats (the x_axis quantity result, the y_axis quantity result) [units according to the quantities]

get_velocity_of_lower_boundary_of_region(*region*: str) → [List[float], List[float]]

Returns the velocity of the lower boundary of the specified region in dependency of time.

Parameters

region – The name of the region

Returns

A tuple of two lists of floats (time [s], velocity of lower boundary of region [m/s])

get_velocity_of_upper_boundary_of_region(*region*: str) → [List[float], List[float]]

Returns the velocity of the upper boundary of the specified region in dependency of time.

Parameters

region – The name of the region

Returns

A tuple of two lists of floats (time [s], velocity of upper boundary of region [m/s])

get_width_of_region(*region*: str) → [List[float], List[float]]

Returns the width of region, in dependency of time.

Parameters

region – The name of the region

Returns

A tuple of two lists of floats (time [s], width of the specified region [m])

save_to_disk(*path: str*)

Saves the result to disk. The result can later be loaded using `tc_python.server.Setup.load_result_from_disk()`.

Note: The *result data* is represented by a whole folder containing multiple files.

Parameters

path – The path to the result folder, can be relative or absolute.

Returns

This *DiffusionCalculationResult* object

with_continued_calculation()

Returns a *ContinuedDiffusionCalculation* that is used for continuing a diffusion calculation with altered settings.

Returns

A *ContinuedDiffusionCalculation*

class `tc_python.diffusion.DiffusionIsoThermalCalculation`(*calculation*)

Bases: *AbstractCalculation*

Configuration for an isothermal diffusion calculation.

add_console_command(*console_command: str*)

Registers a DICTRA Console Mode command for execution. These commands are executed after all other configuration directly before the calculation starts to run. All commands are stored and used until explicitly deleted using `tc_python.diffusion.DiffusionIsoThermoCalculation.remove_all_console_commands`.

Parameters

console_command – The DICTRA Console Mode command

Returns

This *DiffusionIsoThermalCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw DICTRA-commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten parenthesis, ...).

add_region(*region: Region*)

Adds a region to the calculation. Regions are always added in the simulation domain from left to right.

If you want to replace an already added region, call `remove_all_regions()`, and add the regions that you want to keep.

Warning: Regions must have unique names.

Parameters

region – The region to be added

Returns

This *DiffusionIsoThermalCalculation* object

calculate(*timeout_in_minutes: float = 0.0*) → *DiffusionCalculationResult*

Runs the diffusion calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *DiffusionCalculationResult* which later can be used to get specific values from the calculated result

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications*()

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

remove_all_console_commands()

Removes all previously added Console Mode commands.

Returns

This *DiffusionIsoThermalCalculation* object

remove_all_regions()

Removes all previously added regions.

:return This *DiffusionIsoThermalCalculation* object

set_simulation_time(*simulation_time: float*)

Sets the simulation time.

Parameters

simulation_time – The simulation time [s]

Returns

This *DiffusionIsoThermalCalculation* object

set_temperature(*temperature: float*)

Sets the temperature for the isothermal simulation.

Parameters

temperature – The temperature [K]

Returns

This *DiffusionIsoThermalCalculation* object

with_cylindrical_geometry(*first_interface_position*: float = 0.0)

Sets geometry to *cylindrical*, corresponds to an infinitely long cylinder of a certain radius.

Default: A planar geometry

Note: With a cylindrical or spherical geometry, the system's zero coordinate (left boundary) is at the centre of the cylinder or sphere by default. By specifying the *first_interface_position*, a different left-most coordinate can be defined. This allows to model a tube or a hollow sphere geometry. The highest coordinate (right boundary) is defined by the cylinder or sphere radius (i.e. by the width of all regions).

Parameters

first_interface_position – The position of the left-most coordinate along the axis, only necessary for modeling a tube geometry [m]

Returns

This *DiffusionIsoThermalCalculation* object

with_left_boundary_condition(*boundary_condition*: *BoundaryCondition*, *to*: float = 1.7976931348623157e+308)

Defines the boundary condition on the left edge of the system.

Default: A closed-system boundary condition.

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Note: You can specify time-dependent boundary conditions by calling *with_left_boundary_condition()* many times, with different values of the “to” parameter.

Examples:

- *with_left_boundary_condition(BoundaryCondition.closed_system(), to=100)*
- *with_left_boundary_condition(BoundaryCondition.mixed_zero_flux_and_activity().set_activity_for_element("C", surface_activity), to=500)*
- *with_left_boundary_condition(BoundaryCondition.closed_system())*

This example sets an closed-system-boundary-condition from start up to 100s and a activity-boundary-condition from 100s to 500s and finally a closed-system-boundary-condition from 500s to the end of simulation.

Parameters

- **boundary_condition** – The boundary condition
- **to** – The upper time-limit for boundary_condition.

Returns

This *DiffusionIsoThermalCalculation* object

with_options(*options*: *Options*, *to*: float = 1.7976931348623157e+308)

Sets the general simulation conditions.

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Parameters

- **options** – The general simulation conditions
- **to** – The upper time-limit for options.

Returns

This *DiffusionIsoThermalCalculation* object

with_planar_geometry()

Sets geometry to *planar*.

This is default.

Returns

This *DiffusionIsoThermalCalculation* object

with_reference_state(*element: str, phase: str = 'SER', temperature: float = -1.0, pressure: float = 100000.0*)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **element** – The name of the element
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The pressure (in Pa) for the reference state

Returns

This *DiffusionIsoThermalCalculation* object

with_right_boundary_condition(*boundary_condition: BoundaryCondition, to: float = 1.7976931348623157e+308*)

Defines the boundary condition on the right edge of the system.

Default: A closed-system boundary condition

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Note: You can specify time-dependent boundary conditions by calling `with_right_boundary_condition()` many times, with different values of the “to” parameter.

Examples:

- `with_right_boundary_condition(BoundaryCondition.closed_system(), to=100)`
- `with_right_boundary_condition(BoundaryCondition.mixed_zero_flux_and_activity().set_activity_for_element("C", surface_activity), to=500)`
- `with_right_boundary_condition(BoundaryCondition.closed_system())`

This example sets an closed-system-boundary-condition from start up to 100s and a activity-boundary-condition from 100s to 500s and finally a closed-system-boundary-condition from 500s to the end of simulation.

Parameters

- **boundary_condition** – The boundary condition
- **to** – The upper time-limit for boundary_condition.

Returns

This `DiffusionIsoThermalCalculation` object

with_solver(*solver*: `Solver`, *to*: `float = 1.7976931348623157e+308`)

Sets the solver to use (`Classic`, `Homogenization` or `Automatic`). **Default is Automatic.**

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Parameters

- **solver** – The solver to use
- **to** – The upper time-limit for solver.

Returns

This `DiffusionIsoThermalCalculation` object

with_spherical_geometry(*first_interface_position*: `float = 0.0`)

Sets geometry to *spherical*, corresponds to a sphere with a certain radius.

Default: A spherical geometry

Note: With a cylindrical or spherical geometry, the system’s zero coordinate (left boundary) is at the centre of the cylinder or sphere by default. By specifying the *first_interface_position*, a different left-most coordinate can be defined. This allows to model a tube or a hollow sphere geometry. The highest coordinate (right boundary) is defined by the cylinder or sphere radius (i.e. by the width of all regions).

Parameters

first_interface_position – The position of the left-most coordinate along the axis, only necessary for modeling a hollow sphere geometry [m]

Returns

This `DiffusionIsoThermalCalculation` object

with_system_modifications(*system_modifications*: *SystemModifications*)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *DiffusionIsoThermalCalculation* object

with_timestep_control(*timestep_control*: *TimestepControl*, *to*: *float = 1.7976931348623157e+308*)

Sets the timestep control options.

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Parameters

- **timestep_control** – The new timestep control options
- **to** – The upper time-limit for timestep_control.

Returns

This *DiffusionIsoThermalCalculation* object

class `tc_python.diffusion.DiffusionNonIsoThermalCalculation`(*calculation*)

Bases: *AbstractCalculation*

Configuration for a non-isothermal diffusion calculation.

add_console_command(*console_command*: *str*)

Registers a DICTRA Console Mode command for execution. These commands are executed after all other configuration directly before the calculation starts to run. All commands are stored and used until explicitly deleted using `tc_python.diffusion.DiffusionNonIsoThermalCalculation.remove_all_console_commands`.

Parameters

console_command – The DICTRA Console Mode command

Returns

This *DiffusionNonIsoThermalCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw DICTRA-commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten parenthesis, ...).

add_region(*region*: *Region*)

Adds a region to the calculation. Regions are always added in the simulation domain from left to right.

If you want to replace an already added region, call *remove_all_regions()*, and add the regions that you want to keep.

Warning: Regions must have unique names.

Parameters

region – The region to be added

Returns

This *DiffusionNonIsoThermalCalculation* object

calculate(*timeout_in_minutes*: *float* = 0.0) → *DiffusionCalculationResult*

Runs the diffusion calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *DiffusionCalculationResult* which later can be used to get specific values from the calculated result

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

remove_all_console_commands()

Removes all previously added Console Mode commands.

Returns

This *DiffusionNonIsoThermalCalculation* object

remove_all_regions()

Removes all previously added regions.

Returns

This *DiffusionNonIsoThermalCalculation* object

set_simulation_time(*simulation_time*: *float*)

Sets the simulation time.

Parameters

simulation_time – The simulation time [s]

Returns

This *DiffusionNonIsoThermalCalculation* object

with_cylindrical_geometry(*first_interface_position*: float = 0.0)

Sets geometry to *cylindrical*, corresponds to an infinitely long cylinder of a certain radius.

Default: A planar geometry

Note: With a cylindrical or spherical geometry, the system's zero coordinate (left boundary) is at the centre of the cylinder or sphere by default. By specifying the *first_interface_position*, a different left-most coordinate can be defined. This allows to model a tube or a hollow sphere geometry. The highest coordinate (right boundary) is defined by the cylinder or sphere radius (i.e. by the width of all regions).

Parameters

first_interface_position – The position of the left-most coordinate along the axis, only necessary for modeling a tube geometry [m]

Returns

This *DiffusionNonIsoThermalCalculation* object

with_left_boundary_condition(*boundary_condition*: BoundaryCondition, *to*: float = 1.7976931348623157e+308)

Defines the boundary condition on the left edge of the system.

Default: A closed-system boundary condition.

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Note: You can specify time-dependent boundary conditions by calling *with_left_boundary_condition()* many times, with different values of the “to” parameter.

Examples:

- *with_left_boundary_condition(BoundaryCondition.closed_system(), to=100)*
- *with_left_boundary_condition(BoundaryCondition.mixed_zero_flux_and_activity().set_activity_for_element("C", surface_activity), to=500)*
- *with_left_boundary_condition(BoundaryCondition.closed_system())*

This example sets an closed-system-boundary-condition from start up to 100s and a activity-boundary-condition from 100s to 500s and finally a closed-system-boundary-condition from 500s to the end of simulation.

Parameters

- **boundary_condition** – The boundary condition
- **to** – The upper time-limit for boundary_condition.

Returns

This *DiffusionNonIsoThermalCalculation* object

with_options(*options*: Options, *to*: float = 1.7976931348623157e+308)

Sets the general simulation conditions.

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Parameters

- **options** – The general simulation conditions
- **to** – The upper time-limit for options.

Returns

This *DiffusionNonIsoThermalCalculation* object

with_planar_geometry()

Sets geometry to *planar*.

This is default.

Returns

This *DiffusionNonIsoThermalCalculation* object

with_reference_state(*element*: str, *phase*: str = 'SER', *temperature*: float = -1.0, *pressure*: float = 100000.0)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **element** – The name of the element
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The pressure (in Pa) for the reference state

Returns

This *DiffusionNonIsoThermalCalculation* object

with_right_boundary_condition(*boundary_condition*: `BoundaryCondition`, *to*: `float = 1.7976931348623157e+308`)

Defines the boundary condition on the right edge of the system.

Default: A closed-system boundary condition

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Note: You can specify time-dependent boundary conditions by calling `with_right_boundary_condition()` many times, with different values of the “to” parameter.

Examples:

- `with_right_boundary_condition(BoundaryCondition.closed_system(), to=100)`
- `with_right_boundary_condition(BoundaryCondition.mixed_zero_flux_and_activity().set_activity_for_element("C", surface_activity), to=500)`
- `with_right_boundary_condition(BoundaryCondition.closed_system())`

This example sets an closed-system-boundary-condition from start up to 100s and a activity-boundary-condition from 100s to 500s and finally a closed-system-boundary-condition from 500s to the end of simulation.

Parameters

- **boundary_condition** – The boundary condition
- **to** – The upper time-limit for boundary_condition.

Returns

This `DiffusionNonIsoThermalCalculation` object

with_solver(*solver*: `Solver`, *to*: `float = 1.7976931348623157e+308`)

Sets the solver to use (`Classic`, `Homogenization` or `Automatic`). **Default is Automatic.**

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Parameters

- **solver** – The solver to use
- **to** – The upper time-limit for solver.

Returns

This `DiffusionNonIsoThermalCalculation` object

with_spherical_geometry(*first_interface_position*: `float = 0.0`)

Sets geometry to `spherical`, corresponds to a sphere with a certain radius.

Default: A spherical geometry

Note: With a cylindrical or spherical geometry, the system’s zero coordinate (left boundary) is at the centre of the cylinder or sphere by default. By specifying the `first_interface_position`, a different left-most coordinate can be defined. This allows to model a tube or a hollow sphere geometry. The highest coordinate (right boundary) is defined by the cylinder or sphere radius (i.e. by the width of all regions).

Parameters

first_interface_position – The position of the left-most coordinate along the axis, only necessary for modeling a hollow sphere geometry [m]

Returns

This *DiffusionNonIsoThermalCalculation* object

with_system_modifications(*system_modifications*: *SystemModifications*)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *DiffusionNonIsoThermalCalculation* object

with_temperature_profile(*temperature_profile*: *TemperatureProfile*)

Sets the temperature profile to use with this calculation.

Parameters

temperature_profile – The temperature profile object (specifying time / temperature points)

Returns

This *DiffusionNonIsoThermalCalculation* object

with_timestep_control(*timestep_control*: *TimestepControl*, *to*: float = 1.7976931348623157e+308)

Sets the timestep control options.

It is possible specify the upper time-point for which this setting is valid using the parameter “to”.

Default: The end of the simulation.

Parameters

- **timestep_control** – The new timestep control options
- **to** – The upper time-limit for timestep_control.

Returns

This *DiffusionNonIsoThermalCalculation* object

class tc_python.diffusion.**DoubleGeometricGrid**(*no_of_points*: int = 50, *lower_geometrical_factor*: float = 1.1, *upper_geometrical_factor*: float = 0.9)

Bases: *CalculatedGrid*

Represents a double geometric grid.

get_lower_geometrical_factor() → float

Returns the lower geometrical factor (for the left half).

Returns

The lower geometrical factor

get_no_of_points() → int

Returns number of grid points.

Returns

The number of grid points

get_type() → str

Type of the grid.

Returns

The type of the grid

get_upper_geometrical_factor()

Returns the upper geometrical factor (for the right half).

Returns

The upper geometrical factor

set_lower_geometrical_factor(*geometrical_factor: float = 1.1*)

Sets the lower (left half) geometrical factor.

Note: A geometrical factor of larger than one yields a higher density of grid points at the lower end of the half and vice versa for a factor smaller than one.

Parameters

geometrical_factor – The geometrical factor for the left half

Returns

This *DoubleGeometricGrid* object

set_no_of_points(*no_of_points: int = 50*)

Sets the number of grid points.

Parameters

no_of_points – The number of points

Returns

This *DoubleGeometricGrid* object

set_upper_geometrical_factor(*geometrical_factor: float = 0.9*)

Sets the upper (right half) geometrical factor.

Note: A geometrical factor of larger than one yields a higher density of grid points at the lower end of the half and vice versa for a factor smaller than one.

Parameters

geometrical_factor – The geometrical factor for the right half

Returns

This *DoubleGeometricGrid* object

class tc_python.diffusion.**ElementProfile**

Bases: *AbstractElementProfile*

Factory class providing objects for configuring a step, function or linear initial concentration profile.

classmethod `constant(value: float)`

Factory method that creates a **new** constant initial concentration profile.

Parameters

value – The constant composition in the region. [unit as defined in [CompositionProfile](#)].

Returns

A new [ConstantProfile](#) object

classmethod `funct(dictra_console_mode_function: str)`

Factory method that creates a **new** initial concentration profile defined by a function in DICTRA Console Mode syntax.

Parameters

dictra_console_mode_function – The function, expressed in DICTRA Console Mode syntax.

Returns

A new [FunctionProfile](#) object

Note: This is an advanced feature, preferably a complex concentration profile should be generated using third party libraries and added to the simulation using [tc_python.diffusion.PointByPointGrid](#).

classmethod `linear(start_value: float, end_value: float)`

Factory method that creates a **new** linear initial concentration profile.

Parameters

- **start_value** – Composition at the left side of the region [unit as defined in [CompositionProfile](#)].
- **end_value** – Composition at the right side of the region [unit as defined in [CompositionProfile](#)].

Returns

A new [LinearProfile](#) object

classmethod `step(lower_boundary: float, upper_boundary: float, step_at: float)`

Factory method that creates a **new** initial concentration profile with a step at the specified distance, otherwise the composition is constant at the specified values.

Parameters

- **lower_boundary** – Composition before the step [unit as defined in [CompositionProfile](#)].
- **upper_boundary** – Composition after the step [unit as defined in [CompositionProfile](#)].
- **step_at** – The distance where the step should be [m].

Returns

A new [StepProfile](#) object

class `tc_python.diffusion.FixFluxValue`

Bases: [BoundaryCondition](#)

get_type() → str

The type of the boundary condition.

Returns

The type

set_flux(*element_name*: str, *J*: str = '0', *to_time*: float = 1.7976931348623157e+308)

Enter functions that yield the flux times the molar volume for the specified element. May be a function of time, temperature and pressure: $J(T,P,TIME)$.

Parameters

- **element_name** – The name of the element
- **J** – the function $J(T,P,TIME)$
- **to_time** – The max-time for which the flux function is used.

class tc_python.diffusion.**FixedCompositions**(*unit_enum*: Unit = Unit.MASS_PERCENT)

Bases: *BoundaryCondition*

Represents a boundary having fixed composition values.

get_type() → str

The type of the boundary condition.

Returns

The type

set_composition(*element_name*: str, *value*: float)

Sets the composition for the specified element.

Note: The boundary composition needs to be specified for each element.

Parameters

- **element_name** – The name of the element
- **value** – The composition value [unit according to the constructor parameter]

class tc_python.diffusion.**FunctionProfile**(*dictra_console_mode_function*: str)

Bases: *ElementProfile*

Creates an initial concentration profile defined by a function in DICTRA Console Mode syntax.

Note: This is an advanced feature, preferably a complex concentration profile should be generated using third party libraries and added to the simulation using `tc_python.diffusion.PointByPointGrid`.

get_type() → str

The type of the element profile.

Returns

The type

class tc_python.diffusion.**GeneralLowerHashinShtrikman**

Bases: *HomogenizationFunctions*

General lower Hashin-Shtrikman bounds: the outermost shell consists of the phase with the most sluggish kinetics.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

```
class tc_python.diffusion.GeneralLowerHashinShtrikmanExcludedPhase(excluded_phases: List[str] = [])
```

Bases: *HomogenizationFunctions*

General lower Hashin-Shtrikman bounds: the outermost shell consists of the phase with the most sluggish kinetics.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

The excluded phases are not considered when evaluating what phase has the most sluggish kinetics.

```
class tc_python.diffusion.GeneralUpperHashinShtrikman
```

Bases: *HomogenizationFunctions*

General upper Hashin-Shtrikman bounds: the innermost shell consists of the phase with the most sluggish kinetics.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

```
class tc_python.diffusion.GeneralUpperHashinShtrikmanExcludedPhase(excluded_phases: List[str] = [])
```

Bases: *HomogenizationFunctions*

General upper Hashin-Shtrikman bounds: the innermost shell consists of the phase with the most sluggish kinetics.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

The excluded phases are not considered when evaluating what phase has the most sluggish kinetics.

```
class tc_python.diffusion.GeometricGrid(no_of_points: int = 50, geometrical_factor: float = 1.1)
```

Bases: *CalculatedGrid*

Represents a geometric grid.

```
get_geometrical_factor() → float
```

Returns the geometrical factor.

Returns

The geometrical factor

```
get_no_of_points() → int
```

Returns the number of grid points.

Returns

The number of grid points

```
get_type() → str
```

Returns the type of grid.

Returns

The type

```
set_geometrical_factor(geometrical_factor: float = 1.1)
```

Sets the geometrical factor.

Note: A geometrical factor larger than one yields a higher density of grid points at the lower end of the region and a factor smaller than one yields a higher density of grid points at the upper end of the region.

Parameters

geometrical_factor – The geometrical factor

Returns

This *GeometricGrid* object

set_no_of_points(*no_of_points*: int = 50)

Sets the number of grid points.

Parameters

no_of_points – The number of points

Returns

This *GeometricGrid* object

class tc_python.diffusion.**GridPoint**(*distance*: float)

Bases: object

Represents a grid point, this is used in combination with grids of the type *tc_python.diffusion.PointByPointGrid*.

add_composition(*element*: str, *value*: float)

Adds a composition for the specified element to the grid point.

Parameters

- **element** – The element
- **value** – The composition value [unit as defined for the grid]

Returns

This *GridPoint* object

class tc_python.diffusion.**HashinShtrikmanBoundMajority**

Bases: *HomogenizationFunctions*

Hashin-Shtrikman bounds with majority phase as matrix phase: the outermost shell consists of the phase with the highest local volume fraction.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

class tc_python.diffusion.**HashinShtrikmanBoundMajorityExcludedPhase**(*excluded_phases*: List[str] = [])

Bases: *HomogenizationFunctions*

Hashin-Shtrikman bounds with majority phase as matrix phase: the outermost shell consists of the phase with the highest local volume fraction.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

The excluded phases are not considered when evaluating what phase has the most sluggish kinetics.

```
class tc_python.diffusion.HashinShtrikmanBoundPrescribed(matrix_phase: str)
```

Bases: *HomogenizationFunctions*

Hashin-Shtrikman bounds with prescribed phase as matrix phase: the outermost shell consists of the prescribed phase.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

```
class tc_python.diffusion.HashinShtrikmanBoundPrescribedExcludedPhase(matrix_phase: str,
                                                                       excluded_phases:
                                                                       List[str] = [])
```

Bases: *HomogenizationFunctions*

```
class tc_python.diffusion.HomogenizationFunction(value, names=None, *, module=None,
                                                  qualname=None, type=None, start=1,
                                                  boundary=None)
```

Bases: Enum

Homogenization function used for the *homogenization solver*. Many homogenization functions are based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase. **Default:** *RULE_OF_MIXTURES* (i.e. upper Wiener bounds)

GENERAL_LOWER_HASHIN_SHTRIKMAN = 0

General lower Hashin-Shtrikman bounds: the outermost shell consists of the phase with the most sluggish kinetics.

GENERAL_UPPER_HASHIN_SHTRIKMAN = 1

General upper Hashin-Shtrikman bounds: the innermost shell consists of the phase with the most sluggish kinetics.

HASHIN_SHTRIKMAN_BOUND_MAJORITY = 2

Hashin-Shtrikman bounds with majority phase as matrix phase: the outermost shell consists of the phase with the highest local volume fraction.

INVERSE_RULE_OF_MIXTURES = 4

Lower Wiener bounds: the geometrical interpretation are continuous layers of each phase orthogonal to the direction of diffusion

RULE_OF_MIXTURES = 3

Upper Wiener bounds: the geometrical interpretation are continuous layers of each phase parallel with the direction of diffusion

```
class tc_python.diffusion.HomogenizationFunctions
```

Bases: object

```
classmethod general_lower_hashin_shtrikman()
```

Factory method that creates a **new** homogenization function of the type *GeneralLowerHashinShtrikman*.

General lower Hashin-Shtrikman bounds: the outermost shell consists of the phase with the most sluggish kinetics.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

Returns

A new *GeneralLowerHashinShtrikman* object

classmethod `general_lower_hashin_shtrikman_excluded_phase(excluded_phases: List[str] = [])`

Factory method that creates a **new** homogenization function of the type *GeneralLowerHashinShtrikmanExcludedPhase*.

General lower Hashin-Shtrikman bounds: the outermost shell consists of the phase with the most sluggish kinetics.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase. The excluded phases are not considered when evaluating what phase has the most sluggish kinetics.

Parameters

excluded_phases – The excluded phases

Returns

A new *GeneralLowerHashinShtrikmanExcludedPhase* object

classmethod `general_upper_hashin_shtrikman()`

Factory method that creates a **new** homogenization function of the type *GeneralUpperHashinShtrikman*.

General upper Hashin-Shtrikman bounds: the innermost shell consists of the phase with the most sluggish kinetics.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

Returns

A new *GeneralUpperHashinShtrikman* object

classmethod `general_upper_hashin_shtrikman_excluded_phase(excluded_phases: List[str] = [])`

Factory method that creates a **new** homogenization function of the type *GeneralUpperHashinShtrikmanExcludedPhase*.

General upper Hashin-Shtrikman bounds: the innermost shell consists of the phase with the most sluggish kinetics.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase. The excluded phases are not considered when evaluating what phase has the most sluggish kinetics.

Parameters

excluded_phases – The excluded phases

Returns

A new *GeneralUpperHashinShtrikmanExcludedPhase* object

classmethod `hashin_shtrikman_bound_majority()`

Factory method that creates a **new** homogenization function of the type *HashinShtrikmanBoundMajority*.

Hashin-Shtrikman bounds with majority phase as matrix phase: the outermost shell consists of the phase with the highest local volume fraction.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

Returns

A new *HashinShtrikmanBoundMajority* object

classmethod `hashin_shtrikman_bound_majority_excluded_phase(excluded_phases: List[str] = [])`
Factory method that creates a **new** homogenization function of the type *HashinShtrikmanBoundMajorityExcludedPhase*.

Hashin-Shtrikman bounds with majority phase as matrix phase: the outermost shell consists of the phase with the highest local volume fraction. Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase. The excluded phases are not considered when evaluating what phase has the most sluggish kinetics.

Parameters

excluded_phases – The excluded phases

Returns

A new *HashinShtrikmanBoundMajorityExcludedPhase* object

classmethod `hashin_shtrikman_bound_prescribed(matrix_phase: str)`

Factory method that creates a **new** homogenization function of the type *HashinShtrikmanBoundPrescribed*.

Hashin-Shtrikman bounds with prescribed phase as matrix phase: the outermost shell consists of the prescribed phase.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase.

Parameters

matrix_phase – The matrix phase

Returns

A new *HashinShtrikmanBoundPrescribed* object

classmethod `hashin_shtrikman_bound_prescribed_excluded_phase(matrix_phase: str, excluded_phases: List[str] = [])`

Factory method that creates a **new** homogenization function of the type *HashinShtrikmanBoundPrescribedExcludedPhase*.

Hashin-Shtrikman bounds with prescribed phase as matrix phase: the outermost shell consists of the prescribed phase.

Based on a variant of the Hashin-Shtrikman bounds, their geometrical interpretation are concentric spherical shells of each phase. The excluded phases are not considered when evaluating what phase has the most sluggish kinetics.

Parameters

- **matrix_phase** – The matrix phase
- **excluded_phases** – The excluded phases

Returns

A new *HashinShtrikmanBoundPrescribedExcludedPhase* object

classmethod `inverse_rule_of_mixtures()`

Factory method that creates a **new** homogenization function of the type *InverseRuleOfMixtures*.

Lower Wiener bounds: the geometrical interpretation are continuous layers of each phase orthogonal to the direction of diffusion.

Returns

A new *InverseRuleOfMixtures* object

classmethod `inverse_rule_of_mixtures_excluded_phase(excluded_phases: List[str] = [])`

Factory method that creates a **new** homogenization function of the type *InverseRuleOfMixturesExcludedPhase*.

Lower Wiener bounds: the geometrical interpretation are continuous layers of each phase orthogonal to the direction of diffusion. Excluded phases are not considered in the diffusion calculations.

Parameters

excluded_phases – The excluded phases

Returns

A new *InverseRuleOfMixturesExcludedPhase* object

classmethod `labyrinth_factor_f(matrix_phase: str)`

Factory method that creates a **new** homogenization function of the type *LabyrinthFactorF*.

The labyrinth factor functions implies that all diffusion takes place in a single continuous matrix phase. The impeding effect on diffusion by phases dispersed in the matrix phase is taken into account by multiplying the flux with the volume fraction of the matrix phase.

Parameters

matrix_phase – The matrix phase

Returns

A new *LabyrinthFactorF* object

classmethod `labyrinth_factor_f2(matrix_phase: str)`

Factory method that creates a **new** homogenization function of the type *LabyrinthFactorF2*.

The labyrinth factor functions implies that all diffusion takes place in a single continuous matrix phase. The impeding effect on diffusion by phases dispersed in the matrix phase is taken into account by multiplying the flux with the volume fraction of the matrix phase squared.

Parameters

matrix_phase – The matrix phase

Returns

A new *LabyrinthFactorF2* object

classmethod `rule_of_mixtures()`

Factory method that creates a **new** homogenization function of the type *RuleOfMixtures*.

Upper Wiener bounds: the geometrical interpretation are continuous layers of each phase parallel with the direction of diffusion.

Returns

A new *RuleOfMixtures* object

classmethod `rule_of_mixtures_excluded_phase(excluded_phases: List[str] = [])`

Factory method that creates a **new** homogenization function of the type *RuleOfMixturesExcludedPhase*.

Upper Wiener bounds: the geometrical interpretation are continuous layers of each phase parallel with the direction of diffusion. Excluded phases are not considered in the diffusion calculations.

Parameters

excluded_phases – The excluded phases

Returns

A new *RuleOfMixturesExcludedPhase* object

`class tc_python.diffusion.HomogenizationSolver`

Bases: *Solver*

Solver using the *Homogenization model*.

Note: This solver always uses the homogenization model, even if all regions have only one phase. The solver is **significantly slower than the Classic model**. Use the *tc_python.diffusionAutomaticSolver* instead if you do not need that behavior.

`disable_global_minimization()`

Disables global minimization to be used in equilibrium calculations. **Default:** Disabled

Note: In general, using global minimization **significantly increases the simulation time**, but there is also a significantly reduced risk for non-converged equilibrium calculations.

Returns

A new *HomogenizationSolver* object

`disable_interpolation_scheme()`

Configures the simulation not use *any interpolation scheme*. **Default:** To use the *logarithmic interpolation scheme* with 10000 discretization steps

Note: The homogenization scheme can be switched on by using *with_linear_interpolation_scheme* or *with_logarithmic_interpolation_scheme*.

`enable_global_minimization()`

Enables global minimization to be used in equilibrium calculations. **Default:** Disabled

Note: In general, using global minimization **significantly increases the simulation time**, but there is also a significantly reduced risk for non-converged equilibrium calculations.

Returns

A new *HomogenizationSolver* object

`get_type()` → str

The type of solver.

Returns

The type

`set_fraction_of_free_memory_to_use(fraction: float)`

Sets the maximum fraction of free physical memory to be used by the interpolation scheme. **Default:** 1 / 10 of the free physical memory

Parameters

fraction – The maximum free physical memory fraction to be used

Returns

A new *HomogenizationSolver* object

set_memory_to_use(*memory_in_megabytes: float*)

Sets the maximum physical memory in megabytes to be used by the interpolation scheme. **Default:** 1000 MBytes of the free physical memory

Parameters

memory_in_megabytes – The maximum physical memory to be used

Returns

A new *HomogenizationSolver* object

with_function(*homogenization_function: HomogenizationFunctions*)

Sets the *homogenization function* used by the *homogenization model*.

Parameters

homogenization_function – The homogenization function used by the homogenization model

Returns

A new *HomogenizationSolver* object

with_linear_interpolation_scheme(*steps: int = 10000*)

Configures the simulation to use the *linear interpolation scheme*. **Default:** To use the *logarithmic interpolation scheme* with 10000 discretization steps

Parameters

steps – The number of discretization steps in each dimension

Returns

A new *HomogenizationSolver* object

with_logarithmic_interpolation_scheme(*steps: int = 10000*)

Configures the simulation to use the *linear interpolation scheme*. **Default:** To use the *logarithmic interpolation scheme* with 10000 discretization steps

Parameters

steps – The number of discretization steps in each dimension

Returns

A new *HomogenizationSolver* object

class tc_python.diffusion.**InverseRuleOfMixtures**

Bases: *HomogenizationFunctions*

Lower Wiener bounds: the geometrical interpretation are continuous layers of each phase orthogonal to the direction of diffusion.

class tc_python.diffusion.**InverseRuleOfMixturesExcludedPhase**(*excluded_phases: List[str] = []*)

Bases: *HomogenizationFunctions*

Lower Wiener bounds: the geometrical interpretation are continuous layers of each phase orthogonal to the direction of diffusion.

Excluded phases are not considered in the diffusion calculations.

class tc_python.diffusion.**LabyrinthFactorF**(*matrix_phase: str*)

Bases: *HomogenizationFunctions*

The labyrinth factor functions implies that all diffusion takes place in a single continuous matrix phase. The impeding effect on diffusion by phases dispersed in the matrix phase is taken into account by multiplying the flux with the volume fraction of the matrix phase.

class `tc_python.diffusion.LabyrinthFactorF2`(*matrix_phase: str*)

Bases: *HomogenizationFunctions*

The labyrinth factor functions implies that all diffusion takes place in a single continuous matrix phase. The impeding effect on diffusion by phases dispersed in the matrix phase is taken into account by multiplying the flux with the volume fraction of the matrix phase squared.

class `tc_python.diffusion.LinearGrid`(*no_of_points: int = 50*)

Bases: *CalculatedGrid*

Represents an equally spaced grid.

get_no_of_points() → int

Returns the number of grid points.

Returns

The number of grid points

get_type() → str

Type of the grid.

Returns

The type

set_no_of_points(*no_of_points: int = 50*)

Sets the number of grid points.

Parameters

no_of_points – The number of points

Returns

This *LinearGrid* object

class `tc_python.diffusion.LinearProfile`(*start_value: float, end_value: float*)

Bases: *ElementProfile*

Represents a linear initial concentration profile.

get_type() → str

The type of the element profile.

Returns

The type

class `tc_python.diffusion.MixedZeroFluxAndActivity`

Bases: *BoundaryCondition*

Represents a boundary having zero-flux as well as fixed-activity conditions.

Default: On that boundary for every element without an explicitly defined condition, a zero-flux boundary condition is used.

get_type() → str

The type of the boundary condition.

Returns

The type

set_activity_for_element(*element_name: str, activity: str, to_time: float = 1.7976931348623157e+308*)

Sets an activity expression for an element at the boundary. Enter a formula that the software evaluates during the calculation.

The formula can be:

- a function of the variable *TIME*
- a constant

The formula must be written with these rules:

- a number must begin with a number (not a .)
- a number must have a dot or an exponent (*E*)

The operators +, -, *, /, ** (exponentiation) can be used and with any level of parenthesis. As shown, the following operators must be followed by open and closed parentheses ()

- *SQRT(X)* is the square root
- *EXP(X)* is the exponential
- *LOG(X)* is the natural logarithm
- *LOG10(X)* is the base 10 logarithm
- *SIN(X)*, *COS(X)*, *TAN(X)*, *ASIN(X)*, *ACOS(X)*, *ATAN(X)*
- *SINH(X)*, *COSH(X)*, *TANH(X)*, *ASINH(X)*, *ACOSH(X)*, *ATANH(X)*
- *SIGN(X)*
- *ERF(X)* is the error function

Default: the expression entered is used for the entire simulation.

Parameters

- **element_name** – The name of the element
- **activity** – The activity
- **to_time** – The max-time for which the activity is used.

set_zero_flux_for_element(*element_name*: str)

Sets a zero-flux condition for an element at the boundary. **Default for all elements at the boundary without an explicitly defined condition**

Parameters

- **element_name** – The name of the element

class tc_python.diffusion.Options

Bases: object

General simulation conditions for the diffusion calculations.

disable_forced_starting_values_in_equilibrium_calculations()

Disables forced starting values for the equilibrium calculations. **The default is 'enable_automatic_forced_starting_values_in_equilibrium_calculations'.**

Returns

This *Options* object

disable_save_results_to_file()

Disables the saving of results to file during the simulation. **Default:** Saving of the results at every timestep

Returns

This *Options* object

enable_automatic_forced_starting_values_in_eq_calculations()

Lets calculation engine decide if forced start values for the equilibrium calculations should be used. **This is the default setting.**

Returns

This *Options* object

enable_forced_starting_values_in_equilibrium_calculations()

Enables forced start values for the equilibrium calculations. **The default is 'enable_automatic_forced_starting_values_in_equilibrium_calculations'.**

Returns

This *Options* object

enable_save_results_to_file(*every_nth_step: int = -1*)

Enables and configures saving of results to file during the simulation. They can be saved for every n-th or optionally for every timestep (-1). **Default:** Saving of the results at every timestep

Parameters

every_nth_step – -1 or a value ranging from 0 to 99

Returns

This *Options* object

enable_time_integration_method_automatic()

Enables automatic selection of integration method. **This is the default method.**

Returns

This *Options* object

enable_time_integration_method_euler_backwards()

Enables *Euler backwards* integration. **The default method is enable_time_integration_method_automatic.**

Note: This method is more stable but less accurate and may be necessary if large fluctuations occur in the profiles.

Returns

This *Options* object

enable_time_integration_method_trapezoidal()

Enables *trapezoidal* integration.

Note: If large fluctuations occur in the profiles, it may be necessary to use the more stable but less accurate *Euler backwards method*.

Returns

This *Options* object

set_default_driving_force_for_phases_allowed_to_form_at_interf(*driving_force*: float = 1e-05)

Sets the default required driving force for phases allowed to form at the interfaces. **Default:** 1.0e-5

Note: The required driving force (evaluated as $DGM(ph)$) is used for determining whether an inactive phase is stable, i.e. actually formed. DGM represents the driving force normalized by RT and is dimensionless.

Parameters

driving_force – The driving force ($DGM(ph)$) [-]

Returns

This *Options* object

class tc_python.diffusion.**PointByPointGrid**(*unit_enum*: Unit = Unit.MASS_PERCENT)

Bases: *AbstractGrid*

Represents a point-by-point grid. This is setting the grid and the compositions at once, it is typically used to enter a measured composition profile or the result from a previous calculation.

Note: If a point-by-point grid is used, it is not necessary to specify the grid and composition profile separately.

add_point(*grid_point*: GridPoint)

Adds a grid point to the grid.

Parameters

grid_point – The grid point

Returns

This *PointByPointGrid* object

get_type() → str

Type of the grid.

Returns

The type

class tc_python.diffusion.**Region**(*name*: str)

Bases: object

Represents a region of the simulation domain that can contain more than one phase.

Note: The first added phase represents the matrix phase, while all later added phases are *spheroid phases*, i.e. precipitate phases.

add_phase(*phase_name*: str, *is_matrix_phase*: bool = False)

Adds a phase to the region, each region must contain at least one phase.

Note: Normally the *matrix phase* and the *precipitate phases* are automatically chosen based on the presence of all profile elements in the phase and if it has diffusion data. If multiple phases have equal properties, the phase that was added first is chosen. The matrix phase can be explicitly set by using *is_matrix_phase=True*.

Note: If multiple phases are added to a region, the *homogenization model* is applied. That means that average properties of the local phase mixture are used.

Parameters

- **phase_name** – The phase name
- **is_matrix_phase** – If set to *True* this phase is explicitly set as matrix phase for the region, if no phase is set to *True*, the matrix phase is chosen automatically

Returns

This *Region* object

add_phase_allowed_to_form_at_left_interface(*phase_name: str, driving_force: float = 1e-05*)

Adds a phase allowed to form at the left boundary of the region (an *inactive phase*). The phase will only appear at the interface as a new automatic region if the driving force to form it is sufficiently high.

Parameters

- **phase_name** – The phase name
- **driving_force** – The driving force for the phase to form (*DGM(ph)*)

Returns

This *Region* object

add_phase_allowed_to_form_at_right_interface(*phase_name: str, driving_force: float = 1e-05*)

Adds a phase allowed to form at the right boundary of the region (an *inactive phase*). The phase will only appear at the interface as a new automatic region if the driving force to form it is sufficiently high.

Parameters

- **phase_name** – The phase name
- **driving_force** – The driving force for the phase to form (*DGM(ph)*)

Returns

This *Region* object

remove_all_phases()

Removes all previously added phases from the region.

Returns

This *Region* object

set_width(*width: float*)

Defined the width of the region.

Note: This method needs only to be used if a calculated grid has been defined (using *with_grid()*).

Parameters

width – The width [m]

Returns

This *Region* object

with_composition_profile(*initial_compositions*: [CompositionProfile](#))

Defines the initial composition profiles for all elements in the region.

Note: This method needs only to be used if a calculated grid has been defined (using [with_grid\(\)](#)).

Parameters

initial_compositions – The initial composition profiles for all elements

Returns

This [Region](#) object

with_grid(*grid*: [CalculatedGrid](#))

Defines a calculated grid in the region. If measured composition profiles or the result from a previous calculation should be used, instead [with_point_by_point_grid_containing_compositions\(\)](#) needs to be applied.

Note: The composition profiles need to be defined separately using [with_composition_profile\(\)](#), additionally the region width needs to be specified using [set_width\(\)](#).

Parameters

grid – The grid

Returns

This [Region](#) object

with_point_by_point_grid_containing_compositions(*grid*: [PointByPointGrid](#))

Defines a point-by-point grid in the region. This is setting the grid and the compositions at once, it is typically used to enter a measured composition profile or the result from a previous calculation. If the composition profile should be calculated (linear, geometric, ...) [with_grid\(\)](#) should be used instead.

Note: If a point-by-point grid is used, [with_grid\(\)](#), [with_composition_profile\(\)](#) and [set_width\(\)](#) are unnecessary and must not be used.

Parameters

grid – The point-by-point grid

Returns

This [Region](#) object

class `tc_python.diffusion.RuleOfMixtures`

Bases: [HomogenizationFunctions](#)

Upper Wiener bounds: the geometrical interpretation are continuous layers of each phase parallel with the direction of diffusion.

class `tc_python.diffusion.RuleOfMixturesExcludedPhase`(*excluded_phases*: `List[str] = []`)

Bases: [HomogenizationFunctions](#)

Upper Wiener bounds: the geometrical interpretation are continuous layers of each phase parallel with the direction of diffusion.

Excluded phases are not considered in the diffusion calculations.

```
class tc_python.diffusion.SimulationTime(value, names=None, *, module=None, qualname=None,
                                         type=None, start=1, boundary=None)
```

Bases: Enum

Specifying special time steps for the evaluation of diffusion results.

Note: These placeholders should be used because especially the actual last timestep will slightly differ from the specified end time of the simulation.

FIRST = 0

Represents the first timestep of the simulation

LAST = 1

Represents the last timestep of the simulation

```
class tc_python.diffusion.Solver
```

Bases: *AbstractSolver*

Factory class providing objects representing a solver.

```
classmethod automatic()
```

Factory method that creates a **new** *automatic solver*. **This is the default solver and recommended for most applications.**

Note: This solver uses the homogenization model if any region has more than one phase, otherwise it uses the classic model.

Returns

A new *AutomaticSolver* object

```
classmethod classic()
```

Factory method that creates a **new** *classic solver*.

Note: This solver never switches to the homogenization model even if the solver fails to converge. Use the *tc_python.diffusion.AutomaticSolver* if necessary instead.

Returns

A new *ClassicSolver* object

```
classmethod homogenization()
```

Factory method that creates a **new** *homogenization solver*.

Note: This solver always uses the homogenization model, even if all regions have only one phase. The solver is **significantly slower than the Classic model**. Use the *tc_python.diffusion.AutomaticSolver* instead if you do not need that behavior.

Returns

A new *HomogenizationSolver* object

class `tc_python.diffusion.StepProfile`(*lower_boundary: float, upper_boundary: float, step_at: float*)

Bases: `ElementProfile`

Represents an initial constant concentration profile with a step at the specified position.

get_type() → str

The type of the element profile.

Returns

The type

class `tc_python.diffusion.TimestepControl`

Bases: object

Settings that control the time steps in the simulation.

disable_check_interface_position()

Disables checking of the interface position, i.e. the timesteps are not controlled by the phase interface displacement during the simulation. **The default setting is :func:`enable_automatic_check_interface_position`.**

Returns

This `TimestepControl` object

enable_automatic_check_interface_position()

Lets calculation engine decide if checking of the interface position should be used. **This is the default setting.**

Returns

This `TimestepControl` object

enable_check_interface_position()

Enables checking of the interface position, i.e. the timesteps are controlled by the phase interface displacement during the simulation. **The default setting is :func:`enable_automatic_check_interface_position`.**

Returns

This `TimestepControl` object

set_initial_time_step(*initial_time_step: float = 1e-07*)

Sets the initial timestep. **Default:** 1.0e-7 s

Parameters

initial_time_step – The initial timestep [s]

Returns

This `TimestepControl` object

set_max_absolute_error(*absolute_error: float = 1e-05*)

Sets the maximum absolute error. **Default:** 1.0e-5

Parameters

absolute_error – The maximum absolute error

Returns

This `TimestepControl` object

set_max_relative_error(*relative_error: float = 0.05*)

Sets the maximum relative error. **Default:** 0.05

Parameters

relative_error – The maximum relative error

Returns

This *TimestepControl* object

set_max_timestep_allowed_as_percent_of_simulation_time(*max_timestep_allowed_as_percent_of_simulation_time: float = 10.0*)

The maximum timestep allowed during the simulation, specified in percent of the simulation time. **Default:** 10.0%

Parameters

max_timestep_allowed_as_percent_of_simulation_time – The maximum timestep allowed [%]

Returns

This *TimestepControl* object

set_max_timestep_increase_factor(*max_timestep_increase_factor: float = 2.0*)

Sets the maximum timestep increase factor. **Default:** 2

Note: For example, if 2 is entered the maximum time step is twice as long as the previous time step taken.

Parameters

max_timestep_increase_factor – The maximum timestep increase factor

Returns

This *TimestepControl* object

set_smallest_time_step_allowed(*smallest_time_step_allowed: float = 1e-07*)

Sets the smallest time step allowed during the simulation. This is required when using the automatic procedure to determine the time step. **Default:** 1.0e-7 s

Parameters

smallest_time_step_allowed – The smallest timestep allowed [s]

Returns

This *TimestepControl* object

class `tc_python.diffusion.Unit`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

Represents a composition unit.

MASS_FRACTION = 2

Mass fraction.

MASS_PERCENT = 3

Mass percent.

MOLE_FRACTION = 0

Mole fraction.

MOLE_PERCENT = 1

Mole percent.

U_FRACTION = 4

U fraction

6.1.7 Module “propertymodel”

class `tc_python.propertymodel.PropertyModelCalculation`(*calculator*)

Bases: `AbstractCalculation`, `Generic[ArgType, ResType, ArgOptType]`

Configuration for a Property Model calculation.

Note: Specify the settings, the calculation is performed with `calculate()`.

ArgumentOptions: `Optional[Type[ArgOptType]]`

Arguments: `Type[ArgType]`

Results: `Type[ResType]`

calculate(*timeout_in_minutes: float = 0.0*) → `PropertyModelResult[ResType]`

Runs the Property Model calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than `timeout_in_minutes`, a `CalculationEngineException` will be thrown.

Returns

A `PropertyModelResult` which later can be used to get specific values from the simulation.

get_argument_default(*argument_id: str*) → object

Returns the default value for the specified argument. The argument id can be obtained with `get_arguments()`.

Parameters

argument_id – The argument id

Returns

The default value (the type depends on the argument)

get_argument_description(*argument_id: str*) → str

Returns the detailed description of the argument. The id can be obtained with `get_arguments()`.

Parameters

argument_id – The argument id

Returns

The detailed description

get_arguments() → `Set[str]`

Returns a list of the arguments of the Property Model.

Note: The arguments are the ‘UI-panel components’ defined in the Property Model interface method `provide_ui_panel_components()`. They have the same id as specified in the Property Model. The naming is different because there is no UI present.

Returns

The ids of the available arguments

get_dynamic_arguments() → Set[str]

Returns a list of the dynamic arguments of the Property Model.

Note: Dynamic arguments are “extra” arguments created by pressing the “plus” button that can occur next to the UI-panel for some models, when running the Property Model from within Thermo-Calc. You can use them also from the API by *invoke_dynamic_argument()*.

Returns

The ids of the available dynamic arguments

get_model_description() → str

Returns the description text of the current model.

Returns

the description

get_model_parameter_value(model_parameter_id: str) → float

Returns the current value of an optimizable model parameter. The id can be obtained with *get_model_parameters()*.

Parameters

model_parameter_id – The model parameter id

Returns

The current value [unit according to the parameter meaning]

get_model_parameters() → Set[str]

Returns a list of the optimizable model parameters.

Note: The model parameters are an optional set of variables that can be used within the Property Model. Typically they are used to provide the possibility to inject parameter values during an optimization into the model. This allows the dynamic development of Property Models that need to be fitted to experimental data. The model parameters are controlled with the Property Model interface methods *provide_model_parameters* and *set_model_parameter*.

Returns

The ids of the optimizable model parameters

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

invoke_dynamic_argument(argument_id: Union[str, DynamicArgument]) → Self

Increases the number of instances of this dynamic argument by one, the argument will have an id such as *argument_1*, *argument_2*, ... if the dynamic argument is called *argument*.

Note: You can obtain all available dynamic arguments by using `get_dynamic_arguments()`.

Parameters

argument_id – argument_id: The argument id

Returns

This *PropertyModelCalculation* object

remove_all_conditions() → Self

Removes all set classic POLY conditions.

Note: This does not affect the compositions set by `set_composition()`.

Returns

This *PropertyModelCalculation* object

remove_dependent_element() → Self

Removes a manually set dependent element. This method does not affect the automatic choice of the dependent element if `set_composition()` is used.

Returns

This *PropertyModelCalculation* object

set_argument(*argument: str, value: Union[str, float, bool, DesignVariable]*) → Self

Sets the specified model argument to the specified value. The id can be obtained with `get_arguments()`.

Parameters

- **argument** – The argument id
- **value** – The value [unit according to the argument meaning]

Returns

This *PropertyModelCalculation* object

set_composition(*element_name: str, value: Union[float, DesignVariable]*) → Self

Sets the composition of an element. The unit for the composition can be changed using `set_composition_unit()`.

You may provide either: A float: sets a fixed composition value (in the currently selected composition unit).

A DesignVariable: registers a design variable for this element and sets its initial value as the current composition. The variable's bounds and name are taken from the provided DesignVariable, and the value may be adjusted by the optimization algorithm.

Default: Mole percent (`CompositionUnit.MOLE_PERCENT`)

Parameters

- **element_name** – The element
- **value** – Either a fixed composition (float, in the current unit) or a DesignVariable to be optimized

Returns

This *PropertyModelCalculation* object

set_composition_unit(*unit_enum*: `CompositionUnit` = `CompositionUnit.MOLE_PERCENT`) → Self

Sets the composition unit.

Default: Mole percent (`CompositionUnit.MOLE_PERCENT`).

Parameters

unit_enum – The new composition unit

Returns

This *PropertyModelCalculation* object

set_condition(*classic_condition*: str, *value*: float) → Self

Adds a classic POLY condition. If that method is used, all conditions need to be specified in such a way. If this method is used, it is necessary to set the dependent element manually using *set_dependent_element()*.

Default if not specified: pressure P = 1e5 Pa, system size N = 1, Temperature T = 1000 K

Warning: It is not possible to mix POLY-commands and compositions using *set_composition()*.

Note: It should not be necessary for most users to use this method, try to use *set_composition()* instead.

Warning: As this method runs raw POLY-commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten parenthesis, ...).

Parameters

- **classic_condition** – The classic POLY condition (for example: *X(CR)*)
- **value** – The value of the condition

Returns

This *PropertyModelCalculation* object

set_dependent_element(*dependent_element_name*: str) → Self

Sets the dependent element manually.

Note: It should not be necessary for most users to use this method. Setting the dependent element manually is only necessary and allowed if *set_condition()* is used.

Parameters

dependent_element_name – The name of the dependent element

Returns

This *PropertyModelCalculation* object

set_model_parameter(*model_parameter_id*: str, *value*) → Self

Resets an optimizable model parameter. The id can be obtained with *get_model_parameters()*.

Parameters

- **model_parameter_id** – The model parameter id
- **value** – The new value of the parameter

Returns

This *PropertyModelCalculation* object

set_temperature(*temperature_type: PMTemperature, temperature: float = 1000*) → Self

Sets the temperature for the selected temperature type.

Example usage: `set_temperature(PropertyModelQuantity.annealing_temperature(), 1000)`

Parameters

- **temperature_type** – The type of temperature setting to set, available in *PropertyModelQuantity*
- **temperature** – The temperature [K]

Returns

This *PropertyModelCalculation* object

with_system_modifications(*system_modifications: SystemModifications*) → Self

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *PropertyModelCalculation* object

class `tc_python.propertymodel.PropertyModelResult`(*result*)

Bases: *AbstractResult*, *Generic*[ResType]

The result of a Property Model calculation.

Results: `Type`[ResType]

get_result_quantities() → Set[str]

Returns a list of the available result quantities defined in the Property Model.

Returns

The ids of the defined result quantities

get_result_quantity_description(*result_quantity_id*) → str

Returns the detailed description of the result quantity. The id can be obtained by *get_result_quantities*() .

Parameters

result_quantity_id – The result quantity id

Returns

The detailed description

get_single_equilibrium_result(*result_quantity_id: str = ""*) → *SingleEquilibriumResult*

Returns a result quantity value. The available result quantities can be obtained by *get_result_quantities()*.

Parameters

result_quantity_id – The id of the result quantity.

Returns

The requested value [unit depending on the quantity], if the result is a *SingleEquilibriumResult*, is returned.

get_value_of(*result_quantity_id: str*) → Union[float, Dict[str, float]]

Returns a result quantity value. The available result quantities can be obtained by *get_result_quantities()*.

Parameters

result_quantity_id – The id of the result quantity

Returns

The requested value [unit depending on the quantity]. If the result is parameterized, parameter-value pairs are returned.

save_to_disk(*path: str*) → Self

Saves the result to disk. The result can later be loaded using *tc_python.server.Setup.load_result_from_disk()*.

Note: The *result data* is represented by a whole folder possibly containing multiple files.

Parameters

path – The path to the result folder, can be relative or absolute.

Returns

This *PropertyModelResult* object

6.1.8 Module “material_to_material”

class *tc_python.material_to_material.AbstractConstantCondition*

Bases: object

The abstract base class for all constant conditions.

class *tc_python.material_to_material.AbstractMaterialToMaterialCalculationAxis*

Bases: object

The abstract base class of all calculation axis.

class *tc_python.material_to_material.ConstantCondition*

Bases: *AbstractConstantCondition*

A constant condition.

classmethod *fraction_of_material_b*(*fraction_of_material_b: float = 0.5*)

Creates a constant fraction of material B condition object.

Note: The unit depends on the composition unit setting in the calculator object.

Parameters

fraction_of_material_b – The fraction of material B [weight-fraction or mole-fraction]

Returns

The condition object

classmethod temperature(*temperature: float = 1000*)

Creates a constant temperature condition object.

Parameters

temperature – The temperature [K]

Returns

The condition object

class `tc_python.material_to_material.FractionOfMaterialBAxis`(*from_fraction: float = 0.0,*
to_fraction: float = 1.0,
start_fraction: float = 0.5)

Bases: *MaterialToMaterialCalculationAxis*

A fraction of material B axis.

class `tc_python.material_to_material.FractionOfMaterialBCondition`(*fraction_of_material_b: float = 0.5*)

Bases: *ConstantCondition*

A constant fraction of material B condition.

class `tc_python.material_to_material.MaterialToMaterialCalculationAxis`

Bases: *AbstractMaterialToMaterialCalculationAxis*

A calculation axis.

classmethod fraction_of_material_b(*from_fraction: float = 0.0, to_fraction: float = 1.0,*
start_fraction: float = 0.5)

Creates a fraction of material B axis object.

Note: The unit depends on the composition unit setting in the calculator.

Parameters

- **from_fraction** – The left axis limit [weight-fraction or mole-fraction]
- **to_fraction** – The right axis limit [weight-fraction or mole-fraction]
- **start_fraction** – The start fraction of the calculation [weight-fraction or mole-fraction]

Returns

A new *FractionOfMaterialBAxis* axis object

classmethod temperature(*from_temperature: float = 1000, to_temperature: float = 3000,*
start_temperature: float = 2000)

Creates a temperature calculation axis object.

Parameters

- **from_temperature** – The left axis limit [K]
- **to_temperature** – The right axis limit [K]

- **start_temperature** – The start temperature of the calculation [K]

Returns

A new *TemperatureAxis* condition object

class `tc_python.material_to_material.MaterialToMaterialCalculationContainer`(*instance*)

Bases: `object`

Provides access to the calculation objects for all Material to Material calculations.

These are specialised calculations for mixtures of two materials A and B. Otherwise they behave identical to the corresponding regular single equilibrium, property diagram and phase diagram calculations.

with_phase_diagram_calculation(*default_conditions: bool = True, components: List[str] = []*) → *MaterialToMaterialPhaseDiagramCalculation*

Creates a Material to Material phase diagram (map) calculation.

Parameters

- **default_conditions** – If *True*, automatically sets the conditions $N=1$ and $P=100000$
- **components** – Specify here the components of the system (for example: *[AL2O3, ...]*), *only necessary if they differ from the elements*. If this option is used, **all elements** of the system need to be replaced by a component.

Returns

A new *MaterialToMaterialPhaseDiagramCalculation* object

with_property_diagram_calculation(*default_conditions: bool = True, components: List[str] = []*) → *MaterialToMaterialPropertyDiagramCalculation*

Creates a Material to Material property diagram (step) calculation.

Parameters

- **default_conditions** – If *True*, automatically sets the conditions $N=1$ and $P=100000$
- **components** – Specify here the components of the system (for example: *[AL2O3, ...]*), *only necessary if they differ from the elements*. If this option is used, **all elements** of the system need to be replaced by a component.

Returns

A new *MaterialToMaterialPropertyDiagramCalculation* object

with_single_equilibrium_calculation(*default_conditions: bool = True, components: List[str] = []*) → *MaterialToMaterialSingleEquilibriumCalculation*

Creates a Material to Material single equilibrium calculation.

Parameters

- **default_conditions** – If *True*, automatically sets the conditions $N=1$ and $P=100000$
- **components** – Specify here the components of the system (for example: *[AL2O3, ...]*), *only necessary if they differ from the elements*. If this option is used, **all elements** of the system need to be replaced by a component.

Returns

A new *MaterialToMaterialSingleEquilibriumCalculation* object

class `tc_python.material_to_material.MaterialToMaterialPhaseDiagramCalculation`(*calculator*)

Bases: *AbstractPhaseDiagramCalculation*

Configuration for a Material to Material phase diagram calculation.

Note: Specify the conditions, the calculation is performed with `calculate()`.

add_initial_equilibrium(*initial_equilibrium*: `InitialEquilibrium`)

Add initial equilibrium start points from which a phase diagram is calculated.

Scans along the axis variables and generates start points when the scan procedure crosses a phase boundary.

It may take a little longer to execute than using the minimum number of start points, as some lines may be calculated more than once. But the core remembers all node points and subsequently stops calculations along a line when it finds a known node point.

It is also possible to create a sequence of start points from one initial equilibria.

Parameters

initial_equilibrium – The initial equilibrium

Returns

This `MaterialToMaterialPhaseDiagramCalculation` object

calculate(*keep_previous_results*: `bool = False`, *timeout_in_minutes*: `float = 0.0`) →

`MaterialToMaterialPhaseDiagramResult`

Performs the phase diagram calculation.

Warning: If you use `keep_previous_results=True`, you must not use another calculator or even get results in between the calculations using `calculate()`. Then the previous results will actually be lost.

Parameters

- **keep_previous_results** – If `True`, results from any previous call to this method are appended. This can be used to combine calculations with multiple start points if the mapping fails at a certain condition.
- **timeout_in_minutes** – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than `timeout_in_minutes`, a `UnrecoverableCalculationException` will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A new `MaterialToMaterialPhaseDiagramResult` object which later can be used to get specific values from the calculated result.

disable_global_minimization()

Disables global minimization.

Default: Enabled

Returns

This `MaterialToMaterialPhaseDiagramCalculation` object

dont_keep_default_equilibria()

Do not keep the initial equilibria added by default.

This is only relevant in combination with `add_initial_equilibrium()`.

This is the default behavior.

Returns

This `MaterialToMaterialPhaseDiagramCalculation` object

enable_global_minimization()

Enables global minimization.

Default: Enabled

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

get_components() → List[str]

Returns the names of the components in the system (including all components auto-selected by the database(s)).

Returns

The component names

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as *.*tdb*-file.

Returns

The system data

keep_default_equilibria()

Keep the initial equilibria added by default. This is only relevant in combination with *add_initial_equilibrium()*.

Default behavior is to not keep default equilibria.

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

remove_all_initial_equilibria()

Removes all previously added initial equilibria.

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

set_activities(*activities: Dict[str, float]*)

Sets the constant activity conditions.

Note: The activity conditions are identical for both materials.

Parameters

activities – The constant activities

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_composition_unit(*unit: CompositionUnit = CompositionUnit.MASS_PERCENT*)

Sets the composition unit of **both materials A and B**.

Default: Weight percent

Parameters

unit – The composition unit of both materials A and B

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_material_a(*composition: Dict[str, float], dependent_component: str = None*)

Sets the composition of the material A.

The unit is set with *set_composition_unit()*.

Tip: The material can also have constant activity conditions, they are set in *set_activities()*.

Parameters

- **composition** – The composition of the material A
- **dependent_component** – The dependent component of the material A

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_material_b(*composition: Dict[str, float], dependent_component: str = None*)

Sets the composition of the material B.

The unit is set with *set_composition_unit()*.

Tip: The material can also have constant activity conditions, they are set in *set_activities()*.

Parameters

- **composition** – The composition of the material B
- **dependent_component** – The dependent component of the material B

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or *ALL_PHASES* for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_pressure(*pressure: float*)

Sets the pressure (i.e. the condition *P*).

Note: If the flag *default_conditions=True* has been set during the creation of the calculator, the pressure is set to 1000 hPa by default.

Parameters

pressure – The pressure [Pa]

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

set_system_size(*system_size: float*)

Sets the system size (i.e. the condition ‘N’, the number of moles).

Note: If the flag *default_conditions=True* has been set during the creation of the calculator, the system size is set to 1.0 moles by default.

Parameters

system_size – The system size [mole]

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

with_first_axis(*axis: MaterialToMaterialCalculationAxis*)

Sets the first axis (either temperature or fraction of material B). This calculation type requires that both temperature and fraction of material B axis are set.

Parameters

axis – The axis

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

with_options(*options: PhaseDiagramOptions*)

Sets the simulation options.

Parameters

options – The simulation options

Returns

This *PhaseDiagramCalculation* object

with_reference_state(*component: str, phase: str = 'SER', temperature: float = -1.0, pressure: float = 10000.0*)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

with_second_axis(*axis: MaterialToMaterialCalculationAxis*)

Sets the second axis (either temperature or fraction of material B). This calculation type requires that both temperature and fraction of material B axis are set.

Parameters

axis – The axis

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

with_system_modifications(*system_modifications: SystemModifications*)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *MaterialToMaterialPhaseDiagramCalculation* object

class `tc_python.material_to_material.MaterialToMaterialPhaseDiagramResult`(*result*)

Bases: *PhaseDiagramResult*

Result of a Material to Material phase diagram calculation, it can be evaluated using quantities or Console Mode syntax.

add_coordinate_for_phase_label(*x: float, y: float*)

Sets a coordinate in the result plot for which the stable phases will be evaluated and provided in the result data object. This can be used to plot the phases of a region into the phase diagram or just to programmatically evaluate the phases in certain regions.

Warning: This method takes coordinates of the **plot** axes and not of the calculation axis.

Parameters

- **x** – The coordinate of the first **plot** axis (“x-axis”) [unit of the **plot** axis]
- **y** – The coordinate of the second **plot** axis (“y-axis”) [unit of the **plot** axis]

Returns

This *MaterialToMaterialPhaseDiagramResult* object

get_values_grouped_by_quantity_of(*x_quantity: Union[ThermodynamicQuantity, str], y_quantity: Union[ThermodynamicQuantity, str]*) → *PhaseDiagramResultValues*

Returns x-y-line data grouped by the multiple datasets of the specified quantities (for example in dependency of components). The available quantities can be found in the documentation of the factory class *ThermodynamicQuantity*. Usually the result data represents the phase diagram.

Note: The different datasets will contain *NaN*-values between different subsections and are not sorted (because they are unsortable due to their nature).

Note: Its possible to use functions as axis variables, either by using *ThermodynamicQuantity.user_defined_function*, or by using an expression that contains ‘=’.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example ‘*T*’), *MATERIAL_B_FRACTION*, or even a function (for example ‘*f=T*1.01*’)
- **y_quantity** – The second quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example ‘*NV*’), *MATERIAL_B_FRACTION*, or even a function (for example ‘*CP=HM.T*’)

Returns

The phase diagram data

get_values_grouped_by_stable_phases_of(*x_quantity*: Union[ThermodynamicQuantity, str],
y_quantity: Union[ThermodynamicQuantity, str]) →
PhaseDiagramResultValues

Returns x-y-line data grouped by the sets of “stable phases” (for example “LIQUID” or “LIQUID + FCC_A1”). The available quantities can be found in the documentation of the factory class `ThermodynamicQuantity`. Usually the result data represents the phase diagram.

Note: The different datasets will contain *NaN*-values between different subsections and are not sorted (because they are unsortable due to their nature).

Note: Its possible to use functions as axis variables, either by using `ThermodynamicQuantity.user_defined_function`, or by using an expression that contains ‘=’.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example ‘*T*’), *MATERIAL_B_FRACTION*, or even a function (for example ‘ $f=T*1.01$ ’)
- **y_quantity** – The second quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example ‘*NV*’), *MATERIAL_B_FRACTION*, or even a function (for example ‘*CP=HM.T*’)

Returns

The phase diagram data

remove_phase_labels()

Erases all added coordinates for phase labels.

Returns

This *MaterialToMaterialPhaseDiagramResult* object

save_to_disk(*path*: str)

Saves the result to disc. Note that a result is a folder, containing potentially many files. The result can later be loaded with `load_result_from_disk()`

Parameters

path – the path to the folder you want the result to be saved in. It can be relative or absolute.

Returns

this *MaterialToMaterialPhaseDiagramResult* object

set_phase_name_style(*phase_name_style_enum*: PhaseNameStyle = PhaseNameStyle.NONE)

Sets the style of the phase name labels that will be used in the result data object (constitution description, ordering description, ...).

Default: PhaseNameStyle.NONE

Parameters

phase_name_style_enum – The phase name style

Returns

This *MaterialToMaterialPhaseDiagramResult* object

class `tc_python.material_to_material.MaterialToMaterialPropertyDiagramCalculation(calculator)`

Bases: *AbstractPropertyDiagramCalculation*

Configuration for a Material to Material property diagram calculation.

Note: Specify the conditions and possibly other settings, the calculation is performed with *calculate()*.

calculate(*keep_previous_results: bool = False, timeout_in_minutes: float = 0.0*) →
MaterialToMaterialPropertyDiagramResult

Performs the Material to Material property diagram calculation.

Warning: If you use *keep_previous_results=True*, you must not use another calculator or even get results in between the calculations using *calculate()*. Then the previous results will actually be lost.

Parameters

- **keep_previous_results** – If *True*, results from any previous call to this method are appended. This can be used to combine calculations with multiple start points if the stepping fails at a certain condition.
- **timeout_in_minutes** – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A new *MaterialToMaterialPropertyDiagramResult* object which later can be used to get specific values from the calculated result

disable_global_minimization()

Disables global minimization.

Default: Enabled

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

disable_step_separate_phases()

Disables *step separate phases*. This is the **default** setting.

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

enable_global_minimization()

Enables global minimization.

Default: Enabled

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

enable_step_separate_phases()

Enables *step separate phases*.

Default: By default separate phase stepping is *disabled*

Note: This is an advanced option, it is used mostly to calculate how the Gibbs energy for a number of phases varies for different compositions. This is particularly useful to calculate Gibbs energies for complex phases with miscibility gaps and for an ordered phase that is never disordered (e.g. SIGMA-phase, G-phase, MU-phase, etc.).

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

get_components() → List[str]

Returns the names of the components in the system (including all components auto-selected by the database(s)).

Returns

The component names

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

Returns

The system data

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

set_activities(*activities: Dict[str, float]*)

Sets the constant activity conditions.

Note: The activity conditions are identical for both materials.

Parameters

activities – The constant activities

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

set_composition_unit(*unit: CompositionUnit = CompositionUnit.MASS_PERCENT*)

Sets the composition unit of **both materials A and B**.

Default: Weight percent

Parameters

unit – The composition unit of both materials A and B

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

set_material_a(*composition: Dict[str, float], dependent_component: str = None*)

Sets the composition of the material A.

The unit is set with *set_composition_unit()*.

Tip: The material can also have constant activity conditions, they are set in *set_activities()*.

Parameters

- **composition** – The composition of the material A
- **dependent_component** – The dependent component of the material A

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

set_material_b(*composition: Dict[str, float], dependent_component: str = None*)

Sets the composition of the material B.

The unit is set with `set_composition_unit()`.

Tip: The material can also have constant activity conditions, they are set in `set_activities()`.

Parameters

- **composition** – The composition of the material B
- **dependent_component** – The dependent component of the material B

Returns

This `MaterialToMaterialPropertyDiagramCalculation` object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or `ALL_PHASES` for all phases

Returns

This `MaterialToMaterialPropertyDiagramCalculation` object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or `ALL_PHASES` for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This `MaterialToMaterialPropertyDiagramCalculation` object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This `MaterialToMaterialPropertyDiagramCalculation` object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or `ALL_PHASES` for all phases

Returns

This `MaterialToMaterialPropertyDiagramCalculation` object

set_pressure(*pressure: float*)

Sets the pressure (i.e. the condition P).

Note: If the flag *default_conditions=True* has been set during the creation of the calculator, the pressure is set to 1000 hPa by default.

Parameters

pressure – The pressure [Pa]

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

set_system_size(*system_size: float*)

Sets the system size (i.e. the condition ‘N’, the number of moles).

Note: If the flag *default_conditions=True* has been set during the creation of the calculator, the system size is set to 1.0 moles by default.

Parameters

system_size – The system size [mole]

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

with_axis(*axis: MaterialToMaterialCalculationAxis*)

Sets the axis (either temperature or fraction of material B). This calculation type requires that either temperature or fraction of material B is set as a constant condition - the other one is set as an axis.

Parameters

axis – The axis

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

with_constant_condition(*condition: ConstantCondition*)

Sets the constant condition (either temperature or fraction of material B). This calculation type requires that either temperature or fraction of material B is set as a constant condition - the other one is set as an axis.

Parameters

condition – The condition

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

with_options(*options: PropertyDiagramOptions*)

Sets the simulation options.

Parameters

options – The simulation options

Returns

This *MaterialToMaterialPropertyDiagramCalculation* object

with_reference_state(*component: str, phase: str = 'SER', temperature: float = -1.0, pressure: float = 100000.0*)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

Returns

This [MaterialToMaterialPropertyDiagramCalculation](#) object

with_system_modifications(*system_modifications: SystemModifications*)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This [MaterialToMaterialPropertyDiagramCalculation](#) object

class `tc_python.material_to_material.MaterialToMaterialPropertyDiagramResult`(*result*)

Bases: [PropertyDiagramResult](#)

Result of a Material to Material property diagram. It can be used to query for specific values.

```
get_values_grouped_by_quantity_of(x_quantity: Union[ThermodynamicQuantity, str], y_quantity:
    Union[ThermodynamicQuantity, str], sort_and_merge: bool =
    True) → Dict[str, ResultValueGroup]
```

Returns x-y-line data grouped by the multiple datasets of the specified quantities (typically the phases). The available quantities can be found in the documentation of the factory class `ThermodynamicQuantity`.

Note: The different datasets might contain *NaN*-values between different subsections and might not be sorted **even if the flag `sort_and_merge` has been set** (because they might be unsortable due to their nature).

Note: Its possible to use functions as axis variables, either by using `ThermodynamicQuantity.user_defined_function`, or by using an expression that contains '='.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example `'T'`), `MATERIAL_B_FRACTION`, or even a function (for example `'f=T*1.01'`)
- **y_quantity** – The second quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example `'NV'`), `MATERIAL_B_FRACTION`, or even a function (for example `'CP=HM.T'`)
- **sort_and_merge** – If *True*, the data is sorted and merged into as few subsections as possible (divided by *NaN*)

Returns

Containing the datasets with the quantities as their keys

```
get_values_grouped_by_stable_phases_of(x_quantity: Union[ThermodynamicQuantity, str],
    y_quantity: Union[ThermodynamicQuantity, str],
    sort_and_merge: bool = True) → Dict[str,
    ResultValueGroup]
```

Returns x-y-line data grouped by the sets of “stable phases” (for example “LIQUID” or “LIQUID + FCC_A1”). The available quantities can be found in the documentation of the factory class `ThermodynamicQuantity`.

Note: The different datasets might contain *NaN*-values between different subsections and different lines of an ambiguous dataset. They might not be sorted **even if the flag `sort_and_merge` has been set** (because they might be unsortable due to their nature).

Note: Its possible to use functions as axis variables, either by using `ThermodynamicQuantity.user_defined_function`, or by using an expression that contains '='.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example ‘T’), *MATERIAL_B_FRACTION*, or even a function (for example ‘ $f=T*1.01$ ’)
- **y_quantity** – The second quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example ‘NV’), *MATERIAL_B_FRACTION*, or even a function (for example ‘CP=HM.T’)
- **sort_and_merge** – If *True*, the data will be sorted and merged into as few subsections as possible (divided by *NaN*)

Returns

Containing the datasets with the quantities as their keys

get_values_of(*x_quantity*: Union[ThermodynamicQuantity, str], *y_quantity*: Union[ThermodynamicQuantity, str]) → [List[float], List[float]]

Returns sorted x-y-line data without any separation. Use `get_values_grouped_by_quantity_of()` or `get_values_grouped_by_stable_phases_of()` instead if you need such a separation. The available quantities can be found in the documentation of the factory class `ThermodynamicQuantity`.

Note: This method will always return sorted data without any *NaN*-values. If it is unsortable that might give data that is hard to interpret. In such a case you need to choose the quantity in another way or use one of the other methods. One example of this is to use quantities with *All*-markers, for example `MassFractionOfAComponent("All")`.

Note: Its possible to use functions as axis variables, either by using `ThermodynamicQuantity.user_defined_function()`, or by using an expression that contains ‘=’.

Example `get_values_grouped_by_quantity_of('T', ThermodynamicQuantity.user_defined_function('HM.T'))`

Example `get_values_grouped_by_quantity_of('T', 'CP=HM.T')`

Parameters

- **x_quantity** – The first thermodynamic quantity (“x-axis”), Console Mode syntax strings can be used as an alternative (for example ‘T’, *MATERIAL_B_FRACTION*, or even a function (for example ‘ $f=T*1.01$ ’).
- **y_quantity** – The second thermodynamic quantity (“y-axis”), Console Mode syntax strings can be used as an alternative (for example ‘NV’), *MATERIAL_B_FRACTION*, or even a function (for example ‘CP=HM.T’)

Returns

A tuple containing the x- and y-data in lists

save_to_disk(*path*: str)

Saves the result to disc. Note that a result is a folder, containing potentially many files. The result can later be loaded with `load_result_from_disk()`

Parameters

path – the path to the folder you want the result to be saved in. It can be relative or absolute.

Returns

this *MaterialToMaterialPropertyDiagramResult* object

set_phase_name_style(*phase_name_style_enum*: *PhaseNameStyle* = *PhaseNameStyle.NONE*)

Sets the style of the phase name labels that will be used in the result data object (constitution description, ordering description, ...).

Default: *PhaseNameStyle.NONE*

Parameters

phase_name_style_enum – The phase name style

Returns

This *MaterialToMaterialPropertyDiagramResult* object

class `tc_python.material_to_material.MaterialToMaterialSingleEquilibriumCalculation`(*calculator*)

Bases: *AbstractSingleEquilibriumCalculation*

Configuration for a Material to Material single fraction of B calculation.

Note: Specify the conditions and possibly other settings, the calculation is performed with *calculate()*.

calculate(*timeout_in_minutes*: *float* = 0.0) → *MaterialToMaterialSingleEquilibriumResult*

Performs the material to material calculation.

Note: The calculation result is **no** temporary result object.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A new *MaterialToMaterialSingleEquilibriumResult* object which can be used to get specific values from the calculated result. It is undefined behavior to use that object after the state of the calculation has been changed.

disable_global_minimization()

Turns the global minimization completely off.

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

enable_global_minimization()

Turns the global minimization on (using the default settings).

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

get_components() → List[str]

Returns a list of components in the system (including all components auto-selected by the database(s)).

Returns

The components

get_gibbs_energy_addition_for(*phase: str*) → float

Used to get the additional energy term (always being a constant) of a given phase. The value given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

phase – Specify the name of the (stoichiometric or solution) phase with the addition

Returns

Gibbs energy addition to G per mole formula unit.

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications*().

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as *.tdb-file.

Returns

The system data

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

set_activities(*activities: Dict[str, float]*)

Sets the constant activity conditions.

Note: The activity conditions are identical for both materials.

Parameters

activities – The constant activities

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_component_to_entered(*component: str*)

Sets the specified component to the status ENTERED, that is the default state.

Parameters

component – The component name or *ALL_COMPONENTS*

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_component_to_suspended(*component: str, reset_conditions: bool = False*)

Sets the specified component to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

- **reset_conditions** – if ‘True’ also remove composition conditions for the component if they are defined
- **component** – The component name or *ALL_COMPONENTS*

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_composition_unit(*unit: CompositionUnit = CompositionUnit.MASS_PERCENT*)

Sets the composition unit of **both materials A and B**.

Default: Weight percent

Parameters

unit – The composition unit of both materials A and B

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_gibbs_energy_addition_for(*phase: str, gibbs_energy: float*)

Used to specify the additional energy term (always being a constant) of a given phase. The value (*gibbs_energy*) given is added to the Gibbs energy of the (stoichiometric or solution) phase. It can represent a nucleation barrier, surface tension, elastic energy, etc.

It is not composition-, temperature- or pressure-dependent.

Parameters

- **phase** – Specify the name of the (stoichiometric or solution) phase with the addition
- **gibbs_energy** – Addition to G per mole formula unit

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_material_a(*composition: Dict[str, float], dependent_component: str = None*)

Sets the composition of the material A.

The unit is set with *set_composition_unit()*.

Tip: The material can also have constant activity conditions, they are set in *set_activities()*.

Parameters

- **composition** – The composition of the material A
- **dependent_component** – The dependent component of the material A

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_material_b(*composition: Dict[str, float], dependent_component: str = None*)

Sets the composition of the material B.

The unit is set with *set_composition_unit()*.

Tip: The material can also have constant activity conditions, they are set in *set_activities()*.

Parameters

- **composition** – The composition of the material B
- **dependent_component** – The dependent component of the material B

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_phase_to_dormant(*phase: str*)

Sets the phase to the status DORMANT, necessary for calculating the driving force to form the specified phase.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_phase_to_entered(*phase: str, amount: float = 1.0*)

Sets the phase to the status ENTERED, that is the default state.

Parameters

- **phase** – The phase name or *ALL_PHASES* for all phases
- **amount** – The phase amount in formula units (zero or larger)

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_phase_to_fixed(*phase: str, amount: float*)

Sets the phase to the status FIXED, i.e. it is guaranteed to have the specified phase fraction after the calculation.

Parameters

- **phase** – The phase name
- **amount** – The fixed phase amount in formula units (zero or larger)

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_phase_to_suspended(*phase: str*)

Sets the phase to the status SUSPENDED, i.e. it is ignored in the calculation.

Parameters

phase – The phase name or *ALL_PHASES* for all phases

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_pressure(*pressure: float*)

Sets the pressure (i.e. the condition *P*).

Note: If the flag *default_conditions=True* has been set during the creation of the calculator, the pressure is set to 1000 hPa by default.

Parameters

pressure – The pressure [Pa]

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

set_system_size(*system_size: float*)

Sets the system size (i.e. the condition ‘N’, the number of moles).

Note: If the flag *default_conditions=True* has been set during the creation of the calculator, the system size is set to 1.0 moles by default.

Parameters

system_size – The system size [mole]

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

with_first_constant_condition(*condition: ConstantCondition*)

Sets the first constant condition (either temperature or fraction of material B).

Parameters

condition – The condition

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

with_options(*options: SingleEquilibriumOptions*)

Sets the simulation options.

Parameters

options – The simulation options

Returns

This *SingleEquilibriumCalculation* object

with_reference_state(*component: str, phase: str = 'SER', temperature: float = -1.0, pressure: float = 100000.0*)

The reference state for a component is important when calculating activities, chemical potentials and enthalpies and is determined by the database being used. For each component the data must be referred to a selected phase, temperature and pressure, i.e. the reference state.

All data in all phases where this component dissolves must use the same reference state. However, different databases can use different reference states for the same element/component. It is important to be careful when combining data obtained from different databases.

By default, activities, chemical potentials and so forth are computed relative to the reference state used by the database. If the reference state in the database is not suitable for your purposes, use this command to set the reference state for a component using SER, i.e. the Stable Element Reference (which is usually set as default for a major component in alloys dominated by the component). In such cases, the temperature and pressure for the reference state is not needed.

For a phase to be usable as a reference for a component, the component needs to have the same composition as an end member of the phase. The reference state is an end member of a phase. The selection of the end member associated with the reference state is only performed once this command is executed.

If a component has the same composition as several end members of the chosen reference phase, then the end member that is selected at the specified temperature and pressure will have the lowest Gibbs energy.

Parameters

- **component** – The name of the element must be given.
- **phase** – Name of a phase used as the new reference state. Or SER for the Stable Element Reference.
- **temperature** – The Temperature (in K) for the reference state. Or CURRENT_TEMPERATURE which means that the current temperature is used at the time of evaluation of the reference energy for the calculation.
- **pressure** – The Pressure (in Pa) for the reference state.

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

with_second_constant_condition(*condition*: ConstantCondition)

Sets the second constant condition (either temperature or fraction of material B).

Parameters

condition – The condition

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

with_system_modifications(*system_modifications*: SystemModifications)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

This *MaterialToMaterialSingleEquilibriumCalculation* object

class tc_python.material_to_material.**MaterialToMaterialSingleEquilibriumResult**(*result*)

Bases: *SingleEquilibriumResult*

Result of a Material To Material calculation for a single fraction of material B, it can be evaluated using a quantity or Console Mode syntax.

change_pressure(*pressure: float*)

Change the pressure and re-evaluate the results from the equilibrium without minimizing Gibbs energy, i.e. with higher performance. The properties are calculated at the new pressure using the phase amount, temperature and composition of phases from the initial equilibrium. Use *get_value_of()* to obtain them.

Parameters

pressure – The pressure [Pa]

Returns

This *MaterialToMaterialSingleEquilibriumResult* object

change_temperature(*temperature: float*)

Change the temperature and re-evaluate the results from the equilibrium without minimizing Gibbs energy, i.e. with high performance. The properties are calculated at the new temperature using the phase amount, pressure and composition of phases from the initial equilibrium. Use *get_value_of()* to obtain them.

Note: This is typically used when calculating room temperature properties (e.g. density) for a material when it is assumed that the equilibrium phase amount and composition freeze-in at a higher temperature during cooling.

Parameters

temperature – The temperature [K]

Returns

This *MaterialToMaterialSingleEquilibriumResult* object

get_components() → List[str]

Returns the names of the components selected in the system (including any components auto-selected by the database(s)).

Returns

The names of the selected components

get_conditions() → List[str]

Returns the conditions.

Returns

The selected conditions

get_phases() → List[str]

Returns the phases present in the system due to its configuration. It also contains all phases that have been automatically added during the calculation, this is the difference to the method *System.get_phases_in_system()*.

Returns

The names of the phases in the system including automatically added phases

get_stable_phases() → List[str]

Returns the stable phases (i.e. the phases present in the current equilibrium).

Returns

The names of the stable phases

get_value_of(*quantity: Union[ThermodynamicQuantity, str]*) → float

Returns a value from a single equilibrium calculation.

Parameters

quantity – The thermodynamic quantity to get the value of; a Console Mode syntax strings can be used as an alternative (for example “NPM(FCC_A1)”)

Returns

The requested value

run_poly_command(*command: str*)

Runs a Thermo-Calc command from the Console Mode POLY module immediately in the engine. This affects only the state of the result object.

Parameters

command – The Thermo-Calc Console Mode command

Returns

This *MaterialToMaterialSingleEquilibriumResult* object

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

save_to_disk(*path: str*)

Saves the result to disk. Note that the result is a folder, containing potentially many files. The result can later be loaded with `load_result_from_disk()`

Parameters

path – the path to the folder you want the result to be saved in. It can be relative or absolute.

Returns

this *MaterialToMaterialSingleEquilibriumResult* object

```
class tc_python.material_to_material.TemperatureAxis(from_temperature: float = 1000,
                                                    to_temperature: float = 3000,
                                                    start_temperature: float = 2000)
```

Bases: *MaterialToMaterialCalculationAxis*

A temperature calculation axis.

```
class tc_python.material_to_material.TemperatureCondition(temperature: float = 1000.0)
```

Bases: *ConstantCondition*

A constant temperature condition.

6.1.9 Package “process_metallurgy”

6.1.9.1 Module “base”

class tc_python.process_metallurgy.base.**AbstractAddition**

Bases: object

The base class for representing an addition to an equilibrium calculation or process simulation.

get_composition() → Dict[str, float]

Returns the composition of the addition - without containing a dependent component.

Returns

The composition [in the unit provided by `getCompositionUnit()`]

abstract get_composition_unit()

Returns the composition unit used in this addition.

Returns

The composition unit

get_dependent_component() → str

Returns the dependent component.

Returns

The dependent component or an empty string if no dependent component is defined

get_elements() → Set[str]

Returns all elements of the addition.

Returns

The elements

get_id() → str

Returns the unique ID of the addition.

Returns

The unique ID of the addition

get_temperature() → float

Returns the temperature of the addition. This refers to the temperature before it is added to the process.

Returns

The temperature [K]

is_do_scale() → bool

Returns if the composition of the addition is being scaled to 100% / 1 or not.

Returns

If the composition is scaled

is_empty() → bool

Returns if the addition is “empty”, i.e., has zero amount.

Returns

If the addition is empty

class tc_python.process_metallurgy.base.**ActivityReference**(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

The reference for a slag activity calculation. The actual reference phase depends on the component for which the activity is request and can be obtained by using these methods on the result object: `tc_python.process_metallurgy.process.ProcessSimulationResult.get_formula_for_activity_of_slag()` or `tc_python.process_metallurgy.equilibrium.EquilibriumResult.get_formula_for_activity_of_slag()`.

LIQUID = 1

The reference is liquid slag.

SOLID = 0

The reference is solid slag.

```
class tc_python.process_metallurgy.base.PhaseGroup(value, names=None, *, module=None,
                                                  qualname=None, type=None, start=1,
                                                  boundary=None)
```

Bases: Enum

The phase group, such a group is collecting all phases that belong to a certain type.

ALL_METAL = 2

All metal phases.

ALL_SLAG = 5

All slag phases.

GAS = 6

All gas phases.

LIQUID_METAL = 0

All liquid metal phases.

LIQUID_SLAG = 4

All liquid slag phases.

SOLID_METAL = 1

All solid metal phases.

SOLID_SLAG = 3

All solid slag phases.

```
class tc_python.process_metallurgy.base.ProcessDatabase(value, names=None, *, module=None,
                                                       qualname=None, type=None, start=1,
                                                       boundary=None)
```

Bases: Enum

The database used for a Process Metallurgy calculation.

LATEST = 0

The latest database available.

OXDEMO = 1

The database OXDEMO.

TCOX10 = 4

The database TCOX10.

TCOX11 = 5

The database TCOX11.

TCOX12 = 6

The database TCOX12.

TCOX13 = 7

The database TCOX13.

TCOX14 = 8

The database TCOX14.

TCOX15 = 9

The database TCOX15.

TCOX8 = 2

The database TCOX8.

TCOX9 = 3

The database TCOX9.

get_name() → str

Returns the name of the actually used database.

Tip: This is especially useful if *LATEST* is used.

Returns

The name of the database

class `tc_python.process_metallurgy.base.ProcessMetallurgyOptions`

Bases: *SingleEquilibriumOptions*

The options for a process metallurgy calculation.

disable_approximate_driving_force_for_metastable_phases()

Disables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use *disable_approximate_driving_force_for_metastable_phases()* to force the calculation to converge for the metastable phases.

Returns

This *ProcessMetallurgyOptions* object

disable_control_step_size_during_minimization()

Disables step size control during minimization (non-global).

Default: Enabled

Returns

This *ProcessMetallurgyOptions* object

disable_force_positive_definite_phase_hessian()

Disables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This *ProcessMetallurgyOptions* object

enable_approximate_driving_force_for_metastable_phases()

Enables the approximation of the driving force for metastable phases.

Default: Enabled

Note: When enabled, the metastable phases are included in all iterations. However, these may not have reached their most favorable composition and thus their driving forces may be only approximate.

If it is important that these driving forces are correct, use *disable_approximate_driving_force_for_metastable_phases()* to force the calculation to converge for the metastable phases.

Returns

This *ProcessMetallurgyOptions* object

enable_control_step_size_during_minimization()

Enables step size control during normal minimization (non-global).

Default: Enabled

Returns

This *ProcessMetallurgyOptions* object

enable_force_positive_definite_phase_hessian()

Enables forcing of positive definite phase Hessian. This determines how the minimum of an equilibrium state in a normal minimization procedure (non-global) is reached. For details, search the Thermo-Calc documentation for “Hessian minimization”.

Default: Enabled

Returns

This *ProcessMetallurgyOptions* object

set_global_minimization_max_grid_points(*max_grid_points: int = 2000*)

Sets the maximum number of grid points in global minimization. **Only applicable if global minimization is actually used.**

Default: 2000 points

Parameters

max_grid_points – The maximum number of grid points

Returns

This *ProcessMetallurgyOptions* object

set_max_no_of_iterations(*max_no_of_iterations: int = 2000*)

Sets the maximum number of iterations for the CALPHAD minimizer.

Default: max. 2000 iterations

Note: As some models give computation times of more than 1 CPU second/iteration, this number is also used to check the CPU time and the calculation stops if 500 CPU seconds/iterations are used.

Parameters

max_no_of_iterations – The max. number of iterations

Returns

This *ProcessMetallurgyOptions* object

set_process_minimization_policy(*minimization_policy*: *ProcessMinimizationPolicy*)

Sets the minimization policy for the process metallurgy calculation. It is possible to choose policies that try different methods if one method fails.

Parameters

minimization_policy – The minimization policy to be used

Returns

This *ProcessMetallurgyOptions* object

set_required_accuracy(*accuracy*: *float = 1e-06*)

Sets the required relative accuracy.

Default: 1.0E-6

Note: This is a relative accuracy, and the program requires that the relative difference in each variable must be lower than this value before it has converged. A larger value normally means fewer iterations but less accurate solutions. The value should be at least one order of magnitude larger than the machine precision.

Parameters

accuracy – The required relative accuracy

Returns

This *ProcessMetallurgyOptions* object

set_smallest_fraction(*smallest_fraction*: *float = 1e-16*)

Sets the smallest fraction for constituents that are unstable.

It is normally only in the gas phase that you can find such low fractions.

The **default value** for the smallest site-fractions is 1E-16 for all phases except for IDEAL phase with one sublattice site (such as the GAS mixture phase in many databases) for which the default value is always as 1E-30.

Parameters

smallest_fraction – The smallest fraction for constituents that are unstable

Returns

This *ProcessMetallurgyOptions* object

```
class tc_python.process_metallurgy.base.ProcessMinimizationPolicy(value, names=None, *,
                                                                    module=None,
                                                                    qualname=None, type=None,
                                                                    start=1, boundary=None)
```

Bases: Enum

The policy for the CALPHAD minimization routine used in a calculation.

Note: This affects the runtime and stability of a calculation. Global minimization is more stable but more time-consuming. Local minimization is much faster but can miss new phases coming up. Global test is a compromise between both approaches.

GLOBAL = 0

Always use global minimization.

GLOBAL_TEST = 1

Always use global test.

GLOBAL_TEST__GLOBAL = 5

First try global test, if that fails use global minimization.

LOCAL = 2

Always use local minimization.

LOCAL__GLOBAL_TEST = 3

First try local minimization, if that fails use global test.

LOCAL__GLOBAL_TEST__GLOBAL = 4

First try local minimization, if that fails try global test and if that fails use global minimization.

```
class tc_python.process_metallurgy.base.SlagProperty(value, names=None, *, module=None,
                                                    qualname=None, type=None, start=1,
                                                    boundary=None)
```

Bases: Enum

The slag property, different definitions are available. The actual definition of a certain slag property for the current system can be obtained using these methods on the result object: `tc_python.process_metallurgy.process.ProcessSimulationResult.getFormulaForSlagProperty()` or `tc_python.process_metallurgy.equilibrium.EquilibriumResult.getFormulaForSlagProperty()`.

Note: If not all components required by the definition of slag property are available in a given system, the slag property will return *NaN*.

B2 = 0

Basicity *B2* (based on: *CaO / SiO2*).

B3 = 1

Basicity *B3* (based on: *CaO / MgO / SiO2*).

B4 = 3

Basicity *B4* (based on: *CaO / MgO / SiO2 / Al2O3*).

BAS2 = 2

Basicity *Bas2* (based on: *CaO / MgO / SiO2 / Al2O3 / TiO2*).

BELLS_RATIO = 4

Basicity *Bell's ratio* (based on: *CaO / MgO / SiO2 / Al2O3*).

LOG_10_SULPHUR_CAPACITY = 5

Logarithmic sulphur capacity of the slag.

LS = 6

Sulphur capacity *L_s* of the slag.

```
class tc_python.process_metallurgy.base.SlagType(value, names=None, *, module=None,
                                                qualname=None, type=None, start=1,
                                                boundary=None)
```

Bases: Enum

The type of slag considered for a slag property calculation.

ALL = 2

The slag property is calculated for all slag, i.e. for both the liquid and solid slag.

LIQUID = 1

The slag property is calculated for all liquid slag.

SOLID = 0

The slag property is calculated for all solid slag.

6.1.9.2 Module “equilibrium”

```
class tc_python.process_metallurgy.equilibrium.AbstractEquilibriumAddition
```

Bases: *AbstractAddition*

The base class for representing an addition to an equilibrium calculation.

```
set_amount(amount: float)
```

Change the amount of the addition.

Parameters

amount – The new amount [in the amount unit of this addition]

Returns

This *AbstractEquilibriumAddition* object

```
set_component_composition(component: str, content: float)
```

Change the composition of a component of the addition.

Parameters

- **component** – The component to be changed
- **content** – The new content of the component [in the composition unit defined for this addition]

Returns

This *AbstractEquilibriumAddition* object

```
class tc_python.process_metallurgy.equilibrium.AdiabaticEquilibriumCalculation(calculator)
```

Bases: *EquilibriumCalculation*

An *adiabatic* Process Metallurgy equilibrium calculation. Such calculations can for example be used to determine the global equilibrium state of a process.

```
add_addition(addition: AbstractEquilibriumAddition)
```

Adds an addition to the calculation.

Parameters

addition – A *EquilibriumAddition* or *EquilibriumGasAddition*

Returns

This *AdiabaticEquilibriumCalculation* object

add_poly_command(*command: str*)

Adds a Thermo-Calc Console syntax POLY module command which will be executed when performing the calculation using the *calculate()* method.

If multiple commands are added, they will be executed in the order of addition. Each command will only be executed one.

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

Parameters

command – The POLY module command in Thermo-Calc console syntax

Returns

This *AdiabaticEquilibriumCalculation* object

calculate(*timeout_in_minutes: float = 0.0*) → *EquilibriumResult*

Runs the Process Metallurgy equilibrium calculation.

Parameters

timeout_in_minutes – The calculation will be aborted after that time, **default: no timeout**

Returns

A new *EquilibriumResult* object

remove_addition(*addition: AbstractEquilibriumAddition*)

Removes an addition from the calculation.

Parameters

addition – The addition to be removed

Returns

This *AdiabaticEquilibriumCalculation* object

remove_all_additions()

Removes all additions from the calculation.

Returns

This *AdiabaticEquilibriumCalculation* object

set_pressure(*pressure: float = 100000.0*)

Sets the pressure.

Parameters

pressure – The pressure [Pa]

Returns

This *AdiabaticEquilibriumCalculation* object

with_options(*options*: ProcessMetallurgyOptions)

Sets the options for the calculation.

Parameters

options – The options

Returns

This *AdiabaticEquilibriumCalculation* object

```
class tc_python.process_metallurgy.equilibrium.EquilibriumAddition(composition: Dict[str, float],
                                                                amount: float, temperature:
                                                                float = 293.15,
                                                                composition_unit:
                                                                CompositionUnit = Compo-
                                                                sitionUnit.MASS_PERCENT,
                                                                do_scale: bool = False)
```

Bases: *AbstractEquilibriumAddition*

An addition to an equilibrium calculation.

Tip: By setting *do_scale=True*, the composition will be scaled to 100% / fraction of 1. This is useful if the composition provided is not summing to 100% / 1. An example could be a slag addition which is provided like this: *90 wt-% CaO - 5 wt-% Al2O3 - 4 wt-% SiO2*.

Parameters

- **composition** – The composition
- **amount** – The amount [kg]
- **temperature** – The initial addition temperature (**default: 20 °C**) [K]
- **composition_unit** – The composition unit
- **do_scale** – If the composition is scaled to 100% / fraction of 1

get_amount() → float

Returns the amount of this addition.

Returns

The amount [kg]

get_composition_unit() → *CompositionUnit*

Returns the composition unit used in this addition.

Returns

The composition unit

```
class tc_python.process_metallurgy.equilibrium.EquilibriumCalculation(metallurgical_reaction)
```

Bases: object

A Process Metallurgy equilibrium calculation. Such calculations can for example be used to determine the global equilibrium state of a process.

abstract add_addition(*addition*: AbstractEquilibriumAddition)

Adds an addition to the calculation.

Parameters

addition – The addition

Returns

This *EquilibriumCalculation* object

abstract add_poly_command(*command: str*)

Adds a Thermo-Calc Console syntax POLY module command which will be executed when performing the calculation using the *calculate()* method.

If multiple commands are added, they will be executed in the order of addition. Each command will only be executed one.

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

Parameters

command – The POLY module command in Thermo-Calc console syntax

Returns

This *EquilibriumCalculation* object

abstract calculate(*timeout_in_minutes: float = 0.0*) → *EquilibriumResult*

Runs the Process Metallurgy equilibrium calculation.

Parameters

timeout_in_minutes – The calculation will be aborted after that time, **default: no timeout**

Returns

A new *EquilibriumResult* object

abstract remove_addition(*addition: AbstractEquilibriumAddition*)

Removes an addition from the calculation.

Parameters

addition – The addition to be removed

Returns

This *EquilibriumCalculation* object

abstract remove_all_additions()

Removes all additions from the calculation.

Returns

This *EquilibriumCalculation* object

abstract set_pressure(*pressure: float = 100000.0*)

Sets the pressure.

Parameters

pressure – The pressure [Pa]

Returns

This *EquilibriumCalculation* object

update_addition(*addition*: *AbstractEquilibriumAddition*)

Replaces an already added addition with an updated one. This is usually used to change the composition or amount of an addition while iterating over them. Typically, this is done for stepping or mapping calculations.

Note: The calculation must already contain the addition object to be updated.

Parameters

addition – The new addition containing updated values

Returns

This *IsoThermalMetallurgyCalculation* object

abstract with_options(*options*: *ProcessMetallurgyOptions*)

Sets the options for the calculation.

Parameters

options – The options

Returns

This *EquilibriumCalculation* object

```
class tc_python.process_metallurgy.equilibrium.EquilibriumGasAddition(composition: Dict[str, float], amount: float, temperature: float = 293.15, amount_unit: GasAmountUnit = GasAmountUnit.NORM_CUBIC_METER, composition_unit: GasCompositionUnit = GasCompositionUnit.VOLUME_PERCENT, do_scale: bool = False)
```

Bases: *AbstractEquilibriumAddition*

A gas addition to an equilibrium calculation.

Tip: By setting *do_scale=True*, the composition will be scaled to 100% / fraction of 1. This is useful if the composition provided is not summing to 100% / 1. An example could be a gas addition which is provided like this: *90 vol-% Ar - 10 vol-% O2*.

get_amount() → float

Returns the amount of this addition.

Note: The amount unit can be obtained using *get_amount_unit*().

Returns

The amount [in the amount unit]

get_amount_unit() → *GasAmountUnit*

Returns the amount unit used in this addition.

Returns

The amount unit

`get_composition_unit()` → *GasCompositionUnit*

Returns the composition unit used in this addition.

Returns

The composition unit

`class tc_python.process_metallurgy.equilibrium.EquilibriumResult(result)`

Bases: *AbstractResult*

The result of a Process Metallurgy equilibrium calculation.

`get_activity_of_slag(component: str, reference: ActivityReference = ActivityReference.LIQUID)` → float

Returns the activity of a component in the slag.

Parameters

- **component** – The component
- **reference** – The reference for the activity, can be liquid or solid slag, **default: liquid slag**

Returns

The activity of the component [-]

`get_amount()` → float

Returns the total amount.

Returns

The total amount [kg]

`get_amount_of_elements()` → Dict[str, float]

Returns the amount of each element.

Returns

The amount of the elements [kg]

`get_amount_of_phase_groups()` → Dict[PhaseGroup, float]

Returns the amount of each phase group (e.g., for example all liquid slag).

Returns

The amount of the phase groups [kg]

`get_amount_of_phases()` → Dict[str, float]

Returns the amount of each phase.

Returns

The amount of the phases [kg]

`get_components()` → Set[str]

Returns all components defined for the elements present in this result.

Returns

The components present in this result

`get_composition(composition_unit: CompositionUnit = CompositionUnit.MASS_PERCENT)` → Dict[str, float]

Returns the composition of the result.

Parameters

composition_unit – The composition unit, **default: mass percent**

Returns

The composition

get_composition_of_phase(*phase: str, composition_unit: CompositionUnit = CompositionUnit.MASS_PERCENT, composition_type: CompositionType = CompositionType.COMPONENT*) → Dict[str, float]

Returns the composition of a phase in the result.

Parameters

- **phase** – The phase name
- **composition_unit** – The composition unit, **default: mass percent**
- **composition_type** – Defines if the composition is given by element (e.g., 75 wt-% Fe - 25 wt-% Cr) or by component (e.g. 65 wt-% Al₂O₃ - 35 wt-% CaO). In case of a metallic phase, the composition is given by element even if *component* is selected. **Default: by component.**

Returns

The composition

get_composition_of_phase_group(*phase_group: PhaseGroup, composition_unit: CompositionUnit = CompositionUnit.MASS_PERCENT, composition_type: CompositionType = CompositionType.COMPONENT*) → Dict[str, float]

Returns the composition of a phase group (e.g., all liquid slag) in the result.

Parameters

- **phase_group** – The phase group
- **composition_unit** – The composition unit, **default: mass percent**
- **composition_type** – Defines if the composition is given by element (e.g., 75 wt-% Fe - 25 wt-% Cr) or by component (e.g. 65 wt-% Al₂O₃ - 35 wt-% CaO). In case of a metallic phase, the composition is given by element even if *component* is selected. **Default: by component.**

Returns

The composition

get_elements() → Set[str]

Returns all elements defined for the result.

Returns

All elements present in this result

get_formula_for_activity_of_slag(*component: str, reference: ActivityReference = ActivityReference.LIQUID*) → str

Returns the Thermo-Calc Console syntax formula used for calculating the activity of a component in the slag (e.g. AC(AL₂O₃, IONIC_LIQ). The actual activity can be obtained using *get_activity_of_slag()*.

Parameters

- **component** – The component
- **reference** – The reference for the activity, can be liquid or solid slag, **default: liquid slag**

Returns

The formula for calculating the activity

get_formula_for_slag_property(*slag_property*: SlagProperty, *slag_type*: SlagType = SlagType.ALL) → str

Returns the Thermo-Calc Console syntax formula used for calculating a property of the slag (e.g. $B(CAO)/B(SIO_2)$). The actual slag property can be obtained using `get_slag_property()`.

Parameters

- **slag_property** – The slag property
- **slag_type** – The part of the slag for which the property will be calculated. Can be all slag, the liquid or the solid slag. **Default: all slag**

Returns

The formula for calculating the slag property

get_fraction_of_phase_groups(*unit*: PhaseUnit = PhaseUnit.MASS_FRACTION) → Dict[PhaseGroup, float]

Returns the fraction of the phase groups (e.g., all liquid slag) in the result.

Parameters

unit – The unit of the fraction, **default: volume fraction**

Returns

The phase fractions

get_fraction_of_phases(*unit*: PhaseUnit = PhaseUnit.MASS_FRACTION) → Dict[str, float]

Returns the fraction of the stable phases in the result.

Parameters

unit – The unit of the fraction, **default: volume fraction**

Returns

The phase fractions

get_gas_components() → Set[str]

Returns all components of the gas phase defined for the elements present in this result.

Returns

The components of the gas phase present in this result

get_oxygen_partial_pressure() → float

Returns the partial pressure of oxygen in the result.

Returns

The partial pressure [Pa]

get_pressure() → float

Returns the pressure in the result.

Returns

The pressure [Pa]

get_slag_property(*slag_property*: SlagProperty, *slag_type*: SlagType = SlagType.ALL) → float

Returns a property of the slag. These properties are mostly used to describe the property of a slag to pick up sulfur.

Parameters

- **slag_property** – The slag property

- **slag_type** – The part of the slag for which the property will be calculated. Can be all slag, the liquid or the solid slag. **Default: all slag**

Returns

The slag property [unit depending on the property]

get_stable_phases() → Set[str]

Returns the stable phases in the result.

Returns

The stable phases

get_stable_phases_in_phase_group(*phase_group*: PhaseGroup) → Set[str]

Returns the stable phases of a phase group (e.g., all liquid slag) in the result.

Parameters

phase_group – The phase group

Returns

The stable phases

get_temperature() → float

Returns the temperature in the result.

Returns

The temperature [K]

get_value_of(*classic_expression*: str) → float

Returns a value for a thermodynamic quantity.

Warning: It should normally not be required to use this method, use the appropriate method available in the API instead.

Parameters

classic_expression – The thermodynamic quantity to get the value of in Thermo-Calc Console Mode syntax (for example “NPM(FCC_A1)”)

Returns

The requested value

get_viscosity_dynamic_of_phase(*phase*: str) → float

Returns the dynamic viscosity of a phase in the result.

Parameters

phase – The phase name

Returns

The dynamic viscosity [Pa*s]

get_viscosity_kinematic_of_phase(*phase*: str) → float

Returns the kinematic viscosity of a phase in the result.

Parameters

phase – The phase name

Returns

The kinematic viscosity [m**2/s]

`class tc_python.process_metallurgy.equilibrium.IsoThermalEquilibriumCalculation(calculation)`

Bases: *EquilibriumCalculation*

An *isothermal* Process Metallurgy equilibrium calculation. Such calculations can for example be used to determine the global equilibrium state of a process.

`add_addition(addition: AbstractEquilibriumAddition)`

Adds an addition to the calculation.

Parameters

addition – A *EquilibriumAddition* or *EquilibriumGasAddition*

Returns

This *IsoThermalEquilibriumCalculation* object

`add_poly_command(command: str)`

Adds a Thermo-Calc Console syntax POLY module command which will be executed when performing the calculation using the *calculate()* method.

If multiple commands are added, they will be executed in the order of addition. Each command will only be executed one.

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw Thermo-Calc commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten equals sign).

Parameters

command – The POLY module command in Thermo-Calc console syntax

Returns

This *IsoThermalEquilibriumCalculation* object

`calculate(timeout_in_minutes: float = 0.0) → EquilibriumResult`

Runs the Process Metallurgy equilibrium calculation.

Parameters

timeout_in_minutes – The calculation will be aborted after that time, **default: no timeout**

Returns

A new *EquilibriumResult* object

`remove_addition(addition: AbstractEquilibriumAddition)`

Removes an addition from the calculation.

Parameters

addition – The addition to be removed

Returns

This *IsoThermalEquilibriumCalculation* object

`remove_all_additions()`

Removes all additions from the calculation.

Returns

This *IsoThermalEquilibriumCalculation* object

set_pressure(*pressure: float = 100000.0*)

Sets the pressure.

Parameters

pressure – The pressure [Pa]

Returns

This *IsoThermalEquilibriumCalculation* object

set_temperature(*temperature: float*)

Sets the temperature.

Parameters

temperature – The temperature [K]

Returns

This *IsoThermalEquilibriumCalculation* object

update_addition(*addition: AbstractEquilibriumAddition*)

Replaces an already added addition with an updated one.

Tip: This is usually used to change the composition or amount of an addition while iterating over multiple values. Typically, this is done for stepping or mapping calculations.

Note: The calculation must already contain the addition object to be updated.

Parameters

addition – A previously added addition object with the updated values

Returns

This *IsoThermalEquilibriumCalculation* object

with_options(*options: ProcessMetallurgyOptions*)

Sets the options for the calculation.

Parameters

options – The options

Returns

This *IsoThermalEquilibriumCalculation* object

6.1.9.3 Module “process”

class `tc_python.process_metallurgy.process.AbstractContinuousAddition`

Bases: *AbstractProcessAddition*

The base class representing an addition in a process simulation that is added continuously over a period of time.

class `tc_python.process_metallurgy.process.AbstractProcessAddition`

Bases: *AbstractAddition*

The base class for representing an addition in a process simulation.

class `tc_python.process_metallurgy.process.AbstractSingleTimeAddition`

Bases: [AbstractProcessAddition](#)

The base class representing an addition in a process simulation that is added at a distinct time point.

class `tc_python.process_metallurgy.process.BulkZone`(*density: float, phase_group_to_transfer: PhaseGroup, name: str*)

Bases: [Zone](#)

A bulk zone in a process simulation, this is representing a large volume in the process, for example the steel melt or the top slag. A zone is a volume in a process that has identical temperature and composition. It has well-defined boundaries to other zones.

Tip: This is a generic class and seldom used directly. Use instead [MetalBulkZone](#) or [SlagBulkZone](#).

add_addition(*addition: AbstractSingleTimeAddition, time: float = 0.0*)

Adds a single-time addition at the specified time point to the zone. The addition will be dissolved immediately.

Parameters

- **addition** – A [SingleTimeAddition](#) or [SingleTimeGasAddition](#)
- **time** – The time point [s]

Returns

This [BulkZone](#) object

add_continuous_addition(*addition: AbstractContinuousAddition, from_time: float = 0.0, to_time: float = nan*)

Adds a constant addition continuously during the specified time period to the zone. All added material will be dissolved immediately.

Parameters

- **addition** – A [ContinuousAddition](#) or [ContinuousGasAddition](#)
- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This [BulkZone](#) object

add_power(*power: float, from_time: float = 0.0, to_time: float = nan*)

Adds a constant power during a specified time period to the zone (for example heating or cooling).

Parameters

- **power** – The power [W]
- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This [BulkZone](#) object

disable_degassing()

Disables degassing for this zone, i.e. all gas formed at any time step will be staying in this zone.

Returns

This *BulkZone* object

enable_degassing()

Enables degassing for this zone, i.e. any gas formed at any time step will be removed after that time step. This gas will be transferred into the *exhaust gas zone*. **This is the default.**

Returns

This *BulkZone* object

get_density() → float

Returns the density of the zone

Returns

The density [kg/m**3]

get_elements() → Set[str]

Returns the elements present in the zone. The elements are determined by the additions.

Returns

The elements

get_id() → str

Returns the unique id of the zone. :return: The zone id

get_phase_group_to_transfer() → *PhaseGroup*

Returns the phase group that is transferred from the attached reaction zones back to this zone after each time step.

Returns

The phase group

is_degassing_enabled() → bool

Returns if degassing is enabled in the zone.

Returns

If degassing is enabled

```
class tc_python.process_metallurgy.process.ContinuousAddition(composition: Dict[str, float], rate: float, temperature: float = 293.15, composition_unit: CompositionUnit = CompositionUnit.MASS_PERCENT, do_scale: bool = False)
```

Bases: *AbstractContinuousAddition*

An addition in a process simulation that is added continuously during a period of time.

It is assumed that the material added during that period is dissolved instantaneously.

Tip: By setting *do_scale=True*, the composition will be scaled to 100% / fraction of 1. This is useful if the composition provided is not scaling to 100% / 1. An example could be a slag addition which is provided like this: *90 wt-% CaO - 5 wt-% Al2O3 - 4 wt-% SiO2*.

Parameters

- **composition** – The composition
- **rate** – The rate of addition [kg/s]

- **temperature** – The initial addition temperature (**default: 20 °C**) [K]
- **composition_unit** – The composition unit
- **do_scale** – If the composition is scaled to 100% / fraction of 1

get_composition_unit() → *CompositionUnit*

Returns the composition unit used in this addition.

Returns

The composition unit

get_rate() → float

Returns the rate of addition.

Returns

The addition rate [kg/s]

```
class tc_python.process_metallurgy.process.ContinuousGasAddition(composition: Dict[str, float],
                                                                rate: float, temperature: float =
                                                                293.15, rate_unit: GasRateUnit
                                                                = GasRateUnit.NORM_CUBIC_METER_PER_SEC,
                                                                composition_unit:
                                                                GasCompositionUnit =
                                                                GasCompositionUnit.VOLUME_PERCENT,
                                                                do_scale: bool = False)
```

Bases: *AbstractContinuousAddition*

A gas addition in a process simulation that is added continuously during a period of time.

It is assumed that the gas added during that period is dissolved instantaneously.

Tip: By setting *do_scale=True*, the composition will be scaled to 100% / fraction of 1. This is useful if the composition provided is not scaling to 100% / 1. An example could be a gas addition which is provided like this: *90 vol-% Ar - 10 vol-% O2*.

get_composition_unit() → *GasCompositionUnit*

Returns the composition unit used in this addition.

Returns

The composition unit

get_rate() → float

Returns the rate of addition.

Note: The rate unit can be obtained using *get_rate_unit()*.

Returns

The addition rate [in the rate unit]

get_rate_unit() → *GasRateUnit*

Returns the rate unit used in this addition.

Returns

The rate unit

class `tc_python.process_metallurgy.process.ExhaustGasResult(result)`

Bases: `object`

A result representing the exhaust gas zone, here all exhaust gas generated during the process is accumulated.

The data is returned for each time point of the process simulation. These time points can be obtained from this method: `ProcessSimulationResult.get_time_points()`.

get_amount() → `List[float]`

Returns the amount of exhaust gas present at each time point.

This is the amount of gas accumulated since the beginning of the process.

Returns

The accumulated amount of gas at each time point [kg]

get_amount_of_components() → `Dict[str, List[float]]`

Returns the amount of each exhaust gas component present at each time point.

This is the amount of gas accumulated since the beginning of the process. This is different from the **current composition at each time point** obtained using `get_composition()`.

Returns

The accumulated amount of each gas component at each time point [kg]

get_composition(composition_type: `CompositionType = CompositionType.COMPONENT`, unit: `CompositionUnit = CompositionUnit.MASS_PERCENT`) → `Dict[str, List[float]]`

Returns the current composition of the exhaust gas zone at each time point. This is the composition **at each time point**. This is different from the **accumulated amount** obtained using `get_amount_of_components()`.

Parameters

- **composition_type** – The type of the composition, can be by gas component or by element, **default: by gas component**
- **unit** – The composition unit, **default: mass percent**

Returns

The current composition of the gas components at each time point

get_pressure() → `List[float]`

Returns the pressure of the exhaust gas zone at each time point.

Returns

The pressure [Pa]

get_stable_phases() → `Set[str]`

Returns the stable phases within the exhaust gas zone at each time point.

Returns

The stable phases

get_temperature() → `List[float]`

Returns the temperature of the exhaust gas at each time point.

Returns

The temperature at each time point [K]

class `tc_python.process_metallurgy.process.MassTransferCoefficients`

Bases: `object`

The mass transfer coefficients between a reaction zone and a bulk zone vs. time.

add(*mass_transfer_coefficient: float, time: float = 0.0*)

Adds the mass transfer coefficient valid beginning at a time point.

This value is valid until another value is defined for a later time point.

Parameters

- **mass_transfer_coefficient** – The mass transfer coefficient [m/s]
- **time** – The time-point where the mass transfer coefficient begins to be valid [s]

Returns

This `MassTransferCoefficients` object

class `tc_python.process_metallurgy.process.MetalBulkZone`(*density: float*)

Bases: `Zone`

A metallic bulk zone in a process simulation.

This is representing a large volume in the process, for example the steel melt. A zone is a volume in a process that has identical temperature and composition. It has well-defined boundaries to other zones.

The name of this zone is automatically defined and unique.

add_addition(*addition: AbstractSingleTimeAddition, time: float = 0.0*)

Adds a single-time addition at the specified time point to the zone. The addition will be dissolved immediately.

Parameters

- **addition** – A `SingleTimeAddition` or `SingleTimeGasAddition`
- **time** – The time point [s]

Returns

This `MetalBulkZone` object

add_continuous_addition(*addition: AbstractContinuousAddition, from_time: float = 0.0, to_time: float = nan*)

Adds a constant addition continuously during the specified time period to the zone. All added material will be dissolved immediately.

Parameters

- **addition** – A `ContinuousAddition` or `ContinuousGasAddition`
- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This `MetalBulkZone` object

add_power(*power: float, from_time: float = 0.0, to_time: float = nan*)

Adds a constant power during a specified time period to the zone (for example heating or cooling).

Parameters

- **power** – The power [W]

- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This *MetalBulkZone* object

disable_degassing()

Disables degassing for this zone, i.e. all gas formed at any time step will be staying in this zone.

Returns

This *MetalBulkZone* object

enable_degassing()

Enables degassing for this zone, i.e. any gas formed at any time step will be removed after that time step. This gas will be transferred into the *exhaust gas zone*. **This is the default.**

Returns

This *MetalBulkZone* object

get_density() → float

Returns the density of the zone

Returns

The density [kg/m**3]

get_elements() → Set[str]

Returns the elements present in the zone. The elements are determined by the additions.

Returns

The elements

get_id() → str

Returns the unique name / id of the zone.

Returns

The zone name / id

get_phase_group_to_transfer() → *PhaseGroup*

Returns the phase group that is transferred from the attached reaction zones back to this zone after each time step.

Returns

The phase group

is_degassing_enabled() → bool

Returns if degassing is enabled in the zone.

Returns

If degassing is enabled

class tc_python.process_metallurgy.process.**ProcessSimulationCalculation**(*calculation*)

Bases: object

A Process Metallurgy process simulation. Such calculations represent complete metallurgical processes with several zones and simulate their evolution over time.

calculate(*timeout_in_minutes: float = 0.0*) → *ProcessSimulationResult*

Runs the Process Metallurgy process simulation.

Parameters

timeout_in_minutes – The calculation will be aborted after that time, **default: no timeout**

Returns

A new *ProcessSimulationResult* object

set_end_time(*end_time*: float)

Sets the end time of a process.

Parameters

end_time – The end time point [s]

Returns

This *ProcessSimulationCalculation* object

set_initial_time_step(*initial_time_step*: float = 1.0)

Sets the initial time step used in the process simulation.

Note: All later time steps are automatically determined to limit the expected temperature change during that step, this is controlled by *set_max_allowed_temp_change_per_step()*.

Parameters

initial_time_step – The initial time step [s]

Returns

This *ProcessSimulationCalculation* object

set_max_allowed_temp_change_per_step(*max_allowed_temp_change*: float = 10.0)

The maximum allowed temperature change per time step. This is implicitly also limiting the composition change during a time step and required for numerical stability.

Parameters

max_allowed_temp_change – The maximum allowed temperature change [K]

Returns

This *ProcessSimulationCalculation* object

set_max_time_step(*max_time_step*: float = 180.0)

The maximum time step chosen by the automatic time step control.

Note: All time steps are automatically determined to limit the expected temperature change during that step, this is controlled by *set_max_allowed_temp_change_per_step()*.

Parameters

max_time_step – The maximum time step [s]

Returns

This *ProcessSimulationCalculation* object

set_min_time_step(*min_time_step*: float = 1.0)

The minimum time step chosen by the automatic time step control.

Note: All time steps are automatically determined to limit the expected temperature change during that step, this is controlled by *set_max_allowed_temp_change_per_step()*.

Parameters**min_time_step** – The minimum time step [s]**Returns**This *ProcessSimulationCalculation* object**set_pressure**(*pressure: float = 100000.0*)

Sets a constant pressure during the complete process.

Parameters**pressure** – The pressure [Pa]**Returns**This *ProcessSimulationCalculation* object**set_pressure_in_time_period**(*pressure_in_pa: float, from_time: float = 0.0, to_time: float = nan*)

Sets a constant pressure during a time period.

Default: 1.0e5 Pa.**Parameters**

- **pressure_in_pa** – The pressure [Pa]
- **from_time** – The start time [s]
- **to_time** – The end time [s]

ReturnsThis *ProcessSimulationCalculation* object**with_options**(*options: ProcessMetallurgyOptions*)

Sets the options for the process simulation.

Parameters**options** – The options**Returns**This *ProcessSimulationCalculation* object**with_reaction_zone**(*reaction_zone: ReactionZone*)

Sets the reaction zone of the process simulation. The bulk zones attached to this reaction zone are configured in the reaction zone object.

Note: In the present release, **only one** reaction zone is supported.

Parameters**reaction_zone** – The reaction zone object**Returns**This *ProcessSimulationCalculation* object**class** `tc_python.process_metallurgy.process.ProcessSimulationResult`(*result*)Bases: *AbstractResult*

The result of a Process Metallurgy process simulation.

get_activity_of_slag(*zone: Union[Zone, str]*, *component: str*, *reference: ActivityReference = ActivityReference.LIQUID*) → List[float]

Returns the activity of a component in the slag in a zone at each time point.

Parameters

- **zone** – The zone object or the zone name
- **component** – The component
- **reference** – The reference for the activity, can be liquid or solid slag, **default: liquid slag**

Returns

The activity of the component at each time point [-]

get_amount(*zone: Union[Zone, str]*) → List[float]

Returns the amount of a zone at each time point.

Parameters

zone – The zone object or the zone name

Returns

The amount at each time point [kg]

get_amount_of_elements() → Dict[str, List[float]]

Returns the total amount of each element in the simulation at each time point.

Returns

The total amount of the elements at each time point [kg]

get_amount_of_phase_groups(*zone: Union[Zone, str]*) → Dict[PhaseGroup, List[float]]

Returns the amount of each phase group (e.g., for example all liquid slag) in a zone at each time point.

Parameters

zone – The zone object or the zone name

Returns

The amount of the phase groups at each time point [kg]

get_amount_of_phases(*zone: Union[Zone, str]*) → Dict[str, List[float]]

Returns the amount of each phase in a zone at each time point.

Parameters

zone – The zone object or the zone name

Returns

The amount of the phases at each time point [kg]

get_components() → Set[str]

Returns all components defined in the simulation.

Returns

The components

get_composition(*zone: Union[Zone, str]*, *composition_unit: CompositionUnit = CompositionUnit.MASS_PERCENT*) → Dict[str, List[float]]

Returns the composition of a zone per element at each time point.

Parameters

- **zone** – The zone object or the zone name

- **composition_unit** – The composition unit, **default: mass percent**

Returns

The composition at each time point

get_composition_of_phase(*zone: Union[Zone, str]*, *phase: str*, *composition_unit: CompositionUnit = CompositionUnit.MASS_PERCENT*, *composition_type: CompositionType = CompositionType.COMPONENT*) → Dict[str, List[float]]

Returns the composition of a phase in a zone at each time point.

Parameters

- **zone** – The zone object or the zone name
- **phase** – The phase name
- **composition_unit** – The composition unit, **default: mass percent**
- **composition_type** – Defines if the composition is given by element (e.g., *75 wt-% Fe - 25 wt-% Cr*) or by component (e.g. *65 wt-% Al2O3 - 35 wt-% CaO*). In case of a metallic phase, the composition is given by element even if *component* is selected. **Default: by component.**

Returns

The composition at each time point

get_composition_of_phase_group(*zone: Union[Zone, str]*, *phase_group: PhaseGroup*, *composition_unit: CompositionUnit = CompositionUnit.MASS_PERCENT*, *composition_type: CompositionType = CompositionType.COMPONENT*) → Dict[str, List[float]]

Returns the composition of a phase group (e.g., all liquid slag) in a zone at each time point.

Parameters

- **zone** – The zone object or the zone name
- **phase_group** – The phase group
- **composition_unit** – The composition unit, **default: mass percent**
- **composition_type** – Defines if the composition is given by element (e.g., *75 wt-% Fe - 25 wt-% Cr*) or by component (e.g. *65 wt-% Al2O3 - 35 wt-% CaO*). In case of a metallic phase, the composition is given by element even if *component* is selected. **Default: by component.**

Returns

The composition at each time point

get_elements() → Set[str]

Returns all elements present in the simulation.

Returns

The elements

get_enthalpy() → List[float]

Returns the total enthalpy of the process at each time point.

Returns

The enthalpy at each time point [J]

`get_exhaust_gas()` → *ExhaustGasResult*

Returns the result for the exhaust gas zone.

This result object can be used to evaluate the exhaust gas zone at each time point.

Returns

The exhaust gas zone result object.

`get_formula_for_activity_of_slag(zone: Union[Zone, str], component: str, reference: ActivityReference = ActivityReference.LIQUID)` → List[str]

Returns the Thermo-Calc Console syntax formula used for calculating the activity of a component in the slag (e.g. *AC(AL2O3, IONIC_LIQ)*) in a zone at each time point. The actual activity can be obtained using `get_activity_of_slag()`.

Parameters

- **zone** – The zone object or the zone name
- **component** – The component
- **reference** – The reference for the activity, can be liquid or solid slag, **default: liquid slag**

Returns

The formula for calculating the activity at each time point

`get_formula_for_slag_property(zone: Union[Zone, str], slag_property: SlagProperty, slag_type: SlagType = SlagType.ALL)` → List[str]

Returns the Thermo-Calc Console syntax formula used for calculating a property of the slag (e.g. *B(CAO)/B(SIO2)*) in a zone at each time point. The actual slag property can be obtained using `get_slag_property()`.

Parameters

- **zone** – The zone object or the zone name
- **slag_property** – The slag property
- **slag_type** – The part of the slag for which the property will be calculated. Can be all slag, the liquid or the solid slag. **Default: all slag**

Returns

The formula for calculating the slag property at each time point

`get_fraction_of_phase_groups(zone: Union[Zone, str], unit: PhaseUnit = PhaseUnit.MASS_FRACTION)` → Dict[PhaseGroup, List[float]]

Returns the fractions of the phase groups (e.g., all liquid slag) in a zone at each time point.

Parameters

- **zone** – The zone object or the zone name
- **unit** – The unit of the fraction

Returns

The phase fractions at each time point

`get_fraction_of_phases(zone: Union[Zone, str], unit: PhaseUnit = PhaseUnit.MASS_FRACTION)` → Dict[str, List[float]]

Returns the fractions of all stable phases in a zone at each time point.

Parameters

- **zone** – The zone object or the zone name
- **unit** – The unit of the fraction

Returns

The phase fractions at each time point

get_gas_components() → Set[str]

Returns all components of the gas phase defined for the elements present in the simulation.

Returns

The components of the gas phase

get_num_of_performed_steps() → List[int]

Returns the accumulated number of performed time steps at each time point.

Note: The number of performed time steps can differ from the index of the time step in the result list because time steps might have been repeated with smaller step size during a process simulation.

Returns

The accumulated number of performed time steps

get_oxygen_partial_pressure(zone: Union[Zone, str]) → List[float]

Returns the partial pressure of oxygen in the zone at each time point.

Parameters

zone – The zone object or the zone name

Returns

The partial pressure [Pa]

get_pressure(zone: Union[Zone, str]) → List[float]

Returns the pressure in a zone at each time point.

Parameters

zone – The zone object or the zone name

Returns

The pressure at each time point [Pa]

get_slag_property(zone: Union[Zone, str], slag_property: SlagProperty, slag_type: SlagType = SlagType.ALL) → List[float]

Returns a property of the slag in a zone at each time point. These properties are mostly used to describe the property of a slag to pick up sulfur.

Parameters

- **zone** – The zone object or the zone name
- **slag_property** – The slag property
- **slag_type** – The part of the slag for which the property will be calculated. Can be all slag, the liquid or the solid slag. **Default: all slag**

Returns

The slag property at each time point [unit depending on the property]

get_stable_phases(*zone*: Union[Zone, str]) → Set[str]

Returns the stable phases in a zone.

Parameters

zone – The zone object or the zone name

Returns

The stable phases

get_stable_phases_in_phase_group(*zone*: Union[Zone, str], *phase_group*: PhaseGroup) → Set[str]

Returns the stable phases of a phase group (e.g., all solid slag) in a zone.

Parameters

- **zone** – The zone object or the zone name
- **phase_group** – The phase group

Returns

The stable phases of the phase group

get_temperature(*zone*: Union[Zone, str]) → List[float]

Returns the temperature of a zone at each time point.

Parameters

zone – The zone object or the zone name

Returns

The temperature at each time point [K]

get_time_points() → List[float]

Returns the time points of the process simulation. All result quantities are returned for exactly these time points.

Returns

The time points [s]

get_value_of(*zone*: Union[Zone, str], *classic_expression*: str) → List[float]

Returns a value for a thermodynamic quantity in a zone at each time point.

<p>Warning: It should normally not be required to use this method, use the appropriate method available in the API instead.</p>
--

Parameters

- **zone** – The zone object or the zone name
- **classic_expression** – The thermodynamic quantity to get the value of in Thermo-Calc Console Mode syntax (for example “NPM(FCC_A1)”)

Returns

The requested value at each time point

get_viscosity_dynamic_of_phase(*zone*: Union[Zone, str], *phase*: str) → List[float]

Returns the dynamic viscosity of a phase in a zone at each time point.

Parameters

- **zone** – The zone object or the zone name
- **phase** – The phase name

Returns

The dynamic viscosity at each time point [Pa*s]

`get_viscosity_kinematic_of_phase(zone: Union[Zone, str], phase: str) → List[float]`

Returns the kinematic viscosity of a phase in a zone at each time point.

Parameters

- **zone** – The zone object or the zone name
- **phase** – The phase name

Returns

The kinematic viscosity at each time point [m**2/s]

```
class tc_python.process_metallurgy.process.ReactionZone(area: float, left_zone: Zone,
                                                       mass_transfer_coefficient_left: Union[float,
                                                       MassTransferCoefficients], right_zone:
                                                       Zone, mass_transfer_coefficient_right:
                                                       Union[float, MassTransferCoefficients])
```

Bases: [Zone](#)

A reaction zone in a process simulation, this is representing the interface layer between two bulk zones that are in contact and can react with each other, for example the steel melt and the top slag. The size of the reaction zone is dynamic and determined by the mass transfer coefficient. A zone is a volume in a process that has identical temperature and composition. It has well-defined boundaries to other zones.

`add_addition(addition: AbstractSingleTimeAddition, time: float = 0.0)`

Adds a single-time addition at the specified time point to the zone. The addition will be dissolved immediately.

Parameters

- **addition** – A [SingleTimeAddition](#) or [SingleTimeGasAddition](#)
- **time** – The time point [s]

Returns

This [ReactionZone](#) object

`add_continuous_addition(addition: AbstractContinuousAddition, from_time: float = 0.0, to_time: float = nan)`

Adds a constant addition continuously during the specified time period to the zone. All added material will be dissolved immediately.

Parameters

- **addition** – A [ContinuousAddition](#) or [ContinuousGasAddition](#)
- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This [ReactionZone](#) object

`add_heat_transfer(heat_transfer_coefficient: float)`

Adds heat transfer through the reaction zone, i.e., between the two attached bulk zones.

Parameters

heat_transfer_coefficient – The heat transfer coefficient [W/(K*m**2)]

Returns

This *ReactionZone* object

add_power(*power*: float, *from_time*: float = 0.0, *to_time*: float = nan)

Adds a constant power during a specified time period to the zone (for example heating or cooling).

Parameters

- **power** – The power [W]
- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This *ReactionZone* object

add_transfer_of_phase_group(*transfer_of_phase_group*: *TransferOfPhaseGroup*)

Adds transfer of a certain phase group through the reaction zone during each time step, i.e. from one of the attached bulk zones to the other. This is for example used to model inclusion flotation from the steel melt to the slag.

Parameters

transfer_of_phase_group – The transfer of phase group configuration, can be time-dependent.

Returns

This *ReactionZone* object

disable_degassing()

Disables degassing for this zone, i.e. all gas formed at any time step will be staying in this zone.

Returns

This *ReactionZone* object

enable_degassing()

Enables degassing for this zone, i.e. any gas formed at any time step will be removed after that time step. This gas will be transferred into the *exhaust gas zone*. **This is the default.**

Returns

This *ReactionZone* object

get_elements() → Set[str]

Returns the elements present in the zone. The elements are determined by the additions.

Returns

The elements

get_id() → str

Returns the unique id of the zone. :return: The zone id

is_degassing_enabled() → bool

Returns if degassing is enabled in the zone.

Returns

If degassing is enabled

```
class tc_python.process_metallurgy.process.SingleTimeAddition(composition: Dict[str, float],  
                                                             amount: float, temperature: float =  
                                                             293.15, composition_unit:  
                                                             CompositionUnit = CompositionUnit.MASS_PERCENT, do_scale:  
                                                             bool = False)
```

Bases: *AbstractSingleTimeAddition*

An addition in a process simulation that is added at a distinct time point.

It is assumed that the addition is dissolved instantaneously.

Tip: By setting *do_scale=True*, the composition will be scaled to 100% / fraction of 1. This is useful if the composition provided is not summing to 100% / 1. An example could be a slag addition which is provided like this: *90 wt-% CaO - 5 wt-% Al2O3 - 4 wt-% SiO2*.

Parameters

- **composition** – The composition
- **amount** – The amount [kg]
- **temperature** – The initial addition temperature (**default: 20 °C**) [K]
- **composition_unit** – The composition unit
- **do_scale** – If the composition is scaled to 100% / fraction of 1

get_amount() → float

Returns the amount of this addition.

Returns

The amount [kg]

get_composition_unit() → *CompositionUnit*

Returns the composition unit used in this addition.

Returns

The composition unit

```
class tc_python.process_metallurgy.process.SingleTimeGasAddition(composition: Dict[str, float],
                                                                amount: float, temperature:
                                                                float = 293.15, amount_unit:
                                                                GasAmountUnit = GasAmountUnit.NORM_CUBIC_METER,
                                                                composition_unit:
                                                                GasCompositionUnit =
                                                                GasCompositionUnit.VOLUME_PERCENT,
                                                                do_scale: bool = False)
```

Bases: *AbstractSingleTimeAddition*

A gas addition in a process simulation that is added at a distinct time point.

It is assumed that the addition is dissolved instantaneously.

Tip: By setting *do_scale=True*, the composition will be scaled to 100% / fraction of 1. This is useful if the composition provided is not scaling to 100% / 1. An example could be a gas addition which is provided like this: *90 vol-% Ar - 10 vol-% O2*.

Parameters

- **composition** – The composition
- **amount** – The amount
- **temperature** – The initial addition temperature (**default: 20 °C**) [K]
- **amount_unit** – The amount unit
- **composition_unit** – The composition unit
- **do_scale** – If the composition is scaled to 100% / fraction of 1

get_amount() → float

Returns the amount of this addition.

Note: The amount unit can be obtained using `get_amount_unit()`.

Returns

The amount [in the amount unit]

get_amount_unit() → *GasAmountUnit*

Returns the amount unit used in this addition.

Returns

The amount unit

get_composition_unit() → *GasCompositionUnit*

Returns the composition unit used in this addition.

Returns

The composition unit

class `tc_python.process_metallurgy.process.SlagBulkZone`(*density: float*)

Bases: *Zone*

A slag bulk zone in a process simulation.

This is representing a large volume in the process, for example the top slag. A zone is a volume in a process that has identical temperature and composition. It has well-defined boundaries to other zones.

The name of this zone is automatically defined and unique.

add_addition(*addition: AbstractSingleTimeAddition*, *time: float = 0.0*)

Adds a single-time addition at the specified time point to the zone. The addition will be dissolved immediately.

Parameters

- **addition** – A *SingleTimeAddition* or *SingleTimeGasAddition*
- **time** – The time point [s]

Returns

This *SlagBulkZone* object

add_continuous_addition(*addition: AbstractContinuousAddition*, *from_time: float = 0.0*, *to_time: float = nan*)

Adds a constant addition continuously during the specified time period to the zone. All added material will be dissolved immediately.

Parameters

- **addition** – A *ContinuousAddition* or *ContinuousGasAddition*
- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This *SlagBulkZone* object

add_power(*power: float, from_time: float = 0.0, to_time: float = nan*)

Adds a constant power during a specified time period to the zone (for example heating or cooling).

Parameters

- **power** – The power [W]
- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This *SlagBulkZone* object

disable_degassing()

Disables degassing for this zone, i.e. all gas formed at any time step will be staying in this zone.

Returns

This *SlagBulkZone* object

enable_degassing()

Enables degassing for this zone, i.e. any gas formed at any time step will be removed after that time step. This gas will be transferred into the *exhaust gas zone*. **This is the default.**

Returns

This *SlagBulkZone* object

get_density() → float

Returns the density of the zone

Returns

The density [kg/m**3]

get_elements() → Set[str]

Returns the elements present in the zone. The elements are determined by the additions.

Returns

The elements

get_id() → str

Returns the unique id of the zone. :return: The zone id

get_phase_group_to_transfer() → *PhaseGroup*

Returns the phase group that is transferred from the attached reaction zones back to this zone after each time step.

Returns

The phase group

is_degassing_enabled() → bool

Returns if degassing is enabled in the zone.

Returns

If degassing is enabled

```
class tc_python.process_metallurgy.process.TransferOfPhaseGroup(phase_group_to_transfer:
                                                                PhaseGroup, source_zone:
                                                                Zone)
```

Bases: object

The transfer of a percentage of a certain phase group (e.g., solid slag) between zones during each time step. This is for example used to model inclusion flotation from the steel melt to the slag.

```
add(transfer_rate: float, time: float = 0)
```

Adds the transfer rate valid beginning at a time point.

This value is valid until another value is defined for a later time point.

Parameters

- **transfer_rate** – The transfer rate [% of phase group amount/s]
- **time** – The time point where the transfer of a phase group begins to be valid [s]

Returns

This *TransferOfPhaseGroup* object

```
get_phase_group_to_transfer() → PhaseGroup
```

Returns the phase group to be transferred

Returns

The phase group

```
get_transfer_source_zone_id() → str
```

The id of the source zone of the transfer

Returns

This source zone id

```
class tc_python.process_metallurgy.process.Zone
```

Bases: object

The base class of a zone in a process simulation. A zone is a volume in a process that has identical temperature and composition. It has well-defined boundaries to other zones.

```
add_addition(addition: AbstractSingleTimeAddition, time: float = 0.0)
```

Adds a single-time addition at the specified time point to the zone. The addition will be dissolved immediately.

Parameters

- **addition** – A *SingleTimeAddition* or *SingleTimeGasAddition*
- **time** – The time point [s]

Returns

This *Zone* object

```
add_continuous_addition(addition: AbstractContinuousAddition, from_time: float = 0.0, to_time: float =
nan)
```

Adds a constant addition continuously during the specified time period to the zone. All added material will be dissolved immediately.

Parameters

- **addition** – A *ContinuousAddition* or *ContinuousGasAddition*
- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This *Zone* object

add_power(*power: float, from_time: float = 0.0, to_time: float = nan*)

Adds a constant power during a specified time period to the zone (for example heating or cooling).

Parameters

- **power** – The power [W]
- **from_time** – The start time point [s]
- **to_time** – The end time point [s]

Returns

This *Zone* object

disable_degassing()

Disables degassing for this zone, i.e. all gas formed at any time step will be staying in this zone.

Returns

This *Zone* object

enable_degassing()

Enables degassing for this zone, i.e. any gas formed at any time step will be removed after that time step. This gas will be transferred into the *exhaust gas zone*. **This is the default.**

Returns

This *Zone* object

get_elements() → Set[str]

Returns the elements present in the zone. The elements are determined by the additions.

Returns

The elements

get_id() → str

Returns the unique id of the zone. :return: The zone id

is_degassing_enabled() → bool

Returns if degassing is enabled in the zone.

Returns

If degassing is enabled

6.1.10 Module “additive_manufacturing”

class tc_python.am.**AdditiveManufacturingCalculation**(*calculation*)

Bases: object

Abstract base class for an Additive Manufacturing calculation.

disable_fluid_flow_marangoni()

Disables the fluid flow modelling of the Marangoni effect.

Default: Enabled

Returns

This *AdditiveManufacturingCalculation* object

disable_separate_materials()

Disables separate material properties for powder and solid material.

Default: Enabled

Returns

This *AdditiveManufacturingCalculation* object

enable_fluid_flow_marangoni()

Enables the fluid flow modelling of the Marangoni effect.

Default: Enabled

Returns

This *AdditiveManufacturingCalculation* object

enable_separate_materials()

Enables separate material properties for powder and solid material.

Default: Enabled

Returns

This *AdditiveManufacturingCalculation* object

get_configuration_as_string() → str

Returns detailed information about the current state of the calculation object.

<p>Warning: The structure of the calculation objects is an implementation detail and might change between releases without notice. Therefore do not rely on the internal object structure.</p>
--

invalidate()

Invalidates the object and frees the disk space used by it. *This is only required if the disk space occupied by the object needs to be released during the calculation.* No data can be retrieved from the object afterward.

set_ambient_temperature(temperature: float = 296.15)

Sets the ambient temperature.

Default: 23 degree Celsius

Parameters

temperature – The ambient temperature [K]

Returns

This *AdditiveManufacturingCalculation* object

set_base_plate_temperature(temperature: float = 303.15)

Sets the baseplate temperature.

Default: 30 degree Celsius

Parameters

temperature – The baseplate temperature [K]

Returns

This *AdditiveManufacturingCalculation* object

set_gas_pressure(*pressure: float = 100000.0*)

Sets the gas pressure.

Default: 1.0e5 Pa

Parameters

pressure – The pressure [Pa]

Returns

This *AdditiveManufacturingCalculation* object

set_height(*height: float = 0.002*)

Sets the height of the simulation domain.

Default: 2.0e-3 m

Parameters

height – The height [m]

Returns

This *AdditiveManufacturingCalculation* object

set_layer_thickness(*layer_thickness: float = 4e-05*)

Sets the layer thickness.

Default: 40.0e-6 m

Parameters

layer_thickness – The layer thickness [m]

Returns

This *AdditiveManufacturingCalculation* object

set_powder_density(*powder_density: float = 80.0*)

Sets the powder density.

Default: 80.0%

Parameters

powder_density – The powder density [%]

Returns

This *AdditiveManufacturingCalculation* object

with_heat_source(*heat_source: HeatSource*)

Sets the heat source.

Parameters

heat_source – The heat source

Returns

This *AdditiveManufacturingCalculation* object

with_material_properties(*material_properties: MaterialProperties*)

Sets the material properties.

Tip: Material properties can be defined like this: `MaterialProperties.from_library("IN718")` or `MaterialProperties.from_scheil_result(scheil_result)`.

Parameters

material_properties – The material properties

Returns

This *AdditiveManufacturingCalculation* object

with_mesh(*mesh*: *Mesh*)

Sets the mesh.

Parameters

mesh – The mesh

Returns

This *AdditiveManufacturingCalculation* object

with_numerical_options(*numerical_options*: *NumericalOptions*)

Sets the numerical options.

Parameters

numerical_options – The numerical options

Returns

This *AdditiveManufacturingCalculation* object

with_top_boundary_conditions(*boundary_conditions*: *TopBoundaryConditions*)

Sets the boundary conditions.

Parameters

boundary_conditions – The boundary conditions

Returns

This *AdditiveManufacturingCalculation* object

class `tc_python.am.AdditiveManufacturingResult`(*result*)

Bases: *AbstractResult*

Base class for additive manufacturing results.

get_absorptivity_mesh()

Returns a mesh object containing the absorptivity data from this result. Returns NONE for this method if the result has no absorptivity data.

get_data_over_line(*name*: *str*, *point1*: *List[float]*, *point2*: *List[float]*, *n*: *int*) → *Tuple[List[float], List[float]]*

Obtains the data of property name over a line from point1 to point2 :param name: The name of property to obtain the data from :param point1: The first point of the line :param point2: The second point of the line :param n: The number of points to obtain :return: A tuple (distance to point 1 [m], data value)

get_effective_absorption() → *float*

:return Effective absorption under the heat source due to multiple reflections of laser rays

get_heat_affected_zone_depth() → *float*

Returns the depth of the heat affected zone.

Returns

The depth of the heat affected zone [m]

get_heat_affected_zone_length() → *float*

Returns the length of the heat affected zone.

Returns

The heat affected zone length [m]

get_heat_affected_zone_width() → float

Returns the width of the heat affected zone.

Returns

The width of the heat affected zone [m]

get_mass_fractions() → dict[str, float]

Returns the mass fractions

Returns

Mass fraction of material used for the simulation

get_meltpool_depth() → float

Returns the meltpool depth.

Returns

The meltpool depth [m]

get_meltpool_length() → float

Returns the meltpool length.

Returns

The meltpool length [m]

get_meltpool_width() → float

Returns the meltpool width.

Returns

The meltpool width [m]

get_mole_fractions() → dict[str, float]

Returns the mole fractions

Returns

Mole fraction of material used for the simulation

get_pyvista_mesh(*scalar*: `Scalar = Scalar.TEMPERATURE`, *material_type*: `MaterialType = MaterialType.SHOW_ALL`)

Returns a *pyvista* mesh object that can be added to a *pyvista* plotter.

More details about *pyvista* meshes can be found in their documentation: https://docs.pyvista.org/version/stable/api/plotting/_autosummary/pyvista.Plotter.add_mesh.html

Tip: This method is typically used to obtain additional meshes with other settings if the plot object has already been retrieved with `get_pyvista_plotter()`.

Parameters

- **scalar** – The quantity to be visualized in the plot
- **material_type** – The material type to be visualized in the plot

Returns

A `pyvista.DataSet` object

```

get_pyvista_plotter(scalar: Scalar = Scalar.TEMPERATURE, material_type: MaterialType =
    MaterialType.SHOW_ALL, camera: Dict[str, List[float]] = None, anti_aliasing: str =
    'msaa', multi_samples: int = 16, color_map: str = 'jet',
    enable_camera_orientation_widget: bool = False, render_lines_as_tubes: bool =
    True, background: str = 'LightSteelBlue', shape: bool = None, view_buttons: bool =
    True, update_plot_callback: Callable = None, use_gpu: UseGpuMode =
    UseGpuMode.AUTO)

```

Returns a *pyvista* plotter and a mesh object containing the data from this result. They can be used to create 3D-plots visualizing the results of the AM calculation. More details about the *pyvista* settings can be found in their documentation: https://docs.pyvista.org/version/stable/api/plotting/_autosummary/pyvista.Plotter.html

The most simple usage of this method is:

```

plotter, mesh = result.get_pyvista_plotter()
plotter.add_mesh(mesh)
plotter.show()

```

Parameters

- **scalar** – The quantity to be visualized in the plot
- **material_type** – The material type to be visualized in the plot, only available if *AdditiveManufacturingCalculation.enable_separate_materials()* has been used
- **camera** – Defining the camera position, view-up vector and focus point, the default is *DEFAULT_CAMERA*, for example: `{'position': [-2, -2, 1], 'viewup': [0, 0, 1], 'focal_point': [0.0, 0.0, 0.0]}`. More details can be found here: <https://docs.pyvista.org/version/stable/api/core/camera.html>
- **anti_aliasing** – The *pyvista* antialiasing setting, can be one of: “*msaa*” - Multi-Sample Anti-Aliasing, “*fxaa*” - Fast Approximate Anti-Aliasing or “*ssaa*” - Super-Sample Anti-Aliasing. More details can be found here: <https://docs.pyvista.org/version/stable/examples/02-plot/anti-aliasing.html>
- **multi_samples** – The number of samples used for antialiasing
- **color_map** – The *pyvista* colormap. Can be any colormap provided by Matplotlib and some other plotting libraries. More details can be found here: <https://docs.pyvista.org/version/stable/examples/02-plot/cmap.html>
- **enable_camera_orientation_widget** – Enables the *pyvista* camera orientation widget in the plotter
- **render_lines_as_tubes** – Controls if lines are rendered as tubes
- **background** – The *pyvista* background color, either a string, rgb list or hex color string. https://docs.pyvista.org/version/stable/api/plotting/_autosummary/pyvista.Plotter.background_color.html
- **shape** – The shape of the plot, i.e. how many subplots will be created - a tuple (y, x), for example (2, 2). They are accessed using *pyvista.Plotter.subplot*.
- **view_buttons** – If buttons for quick navigation between camera and x-, y-, or z-direction view should be added to the plot
- **update_plot_callback** – A plot update function that will be called every time the slider with simulation time is dragged in the plot windows, this can be used to dynamically ap-

ply changes to the plot, required syntax: `def update_plot(plotter: pv.Plotter, mesh: pv.DataSet)`

- **use_gpu** – USE_GPU_MODE Specifies whether to use GPU or CPU for rendering, with a default option for automatic mode detection.

Returns

Tuple containing the `pyvista.Plotter` and the `pyvista.DataSet` mesh object

get_result_file_path() → str

Returns the path to the main result file (for example a ParaView *.pvd file) on disk containing the complete result data set. Its directory contains also further result data that can be useful.

Tip: The Python API of ParaView can be used to extract any kind of data from the result in a programmatic way. See here for more details: <https://kitware.github.io/paraview-docs/latest/python/>

Returns

The path to the main result file

get_thermal_gradient_and_melting_rate() → List[List[float]]

Evaluate the thermal gradient and melting rate at the liquidus isotherm :return [[Thermal gradient], [melting rate], [x], [y], [z]]

get_thermal_gradient_and_solidification_rate() → List[List[float]]

Evaluate the thermal gradient and solidification rate at the liquidus isotherm :return [[Thermal gradient], [solidification rate], [x], [y], [z]]

static get_vtk_render_window(plotter)

Returns the VTK render window from a PyVista plotter, handling different PyVista versions.

has_absorption_distribution_on_keyhole() → bool

:return True if there is effective absorption on the keyhole

has_keyhole() → bool

Returns if the result contains a keyhole.

Returns

True if the result has a keyhole

class tc_python.am. Automatic

Bases: *FileSavingStrategy*

An automatic saving strategy.

get_type() → str

Returns the type of the file saving strategy.

Returns

The type

set_max_number_of_files_stored(max_number: int = 1000000)

Sets the maximum number of files that are stored.

Default: unlimited

Parameters

max_number – The maximum number of files that is stored

Returns

This *FileSavingStrategy* object

set_saving_interval_strategy(*saving_interval_strategy=AutomaticSavingIntervalStrategy.LINEAR*)

Sets the saving interval strategy.

Default: A linear saving interval strategy.

Parameters

saving_interval_strategy – The saving interval strategy

Returns

This *FileSavingStrategy* object

store_unlimited_number_of_files()

Sets the maximum number of files that are stored to unlimited.

Returns

This *FileSavingStrategy* object

class tc_python.am.**AutomaticSavingIntervalStrategy**(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

The strategy for choosing the time interval for saving files in *automatic* mode.

EXPONENTIALLY_INCREASING = 2

An exponentially increasing time interval

LINEAR = 1

A linear time interval

class tc_python.am.**BiDirectionalScanningStrategy**

Bases: *ScanningStrategy*

A bidirectional scanning strategy (flipping scanning direction of the heat source between alternate tracks).

get_type() → str

Returns the type of scanning strategy.

Returns

The type

set_angle(*angle: float = 0.0*)

Sets the rotation of the scanning direction between two consecutive layers.

Note: The scanning direction of the first layer is always aligned parallel to the x-axis.

Default: 0 degree

Parameters

angle – The angle [degree]

Returns

This *BiDirectionalScanningStrategy* object

set_hatch_spacing(*hatch_spacing: float = 0.0*)

Sets the horizontal separation between two consecutive tracks.

Default: 0 m

Parameters

hatch_spacing – The hatch spacing [m]

Returns

This *BiDirectionalScanningStrategy* object

set_lift_time(*lift_time: float = 0.0*)

Sets the lift time, i.e. the time between two tracks where the heat source is inactive.

Default: 0 s

Parameters

lift_time – The lift time [s]

Returns

This *BiDirectionalScanningStrategy* object

set_margin(*margin: float = 0.00125*)

Sets the margin.

This is the offset of the scanning path from the sides of the computational domain.

Default: 1.25e-3 [m]

Parameters

margin – The margin [m]

Returns

This *BiDirectionalScanningStrategy* object

set_number_of_layers(*number_of_layers: int = 1*)

Sets the number of layers.

Default: 1

Parameters

number_of_layers – The number of layers

Returns

This *BiDirectionalScanningStrategy* object

set_powder_fill_time(*powder_fill_time: float = 0.0*)

Sets the powder fill time.

Default: 0 s

Parameters

powder_fill_time – The powder fill time [s]

Returns

This *BiDirectionalScanningStrategy* object

class `tc_python.am.CalculatedCoreRingHeatSource`(*absorptivity_factor: float = 1.0, wave_length: float = 1064.0*)

Bases: *CoreRingHeatSource*

A Core-ring heat source with calculated absorptivity based on wavelength.

static `get_type()` → str

Returns the type of heat source.

Returns

The type

set_absorptivity_pre_factor(*pre_factor*: float = 1)

Parameters

pre_factor – The absorptivity prefactor value to set, default is 1.

Returns

This [CalculatedCoreRingHeatSource](#) object

set_wave_length(*wave_length*: float = 1064)

Parameters

wave_length – The wavelength to be set for the heat source, defaults to 1064 nm.

Returns

This [CalculatedCoreRingHeatSource](#) object

class `tc_python.am.CalculatedGaussianEBMHeatSource`(*absorptivity_factor*: float = 1.0,
electronBeamEnergy: float = 60.0)

Bases: [EBMBeamShapingHeatSource](#)

A Gaussian EBM heat source with calculated absorptivity (no wavelength).

static `get_type()` → str

Returns the type of heat source.

Returns

The type

set_absorptivity_pre_factor(*pre_factor*: float = 1)

Parameters

pre_factor – The absorptivity prefactor value to set, default is 1.

Returns

This [CalculatedGaussianEBMHeatSource](#) object

class `tc_python.am.CalculatedGaussianHeatSource`(*absorptivity_factor*: float = 1.0, *wave_length*: float =
1064.0)

Bases: [GaussianHeatSource](#)

A Gaussian heat source with calculated absorptivity based on wavelength.

static `get_type()` → str

Returns the type of heat source.

Returns

The type

set_absorptivity_pre_factor(*pre_factor*: float = 1)

Parameters

pre_factor – The absorptivity prefactor value to set, default is 1.

Returns

This [CalculatedGaussianHeatSource](#) object

set_wave_length(*wave_length*: float = 1064)

Parameters

wave_length – The wavelength to be set for the heat source, defaults to 1064 nm.

Returns

This *CalculatedGaussianHeatSource* object

class tc_python.am.**CalculatedTophatHeatSource**(*absorptivity_factor*: float = 1.0, *wave_length*: float = 1064.0)

Bases: *TophatHeatSource*

A Tophat heat source with calculated absorptivity based on wavelength.

static get_type() → str

Returns the type of heat source.

Returns

The type

set_absorptivity_pre_factor(*pre_factor*: float = 1)

Parameters

pre_factor – The absorptivity prefactor value to set, default is 1.

Returns

This *CalculatedTophatHeatSource* object

set_beam_radius(*beam_radius*: float = 0.00011)

Sets the beam radius.

Default: 110.0e-6 m

Parameters

beam_radius – The beam radius [m]

Returns

This heat source object

set_wave_length(*wave_length*: float = 1064)

Parameters

wave_length – The wavelength to be set for the heat source, defaults to 1064 nm.

Returns

This *CalculatedTophatHeatSource* object

class tc_python.am.**CalibratedConicalHeatSource**(*java_calibrated_heat_source*)

Bases: object

A calibrated conical heat source.

get_absorptivity() → float

Returns the absorptivity of the heat source.

Returns

The absorptivity [%]

get_hi() → float

Returns the Hi dimension of the heat source.

Returns

The Hi dimension [micrometer]

get_re() → float

Returns the Re dimension of the heat source.

Returns

The Re dimension [micrometer]

get_ri() → float

Returns the Ri dimension of the heat source.

Returns

The Ri dimension [micrometer]

get_type() → *HeatSourceType*

Returns the type of heat source.

Returns

The type

set_power(*power: float = 200.0*)

Sets the power of the heat source.

Default: 200 W

Parameters

power – The power [W]

Returns

This *CalibratedConicalHeatSource* object

set_scanning_speed(*beam_speed: float = 1.0*)

Sets the moving velocity of the heat source.

Default: 1000.0e-3 m/s

Parameters

beam_speed – The beam speed [m/s]

Returns

This *CalibratedConicalHeatSource* object

class tc_python.am.**CalibratedDoubleEllipsoidalHeatSource**(*java_calibrated_heat_source*)

Bases: object

A calibrated double-ellipsoidal heat source.

get_absorptivity() → float

Returns the absorptivity of the heat source.

Returns

The absorptivity [%]

get_af() → float

Returns the Af dimension of the heat source.

Returns

The Af dimension [micrometer]

get_ar() → float

Returns the Ar dimension of the heat source.

Returns

The Ar dimension [micrometer]

get_b() → float

Returns the B dimension of the heat source.

Returns

The B dimension [micrometer]

get_c() → float

Returns the C dimension of the heat source.

Returns

The C dimension [micrometer]

get_type() → *HeatSourceType*

Returns the type of heat source.

Returns

The type

set_power(*power: float = 200.0*)

Sets the power of the heat source.

Default: 200 W

Parameters

power – The power [W]

Returns

This *CalibratedConicalHeatSource* object

set_scanning_speed(*beam_speed: float = 1.0*)

Sets the moving velocity of the heat source.

Default: 1000.0e-3 m/s

Parameters

beam_speed – The beam speed [m/s]

Returns

This *CalibratedDoubleEllipsoidalHeatSource* object

class tc_python.am.**CalibratedGaussianHeatSource**(*java_calibrated_heat_source*)

Bases: object

A calibrated Gaussian heat source.

get_absorptivity() → float

Returns the absorptivity of the heat source.

Returns

The absorptivity [%]

get_absorptivity_prefactor() → float

Returns the absorptivity prefactor value of the calibrated heat source.

Returns

The absorptivity [%]

get_beam_radius() → float

Returns the beam radius of the heat source.

Returns

The beam radius [micrometer]

get_type() → *HeatSourceType*

Returns the type of heat source.

Returns

The type

set_power(*power: float = 200.0*)

Sets the power of the heat source.

Default: 200 W

Parameters

power – The power [W]

Returns

This *CalibratedGaussianHeatSource* object

set_scanning_speed(*beam_speed: float = 1.0*)

Sets the moving velocity of the heat source.

Default: 1000.0e-3 m/s

Parameters

beam_speed – The beam speed [m/s]

Returns

This *CalibratedGaussianHeatSource* object

class `tc_python.am.CalibratedHeatSource`

Bases: *HeatSource*

A calibrated heat source.

abstract set_power(*power: float = 200.0*)

Sets the power of the heat source.

Default: 200 W

Parameters

power – The power [W]

Returns

This *CalibratedHeatSource* object

abstract set_scanning_speed(*beam_speed: float = 1.0*)

Sets the moving velocity of the heat source.

Default: 1000.0e-3 m/s

Parameters

beam_speed – The beam speed [m/s]

Returns

This *CalibratedHeatSource* object

class `tc_python.am.CoarseMesh`

Bases: *Mesh*

An initially coarse mesh.

Note: It is adaptive and will be automatically refined as required.

class `tc_python.am.ConicalHeatSource`

Bases: `object`

A conical heat source.

get_type() → `str`

Returns the type of heat source.

Returns

The type

set_absorptivity(*absorptivity: float = 60.0*)

Sets the absorptivity.

Default: 60%

Parameters

absorptivity – The absorptivity [%]

Returns

This `ConicalHeatSource` object

set_hi(*hi_dim: float = 0.0001*)

Sets the parameter Hi that defines the dimensions of the heat source.

Tip: See Thermo-Calc Online Help for details about this heat source model.

Default: 100.0e-6 m

Parameters

hi_dim – The Hi parameter [m]

Returns

This `ConicalHeatSource` object

set_power(*power: float = 200.0*)

Sets the power of the heat source.

Default: 200 W

Parameters

power – The power [W]

Returns

This `ConicalHeatSource` object

set_re(*re_dim: float = 0.0001*)

Sets the parameter Re that defines the dimensions of the heat source.

Tip: See Thermo-Calc Online Help for details about this heat source model.

Default: 100.0e-6 m

Parameters

re_dim – The Re parameter [m]

Returns

This `ConicalHeatSource` object

set_ri(*ri_dim: float = 6e-05*)

Sets the parameter Ri that defines the dimensions of the heat source.

Tip: See Thermo-Calc Online Help for details about this heat source model.

Default: 60.0e-6 m

Parameters

ri_dim – The Ri parameter [m]

Returns

This *ConicalHeatSource* object

set_scanning_speed(*beam_speed: float = 1.0*)

Sets the moving velocity of the heat source.

Default: 1000.0e-3 m/s

Parameters

beam_speed – The beam speed [m/s]

Returns

This *ConicalHeatSource* object

class `tc_python.am.CoreRingHeatSource`(*absorptivity: float = 60.0*)

Bases: *GaussianHeatSource*

A Core-ring heat source (derived from Gaussian base).

get_type() → str

Returns the type of heat source.

Returns

The type

set_absorptivity(*absorptivity: float = 60.0*)

Sets the absorptivity as a constant.

Default: 60%

Parameters

absorptivity – The absorptivity [%]

Returns

This *CoreRingHeatSource* object

set_beam_radius_core(*beam_radius_core: float = 5e-05*)

Sets the beam radius-Core.

Default: 50.0e-6 m

Parameters

beam_radius_core – The beam radius of the core beam [m]

Returns

This *CoreRingHeatSource* object

set_beam_radius_ring(*beam_radius_ring: float = 3.3e-05*)

Sets the beam radius-Ring.

Default: 33.0e-6 m

Note: `set_beam_radius_ring()` cannot be used with `set_core_ring_index()`.

Parameters

beam_radius_ring – The beam radius of the ring beam [m]

Returns

This `CoreRingHeatSource` object

set_core_ring_index(*core_ring_index*: `CoreRingIndex` = `CoreRingIndex.INDEX_0`)

Sets the *Core-Ring Index*. *Beam radius-Ring*, *Ring radius* and *Percentage of power in ring* are then set to a value based on the selected Index and Beam radius-Core.

Default: `CoreRingIndex.INDEX_0`

Note: `set_core_ring_index()` cannot be used with `set_beam_radius_ring()`, `set_ring_radius()` or `set_ring_power_percent()`.

Parameters

core_ring_index – The index (INDEX_0 - INDEX_6) of the Core-Ring laser system

Returns

This `CoreRingHeatSource` object

set_power(*power*: *float* = 200.0)

Sets the power of the heat source.

Default: 200 W

Parameters

power – The power [W]

Returns

This `CoreRingHeatSource` object

set_ring_power_percent(*ring_power_percent*: *float* = 7.0)

Sets the percentage of the power of the heat source in the ring beam

Default: 7.0 %

Note: `set_ring_power_percent()` cannot be used with `set_core_ring_index`.

Parameters

ring_power_percent – The percentage of power in the ring beam [%]

Returns

This `CoreRingHeatSource` object

set_ring_radius(*ring_radius*: *float* = 9.858e-05)

Sets the ring radius.

Default: 98.58e-6 m

Note: `set_ring_radius()` cannot be used with `set_core_ring_index()`.

Parameters

ring_radius – The radius of the ring beam [m]

Returns

This `CoreRingHeatSource` object

set_scanning_speed(*beam_speed: float = 1.0*)

Sets the moving velocity of the heat source.

Default: 1000.0e-3 m/s

Parameters

beam_speed – The beam speed [m/s]

Returns

This `CoreRingHeatSource` object

class `tc_python.am.CoreRingIndex`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: `Enum`

Index number of the Core-ring heat source. The selected Index sets a pre-defined value of *Percentage of power in ring*. INDEX_0 = 7%, INDEX_1 = 25%, INDEX_2 = 35%, INDEX_3 = 50%, INDEX_4 = 70%, INDEX_5 = 80%, INDEX_6 = 90%

INDEX_0 = 0

Percentage of power in ring = 7%

INDEX_1 = 1

Percentage of power in ring = 25%

INDEX_2 = 2

Percentage of power in ring = 35%

INDEX_3 = 3

Percentage of power in ring = 50%

INDEX_4 = 4

Percentage of power in ring = 70%

INDEX_5 = 5

Percentage of power in ring = 80%

INDEX_6 = 6

Percentage of power in ring = 90%

class `tc_python.am.CustomMesh`(*minimum_element_size: float = 1e-05, maximum_element_size: float = 0.0001*)

Bases: `Mesh`

An initial mesh with explicitly defined dimensions.

Note: It is adaptive and will be automatically refined as required.

Parameters

- **minimum_element_size** – The minimum element size [m]
- **maximum_element_size** – The maximum element size [m]

```
tc_python.am.DEFAULT_CAMERA = {'position': [-2, -2, 1], 'viewup': [0, 0, 1]}
```

The default *pyvista* camera view.

```
class tc_python.am.DoubleEllipsoidalHeatSource
```

Bases: object

A double ellipsoidal heat source.

```
get_type() → str
```

Returns the type of heat source.

Returns

The type

```
set_absorptivity(absorptivity: float = 60.0)
```

Sets the absorptivity.

Default: 60%

Parameters

absorptivity – The absorptivity [%]

Returns

This *DoubleEllipsoidalHeatSource* object

```
set_af(af: float = 7e-05)
```

Sets the parameter Af that defines the dimensions of the heat source.

Tip: See Thermo-Calc Online Help for details about this heat source model.

Default: 70.0e-6 m

Parameters

af – The Af parameter [m]

Returns

This *DoubleEllipsoidalHeatSource* object

```
set_ar(ar: float = 70.0)
```

Sets the parameter Ar that defines the dimensions of the heat source.

Tip: See Thermo-Calc Online Help for details about this heat source model.

Default: 70.0e-6 m

Parameters

ar – The Ar parameter [m]

Returns

This *DoubleEllipsoidalHeatSource* object

set_b(*b*: float = 8.5e-05)

Sets the parameter B that defines the dimensions of the heat source.

Tip: See Thermo-Calc Online Help for details about this heat source model.

Default: 85.0e-6 m

Parameters

b – The B parameter [m]

Returns

This *DoubleEllipsoidalHeatSource* object

set_c(*c*: float = 0.0002)

Sets the parameter C that defines the dimensions of the heat source.

Tip: See Thermo-Calc Online Help for details about this heat source model.

Default: 200.0e-6 m

Parameters

c – The C parameter [m]

Returns

This *DoubleEllipsoidalHeatSource* object

set_power(*power*: float = 200.0)

Sets the power of the heat source.

Default: 200 W

Parameters

power – The power [W]

Returns

This *DoubleEllipsoidalHeatSource* object

set_scanning_speed(*beam_speed*: float = 1.0)

Sets the moving velocity of the heat source.

Default: 1000.0e-3 m/s

Parameters

beam_speed – The beam speed [m/s]

Returns

This *DoubleEllipsoidalHeatSource* object

class tc_python.am.EBMBeamShapingHeatSource(*absorptivity*: float = 60.0)

Bases: *GaussianHeatSource*

Base class for Electron Beam Melting (EBM) beam shaping heat sources. EBM heat sources do NOT support wavelength or Rayleigh length parameters.

get_type() → str

Returns the type of heat source.

Returns

The type

set_beam_radius(*beam_radius*: float = 0.0002)

Sets the beam radius.

Default: 200.0e-6 m

Parameters

beam_radius – The beam radius [m]

Returns

This heat source object

set_power(*power*: float = 200.0)

Sets the power of the heat source.

Default: 200 W

Parameters

power – The power [W]

Returns

This heat source object

set_scanning_speed(*beam_speed*: float = 1.0)

Sets the moving velocity of the heat source.

Default: 1000.0e-3 m/s

Parameters

beam_speed – The beam speed [m/s]

Returns

This heat source object

class tc_python.am.EvaporationFromSteadyStateResult(*result*)

Bases: *AdditiveManufacturingResult*

A result for evaporation calculations (also with steady-state heat source).

get_2d_mass_fraction_field_and_geometry()

Returns the 2D mass-fraction field and geometry.

Returns

(data, geometry) where data is a 2D mass-fraction field and geometry contains simple plotting info.

Return type

Tuple[dict[str, 2D array], dict]

get_2d_mole_fraction_field_and_geometry()

Returns a 2D mole-fraction field and geometry contains simple plotting info.

Returns

(data, geometry) where data is a 2D mole-fraction field and geometry contains simple plotting info.

Return type

Tuple[dict[str, 2D array], dict]

get_composition_file_path() → str

Returns the path to the composition result file

Returns

The path to the composition result file

get_gas_element_flux_vs_temperature() → dict[str, tuple[list[float], list[float]]]

Returns gas element flux versus temperature

Returns

Mapping from the element name to its gas element flux versus temperature. For each element, the tuple contains ([temperatures], [flux of element (mol/(m²*s))]).

get_gas_mass_fraction_history() → dict[str, list[float]]

Returns gas composition history across tracks, as mass fractions

Returns

Gas composition history across tracks, as mass fractions, where each key is an element name and each value is a list of that element's composition values at each track.

get_gas_mole_fraction_history() → dict[str, list[float]]

Returns gas composition history across tracks, as mole fractions

Returns

Gas composition history across tracks, as mole fractions, where each key is an element name and each value is a list of that element's composition values at each track.

get_gas_mole_fraction_profiles_vs_temperature() → dict[str, tuple[list[float], list[float]]]

Returns gas composition profile versus temperature

Returns

Mapping from the element name to its gas composition profile versus temperature. For each element, the tuple contains ([temperatures], [mole-fraction values]).

get_total_lack_of_fusion_porosity() → float

Returns Total lack-of-fusion porosity in the printed geometry

Returns

Total lack-of-fusion porosity in the printed geometry, expressed as a percentage. The calculation excludes the bottom and side regions of the geometry. Specifically, half of the melt-pool width is removed from both the left and right sides, and $\max(0., \text{melt_pool_height} - \text{layer_thickness})$ is removed from the bottom.

get_track_mass_fraction_history() → dict[str, list[float]]

Returns composition history across tracks in mass fraction

Returns

Composition history across tracks, as mass fractions, where each key is an element name and each value is a list of that element's composition values at each track.

get_track_mole_fraction_history() → dict[str, list[float]]

Returns composition history across tracks in mole fraction

Returns

Composition history across tracks, as mole fractions, where each key is an element name and each value is a list of that element's composition values at each track.

get_widest_melt_pool_contour() → list[list[float]]

Returns the profile of the widest part of the melt pool.

Returns

Ordered list of 3D points defining the profile of the widest part of the melt pool. Each inner list contains the point coordinates in the form [x, y, z].

```
class tc_python.am.EvaporationWithSteadyStateCalculation(evaporation_with_ss_calculation,
                                                         ss_calculation)
```

Bases: *AdditiveManufacturingCalculation*

Runs evaporation “with steady-state” by composing two calculations:

- 1) a steady-state calculation producing a *SteadyStateResult*
- 2) an evaporation-from-steady-state calculation leveraging that steady-state result

This mirrors the pattern used by *TransientWithSteadyStateCalculation*, but the main calculation is evaporation (not transient).

```
calculate(timeout_in_minutes: float = 0.0) → EvaporationFromSteadyStateResult
```

Runs steady-state first, injects its result into the evaporation calculation, then runs evaporation.

Parameters

timeout_in_minutes – Timeout forwarded to both calculations.

Returns

: *EvaporationFromSteadyStateResult*

```
disable_fluid_flow_marangoni()
```

Disables the fluid flow modelling of the Marangoni effect.

Default: Enabled

Returns

This *EvaporationFromSteadyStateResult* object

```
disable_separate_materials()
```

Disables separate material properties for powder and solid material.

Default: Disabled

Returns

This *EvaporationFromSteadyStateResult* object

```
enable_fluid_flow_marangoni()
```

Enables the fluid flow modelling of the Marangoni effect.

Default: Enabled

Returns

This *EvaporationFromSteadyStateResult* object

```
enable_separate_materials()
```

Enables separate material properties for powder and solid material.

Default: Disabled

Returns

This *EvaporationFromSteadyStateResult* object

```
get_scanning_path()
```

Returns the calculation’s scanning pattern object

Returns

The calculation’s scanning pattern object

```
get_steady_state_result() → SteadyStateResult
```

Returns the last steady-state result produced by *calculate()* (or None if not run yet).

has_matching_previous_result() → bool

Returns True only if BOTH:

- steady-state has a matching previous result
- evaporation (using that steady-state result) has a matching previous result

invalidate()

Invalidates both calculations.

set_ambient_temperature(*temperature: float = 296.15*)

Sets the ambient temperature.

Default: 23 degree Celsius

Parameters

temperature – The ambient temperature [K]

Returns

This *EvaporationFromSteadyStateResult* object

set_base_plate_temperature(*temperature: float = 303.15*)

Sets the baseplate temperature.

Default: 30 degree Celsius

Parameters

temperature – The baseplate temperature [K]

Returns

This *EvaporationFromSteadyStateResult* object

set_gas_pressure(*pressure: float = 100000.0*)

Sets the gas pressure.

Default: 1.0e5 Pa

Parameters

pressure – The pressure [Pa]

Returns

This *EvaporationFromSteadyStateResult* object

set_height(*height: float = 0.002*)

Sets the height of the simulation domain.

Default: 2.0e-3 m

Parameters

height – The height [m]

Returns

This *EvaporationFromSteadyStateResult* object

set_layer_thickness(*layer_thickness: float = 4e-05*)

Sets the layer thickness.

Default: 40.0e-6 m

Parameters

layer_thickness – The layer thickness [m]

Returns

This *EvaporationFromSteadyStateResult* object

set_length(*length: float = 0.005*)

Sets the length of the simulation domain.

Default: 5.0e-3 m :param length: The length [m] :return: This *EvaporationFromSteadyStateResult* object

set_powder_density(*powder_density: float = 80.0*)

Sets the powder density.

Default: 80.0%

Parameters

powder_density – The powder density [%]

Returns

This *EvaporationFromSteadyStateResult* object

set_width(*width: float = 0.004*)

Sets the width of the simulation domain.

Default: 4.0e-3 m

Parameters

width – The width [m]

Returns

This *EvaporationFromSteadyStateResult* object

with_heat_source(*heat_source: HeatSource*)

Sets the heat source.

Parameters

heat_source – The heat source

Returns

This *EvaporationFromSteadyStateResult* object

with_material_properties(*material_properties: MaterialProperties*)

Sets the material properties.

Tip: Material properties can be defined like this: `MaterialProperties.from_library("IN718")` or `MaterialProperties.from_scheil_result(scheil_result)`.

Parameters

material_properties – The material properties

Returns

This *EvaporationFromSteadyStateResult* object

with_mesh(*mesh: Mesh*)

Sets the mesh.

Parameters

mesh – The mesh

Returns

This *EvaporationFromSteadyStateResult* object

with_numerical_options(*numerical_options*: NumericalOptions)

Sets the numerical options.

Parameters

numerical_options – The numerical options

Returns

This *EvaporationFromSteadyStateResult* object

with_scanning_strategy(*scanning_strategy*: ScanningStrategy)

Sets the scanning strategy of the heat source, i.e. beam.

Parameters

scanning_strategy – The scanning strategy

Returns

This *TransientCalculation* object

with_top_boundary_conditions(*boundary_conditions*: TopBoundaryConditions)

Sets the boundary conditions.

Parameters

boundary_conditions – The boundary conditions

Returns

This *EvaporationFromSteadyStateResult* object

class tc_python.am.**EveryNthTimeStep**

Bases: *FileSavingStrategy*

Saving at every n-th time step.

get_type() → str

Returns the type of the file saving strategy.

Returns

The type

set_n(*n*: int = 1)

Sets at which n-th time step files are saved.

Default: 1

Parameters

n – The n-th time step where files are saved

Returns

This *FileSavingStrategy* object

class tc_python.am.**EveryTimeInterval**

Bases: *FileSavingStrategy*

Saving after regular time intervals.

get_type() → str

Returns the type of the file saving strategy.

Returns

The type

set_time_interval(*time_interval: float = 0.01*)

Sets the time interval at which files are saved.

Default: 0.01 s

Parameters

time_interval – The time interval [s]

Returns

This *FileSavingStrategy* object

class tc_python.am.**FileSavingStrategy**

Bases: object

The strategy for how result files are saved on disk. Both the number and time point of saving can be controlled.

classmethod **automatic**()

An automatic saving strategy. **This is the default.**

classmethod **every_n_th_time_step**()

Saving at every n-th time step.

classmethod **every_time_interval**()

Saving after regular time intervals.

class tc_python.am.**FineMesh**

Bases: *Mesh*

An initially fine mesh.

Note: It is adaptive and will be automatically refined as required.

class tc_python.am.**GaussianHeatSource**(*absorptivity: float = 60.0*)

Bases: object

Base class for Gaussian heat sources with keyhole model support. Gaussian heat sources are laser-based and support wavelength and Rayleigh length parameters.

disable_keyhole_model()

Disables using a keyhole model in the simulation.

Returns

This *GaussianHeatSource* object

get_type() → str

Returns the type of heat source.

Returns

The type

set_absorptivity(*absorptivity: float = 60.0*)

Sets the absorptivity as a constant.

Default: 60%

Parameters

absorptivity – The absorptivity [%]

Returns

This *GaussianHeatSource* object

set_beam_radius(*beam_radius*: float = 4e-05)

Sets the beam radius.

Default: 40.0e-6 m

Parameters

beam_radius – The beam radius [m]

Returns

This *GaussianHeatSource* object

set_power(*power*: float = 200.0)

Sets the power of the heat source.

Default: 200 W

Parameters

power – The power [W]

Returns

This *GaussianHeatSource* object

set_scanning_speed(*beam_speed*: float = 1.0)

Sets the moving velocity of the heat source.

Default: 1000.0e-3 m/s

Parameters

beam_speed – The beam speed [m/s]

Returns

This *GaussianHeatSource* object

with_keyhole_model(*config*: KeyholeModel)

Sets the keyhole model applied in the simulation.

Default: None

Parameters

config – The keyhole model

Returns

This *GaussianHeatSource* object

class tc_python.am.HeatSource

Bases: object

The heat source.

The heat source model has either a *Gaussian*, *Core-ring*, *Tophat*, *double ellipsoidal* or *conical* distribution.

Default: A Gaussian heat source.

classmethod conical()

A conical heat source.

The default is a Gaussian heat source.

Returns

A new *ConicalHeatSource* object

classmethod `core_ring_with_calculated_absorptivity`(*absorptivity_factor*: float = 1.0,
wave_length: float = 1064.0)

A core_ring heat source with calculated absorptivity.

Parameters

- **absorptivity_factor** – A factor that adjusts the absorptivity of the heat source. Default is 1.0.
- **wave_length** – The wavelength is used for calculating absorptivity. Default is 1064.0 nm.

Returns

A new *CalculatedCoreRingHeatSource* object

classmethod `core_ring_with_constant_absorptivity`(*absorptivity*: float = 60.0)

A core_ring heat source with constant absorptivity.

Parameters

absorptivity – A constant value for absorptivity. Default is 60.0 %.

Returns

A new *CoreRngHeatSource* object

classmethod `core_ring_with_user_defined_function_absorptivity`(*function*: str = '60')

A core_ring heat source with user defined function for absorptivity.

Parameters

function – The user defined function string for absorptivity, which can be constant, or a function of temperature (T), e.g. $-1.6e-7*T*T+2.5e-3*T+31$.

Returns

A new *UserDefinedCoreRingHeatSource* object

classmethod `double_ellipsoidal`()

A double ellipsoidal heat source.

The default is a Gaussian heat source.

Returns

A new *DoubleEllipsoidalHeatSource* object

classmethod `electron_beam_with_calculated_absorptivity`(*absorptivity_factor*: float = 1.0,
electron_beam_energy: float = 60.0)

An electron beam heat source with calculated absorptivity.

Parameters

- **absorptivity_factor** – A factor that adjusts the absorptivity of the heat source. Default is 1.0.
- **electron_beam_energy** – The energy of the electron beam in keV. Default is 60 keV.

Returns

A new *CalculatedGaussianEBMHeatSource* object

classmethod `electron_beam_with_constant_absorptivity`(*absorptivity*: float = 75.0)

An electron beam heat source with constant absorptivity.

Parameters

absorptivity – A constant value for absorptivity. Default is 75.0 %.

Returns

A new *UserDefinedGaussianEBMHeatSource* object

classmethod `from_library(heat_source_name: str, power: float = 200.0, beam_speed: float = 1.0)`

Read a heat source given its name.

Tip: The available heat sources can be obtained using *HeatSource.get_available_calibrated_heat_source_names()*. Their types are then available with the method *get_type()* for each heat source.

Parameters

- **heat_source_name** – The name of the heat source to read
- **power** – The beam power, **default: 200 W** [W]
- **beam_speed** – The beam speed, **default: 1000e-3 m/s** [m/s]

Returns

A new *CalibratedHeatSource* object

classmethod `gaussian_with_calculated_absorptivity(absorptivity_factor: float = 1.0, wave_length: float = 1064.0)`

A gaussian heat source with calculated absorptivity.

Parameters

- **absorptivity_factor** – A factor that adjusts the absorptivity of the heat source. Default is 1.0.
- **wave_length** – The wavelength is used for calculating absorptivity. Default is 1064.0 nm.

Returns

A new *CalculatedGaussianHeatSource* object

classmethod `gaussian_with_constant_absorptivity(absorptivity: float = 60.0)`

A gaussian heat source with constant absorptivity.

Parameters

absorptivity – A constant value for absorptivity. Default is 60.0 %.

Returns

A new *GaussianHeatSource* object

classmethod `gaussian_with_user_defined_function_absorptivity(function: str = '60')`

A gaussian heat source with user defined function for absorptivity.

Parameters

function – The user defined function string for absorptivity, which can be constant, or a function of temperature (T), e.g. $-1.6e-7*T*T+2.5e-3*T+31$.

Returns

A new *UserDefinedGaussianHeatSource* object

classmethod `get_available_calibrated_heat_source_names()` → List[str]

Retrieves a list of available heat source names.

Tip: The heat sources can then be read using `HeatSource.from_library()`.

Returns

A list of strings representing the names of available heat sources

classmethod `tophat_with_calculated_absorptivity(absorptivity_factor: float = 1.0, wave_length: float = 1064.0)`

A tophat heat source with calculated absorptivity.

Parameters

- **absorptivity_factor** – A factor that adjusts the absorptivity of the heat source. Default is 1.0.
- **wave_length** – The wavelength is used for calculating absorptivity. Default is 1064.0 nm.

Returns

A new `CalculatedCoreRingHeatSource` object

classmethod `tophat_with_constant_absorptivity(absorptivity: float = 60.0)`

A tophat heat source with constant absorptivity.

Parameters

absorptivity – A constant value for absorptivity. Default is 60.0 %.

Returns

A new `TophatHeatSource` object

classmethod `tophat_with_user_defined_function_absorptivity(function: str = '60')`

A tophat heat source with user defined function for absorptivity.

Parameters

function – The user defined function string for absorptivity, which can be constant, or a function of temperature (T), e.g. $-1.6e-7*T*T+2.5e-3*T+31$.

Returns

A new `UserDefinedTophatHeatSource` object

class `tc_python.am.HeatSourceType(value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None)`

Bases: Enum

CONICAL = 2

DOUBLE_ELLIPSOIDAL = 1

GAUSSIAN = 0

class `tc_python.am.KeyholeModel`

Bases: object

A model for an “analytic” keyhole in the AM calculation.

set_beam_quality(*beam_quality*: float = 1.0)

Sets the Beam quality factor M2.

Default: 1.0

Parameters

beam_quality – The Beam quality factor M2 []

Returns

This *KeyholeModel* object

class tc_python.am.**LibraryMaterialProperties**(*library_name*: str)

Bases: *MaterialProperties*

Material properties previously saved on disk using the specified library name.

class tc_python.am.**MaterialProperties**

Bases: object

The material properties used in the AM calculation, can be either from a Scheil calculation or from a previously stored library.

delete_library()

Deletes the material library from disk.

classmethod **from_library**(*library_name*: str)

Uses material properties previously saved on disk using a library name.

Parameters

library_name – The library name

Returns

A new *LibraryMaterialProperties* object

classmethod **from_scheil_result**(*result*: *ScheilCalculationResult*, *interface_scattering_constant*: float = 4e-08)

Creates material properties from the result of a Scheil calculation.

Parameters

- **result** – The Scheil result to create material properties from
- **interface_scattering_constant** – Greater than zero to use the interface scattering

Returns

A new *ScheilMaterialProperties* object

classmethod **get_all_library_names**() → List[str]

Returns a list with the names of all material libraries available on disk.

Returns

A list with the names of all material libraries

get_average_material_property_in_range(*material_property_enum*: *MaterialProperty*, *from_zone*: *Zone*, *to_zone*: *Zone*) → float

Returns average values for the specified material property in the specified zone interval.

Parameters

- **material_property_enum** – The material property
- **from_zone** – The lower zone boundary

- **to_zone** – The upper zone boundary

Returns

The average value for the specified material property in the specified zone interval

get_database() → str

Returns the database name

Returns

The database used for material properties calculations.

get_dependent_element() → str

Returns the dependent element

Returns

The dependent element used for material properties calculations.

get_elements() → list[str]

Returns the elements in the composition

Returns

The elements in the composition.

get_evaporation_temperature() → float

Returns the evaporation temperature for the material.

Returns

The evaporation temperature [K]

get_gas_pressure() → float

Returns the gas pressure for the material.

Returns

The gas pressure [Pa]

get_interface_scattering_constant() → float

Returns the interface scattering constant

Returns

The interface scattering constant used for material properties calculations.

get_liquidus_temperature() → float

Returns the liquidus temperature for the material.

Returns

The liquidus temperature [K]

get_mass_fractions() → dict[str, float]

Returns the mass fractions

Returns

The mass fractions of the elements in the composition.

get_mole_fractions() → dict[str, float]

Returns the mole fractions

Returns

The mole fractions of the elements in the composition.

get_name() → str

Returns the name of the library.

Returns

The name of the library

get_smoothed_values_for_material_property(*material_property_enum*: MaterialProperty) → [List[float], List[float]]

Returns smoothed values for the specified material property.

Parameters

material_property_enum – The material property

Returns

The temperature [K] and the values of the specified material property

get_smoothing_for(*material_property_enum*: MaterialProperty) → *Smoothing*

Returns the smoothing level for the specified material property.

Parameters

material_property_enum – The material property to get smoothing level for

Returns

The smoothing level for the specified material property

get_solidification_temperature() → float

Returns the solidification temperature for the material.

Returns

The solidification temperature [K]

rename_as_library(*name*: str)

Renames the material library.

Parameters

name – The new name of the library

Returns

This *MaterialProperties* object

save_as_library(*name*: str = "")

Saves the material library with the specified name to disk.

Default: Re-save the current object with the previously chosen name

Parameters

name – The new name of the library

Returns

This *MaterialProperties* object

save_library()

Saves the material library to disk.

Returns

This *MaterialProperties* object

set_gas_pressure(*pressure*: float)

Sets the gas pressure for the material.

Parameters

pressure – The pressure [Pa]

set_smoothing_for_all_properties(*smoothing_enum*: Smoothing)

Sets the smoothing level for all material properties.

Parameters

smoothing_enum – The smoothing level

Returns

This *MaterialProperties* object

set_smoothing_for_property(*material_property_enum*: MaterialProperty, *smoothing_enum*: Smoothing)

Sets the smoothing level for the specified material property.

Parameters

- **material_property_enum** – The specified material property
- **smoothing_enum** – The smoothing level

Returns

This *MaterialProperties* object

class tc_python.am.**MaterialProperty**(*value*, *names=None*, *, *module=None*, *qualname=None*, *type=None*, *start=1*, *boundary=None*)

Bases: Enum

A single material property used in the class *MaterialProperties*.

CP = 0

Apparent heat capacity [J/(kg K)]

DENSITY = 1

Density [kg/m3]

DRIVING_FORCE_EVAPORATION = 8

Driving force for evaporation [J/mol]

DYNAMIC_VISCOSITY = 4

Dynamic viscosity [Pa s]

ELECTRIC_RESISTIVITY = 11

Resistivity [Ohm * m]

ENTHALPY_PER_KG = 10

Enthalpy [J/kg]

ENTHALPY_PER_MOLE = 2

Enthalpy [J/mol]

EVAPORATION_ENTHALPY = 9

Evaporation enthalpy [J/mol]

MOLAR_MASS_OF_GAS = 7

Molar mass of Gas [kg/mol]

MOLAR_VOLUME = 6

Molar volume [m3/mol]

SURFACE_TENSION = 5

Surface tension [J/m2]

THERMAL_CONDUCTIVITY = 3

Thermal conductivity [W/(m K)]

class tc_python.am.**MaterialType**(value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None)

Bases: Enum

The material (solid, liquid, powder) to be plotted in a *pyvista* visualization plot.

LIQUID = 'Liquid'

Onl liquid material

POWDER = 'Powder'

Only powder

SHOW_ALL = 'All'

All material

SOLID = 'Solid'

Only solid material

SOLID_AND_LIQUID = 'Solid and liquid'

Only solid and liquid material

SOLID_AND_POWDER = 'Solid and powder'

Only solid material and powder

class tc_python.am.**MediumMesh**

Bases: *Mesh*

An initially medium mesh.

Note: It is adaptive and will be automatically refined as required.

class tc_python.am.**Mesh**

Bases: object

The initial mesh size in the simulation.

Can be coarse, medium, fine, or custom.

Note: It is adaptive and will be automatically refined as required.

classmethod **coarse**()

Selecting the mesh to be initially coarse.

Note: It is adaptive and will be automatically refined as required.

Returns

A new *CoarseMesh* object

classmethod `custom`(*minimum_element_size: float = 1e-05, maximum_element_size: float = 0.0001*)

Selecting explicitly the initial mesh.

Default: Minimum element size: 10 um, maximum element size: 100 um

Note: It is adaptive and will be automatically refined as required.

Parameters

- **minimum_element_size** – The minimum element size [m]
- **maximum_element_size** – The maximum element size [m]

Returns

A new *CustomMesh* object

classmethod `fine`()

Selecting the mesh to be initially fine.

Note: It is adaptive and will be automatically refined as required.

Returns

A new *FineMesh* object

classmethod `medium`()

Selecting the mesh to be initially medium.

Note: It is adaptive and will be automatically refined as required.

Returns

A new *MediumMesh* object

class `tc_python.am.NumericalOptions`

Bases: object

The numerical options for an AM simulation.

disable_damping()

Disable numerical damping.

Default: disabled

Returns

This *NumericalOptions* object

disable_petrov_galerkin()

Disables Streamline upwind Petrov-Galerkin (SUPG) for the numerical solver.

Default: enabled

Returns

This *NumericalOptions* object

enable_petrov_galerkin()

Enables Streamline upwind Petrov-Galerkin (SUPG) for the numerical solver.

Default: enabled

Returns

This *NumericalOptions* object

get_options()

Returns the numerical options for an AM simulation.

Returns

The numerical options

set_damping_factor(*damping_factor: float = 0.0*)

Sets the numerical damping factor.

Default: numerical damping is disabled

Parameters

damping_factor – The numerical damping factor

Returns

This *NumericalOptions* object

set_number_of_cores(*num_cores: int*)

Sets the number of used processor cores.

Default: Half of the available cores on the CPU, 2 cores on a 2-core CPU, and 1 core on a 1-core CPU.

Parameters

num_cores – The number of used cores

Returns

This *NumericalOptions* object

set_smagorinsky_constant(*const: float = 0.18*)

Sets the smagorinsky constant.

Parameters

const – The smagorinsky constant.

Returns

This *NumericalOptions* object

with_file_saving_strategy(*file_saving_strategy: FileSavingStrategy*)

Sets the strategy how result files are saved on disk. Both the number and time point of saving can be controlled.

Default: an automatic file saving strategy

Parameters

file_saving_strategy – The file saving strategy

Returns

This *NumericalOptions* object

```
class tc_python.am.ProbeCoordinate(x: float = None, y: float = None, z: float = None, position: List[float] = None)
```

Bases: object

The coordinates of a probe. This is a point in the simulation domain whose properties can be obtained from the result object after the calculation using *TransientResult.get_temperatures_at_probe()*.

```
class tc_python.am.Scalar(value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None)
```

Bases: Enum

A quantity to be plotted in a *pyvista* visualization plot.

EVA_FLUX = 'evaFlux_'

Evaporation flux

MATERIAL_TYPE = 'subdomain_id'

Material type

MOLAR_VOLUME = 'molar_volume'

Molar volume

SURFACE_TENSION = 'gamma'

Surface tension

TEMPERATURE = 'temperature'

Temperature

THERMAL_CONDUCTIVITY = 'k'

Thermal conductivity

VOLUME_FRACTION_LIQUID = 'liquid_vfrac'

Volume fraction of liquid

```
class tc_python.am.ScanningPath(calc: AdditiveManufacturingCalculation)
```

Bases: object

get_end_of_scanning_time() → float

Returns

The end of scanning time (s)

get_heat_source_position(*time: float*) → Tuple[List[float], float]

Parameters

time – The time (s)

Returns

position of the heat source, and its angle. Returns an empty position list, if the heat source is OFF

get_heat_source_position_nearby(*layerID: int, x: float, y: float*) → Tuple[List[float], float, float, float]

Parameters

- **layerID** – The layer ID. Zero index
- **x** – x-coordinate of the point.
- **y** – y-coordinate of the point.

Returns

position of the nearest point, factor of this position on the line, distance to the line, and time.

get_heat_source_position_on_path(*pathID: int, layerID: int, factor: float*) → Tuple[List[float], float, float]

Parameters

- **pathID** – The path ID of the scanning path. Zero index
- **layerID** – The layer ID of the scanning path. Zero index
- **factor** – The factor. 0 - for the beginning position, and 1- for the end position of the line path.

Returns

position of the heat source, its angle, and time.

get_number_of_layers() → int

Returns

Total number of layers

get_position_between_two_nearest_lines(layerID: int, x: float, y: float) → Tuple[float]

Parameters

- **layerID** – The layer ID. Zero index
- **x** – x-coordinate of the point.
- **y** – y-coordinate of the point.

Returns

The nearest position in the middle of two scanning paths. The scanning paths are determined by the two closet to [x, y]

get_scanning_path_of_layer(layer: int) → List[List[float]]

Returns

List of scanning paths on a layer

get_time_on_path(pathID: int, layerID: int) → Tuple[float, float]

Parameters

- **pathID** – The path ID of the scanning path. Zero index
- **layerID** – The layer ID of the scanning path. Zero index

Returns

Starting time, and ending time of a path, on a layer.

is_heat_source_on(time: float) → bool

Parameters

time – The time (s)

Returns

True if the heat source is ON

class tc_python.am.ScanningStrategy

Bases: object

The scanning pattern of the heat source.

Single track, bidirectional (flipping scanning direction of the heat source between alternate tracks), or unidirectional (same scanning direction of the heat source for all tracks) are available.

classmethod bi_directional()

A bidirectional scanning strategy (flipping scanning direction of the heat source between alternate tracks).

Returns

A new *BiDirectionalScanningStrategy* object

set_cooling_time(*cooling_time: float*)

Sets the cooling time.

Default: 0 [s]

Parameters

cooling_time – [s]

Returns

This *ScanningStrategy* object

classmethod single_track()

A single track scanning strategy.

Returns

A new *SingleTrackScanningStrategy* object

classmethod uni_directional()

A unidirectional scanning strategy (same scanning direction of the heat source for all tracks).

Returns

A new *UniDirectionalScanningStrategy* object

class tc_python.am.**ScheilMaterialProperties**(*scheil_result: ScheilCalculationResult*,
interface_scattering_constant: float = 0.0, note: str = "")

Bases: *MaterialProperties*

Material properties created from the result of a Scheil calculation.

class tc_python.am.**SingleTrackScanningStrategy**

Bases: *ScanningStrategy*

A single track scanning strategy.

get_type() → str

Returns the type of scanning strategy.

Returns

The type

set_margin(*margin: float = 0.00125*)

Sets the margin.

This is the offset of the scanning path from the sides of the computational domain. In case of single tracks, offset is placed from the sides transverse to the scanning direction.

Default: 1.25e-3 [m]

Parameters

margin – The margin [m]

Returns

This *SingleTrackScanningStrategy* object

set_number_of_layers(*number_of_layers: int = 1*)

Sets the number of layers.

Default: 1

Parameters**number_of_layers** – The number of layers**Returns**This *SingleTrackScanningStrategy* object**set_powder_fill_time**(*powder_fill_time: float = 0.0*)

Sets the powder fill time.

Default: 0 [s]**Parameters****powder_fill_time** – [s]**Returns**This *SingleTrackScanningStrategy* object**class** tc_python.am.**Smoothing**(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

The smoothing level used in the class *MaterialProperties*.**CONSTANT = -200**

Constant smoothing

LARGE = 600

Large smoothing

LINEAR = -100

Linear smoothing

LITTLE = 60

Little smoothing

MEDIUM = 150

Medium smoothing

NONE = 0

No smoothing

class tc_python.am.**SteadyStateCalculation**(*calculation*)Bases: *AdditiveManufacturingCalculation*

A steady-state Additive Manufacturing calculation.

Note: This computes the temperature distribution in a steady-state environment, either on a bare metal substrate or with a powder layer on the top, with the possibility to add fluid flow inside the melt pool.

calculate(*timeout_in_minutes: float = 0.0*) → *SteadyStateResult*

Runs the calculation.

Parameters**timeout_in_minutes** – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than `timeout_in_minutes`, a `:class`UnrecoverableCalculationException`` will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *SteadyStateResult* which later can be used to get specific values from the calculated result

class tc_python.am.SteadyStateResult(*result*)

Bases: *AdditiveManufacturingResult*

A result for a steady-state calculation.

get_keyhole_depth() → float

The depth of the keyhole.

Returns

The depth of the keyhole [m]

get_keyhole_length() → float

The length of the keyhole.

Returns

The length of the keyhole [m]

get_keyhole_width() → float

The width of the keyhole.

Returns

The width of the keyhole [m]

class tc_python.am.TopBoundaryConditions

Bases: object

The top boundary conditions of the simulation.

disable_evaporation()

Disables the evaporation heat loss due to heating of the powder layer or the metallic surface when being close to the evaporation temperature.

Default: enabled

Returns

This *TopBoundaryConditions* object

enable_evaporation()

Enables the evaporation heat loss due to heating of the powder layer or the metallic surface when being close to the evaporation temperature.

Default: enabled

Returns

This *TopBoundaryConditions* object

set_convective_heat_coefficient(*convective_heat_coefficient: float = 20.0*)

Sets the convective heat transfer coefficient for the top surface to the surrounding gas.

Enter 0 to disable convective heat transfer.

Default: 20.0 W/m**2

Parameters

convective_heat_coefficient – The convective heat transfer coefficient [W/m**2]

Returns

This *TopBoundaryConditions* object

set_radiation_emissivity(*radiation_emissivity*: float = 0.8)

Sets the radiation from the top surface to the surrounding gas.

Enter 0 to disable radiation.

Default: 0.8

Parameters

radiation_emissivity – The radiation emissivity, range: [0 - 1] [-]

Returns

This *TopBoundaryConditions* object

class tc_python.am.**TophatHeatSource**(*absorptivity*: float = 60.0)

Bases: *GaussianHeatSource*

A Tophat heat source (derived from Gaussian base).

get_type() → str

Returns the type of heat source.

Returns

The type

set_beam_radius(*beam_radius*: float = 0.00011)

Sets the beam radius.

Default: 110.0e-6 m

Parameters

beam_radius – The beam radius [m]

Returns

This heat source object

class tc_python.am.**TransientCalculation**(*calculation*)

Bases: *AdditiveManufacturingCalculation*

A transient Additive Manufacturing calculation.

Note: This computes the temperature distribution in a transient case with the given scanning strategy including multiple paths and layers and the possibility to add fluid flow inside the melt pool.

add_probe(*coordinate*: *ProbeCoordinate*)

Adds a probe, this a point in the simulation domain whose properties can be obtained from the result after the calculation using *TransientResult.get_temperatures_at_probe()*.

Parameters

coordinate – The probe to be added

Returns

This *TransientCalculation* object

calculate(*timeout_in_minutes*: float = 0.0) → *TransientResult*

Runs the calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than *timeout_in_minutes*, a *UnrecoverableCalculationException* will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *TransientResult* which later can be used to get specific values from the calculated result

get_scanning_path()

Returns the calculation's scanning pattern object

Returns

The calculation's scanning pattern object

remove_all_probes()

Removes all probes.

Returns

This *TransientCalculation* object

remove_probe(*coordinate*: ProbeCoordinate)

Removes a probe.

Parameters

coordinate – The coordinates of the probe to be removed

Returns

This *TransientCalculation* object

set_length(*length*: float = 0.005)

Sets the length of the simulation domain.

Default: 5.0e-3 m :param *length*: The length [m] :return: This *TransientCalculation* object

set_width(*width*: float = 0.004)

Sets the width of the simulation domain.

Default: 4.0e-3 m

Parameters

width – The width [m]

Returns

This *TransientCalculation* object

with_scanning_strategy(*scanning_strategy*: ScanningStrategy)

Sets the scanning strategy of the heat source, i.e. beam.

Parameters

scanning_strategy – The scanning strategy

Returns

This *TransientCalculation* object

class tc_python.am.TransientResult(*result*)

Bases: *AdditiveManufacturingResult*

A result for transient calculations (also with steady-state heat source).

get_temperatures_at_probe(*coordinate*: ProbeCoordinate) → Tuple[List[float], List[float]]

Obtains the temperature at a probe (i.e., a point in the simulation domain) that had previously been defined for the calculation using *TransientCalculation.add_probe()* or *TransientWithSteadyStateCalculation.add_probe()*.

Parameters

coordinate – The coordinates of the probe - must have been defined in the calculator previously

Returns

A tuple (time points [s], temperatures [K])

get_time_steps() → List[float]

Returns list of the available time steps

Returns

List of the available time steps

set_active_time(step: int)

Set the step to be active

class tc_python.am.**TransientWithSteadyStateCalculation**(transient_with_ss_calculation,
ss_calculation)

Bases: *TransientCalculation*

A transient Additive Manufacturing calculation using a heat source from steady-state.

Note: This computes the temperature distribution in a transient case with the given scanning strategy including multiple paths and layers.

1. A steady-state simulation runs with the configured heat source and with the possibility to add fluid flow in the melt pool.
 2. A volume heat source (based on the solution of steady-state calculation) is used in the transient simulation.
-

Tip: This type of calculation is significantly faster than fully transient calculations using *TransientCalculation*.

calculate(timeout_in_minutes: float = 0.0) → *TransientResult*

Runs the calculation.

Parameters

timeout_in_minutes – Used to prevent the calculation from running longer than what is wanted, or from hanging. If the calculation runs longer than `timeout_in_minutes`, a `UnrecoverableCalculationException` will be thrown, the current TCPython-block will be unusable and a new TCPython block must be created for further calculations.

Returns

A *TransientResult* which later can be used to get specific values from the calculated result

disable_fluid_flow_marangoni()

Disables the fluid flow modelling of the Marangoni effect.

Default: Enabled

Returns

This *TransientWithSteadyStateCalculation* object

disable_separate_materials()

Disables separate material properties for powder and solid material.

Default: Disabled

Returns

This *TransientWithSteadyStateCalculation* object

enable_fluid_flow_marangoni()

Enables the fluid flow modelling of the Marangoni effect.

Default: Enabled

Note: This option is not possible to use in conjunction with the option *separate material*, which is therefore automatically disabled.

Returns

This *TransientWithSteadyStateCalculation* object

enable_separate_materials()

Enables separate material properties for powder and solid material.

Default: Disabled

Note: This option is not possible to use in conjunction with the option *Marangoni fluid flow*, which is therefore automatically disabled.

Returns

This *TransientWithSteadyStateCalculation* object

set_ambient_temperature(*temperature: float = 296.15*)

Sets the ambient temperature.

Default: 23 degree Celsius

Parameters

temperature – The ambient temperature [K]

Returns

This *TransientWithSteadyStateCalculation* object

set_base_plate_temperature(*temperature: float = 303.15*)

Sets the baseplate temperature.

Default: 30 degree Celsius

Parameters

temperature – The baseplate temperature [K]

Returns

This *TransientWithSteadyStateCalculation* object

set_gas_pressure(*pressure: float = 100000.0*)

Sets the gas pressure.

Default: 1.0e5 Pa

Parameters

pressure – The pressure [Pa]

Returns

This *TransientWithSteadyStateCalculation* object

set_height(*height: float = 0.002*)

Sets the height of the simulation domain.

Default: 2.0e-3 m

Parameters

height – The height [m]

Returns

This *TransientWithSteadyStateCalculation* object

set_layer_thickness(*layer_thickness: float = 4e-05*)

Sets the layer thickness.

Default: 40.0e-6 m

Parameters

layer_thickness – The layer thickness [m]

Returns

This *TransientWithSteadyStateCalculation* object

set_length(*length: float = 0.005*)

Sets the length of the simulation domain.

Default: 5.0e-3 m ;param length: The length [m] :return: This *TransientWithSteadyStateCalculation* object

set_powder_density(*powder_density: float = 80.0*)

Sets the powder density.

Default: 80.0%

Parameters

powder_density – The powder density [%]

Returns

This *TransientWithSteadyStateCalculation* object

set_width(*width: float = 0.004*)

Sets the width of the simulation domain.

Default: 4.0e-3 m

Parameters

width – The width [m]

Returns

This *TransientWithSteadyStateCalculation* object

with_heat_source(*heat_source: HeatSource*)

Sets the heat source.

Parameters

heat_source – The heat source

Returns

This *TransientWithSteadyStateCalculation* object

with_material_properties(*material_properties: MaterialProperties*)

Sets the material properties.

Tip: Material properties can be defined like this: `MaterialProperties.from_library("IN718")` or `MaterialProperties.from_scheil_result(scheil_result)`.

Parameters**material_properties** – The material properties**Returns**This *TransientWithSteadyStateCalculation* object**with_mesh**(*mesh*: Mesh)

Sets the mesh.

Parameters**mesh** – The mesh**Returns**This *TransientWithSteadyStateCalculation* object**with_numerical_options**(*numerical_options*: NumericalOptions)

Sets the numerical options.

Parameters**numerical_options** – The numerical options**Returns**This *TransientWithSteadyStateCalculation* object**with_top_boundary_conditions**(*boundary_conditions*: TopBoundaryConditions)

Sets the boundary conditions.

Parameters**boundary_conditions** – The boundary conditions**Returns**This *TransientWithSteadyStateCalculation* object**class** tc_python.am.UniDirectionalScanningStrategyBases: *ScanningStrategy*

A unidirectional scanning strategy (same scanning direction of the heat source for all tracks).

get_type() → str

Returns the type of scanning strategy.

Returns

The type

set_angle(*angle*: float = 0.0)

Sets the rotation of the scanning direction between two consecutive layers.

Note: The scanning direction of the first layer is always aligned parallel to the x-axis.

Default: 0 degree**Parameters****angle** – The angle [degree]

Returns

This *UniDirectionalScanningStrategy* object

set_hatch_spacing(*hatch_spacing: float = 0.0*)

Sets the horizontal separation between two consecutive tracks.

Default: 0 m

Parameters

hatch_spacing – The hatch spacing [m]

Returns

This *UniDirectionalScanningStrategy* object

set_lift_time(*lift_time: float = 0.0*)

Sets the lift time, i.e. the time between two tracks where the heat source is inactive.

Default: 0 s

Parameters

lift_time – The lift time [s]

Returns

This *UniDirectionalScanningStrategy* object

set_margin(*margin: float = 0.00125*)

Sets the margin.

This is the offset of the scanning path from the sides of the computational domain.

Default: 1.25e-3 [m]

Parameters

margin – The margin [m]

Returns

This *UniDirectionalScanningStrategy* object

set_number_of_layers(*number_of_layers: int = 1*)

Sets the number of layers.

Default: 1

Parameters

number_of_layers – The number of layers

Returns

This *UniDirectionalScanningStrategy* object

set_powder_fill_time(*powder_fill_time: float = 0.0*)

Sets the powder fill time.

Default: 0 s

Parameters

powder_fill_time – The powder fill time [s]

Returns

This *UniDirectionalScanningStrategy* object

class tc_python.am.**UseGpuMode**(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

Defines an enumeration that specifies the GPU usage mode for a TC-Python application. It provides options to automatically determine GPU usage, always enable GPU render, or disable it and uses CPU render.

AUTO = 0

NO = 2

YES = 1

class `tc_python.am.UserDefinedCoreRingHeatSource`(*function: str = '60.0'*)

Bases: *CoreRingHeatSource*

A Core-ring heat source with user defined absorptivity function.

static `get_type()` → str

Returns the type of heat source.

Returns

The type

set_absorptivity_function(*function: str = '60'*)

Parameters

function – The absorptivity user defined function value to set for the heat source, provided as a string.

Returns

This *UserDefinedCoreRingHeatSource* object

class `tc_python.am.UserDefinedGaussianEBMHeatSource`(*function: str = '75.0'*)

Bases: *EBMBeamShapingHeatSource*

A Gaussian EBM heat source with user defined absorptivity function.

static `get_type()` → str

Returns the type of heat source.

Returns

The type

set_absorptivity_function(*function: str = '75'*)

Parameters

function – The absorptivity user defined function value to set for the heat source, provided as a string.

Returns

This *UserDefinedGaussianEBMHeatSource* object

class `tc_python.am.UserDefinedGaussianHeatSource`(*function: str = '60.0'*)

Bases: *GaussianHeatSource*

A Gaussian heat source with user defined absorptivity function.

static `get_type()` → str

Returns the type of heat source.

Returns

The type

set_absorptivity_function(*function: str = '60'*)

Parameters

function – The absorptivity user defined function value to set for the heat source, provided as a string.

Returns

This *UserDefinedGaussianHeatSource* object

class `tc_python.am.UserDefinedTophatHeatSource`(*function: str = '60.0'*)

Bases: *TophatHeatSource*

A Tophat heat source with user defined absorptivity function.

static get_type() → str

Returns the type of heat source.

Returns

The type

set_absorptivity_function(*function: str = '60'*)

Parameters

function – The absorptivity user defined function value to set for the heat source, provided as a string.

Returns

This *UserDefinedTophatHeatSource* object

set_beam_radius(*beam_radius: float = 0.00011*)

Sets the beam radius.

Default: 110.0e-6 m

Parameters

beam_radius – The beam radius [m]

Returns

This heat source object

class `tc_python.am.Zone`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

Zones to be used in combination with keyhole model and material properties.

LIQUID = 2

Liquid zone

MUSHY = 1

Mushy zone

SOLID = 0

Solid zone

VAPOR = 3

Vapor zone

`tc_python.am.show_with_opengl_summary`(*plotter*)

Shows a PyVista plotter, prints OpenGL vendor, renderer and version, and keeps the window interactive.

6.2 Module “system”

class `tc_python.system.MultiDatabaseSystemBuilder`(*multi_database_system_builder*)

Bases: `object`

Used to select databases, elements, phases etc. and create a System object. The difference to the class System-Builder is that the operations are performed on all the previously selected databases. The system is then used to create calculations.

create_and_select_species(*stoichiometry: str*) → Self

Specify a species from the already entered elements. The stoichiometry of the species is the chemical formula of the species. The created species will also be automatically selected.

Note: The elements in the chemical formula are normally separated by stoichiometric numbers. Neither parenthesis “()” nor an underscore “_” is allowed in the chemical formula, while the special combination “/−” or “/+” can be used. Consult the Thermo-Calc database documentation for details about the syntax.

Parameters

stoichiometry – The stoichiometry of the species

Returns

This `MultiDatabaseSystemBuilder` object

deselect_constituent_on_sublattice(*phase_name: str, sublattice_no: int, constituent_name_to_deselect: str*) → Self

Rejects a constituent on a sublattice in a phase in both the thermodynamic and the kinetic database.

Parameters

- **phase_name** – The name of the phase
- **sublattice_no** – The number of the sublattice (starting with 1)
- **constituent_name_to_deselect** – The name of the constituent to deselect

Returns

This `MultiDatabaseSystemBuilder` object

deselect_phase(*phase_name_to_deselect: str*) → Self

Rejects a phase for both the thermodynamic and the kinetic database.

Parameters

phase_name_to_deselect – The phase name

Returns

This `MultiDatabaseSystemBuilder` object

deselect_species(*species_name: str*) → Self

Removes the species from the system.

Parameters

species_name – The species

Returns

This `MultiDatabaseSystemBuilder` object

get_system() → *System*

Creates a new *System* object that is the basis for all calculation types. Several calculation types can be defined later from the object; these are independent.

Returns

A new *System* object

select_constituent_on_sublattice(*phase_name: str, sublattice_no: int, constituent_name_to_select: str*) → Self

Selects a constituent on a sublattice in a phase in both the thermodynamic and the kinetic database.

Note: Previously the third parameter *constituent_name_to_select* had a wrong name, it has been corrected in version 2021b.

Parameters

- **phase_name** – The name of the phase
- **sublattice_no** – The number of the sublattice (starting with 1)
- **constituent_name_to_select** – The name of the constituent to select

Returns

This *MultiDatabaseSystemBuilder* object

select_phase(*phase_name_to_select: str*) → Self

Selects a phase for both the thermodynamic and the kinetic database.

Parameters

phase_name_to_select – The phase name

Returns

This *MultiDatabaseSystemBuilder* object

select_species(*species_name: str*) → Self

Adds the species to the system. Up to 1000 species can be defined in a single system.

Parameters

species_name – The species

Returns

This *MultiDatabaseSystemBuilder* object

with_new_composition_set(*composition_set: CompositionSet*) → Self

Used to enter two or more composition sets for a phase. If a phase has a miscibility gap it is necessary to have two composition sets, one for each possible composition that can be stable simultaneously.

The databases often create the typical composition sets for phases automatically when data are retrieved. The equilibrium calculations (using the default settings with global minimization) will usually add new composition sets if needed.

Note: Precipitation and diffusion calculations can require the user to define additional composition sets. E.g. in the case where the new composition set is needed in the configuration of the calculation.

Parameters

composition_set – the composition set

Returns

This *MultiDatabaseSystemBuilder* object

`without_default_phases()` → Self

Rejects all the default phases from both the thermodynamic and the kinetic database, any phase now needs to be selected manually for the databases.

Returns

This *MultiDatabaseSystemBuilder* object

class `tc_python.system.System(system_instance)`

Bases: object

A system containing selections for databases, elements, phases etc.

Note: For the defined system, different calculations can be configured and run. **Instances of this class should always be created from a SystemBuilder.**

Note: The system object is **immutable**, i.e. it cannot be changed after it has been created. If you want to change the system, you must instead create a new one.

convert_composition(*input_composition*: Dict[str, float], *input_unit*: ConversionUnit, *output_unit*: ConversionUnit, *dependent_component*: str = "") → Dict[str, float]

Provides conversion between composition units for any combination of chemical compounds. It is fast because no thermodynamic equilibrium calculation is involved.

Syntax of the chemical compounds: “Al2O3”, “FeO”, “CO”, “Fe”, “C”, ...

Note: It is not required that the chemical compounds are components of the database. The only requirement is that all elements are present in the database.

Parameters

- **input_composition** – Composition (for example: {“Al2O3”: 25.0, “FeO”: 75.0})
- **input_unit** – Unit of the input composition
- **output_unit** – Requested output unit
- **dependent_component** – The dependent component (optional), for example: “Fe”. If no dependent component is specified the sum of the input composition needs to match 100% / 1

Returns

The composition in the requested output unit

get_all_elements_in_databases() → List[str]

Returns the names of all elements present in the selected databases, regardless of the actual selection of elements.

Returns

A list of element names

get_all_phases_in_databases() → List[str]

Returns all phase names present in the selected databases, regardless of selected elements, phases etc.

Returns

A list of phase names

get_all_species_in_databases() → List[str]

Returns all species names present in the selected databases, regardless of the actual selection of elements, phases, ...

Returns

A list of species names

get_database_names() → List[str]

Returns the names of the selected thermodynamic and mobility databases.

Returns

A list of database names

get_element_object(*element_name: str*) → *Element*

Returns the Element object of an element. This can be used to obtain detailed information about the element.

Parameters

element_name – The element name

Returns

A Element: object

get_elements_in_system() → List[str]

Returns the names of all elements present in the selected system.

Note: The list does not contain any elements or components that have been auto-selected by the database(s) in a calculator. Use the `get_components()` of the calculator object instead to get the complete information.

Returns

A list of element names

get_phase_object(*phase_name: str*) → *Phase*

Returns the Phase object of a phase. This can be used to obtain detailed information about the phase.

Parameters

phase_name – The phase name

Returns

A Phase: object

get_phases_in_system() → List[str]

Returns all phase names present in the system due to its configuration (selected elements, phases, etc.).

Returns

A list of phase names

get_references() → Dict[str, List[str]]

Provides a dictionary with database references per database in the selected system.

Returns

The database references

`get_species_in_system()` → List[str]

Returns the names of all species present in the selected system.

Note: The list does not contain any species or components that have been auto-selected by the database(s) in a calculator. Use the `get_components()` of the calculator object instead to get the complete information.

Returns

The list of species names

`get_species_object(species_name: str)` → *Species*

Returns the *Species* object of an species. This can be used to obtain detailed information about the species.

Parameters

species_name – The species name

Returns

A *Species*: object

`get_system_data()` → *SystemData*

Returns the content of the database. This can be used to modify the parameters and functions and to change the current system by using `with_system_modifications()`.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as *.tdb-file.

Returns

The system data

`with_batch_equilibrium_calculation(default_conditions: bool = True, components: List[str] = [])` → *BatchEquilibriumCalculation*

Creates a batch-equilibrium calculation (a vectorized equilibrium calculation).

Note: Use this instead of looping if you want to calculate equilibria for a larger number of compositions and know the conditions in advance. This calculation type has improved performance when calculating a large number of equilibria when each individual calculations is quick. E.g. when evaluating single phase properties for thousands of compositions.

Parameters

- **default_conditions** – If *True*, automatically sets the conditions $N=1$ and $P=100000$
- **components** – Specify here the components of the system (for example: `[AL2O3, ...]`), *only necessary if they differ from the elements*. If this option is used, **all elements** of the system need to be replaced by a component.

Returns

A new *BatchEquilibriumCalculation* object

`with_cct_precipitation_calculation()` → *PrecipitationCCTCalculation*

Creates a CCT diagram calculation.

Returns

A new *PrecipitationCCTCalculation* object

with_isothermal_diffusion_calculation() → *DiffusionIsoThermalCalculation*

Creates an isothermal diffusion calculation.

Returns

A new DiffusionIsoThermalCalculation object

with_isothermal_precipitation_calculation() → *PrecipitationIsoThermalCalculation*

Creates an isothermal precipitation calculation.

Returns

A new PrecipitationIsoThermalCalculation object

with_material_to_material() → *MaterialToMaterialCalculationContainer*

Provides access to all Material to Material calculations. The actual calculation needs to be chosen in the returned object.

Returns

A new MaterialToMaterialCalculationContainer object

with_non_isothermal_diffusion_calculation() → *DiffusionNonIsoThermalCalculation*

Creates a non-isothermal precipitation calculation.

Returns

A new PrecipitationNonIsoThermalCalculation object

with_non_isothermal_precipitation_calculation() → *PrecipitationNonIsoThermalCalculation*

Creates a non-isothermal precipitation calculation.

Returns

A new PrecipitationNonIsoThermalCalculation object

with_phase_diagram_calculation(*default_conditions: bool = True, components: List[str] = []*) → *PhaseDiagramCalculation*

Creates a phase diagram (map) calculation.

Parameters

- **default_conditions** – If *True*, automatically sets the conditions $N=1$ and $P=100000$
- **components** – Specify here the components of the system (for example: *[AL2O3, ...]*), only necessary if they differ from the elements. If this option is used, **all elements** of the system need to be replaced by a component.

Returns

A new PhaseDiagramCalculation object

with_property_diagram_calculation(*default_conditions: bool = True, components: List[str] = []*) → *PropertyDiagramCalculation*

Creates a property diagram (step) calculation.

Parameters

- **default_conditions** – If *True*, automatically sets the conditions $N=1$ and $P=100000$
- **components** – Specify here the components of the system (for example: *[AL2O3, ...]*), only necessary if they differ from the elements. If this option is used, **all elements** of the system need to be replaced by a component.

Returns

A new PropertyDiagramCalculation object

with_property_model_calculation(*model*: Union[str, type], *path_to_models*: str = "", *debug_model*: bool = False) → *PropertyModelCalculation*

Creates a Property Model calculation.

The parameter *debug_model* is only used when debugging self-developed models.

Parameters

- **model** – The Property Model to be calculated.
- **path_to_models** – The path where the Property Models are installed. If no value is entered, the Property Models folder used by the normal Thermo-Calc application is used.
- **debug_model** – Used when debugging self-developed models.

Returns

A new *PropertyModelCalculation* object

with_scheil_calculation() → *ScheilCalculation*

Creates a Scheil solidification calculation.

Returns

A new *ScheilCalculation* object

with_single_equilibrium_calculation(*default_conditions*: bool = True, *components*: List[str] = []) → *SingleEquilibriumCalculation*

Creates a single equilibrium calculation.

Parameters

- **default_conditions** – If *True*, automatically sets the conditions $N=1$ and $P=100000$
- **components** – Specify here the components of the system (for example: [AL2O3, ...]), *only necessary if they differ from the elements*. If this option is used, **all elements** of the system need to be replaced by a component.

Returns

A new *SingleEquilibriumCalculation* object

with_ttt_precipitation_calculation() → *PrecipitationTTTCalculation*

Creates a TTT diagram calculation.

Returns

A new *PrecipitationTTTCalculation* object

class tc_python.system.**SystemBuilder**(*system_builder*)

Bases: object

Used to select databases, elements, phases etc. and create a System object. The system is then used to create calculations.

create_and_select_species(*stoichiometry*: str) → Self

Specify a species from the already entered elements. The stoichiometry of the species is the chemical formula of the species. The created species will also be automatically selected.

Note: The elements in the chemical formula are normally separated by stoichiometric numbers. Neither parenthesis “()” nor an underscore “_” is allowed in the chemical formula, while the special combination “/-” or “/+” can be used. Consult the Thermo-Calc database documentation for details about the syntax.

Parameters

stoichiometry – The stoichiometry of the species

Returns

This *SystemBuilder* object

deselect_constituent_on_sublattice(*phase_name: str, sublattice_no: int, constituent_name_to_deselect: str*) → Self

Rejects a constituent on a sublattice in a phase in the last specified database only.

Parameters

- **phase_name** – The name of the phase
- **sublattice_no** – The number of the sublattice (starting with 1)
- **constituent_name_to_deselect** – The name of the constituent to deselect

Returns

This *SystemBuilder* object

deselect_phase(*phase_name_to_deselect: str*) → Self

Rejects a phase in the last specified database only.

Parameters

phase_name_to_deselect – The name of the phase

Returns

This *SystemBuilder* object

deselect_species(*stoichiometry: str*) → Self

Removes the species from the system.

Parameters

stoichiometry – The species

Returns

This *SystemBuilder* object

get_system() → *System*

Creates a new System object that is the basis for all calculation types. Several calculation types can be defined later from the object; these are independent.

Returns

A new *System* object

select_constituent_on_sublattice(*phase_name: str, sublattice_no: int, constituent_name_to_select: str*) → Self

Selects a constituent on a sublattice in a phase in the last specified database only.

Note: Previously the third parameter *constituent_name_to_select* had a wrong name, it has been corrected in version 2021b.

Parameters

- **phase_name** – The name of the phase
- **sublattice_no** – The number of the sublattice (starting with 1)
- **constituent_name_to_select** – The name of the constituent to select

Returns

This *SystemBuilder* object

select_database_and_elements(*database_name: str, list_of_element_strings: List[str]*) → Self

Selects a thermodynamic or kinetic database and its selected elements (that will be appended). After that, phases can be selected or unselected.

Parameters

- **database_name** – The database name, for example “FEDEMO”
- **list_of_element_strings** – A list of one or more elements as strings, for example [“Fe”, “C”]

Returns

This *SystemBuilder* object

select_phase(*phase_name_to_select: str*) → Self

Selects a phase in the last specified database only.

Parameters

phase_name_to_select – The name of the phase

Returns

This *SystemBuilder* object

select_species(*stoichiometry: str*) → Self

Adds the species to the system. Up to 1000 species can be defined in a single system.

Parameters

stoichiometry – The species

Returns

This *SystemBuilder* object

select_user_database_and_elements(*path_to_user_database: str, list_of_element_strings: List[str]*) → Self

Selects a thermodynamic database which is a user-defined database and select its elements (that will be appended).

Note: By using a r-literal, it is possible to use slashes on all platforms, also on Windows: *select_user_database_and_elements(r"my path/user_db.tdb", [“Fe”, “Cr”])*

Otherwise it is required to use **double** back-slashes on Windows as separator.

Note: On Linux and Mac the path is case-sensitive, also the file ending.

Parameters

- **path_to_user_database** – The path to the database file (“database”.TDB), defaults to the current working directory. Only the filename is required if the database is located in the same folder as the script.
- **list_of_element_strings** – A list of one or more elements as strings, for example [“Fe”, “C”]

Returns

This *SystemBuilder* object

with_new_composition_set(*composition_set*: *CompositionSet*) → Self

Used to enter composition sets for a phase. If a phase has a miscibility gap it is necessary to have two composition sets, one for each possible composition that can be stable simultaneously.

Parameters

composition_set – The composition set

Returns

This *SystemBuilder* object

without_default_phases() → Self

Rejects all default phases in the last specified database only, any phase needs now to be selected manually for that database.

Returns

This *SystemBuilder* object

6.3 Module “entities”

class `tc_python.entities.CompositionSet`(*phase_name*: *str*)

Bases: object

Used by the method `tc_python.system.SystemBuilder.with_new_composition_set()` to enter two or more composition sets for a phase.

Parameters

phase_name – The name of the phase for which a new composition set is required

set_major_constituents_for_sublattice(*sublattice_index*: *int*, *major_constituents*: *List[str]*)

Specify the new major constituent(s) for the sublattice.

Default: If not specified, a default is automatically chosen based on the specified composition set.

Note: This is useful in order to make calculations converge faster and more easily (because it may simplify giving start values when calculating the equilibrium as those phases with miscibility gaps should have different major constituents for each composition set). **The databases often set major constituents for several phases automatically when the data is retrieved.**

Parameters

- **sublattice_index** – Index of the sublattice to set the major constituents for (starting with *I*)
- **major_constituents** – Optional list of the major constituents, which must be selected from the phase constitution of the current system.

Returns

This *CompositionSet* object

class `tc_python.entities.Element`(*element*)

Bases: object

Represents an element, making detailed information about the element accessible.

get_enthalpy() → float

Returns the enthalpy of the element at 298 K, part of the stable element reference state (SER).

Returns

The enthalpy [J]

get_entropy_diff_0_to_298k() → float

Returns the entropy difference 0 - 298 K of the element, part of the stable element reference state (SER).

Returns

The entropy difference 0 - 298 K [J/K]

get_molar_mass() → float

Returns the molar mass of the element.

Returns

The molar mass [g/mol]

get_name() → str

Returns the name of the element.

Returns

The element name

get_stable_element_reference() → str

Returns the stable element reference (i.e. the stable phase at 298.15 K and 1 bar, reference for all element thermodynamic data).

Returns

The name of the stable element reference

is_interstitial() → bool

Returns if the element is interstitial.

Note: In the diffusion simulations (DICTRA), the assumption that the volume is carried by the substitutional elements only is applied. The interstitial elements are assumed to have zero molar volumes.

Returns

If the element is interstitial

is_special() → bool

Returns if the element is special (i.e. vacancies (VA) and electrons (denoted either as /- in gaseous, liquid or solid phases, or ZE in an aqueous solution phase)).

Returns

If the element is special

is_valid() → bool

Returns if the element is valid. Non-valid elements are represented by an empty name.

Returns

If the element is valid

class tc_python.entities.**Phase**(*phase*)

Bases: object

Represents a phase, making detailed information about the phase accessible.

get_name() → str

Returns the name of the phase.

Returns

The phase name

get_species() → Set[*Species*]

Returns the species of the phase.

Returns

A set containing the species

get_species_for_composition_profile() → Set[*Species*]

Returns all species that need to be defined in a composition profile of the phase for diffusion simulations - except for one species that needs to be the dependent species.

Note: In a composition profile of a phase for diffusion simulations it is necessary to specify all non-stoichiometric and non-special species. In case of a DILUTE diffusion model, the database enforces the choice of a certain dependent species.

Returns

Set with the species

get_sublattices() → List[*Sublattice*]

Returns the sublattices of the phase in a well-defined contiguous order.

Returns

A list containing the *Sublattice* objects

get_type() → *PhaseType*

Returns the type of the phase (liquid, ionic liquid, solid, gas).

Returns

The type of a phase

has_diffusion_data() → bool

Returns if diffusion data exists for the phase.

Returns

If diffusion data exists for the phase

has_molar_volume_data() → bool

Returns if molar volume data exists for the phase.

Returns

If molar volume data exists for the phase

is_dilute_diffusion_model() → bool

Returns if diffusion is described using the DILUTE model for the phase. This will always return *False* if no diffusion data is available.

Returns

If the DILUTE model is used

is_gas() → bool

Returns if the phase is a gas phase.

Returns

If the phase is a gas phase

is_ionic_liquid() → bool

Returns if the phase is an ionic liquid phase.

Returns

If the phase is an ionic liquid phase

is_liquid() → bool

Returns if the phase is a liquid or ionic liquid phase.

Returns

If the phase is a liquid phase

is_solid() → bool

Returns if the phase is a solid phase.

Returns

If the phase is a solid phase

```
class tc_python.entities.PhaseType(value, names=None, *, module=None, qualname=None, type=None,
start=1, boundary=None)
```

Bases: Enum

The type of a phase.

GAS = 0

Gas phase.

IONIC_LIQUID = 2

Ionic liquid phase.

LIQUID = 1

Liquid phase.

SOLID = 3

Solid phase.

```
class tc_python.entities.Species(species)
```

Bases: object

Represents a species, making detailed information about the species accessible.

get_all_elements() → List[Tuple[*Element*, float]]

Returns all the elements that the species is composed of.

Returns

List of all elements of the species and their stoichiometry

get_charge() → int

Returns the charge of the species.

Returns

The charge of the species

get_name() → str

Returns the name of the species.

Returns

The species name

is_element() → bool

Returns if the species actually represents an element.

Returns

If the species represents an element

is_interstitial() → bool

Returns if the species is interstitial.

Note: In the diffusion simulations (DICTRA), the assumption that the volume is carried by the substitutional elements only is applied. The interstitial elements are assumed to have zero molar volumes.

Returns

If the species is interstitial

is_special() → bool

Returns if the species is special (i.e. vacancies (VA) and electrons (denoted either as /- in gaseous, liquid or solid phases, or ZE in an aqueous solution phase)).

Returns

If the species is special

is_valid() → bool

Returns if the species is valid. Non-valid species are represented by an empty name.

Returns

If the species is valid

to_element() → *Element*

Returns the *Element* representation of the species - if the species actually represents an element.

Returns

The *Element* object

class tc_python.entities.**Sublattice**(*sublattice*)

Bases: object

Represents a sublattice of a phase.

get_constituents() → Set[*Species*]

Returns the constituents of the sublattice.

Returns

A set containing the constituents

get_nr_of_sites() → float

Returns the number of sites in the sublattice.

Returns

A float number

6.4 Module “server”

class `tc_python.server.AdditiveManufacturingCalculations`(*additive_manufacturing_calculations*)

Bases: object

Provides access to the calculation objects for all Additive Manufacturing calculations.

with_evaporation_with_steady_state_calculation(*moose_commands: Dict[str, str] = None*) → *EvaporationWithSteadyStateCalculation*

Creates an evaporation calculation (with steady-state heat source) for Additive Manufacturing.

Note: This computes the composition changes by evaporation with the given scanning strategy including multiple paths and layers.

1. A steady-state simulation runs with the configured heat source and with the possibility to add fluid flow in the melt pool.
 2. A composition changes on all tracks and layers
-

Parameters

moose_commands – Additional commands (key-value pairs) directly sent to the FEM solver
- this is a special option that is normally not needed

Returns

A new: class:*EvaporationWithSteadyStateCalculation* object

with_steady_state_calculation(*moose_commands: Dict[str, str] = None*) → *SteadyStateCalculation*

Creates a steady-state calculation for Additive Manufacturing.

Note: This computes the temperature distribution in a steady-state environment, either on a bare metal substrate or with a powder layer on the top, with the possibility to add fluid flow inside the melt pool.

Warning: It should not be necessary for most users to send commands directly to the FEM-solver, try to use the corresponding method implemented in the API instead.

Parameters

moose_commands – Additional commands (key-value pairs) directly sent to the FEM solver
- this is a special option that is normally not needed

Returns

A new *SteadyStateCalculation* object

with_transient_calculation(*moose_commands: Dict[str, str] = None*) → *TransientCalculation*

Creates a transient calculation for Additive Manufacturing.

Note: This computes the temperature distribution in a transient case with the given scanning strategy including multiple paths and layers and the possibility to add fluid flow inside the melt pool.

Warning: It should not be necessary for most users to send commands directly to the FEM-solver, try to use the corresponding method implemented in the API instead.

Parameters

moose_commands – Additional commands (key-value pairs) directly sent to the FEM solver
- this is a special option that is normally not needed

Returns

A new `TransientCalculation` object

with_transient_with_steady_state_calculation(*moose_commands: Dict[str, str] = None*) →
TransientWithSteadyStateCalculation

Creates a transient calculation (with steady-state heat source) for Additive Manufacturing.

Note: This computes the temperature distribution in a transient case with the given scanning strategy including multiple paths and layers.

1. A steady-state simulation runs with the configured heat source and with the possibility to add fluid flow in the melt pool.
 2. A volume heat source (based on the solution of steady-state calculation) is used in the transient simulation.
-

Tip: This type of calculation is significantly faster than fully transient calculations using `TransientCalculation`.

Warning: It should not be necessary for most users to send commands directly to the FEM-solver, try to use the corresponding method implemented in the API instead.

Parameters

moose_commands – Additional commands (key-value pairs) directly sent to the FEM solver
- this is a special option that is normally not needed

Returns

A new `TransientWithSteadyStateCalculation` object

class `tc_python.server.LoggingPolicy`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

Logging policy that determines how the TC-Python logs are presented to the user.

FILE = 1

Logging to a file.

NONE = 2

No logging at all.

SCREEN = 0

Logging to the screen.

class `tc_python.server.MetallurgyCalculations`(*metallurgy_calculations*)

Bases: `object`

Provides access to the calculation objects for all Process Metallurgy calculations.

These are specialised calculations for working with metallurgical processes. Both equilibrium calculations and kinetic process simulations (Effective Equilibrium Reaction Zone model) are available.

with_adiabatic_equilibrium_calculation(*database: ProcessDatabase*) → *AdiabaticEquilibriumCalculation*

Creates an adiabatic equilibrium calculation for Process Metallurgy.

Parameters

database – The thermodynamic database used in the calculation

Returns

A new `AdiabaticEquilibriumCalculation` object

with_adiabatic_process_calculation(*database: ProcessDatabase*) → *ProcessSimulationCalculation*

Creates an adiabatic kinetic process simulation (EERZ, i.e. Effective Equilibrium Reaction Zone model).

Parameters

database – The thermodynamic database used in the calculation

Returns

A new `ProcessSimulationCalculation` object

with_isothermal_equilibrium_calculation(*database: ProcessDatabase*) → *IsoThermalEquilibriumCalculation*

Creates an isothermal equilibrium calculation for Process Metallurgy.

Parameters

database – The thermodynamic database used in the calculation

Returns

A new `IsoThermalEquilibriumCalculation` object

class `tc_python.server.ResultLoader`(*result_loader*)

Bases: `object`

Contains methods for loading results from previously done calculations.

diffusion(*path: str*) → *DiffusionCalculationResult*

Loads a `DiffusionCalculationResult` from disc.

Parameters

path – path to the folder where result was previously saved.

Returns

A new `DiffusionCalculationResult` object which later can be used to get specific values from the calculated result

phase_diagram(*path: str*) → *PhaseDiagramResult*

Loads a `PhaseDiagramResult` from disc.

Parameters

path – path to the folder where result was previously saved.

Returns

A new `PhaseDiagramResult` object which later can be used to get specific values from the calculated result

precipitation_TTT_or_CCT(*path: str*) → *PrecipitationCalculationTTTorCCTResult*

Loads a `PrecipitationCalculationTTTorCCTResult` from disc.

Parameters

path – path to the folder where result was previously saved.

Returns

A new `PrecipitationCalculationTTTorCCTResult` object which later can be used to get specific values from the calculated result

precipitation_single(*path: str*) → *PrecipitationCalculationSingleResult*

Loads a `PrecipitationCalculationSingleResult` from disc.

Parameters

path – path to the folder where result was previously saved.

Returns

A new `PrecipitationCalculationSingleResult` object which later can be used to get specific values from the calculated result

property_diagram(*path: str*) → *PropertyDiagramResult*

Loads a `PropertyDiagramResult` from disc.

Parameters

path – path to the folder where result was previously saved.

Returns

A new `PropertyDiagramResult` object which later can be used to get specific values from the calculated result

property_model(*path: str*) → *PropertyModelResult*

Loads a `PropertyModelResult` from disc.

Parameters

path – path to the folder where result was previously saved.

Returns

A new `PropertyModelResult` object which later can be used to get specific values from the calculated result

scheil(*path: str*) → *ScheilCalculationResult*

Loads a `ScheilCalculationResult` from disc.

Parameters

path – path to the folder where result was previously saved.

Returns

A new `ScheilCalculationResult` object which later can be used to get specific values from the calculated result

single_equilibrium(*path: str*) → *SingleEquilibriumResult*

Loads a `SingleEquilibriumResult` from disc.

Parameters

path – path to the folder where result was previously saved.

Returns

A new `SingleEquilibriumResult` object which later can be used to get specific values from the calculated result

class `tc_python.server.Setup(debug_logging=False)`

Bases: `object`

Starting point for all calculations.

Note: This class exposes methods that have no precondition, it is used for choosing databases and elements.

disable_caching() → `Self`

A previously set cache folder is no longer used.

Note: Within the session, caching is activated and used through the default temporary directory.

Returns

This *Setup* object

get_database_info(*database_short_name: str*) → `str`

Obtains the short information available for the specified database.

Parameters

database_short_name – The name of the database (i.e. “FEDEMO”, ...)

Returns

The short information about the database

get_database_path_on_disk(*database_short_name: str*) → `str`

Obtains the path to the database file on disk. *TCPATH* is a placeholder for the root path of the used Thermo-Calc installation.

Note: Encrypted databases (*.TDC) cannot be edited.

Parameters

database_short_name – The name of the database (i.e. “FEDEMO”, ...)

Returns

The path to the database on disk

get_databases() → `List[str]`

Obtains the short names of all databases available in the used Thermo-Calc installation.

Note: Only databases with a valid license are listed.

Returns

List of the available databases

get_license_manager() → *LicenseManager*

Returns the license manager, which is used for managing Thermo-calc licenses for TC-Python

Returns

the license manager

get_property_models(*path_to_models: str = ""*) → Set[str]

Lists the names of all Property Models in the specified directory.

If the directory is not specified, the Property Model folder used by the normal Thermo-Calc application is used.

Parameters

path_to_models – The path where the Property Models are installed. If no value is entered, the Property Model folder used by the normal Thermo-Calc application is used.

Returns

Set containing all Property Model names

load_result_from_disk() → *ResultLoader*

Loads a previously calculated result from disk.

Note: This **only** works for results created by calling one of the `save_result()` methods on a *Result* class created from a calculation.

Returns

A new *ResultLoader* object

select_database_and_elements(*database_name: str, list_of_elements: List[str]*) → *SystemBuilder*

Selects a first thermodynamic or kinetic database and selects the elements in it.

Parameters

- **database_name** – The name of the database, for example “FEDEMO”
- **list_of_elements** – The list of the selected elements in that database, for example [“Fe”, “C”]

Returns

A new *SystemBuilder* object

select_thermodynamic_and_kinetic_databases_with_elements(*thermodynamic_db_name: str, kinetic_db_name: str, list_of_elements: List[str]*) → *MultiDatabaseSystemBuilder*

Selects the thermodynamic and kinetic database at once, guarantees that the databases are added in the correct order. Further rejection or selection of phases applies to both databases.

Parameters

- **thermodynamic_db_name** – The thermodynamic database name, for example “FEDEMO”
- **kinetic_db_name** – The kinetic database name, for example “MFEDEMO”
- **list_of_elements** – The list of the selected elements in that database, for example [“Fe”, “C”]

Returns

A new *MultiDatabaseSystemBuilder* object

select_user_database_and_elements(*path_to_user_database: str, list_of_elements: List[str]*) → *SystemBuilder*

Selects a user-defined database and selects the elements in it.

Note: By using a r-literal, it is possible to use slashes on all platforms, also on Windows: `select_user_database_and_elements(r"my path/user_db.tdb", ["Fe", "Cr"])`

Otherwise it is required to use **double** back-slashes on Windows as separator.

Note: On Linux and Mac the path is case-sensitive, also the file ending.

Parameters

- **path_to_user_database** – The path to the database file ("database".TDB), defaults to the current working directory. Only filename is required if the database is located in the same folder as the script.
- **list_of_elements** – The list of the selected elements in that database, for example ["Fe", "C"]

Returns

A new `SystemBuilder` object

set_cache_folder(*path: str = "*, *precision_for_floats: int = 12*) → Self

Sets a folder where results from calculations and state of systems are saved. If at any time a calculation is run which has the exact same setting as a previous, the calculation is not re-run. The result is instead loaded from this folder.

Note: The same folder can be used in several scripts, and it can even be shared between different users. It can be a network folder.

Parameters

- **path** – path to the folder where results should be stored. It can be relative or absolute.
- **precision_for_floats** – The number of significant figures used when comparing if the calculation has the same setting as a previous.

Returns

This `SetUp` object

set_ges_version(*version: int = 6*) → Self

Setting the version of the Gibbs Energy System (GES).

Parameters

version – The GES-version (currently version 5 or 6)

Returns

This `SetUp` object

set_log_level_to_debug() → Self

Sets log level to DEBUG

Returns

This `SetUp` object

`set_log_level_to_info()` → Self

Sets log level to INFO

Returns

This *SetUp* object

`with_additive_manufacturing()` → *AdditiveManufacturingCalculations*

Provides access to the calculation objects for all Additive Manufacturing calculations.

`with_metallurgy()` → *MetallurgyCalculations*

Provides access to the calculation objects for all Process Metallurgy calculations.

These are specialised calculations for working with metallurgical processes. Both equilibrium calculations and kinetic process simulations (Effective Equilibrium Reaction Zone model) are available.

```
class tc_python.server.TCPython(logging_policy=LoggingPolicy.SCREEN, log_file=None,
                                debug_mode=False, debug_logging=False,
                                do_throw_on_backend_hard_crash=True, port_number=0)
```

Bases: object

Starting point of the API. Typical syntax:

```
with TCPython() as session:
    session.select_database_and_elements(...)
```

Note: Each usage of *with TCPython()* causes significant overhead (starting a new process, stopping the old one, cleaning up the temporary disk space). Usually it is recommendable to call *with TCPython()* only once for each process, even if working in a loop. Instead you should pass the session or calculator object into the loop and use them there.

If necessary, beginning from version 2019a it is however possible to call *with TCPython* safely multiple times.

`tc_python.server.is_java_version_25(java_path)`

Check if the Java executable at the given path is version 25.

Args:

java_path (str): Path to the Java executable

Returns:

bool: True if Java version is 25, False otherwise

```
tc_python.server.start_api_server(logging_policy=LoggingPolicy.SCREEN, log_file=None,
                                  debug_mode=False, is_unittest=False,
                                  do_throw_on_backend_hard_crash=True, port_number=0)
```

Starts a process of the API server and sets up the socket communication with it.

Parameters

- **logging_policy** – Determines if the TC-Python log output is sent to the screen (*LoggingPolicy.SCREEN*), to file (*LoggingPolicy.FILE*) or nothing is logged at all (*LoggingPolicy.NONE*) **Default:** *LoggingPolicy.SCREEN*. Note that the log-handlers can also be adapted through the *tc_python.LOGGER* object at any time.
- **log_file** – The log-file relative to the current path or absolute, only relevant if *logging_policy=LoggingPolicy.FILE*. Log-output will be appended.
- **debug_mode** – If *True* it is tried to open a connection to an already running API-server. **This is only used for debugging the API itself.**

- **is_unittest** – Should be True if called by a unit test, **only to be used internally for development**.
- **do_throw_on_backend_hard_crash** – If *True* an *UnrecoverableCalculationException* will be thrown if the Java-backend crashes hard, if *False* the application will simply crash with a FORTRAN-stacktrace. *If True` the exception can be caught outside of the `with`-clause and the application can continue, if False` more information about the error is shown by the stacktrace..*
- **port_number** – The port number for the communication with the Java-backend server. **This is not required to be changed by normal users.**

Warning: Most users should use *TCPython* using a with-statement for automatic management of the resources (network sockets and temporary files). If you anyway need to use that method, make sure to call `stop_api_server()` in any case using the try-finally-pattern.

```
tc_python.server.start_matlab_server(logging_policy=LoggingPolicy.SCREEN, log_file=None,
                                     debug_mode=False, is_unittest=False,
                                     do_throw_on_backend_hard_crash=True, port_number=0)
```

```
tc_python.server.stop_api_server(gateway_id: str = None)
```

Clears all resources used by the session (i.e. shuts down the API server and deletes all temporary files). The disk usage of temporary files might be significant.

Warning: Call this method only if you used `start_api_server()` initially. **It should never be called when the API has been initialized in a with-statement using *TCPython*.**

6.5 Module “quantity_factory”

```
class tc_python.quantity_factory.DiffusionQuantity
```

Bases: `AbstractQuantity`

Factory class providing quantities used for defining diffusion simulations and their results.

Note: In this factory class only the most common quantities are defined, you can always use the *Console Mode* syntax strings in the respective methods as an alternative (for example: “NPM(*)”).

```
classmethod activity_of_component(component: str, use_ser: bool = False) → ActivityOfComponent
```

Creates a quantity representing the activity of a component.

Parameters

- **component** – The name of the component, use *ALL_COMPONENTS* to choose all components
- **use_ser** – Use Stable-Element-Reference(SER). The user-defined reference state is be used if this setting is set to *False*.

Returns

A new `ActivityOfComponent` object.

classmethod `chemical_diffusion_coefficient`(*phase: str, diffusing_element: str, gradient_element: str, reference_element: str*) → `ChemicalDiffusionCoefficient`

Creates a quantity representing the chemical diffusion coefficient of a phase [m²/s].

Parameters

- **phase** – The name of the phase
- **diffusing_element** – The diffusing element
- **gradient_element** – The gradient element
- **reference_element** – The reference element (for example “Fe” in a steel)

Returns

A new `ChemicalDiffusionCoefficient` object.

classmethod `chemical_potential_of_component`(*component: str, use_ser: bool = False*) → `ChemicalPotentialOfComponent`

Creates a quantity representing the chemical potential of a component [J].

Parameters

- **component** – The name of the component, use `ALL_COMPONENTS` to choose all components
- **use_ser** – Use Stable-Element-Reference(SER). The user-defined reference state is used if this setting is set to `False`.

Returns

A new `ChemicalPotentialOfComponent` object.

classmethod `distance`(*region: str = 'All'*) → `Distance`

Creates a quantity representing the distance [m].

Parameters

region – The name of the region or `All` to choose global.

classmethod `intrinsic_diffusion_coefficient`(*phase: str, diffusing_element: str, gradient_element: str, reference_element: str*) → `IntrinsicDiffusionCoefficient`

Creates a quantity representing the intrinsic diffusion coefficient of a phase [m²/s].

Parameters

- **phase** – The name of the phase
- **diffusing_element** – The diffusing element
- **gradient_element** – The gradient element
- **reference_element** – The reference element (for example “Fe” in a steel)

Returns

A new `IntrinsicDiffusionCoefficient` object.

classmethod `l_bis`(*phase: str, diffusing_element: str, gradient_element: str, reference_element: str*) → `Lbis`

Creates a quantity representing `L'` of a phase [m²/s].

Parameters

- **phase** – The name of the phase

- **diffusing_element** – The diffusing element
- **gradient_element** – The gradient element
- **reference_element** – The reference element (for example “Fe” in a steel)

Returns

A new `Lbis` object.

classmethod `mass_fraction_of_a_component`(*component: str*) → `MassFractionOfAComponent`

Creates a quantity representing the mass fraction of a component.

Parameters

component – The name of the component or `ALL_COMPONENTS` to choose all components

Returns

A new `MassFractionOfAComponent` object.

classmethod `mass_fraction_of_a_phase`(*phase: str*) → `MassFractionOfAPhase`

Creates a quantity representing the mass fraction of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases.

Returns

A new `MassFractionOfAPhase` object.

classmethod `mobility_of_component_in_phase`(*phase: str, component: str*) →

`MobilityOfComponentInPhase`

Creates a quantity representing the mobility of a component in a phase [m^2/Js].

Parameters

- **phase** – The name of the phase
- **component** – The name of the component

Returns

A new `MobilityOfComponentInPhase` object.

classmethod `mole_fraction_of_a_component`(*component: str*) → `MoleFractionOfAComponent`

Creates a quantity representing the mole fraction of a component.

Parameters

component – The name of the component or `ALL_COMPONENTS` to choose all components

Returns

A new `MoleFractionOfAComponent` object.

classmethod `mole_fraction_of_a_phase`(*phase: str*) → `MoleFractionOfAPhase`

Creates a quantity representing the mole fraction of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new `MoleFractionOfAPhase` object.

classmethod `position_of_lower_boundary_of_region`(*region: str*) →

`PositionOfLowerBoundaryOfRegion`

Creates a quantity representing the position of lower boundary of a region [m].

Parameters

region – The name of the region

Returns

A new `PositionOfLowerBoundaryOfRegion` object.

classmethod `position_of_upper_boundary_of_region(region: str) → PositionOfUpperBoundaryOfRegion`

Creates a quantity representing the position of upper boundary of a region [m].

Parameters

region – The name of the region

Returns

A new `PositionOfUpperBoundaryOfRegion` object.

classmethod `temperature() → Temperature`

Creates a quantity representing the temperature [K].

Returns

A new `Temperature` object.

classmethod `thermodynamic_factor(phase: str, diffusing_element: str, gradient_element: str, reference_element: str) → ThermoDynamicFactor`

Creates a quantity representing thermodynamic factor of a phase.

Parameters

- **phase** – The name of the phase
- **diffusing_element** – The diffusing element
- **gradient_element** – The gradient element
- **reference_element** – The reference element (for example “Fe” in a steel)

Returns

A new `ThermoDynamicFactor` object.

classmethod `time() → Time`

Creates a quantity representing the time [s].

classmethod `total_mass_fraction_of_component(component: str) → TotalMassFractionOfComponent`

Creates a quantity representing the total mass fraction of a component.

Parameters

component – The name of the component

Returns

A new `TotalMassFractionOfComponent` object.

classmethod `total_mass_fraction_of_component_in_phase(phase: str, component: str) → TotalMassFractionOfComponentInPhase`

Creates a quantity representing the total mass fraction of a component in a phase.

Parameters

- **phase** – The name of the phase
- **component** – The name of the component

Returns

A new `TotalMassFractionOfComponentInPhase` object.

classmethod `total_mass_fraction_of_phase`(*phase: str*) → `TotalMassFractionOfPhase`

Creates a quantity representing the total mass fraction of a phase.

Parameters

phase – The name of the phase.

Returns

A new `TotalMassFractionOfPhase` object.

classmethod `total_mole_fraction_of_component`(*component: str*) →
`TotalMoleFractionOfComponent`

Creates a quantity representing the total mole fraction of a component.

Parameters

component – The name of the component

Returns

A new `TotalMoleFractionOfComponent` object.

classmethod `total_mole_fraction_of_component_in_phase`(*phase: str, component: str*) →
`TotalMoleFractionOfComponentInPhase`

Creates a quantity representing the total mole fraction of a component in a phase.

Parameters

- **phase** – The name of the phase
- **component** – The name of the component

Returns

A new `TotalMoleFractionOfComponentInPhase` object.

classmethod `total_volume_fraction_of_phase`(*phase: str*) → `TotalVolumeFractionOfPhase`

Creates a quantity representing the total volume fraction of a phase.

Parameters

phase – The name of the phase.

Returns

A new `TotalVolumeFractionOfPhase` object.

classmethod `tracer_diffusion_coefficient`(*phase: str, diffusing_element: str*) →
`TracerDiffusionCoefficient`

Creates a quantity representing tracer diffusion coefficient of a phase [m^2/s].

Parameters

- **phase** – The name of the phase
- **diffusing_element** – The diffusing element

Returns

A new `TracerDiffusionCoefficient` object.

classmethod `u_fraction_of_a_component`(*component: str*) → `UFractionOfAComponent`

Creates a quantity representing the u-fraction of a component.

Parameters

component – The name of the component

Returns

A new `UFractionOfAComponent` object.

classmethod `user_defined_function`(*expression: str*) → Function

Creates a quantity representing a user-defined function.

Parameters

expression – The function expression

Returns

A new Function object

classmethod `velocity_of_lower_boundary_of_region`(*region: str*) →

`VelocityOfLowerBoundaryOfRegion`

Creates a quantity representing the velocity of lower boundary of a region [m/s].

Parameters

region – The name of the region

Returns

A new `VelocityOfLowerBoundaryOfRegion` object.

classmethod `velocity_of_upper_boundary_of_region`(*region: str*) →

`VelocityOfUpperBoundaryOfRegion`

Creates a quantity representing the velocity of upper boundary of a region [m/s].

Parameters

region – The name of the region

Returns

A new `VelocityOfUpperBoundaryOfRegion` object.

classmethod `width_of_region`(*region: str*) → Function

Creates a quantity representing the width of a region [m].

Parameters

region – The name of the region

Returns

A new `WidthOfRegion` object.

class `tc_python.quantity_factory.IndependentVariable`

Bases: `AbstractQuantity`

Factory class providing quantities used for defining the independent variable in general diffusion result querying.

classmethod `distance`(*region: str = 'All'*) → Distance

Creates an independent variable representing the distance [m].

Returns

A new `Distance` object

classmethod `time`() → Time

Creates an independent variable representing the time [s].

Returns

A new `Time` object

class `tc_python.quantity_factory.PlotCondition`

Bases: `AbstractQuantity`

Factory class providing quantities used for defining the plot condition in general diffusion result querying.

Note: In this factory class only the most common quantities are defined, you can always use the *Console Mode* syntax strings in the respective methods as an alternative (for example: “time last”).

classmethod `distance(distancepoint: float, region: str = 'All')` → `DistanceCondition`

Creates a plot condition representing the distance [m].

Change in version 2019b: Mandatory parameter *distancepoint* added

Parameters

- **distancepoint** – The distance from the lower interface of the region
- **region** – The name of the region or *All* to choose global.

Returns

A new *DistanceCondition* object

classmethod `integral()` → `IntegralCondition`

Creates an integral plot condition.

Returns

A new *IntegralCondition* object

classmethod `interface(region: str, interface_position: InterfacePosition)` → `InterfaceCondition`

Creates a plot condition representing an interface between two regions.

Parameters

- **region** – The name of the region used for defining the interface
- **interface_position** – The position of the interface relative to that region (lower or upper)

Returns

A new *InterfaceCondition* object

classmethod `time(timepoint: Union[float, str] = 'Last')` → `TimeCondition`

Creates a plot condition representing the time [s].

Change in version 2019b: Lists of timepoints are no longer supported

Parameters

timepoint – The timepoint. Optionally “Last” can be used for the end of the simulation

Returns

A new *TimeCondition* object

class `tc_python.quantity_factory.PropertyModelQuantity`

Bases: `AbstractQuantity`

Factory class for generating and using any given Property Model Quantity.

classmethod `annealing_temperature()` → `PMTemperature`

classmethod `end_temperature()` → `PMTemperature`

classmethod `evaluation_temperature()` → `PMTemperature`

classmethod `freeze_in_temperature()` → `PMTemperature`

classmethod `high_limit_temperature()` → `PMTemperature`

classmethod `initial_temperature()` → `PMTemperature`

classmethod `low_limit_temperature()` → `PMTemperature`

classmethod `quench_temperature()` → `PMTemperature`

classmethod `start_temperature()` → `PMTemperature`

classmethod `tempering_temperature()` → `PMTemperature`

class `tc_python.quantity_factory.ScheilQuantity`

Bases: `AbstractQuantity`

Factory class providing quantities used for defining a Scheil calculation result ([`tc_python.scheil.ScheilCalculationResult`](#)).

classmethod `apparent_heat_capacity_per_gram()` → `ApparentHeatCapacityPerGram`

Creates a quantity representing the apparent heat capacity [J/g/K].

Returns

A new `ApparentHeatCapacityPerGram` object.

classmethod `apparent_heat_capacity_per_mole()` → `ApparentHeatCapacityPerMole`

Creates a quantity representing the apparent heat capacity [J/mol/K].

Returns

A new `ApparentHeatCapacityPerMole` object.

classmethod `apparent_volumetric_thermal_expansion_coefficient()` →

`ApparentVolumetricThermalExpansionCoefficient`

Creates a quantity representing the apparent volumetric thermal expansion coefficient of the system [1/K].

Returns

A new `ApparentVolumetricThermalExpansionCoefficient` object.

classmethod `average_composition_of_solid_phases_as_mass_fraction(component: str)` →

`AverageCompositionOfSolidPhasesAsMassFraction`

Creates a quantity representing the average composition of solid phases [mass fraction] at the current Scheil step.

Parameters

component – The name of the component, use `ALL_COMPONENTS` to choose all components

Returns

A new `AverageCompositionOfSolidPhasesAsMassFraction` object.

classmethod `average_composition_of_solid_phases_as_mole_fraction(component: str)` →

`AverageCompositionOfSolidPhasesAsMoleFraction`

Creates a quantity representing the average composition of solid phases [mole fraction] at the current Scheil step.

Parameters

component – The name of the component, use `ALL_COMPONENTS` to choose all components

Returns

A new `AverageCompositionOfSolidPhasesAsMoleFraction` object.

classmethod `composition_of_phase_as_mole_fraction`(*phase: str, component: str*) → `CompositionOfPhaseAsMoleFraction`

Creates a quantity representing the composition of a phase [mole-fraction].

Parameters

- **phase** – The name of the phase, use `ALL_PHASES` to choose all stable phases
- **component** – The name of the component, use `ALL_COMPONENTS` to choose all components

Returns

A new `CompositionOfPhaseAsMoleFraction` object.

classmethod `composition_of_phase_as_weight_fraction`(*phase: str, component: str*) → `CompositionOfPhaseAsWeightFraction`

Creates a quantity representing the composition of a phase [weight-fraction].

Parameters

- **phase** – The name of the phase, use `ALL_PHASES` to choose all stable phases
- **component** – The name of the component, use `ALL_COMPONENTS` to choose all components

Returns

A new `CompositionOfPhaseAsWeightFraction` object.

classmethod `density_of_phase`(*phase: str*) → `DensityOfPhase`

Creates a quantity representing the average density of a phase [g/cm³].

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new `DensityOfPhase` object.

classmethod `density_of_system`() → `DensityOfSystem`

Creates a quantity representing the average density of the system [g/cm³].

Returns

A new `DensityOfSystem` object.

classmethod `distribution_of_component_of_phase`(*phase: str, component: str*) → `DistributionOfComponentOfPhase`

Creates a quantity representing the (molar) fraction of the specified component being present in the specified phase compared to the overall system [-]. This corresponds to the degree of segregation to that phase.

Parameters

- **phase** – The name of the phase
- **component** – The name of the component

Returns

A new `DistributionOfComponentOfPhase` object.

classmethod `driving_force_for_evaporation`() → `DrivingForceForEvaporation`

Creates a quantity representing the driving force for evaporation

Returns

A new `DrivingForceForEvaporation` object.

classmethod `dynamic_viscosity`(*phase: str*) → `DynamicViscosity`

Creates a quantity representing the dynamic viscosity of a liquid phase.

Parameters

phase – The name of the liquid phase

Returns

A new `DynamicViscosity` object.

classmethod `electric_conductivity`(*interface_scattering_constant=4e-08*) → `ScheilElectricConductivity`

Creates a quantity representing electric conductivity.

Parameters

interface_scattering_constant – A constant describing the magnitude of the effect of phase interface scattering [ohm * m]. Omitting it or giving a zero value means phase interface scattering is not considered.

Returns

A new `ScheilElectricConductivity` object.

classmethod `electric_conductivity_of_phase`(*phase: str*) → `ElectricConductivityOfPhase`

Creates a quantity representing the electric conductivity of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new `ElectricConductivityOfPhase` object.

classmethod `electric_resistivity`(*interface_scattering_constant=4e-08*) → `ScheilElectricResistivity`

Creates a quantity representing electric resistivity.

Parameters

interface_scattering_constant – A constant describing the magnitude of the effect of phase interface scattering [ohm * m]. Omitting it or giving a zero value means phase interface scattering is not considered.

Returns

A new `ScheilElectricResistivity` object.

classmethod `electric_resistivity_of_phase`(*phase: str*) → `ElectricResistivityOfPhase`

Creates a quantity representing the electric resistivity of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new `ElectricResistivityOfPhase` object.

classmethod `evaporation_enthalpy`() → `EvaporationEnthalpy`

Creates a quantity representing the evaporation enthalpy.

Returns

A new `EvaporationEnthalpy` object.

classmethod `heat_per_gram()` → HeatPerGram

Creates a quantity representing the total heat release from the liquidus temperature down to the current temperature [J/g].

Note: The total or apparent heat release during the solidification process consists of two parts: one is the so-called latent heat, i.e. heat due to the liquid -> solid phase transformation (`latent_heat_per_mole()` and `latent_heat_per_gram()`), and the other is the heat related to the specific heat of liquid and solid phases (`heat_per_mole()` and `heat_per_gram()`).

Returns

A new HeatPerGram object.

classmethod `heat_per_mole()` → HeatPerMole

Creates a quantity representing the total heat release from the liquidus temperature down to the current temperature [J/mol].

Note: The total or apparent heat release during the solidification process consists of two parts: one is the so-called latent heat, i.e. heat due to the liquid -> solid phase transformation (`latent_heat_per_mole()` and `latent_heat_per_gram()`), and the other is the heat related to the specific heat of liquid and solid phases (`heat_per_mole()` and `heat_per_gram()`).

Returns

A new HeatPerMole object.

classmethod `kinematic_viscosity(phase: str)` → KinematicViscosity

Creates a quantity representing the kinematic viscosity of a liquid phase.

Parameters

phase – The name of the liquid phase

Returns

A new KinematicViscosity object.

classmethod `latent_heat_per_gram()` → LatentHeatPerGram

Creates a quantity representing the cumulated latent heat release from the liquidus temperature down to the current temperature [J/g].

Note: The total or apparent heat release during the solidification process consists of two parts: one is the so-called latent heat, i.e. heat due to the liquid -> solid phase transformation (`latent_heat_per_mole()` and `latent_heat_per_gram()`), and the other is the heat related to the specific heat of liquid and solid phases (`heat_per_mole()` and `heat_per_gram()`).

Returns

A new LatentHeatPerGram object.

classmethod `latent_heat_per_mole()` → LatentHeatPerMole

Creates a quantity representing the cumulated latent heat release from the liquidus temperature down to the current temperature [J/mol].

Note: The total or apparent heat release during the solidification process consists of two parts: one is the so-called latent heat, i.e. heat due to the liquid \rightarrow solid phase transformation (*latent_heat_per_mole()* and *latent_heat_per_gram()*), and the other is the heat related to the specific heat of liquid and solid phases (*heat_per_mole()* and *heat_per_gram()*).

Returns

A new LatentHeatPerMole object.

classmethod `mass_fraction_of_a_solid_phase(phase: str) → MassFractionOfASolidPhase`

Creates a quantity representing the mass fraction of a solid phase.

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all solid phases

Returns

A new MassFractionOfASolidPhase object.

classmethod `mass_fraction_of_all_liquid() → MassFractionOfAllLiquid`

Creates a quantity representing the total mass fraction of all the liquid phase.

Returns

A new MassFractionOfAllLiquid object.

classmethod `mass_fraction_of_all_solid_phases() → MassFractionOfAllSolidPhase`

Creates a quantity representing the total mass fraction of all solid phases.

Returns

A new MassFractionOfAllSolidPhase object.

classmethod `molar_mass_of_gas() → MolarMassOfGas`

Creates a quantity representing the molar mass of gas

Returns

A new MolarMassOfGas object.

classmethod `molar_volume_of_phase(phase: str) → MolarVolumeOfPhase`

Creates a quantity representing the molar volume of a phase [m³/mol].

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all phases

Returns

A new MolarVolumeOfPhase object.

classmethod `molar_volume_of_system() → MolarVolumeOfSystem`

Creates a quantity representing the molar volume of the system [m³/mol].

Returns

A new MolarVolumeOfSystem object.

classmethod `mole_fraction_of_a_solid_phase(phase: str) → MoleFractionOfASolidPhase`

Creates a quantity representing the molar fraction of a solid phase.

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all solid phases

Returns

A new MoleFractionOfASolidPhase object.

classmethod `mole_fraction_of_all_liquid()` → `MoleFractionOfAllLiquid`

Creates a quantity representing the total molar fraction of all the liquid phase.

Returns

A new `MoleFractionOfAllLiquid` object.

classmethod `mole_fraction_of_all_solid_phases()` → `MoleFractionOfAllSolidPhases`

Creates a quantity representing the total molar fraction of all solid phases.

Returns

A new `MoleFractionOfAllSolidPhases` object.

classmethod `site_fraction_of_component_in_phase(phase: str, component: str, sub_lattice_ordinal_no: int = 0)` → `SiteFractionOfComponentInPhase`

Creates a quantity representing the site fractions [-].

Parameters

- **phase** – The name of the phase, use `ALL_PHASES` to choose all stable phases
- **component** – The name of the component, use `ALL_COMPONENTS` to choose all components
- **sub_lattice_ordinal_no** – The ordinal number (i.e. 1, 2, ...) of the sublattice of interest, use `None` to choose all sublattices

Note: Detailed information about the sublattices can be obtained by getting the `Phase` object of a phase from the `System` object using `tc_python.system.System.get_phase_in_system`. For each phase the sublattices are obtained by using `tc_python.system.Phase.get_sublattices`. The order in the returned list is equivalent to the sublattice ordinal number expected, **but note that the ordinal numbers start with 1**.

Returns

A new `SiteFractionOfComponentInPhase` object.

classmethod `surface_tension(phase: str)` → `SurfaceTension`

Creates a quantity representing the surface tension of a liquid phase.

Parameters

phase – The name of the liquid phase

Returns

A new `SurfaceTension` object.

classmethod `temperature()` → `Temperature`

Creates a quantity representing the temperature [K].

Returns

A new `Temperature` object.

classmethod `thermal_conductivity(interface_scattering_constant=4e-08)` → `ScheilThermalConductivity`

Creates a quantity representing thermal conductivity.

Parameters

interface_scattering_constant – A constant describing the magnitude of the effect of

phase interface scattering [ohm * m]. Omitting it or giving a zero value means phase interface scattering is not considered.

Returns

A new ScheilThermalConductivity object.

classmethod `thermal_conductivity_of_phase(phase: str) → ThermalConductivityOfPhase`

Creates a quantity representing the thermal conductivity of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new ThermalConductivityOfPhase object.

classmethod `thermal_diffusivity(interface_scattering_constant=4e-08) → ScheilThermalDiffusivity`

Creates a quantity representing thermal diffusivity.

Parameters

interface_scattering_constant – A constant describing the magnitude of the effect of phase interface scattering [ohm * m]. Omitting it or giving a zero value means phase interface scattering is not considered.

Returns

A new ScheilThermalDiffusivity object.

classmethod `thermal_diffusivity_of_phase(phase: str) → ThermalDiffusivityOfPhase`

Creates a quantity representing the thermal diffusivity of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new ThermalDiffusivityOfPhase object.

classmethod `thermal_resistivity(interface_scattering_constant=4e-08) → ScheilThermalResistivity`

Creates a quantity representing thermal resistivity.

Parameters

interface_scattering_constant – A constant describing the magnitude of the effect of phase interface scattering [ohm * m]. Omitting it or giving a zero value means phase interface scattering is not considered.

Returns

A new ScheilThermalResistivity object.

classmethod `thermal_resistivity_of_phase(phase: str) → ThermalResistivityOfPhase`

Creates a quantity representing the thermal resistivity of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new ThermalResistivityOfPhase object.

classmethod `volume_fraction_of_a_solid_phase(phase: str) → VolumeFractionOfASolidPhase`

Creates a quantity representing the volume fraction of a solid phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all solid phases

Returns

A new `VolumeFractionOfASolidPhase` object.

classmethod `volume_fraction_of_all_liquid()` → `VolumeFractionOfAllLiquid`

Creates a quantity representing the total volume fraction of all the liquid phase.

Returns

A new `VolumeFractionOfAllLiquid` object.

classmethod `volume_fraction_of_all_solid_phases()` → `VolumeFractionOfAllSolidPhases`

Creates a quantity representing the total volume fraction of all solid phases.

Returns

A new `VolumeFractionOfAllSolidPhases` object.

class `tc_python.quantity_factory.ThermodynamicQuantity`

Bases: `AbstractQuantity`

Factory class providing quantities used for defining equilibrium calculations (single equilibrium, property and phase diagrams, ...) and their results.

Note: In this factory class only the most common quantities are defined, you can always use the *Console Mode* syntax strings in the respective methods as an alternative (for example: “NPM(*)”).

classmethod `activity_of_component(component: str, use_ser: bool = False)` → `ActivityOfComponent`

Creates a quantity representing the activity of a component [-].

Parameters

- **component** – The name of the component, use `ALL_COMPONENTS` to choose all components
- **use_ser** – Use Stable-Element-Reference(SER). The user-defined reference state is used if this setting is set to `False`.

Returns

A new `ActivityOfComponent` object.

classmethod `bulk_modulus(phase: str)` → `BulkModulus`

Creates a quantity representing the bulk modulus of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new `BulkModulus` object.

classmethod `chemical_diffusion_coefficient(phase: str, diffusing_element: str, gradient_element: str, reference_element: str)` → `ChemicalDiffusionCoefficient`

Creates a quantity representing the chemical diffusion coefficient of a phase [m²/s].

Parameters

- **phase** – The name of the phase
- **diffusing_element** – The diffusing element
- **gradient_element** – The gradient element
- **reference_element** – The reference element (for example “Fe” in a steel)

Returns

A new `ChemicalDiffusionCoefficient` object.

classmethod `chemical_potential_of_component`(*component: str, use_ser: bool = False*) → `ChemicalPotentialOfComponent`

Creates a quantity representing the chemical potential of a component [J].

Parameters

- **component** – The name of the component, use `ALL_COMPONENTS` to choose all components
- **use_ser** – Use Stable-Element-Reference(SER). The user-defined reference state is used if this setting is set to `False`.

Returns

A new `ChemicalPotentialOfComponent` object.

classmethod `composition_of_phase_as_mole_fraction`(*phase: str, component: str = 'All'*) → `CompositionOfPhaseAsMoleFraction`

Creates a quantity representing the composition of a phase [mole-fraction].

Parameters

- **phase** – The name of the phase, use `ALL_PHASES` to choose all stable phases
- **component** – The name of the component, use `ALL_COMPONENTS` to choose all components

Returns

A new `CompositionOfPhaseAsMoleFraction` object.

classmethod `composition_of_phase_as_weight_fraction`(*phase: str, component: str*) → `CompositionOfPhaseAsWeightFraction`

Creates a quantity representing the composition of a phase [weight-fraction].

Parameters

- **phase** – The name of the phase, use `ALL_PHASES` to choose all stable phases
- **component** – The name of the component, use `ALL_COMPONENTS` to choose all components

Returns

A new `CompositionOfPhaseAsWeightFraction` object.

classmethod `dynamic_viscosity`(*phase: str*) → `DynamicViscosity`

Creates a quantity representing the dynamic viscosity of a liquid phase.

Parameters

phase – The name of the liquid phase

Returns

A new `DynamicViscosity` object.

classmethod `electric_conductivity`() → `ElectricConductivity`

Creates a quantity representing electric conductivity.

Returns

A new `ElectricConductivity` object.

classmethod `electric_conductivity_of_phase`(*phase: str*) → `ElectricConductivityOfPhase`

Creates a quantity representing the electric conductivity of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new `ElectricConductivityOfPhase` object.

classmethod `electric_resistivity`() → `ElectricResistivity`

Creates a quantity representing electric resistivity.

Returns

A new `ElectricResistivity` object.

classmethod `electric_resistivity_of_phase`(*phase: str*) → `ElectricResistivityOfPhase`

Creates a quantity representing the electric resistivity of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new `ElectricResistivityOfPhase` object.

classmethod `gibbs_energy_of_a_phase`(*phase: str, use_ser: bool = False*) → `GibbsEnergyOfAPhase`

Creates a quantity representing the Gibbs energy of a phase [J].

Parameters

- **phase** – The name of the phase or `ALL_PHASES` to choose all phases
- **use_ser** – Use Stable-Element-Reference(SER). The user-defined reference state will be used when this setting is set to False.

Returns

A new `GibbsEnergyOfAPhase` object.

classmethod `kinematic_viscosity`(*phase: str*) → `KinematicViscosity`

Creates a quantity representing the kinematic viscosity of a liquid phase.

Parameters

phase – The name of the liquid phase

Returns

A new `KinematicViscosity` object.

classmethod `mass_fraction_of_a_component`(*component: str*) → `MassFractionOfAComponent`

Creates a quantity representing the mass fraction of a component.

Parameters

component – The name of the component or `ALL_COMPONENTS` to choose all components

Returns

A new `MassFractionOfAComponent` object.

classmethod `mass_fraction_of_a_phase`(*phase: str*) → `MassFractionOfAPhase`

Creates a quantity representing the mass fraction of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases.

Returns

A new `MassFractionOfAPhase` object.

classmethod `molar_volume_of_phase`(*phase: str*) → MolarVolumeOfPhase

Creates a quantity representing the molar volume of a phase [m³/mol].

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all phases

Returns

A new MolarVolumeOfPhase object.

classmethod `molar_volume_of_system`() → MolarVolumeOfSystem

Creates a quantity representing the molar volume of the system [m³/mol].

Returns

A new MolarVolumeOfSystem object.

classmethod `mole_fraction_of_a_component`(*component: str*) → MoleFractionOfAComponent

Creates a quantity representing the mole fraction of a component.

Parameters

component – The name of the component or *ALL_COMPONENTS* to choose all components

Returns

A new MoleFractionOfAComponent object.

classmethod `mole_fraction_of_a_phase`(*phase: str*) → MoleFractionOfAPhase

Creates a quantity representing the mole fraction of a phase.

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all phases

Returns

A new MoleFractionOfAPhase object.

classmethod `normalized_driving_force_of_a_phase`(*phase: str*) →

NormalizedDrivingForceOfAPhase

Creates a quantity representing normalized driving force of a phase [-].

<p>Warning: A driving force calculation requires that the respective phase has been set to the state <i>DORMANT</i>. The parameter <i>All</i> is only reasonable if all phases have been set to that state.</p>
--

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all phases

Returns

A new DrivingForceOfAPhase object.

classmethod `pressure`() → Pressure

Creates a quantity representing the pressure [Pa].

Returns

A new Pressure object.

classmethod `shear_modulus`(*phase: str*) → ShearModulus

Creates a quantity representing the shear modulus of a phase.

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all phases

Returns

A new ShearModulus object.

classmethod `surface_tension(phase: str) → SurfaceTension`

Creates a quantity representing the surface tension of a liquid phase.

Parameters

phase – The name of the liquid phase

Returns

A new SurfaceTension object.

classmethod `system_size() → SystemSize`

Creates a quantity representing the system size [mol].

Returns

A new SystemSize object.

classmethod `temperature() → Temperature`

Creates a quantity representing the temperature [K].

Returns

A new Temperature object.

classmethod `thermal_conductivity() → ThermalConductivity`

Creates a quantity representing thermal conductivity.

Returns

A new ThermalConductivity object.

classmethod `thermal_conductivity_of_phase(phase: str) → ThermalConductivityOfPhase`

Creates a quantity representing the thermal conductivity of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new ThermalConductivityOfPhase object.

classmethod `thermal_diffusivity() → ThermalDiffusivity`

Creates a quantity representing thermal diffusivity.

Returns

A new ThermalDiffusivity object.

classmethod `thermal_diffusivity_of_phase(phase: str) → ThermalDiffusivityOfPhase`

Creates a quantity representing the thermal diffusivity of a phase.

Parameters

phase – The name of the phase or `ALL_PHASES` to choose all phases

Returns

A new ThermalDiffusivityOfPhase object.

classmethod `thermal_resistivity() → ThermalResistivity`

Creates a quantity representing thermal resistivity.

Returns

A new ThermalResistivity object.

classmethod `thermal_resistivity_of_phase`(*phase: str*) → ThermalResistivityOfPhase

Creates a quantity representing the thermal resistivity of a phase.

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all phases

Returns

A new ThermalResistivityOfPhase object.

classmethod `tracer_diffusion_coefficient`(*phase: str, diffusing_element: str*) → TracerDiffusionCoefficient

Creates a quantity representing tracer diffusion coefficient of a phase [m²/s].

Parameters

- **phase** – The name of the phase
- **diffusing_element** – The diffusing element

Returns

A new TracerDiffusionCoefficient object.

classmethod `u_fraction_of_a_component`(*component: str*) → UFractionOfAComponent

Creates a quantity representing the u-fraction of a component.

Parameters

component – The name of the component

Returns

A new UFractionOfAComponent object.

classmethod `user_defined_function`(*expression: str*) → Function

Creates a quantity representing a user-defined function.

Parameters

expression – The function expression

Returns

A new Function object

classmethod `volume_fraction_of_a_phase`(*phase: str*) → VolumeFractionOfAPhase

Creates a quantity representing the volume fraction of a phase.

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all phases

Returns

A new VolumeFractionOfAPhase object.

classmethod `youngs_modulus`(*phase: str*) → YoungsModulus

Creates a quantity representing the Young's modulus of a phase.

Parameters

phase – The name of the phase or *ALL_PHASES* to choose all phases

Returns

A new YoungsModulus object.

6.6 Module “utils”

```
class tc_python.utils.CompositionType(value, names=None, *, module=None, qualname=None,
                                     type=None, start=1, boundary=None)
```

Bases: Enum

The type of composition.

COMPONENT = 1

Composition given per component, this will be identical to *ELEMENT* in case of metals.

ELEMENT = 0

Composition given per element.

```
class tc_python.utils.CompositionUnit(value, names=None, *, module=None, qualname=None,
                                       type=None, start=1, boundary=None)
```

Bases: Enum

The composition unit.

MASS_FRACTION = 1

Mass fraction.

MASS_PERCENT = 0

Mass percent.

MOLE_FRACTION = 3

Mole fraction.

MOLE_PERCENT = 2

Mole percent.

```
class tc_python.utils.ConversionUnit(value, names=None, *, module=None, qualname=None, type=None,
                                       start=1, boundary=None)
```

Bases: Enum

The composition unit used in a conversion.

MOLE_FRACTION = 0

Mole fraction.

MOLE_PERCENT = 1

Mole percent.

WEIGHT_FRACTION = 2

Weight fraction.

WEIGHT_PERCENT = 3

Weight percent.

```
class tc_python.utils.GasAmountUnit(value, names=None, *, module=None, qualname=None, type=None,
                                       start=1, boundary=None)
```

Bases: Enum

The amount of a gas.

KILOGRAM = 1

Kilogram.

NORM_CUBIC_METER = 0

Norm cubic meter (according to ISO 2533, p=101325 Pa, T=288.15 K, typically used for trading of gas bottles). Other definitions vary only slightly.

class `tc_python.utils.GasCompositionUnit`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

The composition unit for a gas.

MASS_FRACTION = 1

Mass fraction.

MASS_PERCENT = 0

Mass percent.

MOLE_FRACTION = 3

Mole fraction.

MOLE_PERCENT = 2

Mole percent.

VOLUME_FRACTION = 5

Volume fraction.

VOLUME_PERCENT = 4

Volume percent.

class `tc_python.utils.GasRateUnit`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

The rate of a gas flow.

KILOGRAM_PER_SEC = 1

Kilogram per second.

NORM_CUBIC_METER_PER_SEC = 0

Norm cubic meter per second (according to ISO 2533, p=101325 Pa, T=288.15 K, typically used for trading of gas bottles). Other definitions vary only slightly.

class `tc_python.utils.InterfacePosition`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

The position of an interface relative to its region. Only used for diffusion simulations.

LOWER = 0

The interface is on the lower side of its region.

UPPER = 1

The interface is on the upper side of its region.

class `tc_python.utils.PhaseUnit`(*value, names=None, *, module=None, qualname=None, type=None, start=1, boundary=None*)

Bases: Enum

The units available for a phase fraction.

MASS_FRACTION = 1

Mass fraction.

MOLE_FRACTION = 0

Mole fraction.

VOLUME_FRACTION = 2

Volume fraction.

class `tc_python.utils.ResultValueGroup(result_line_group_java)`

Bases: `object`

A x-y-dataset representing a line data calculation result (i.e. a Thermo-Calc *quantity 1* vs. *quantity 2*).

Warning: Depending on the calculator, the dataset might contain *NaN*-values to separate the data between different subsets.

Variables

- **label** – a str describing what the data corresponds to
- **x** – list of floats representing the first quantity (“x-axis”)
- **y** – list of floats representing the second quantity (“y-axis”)

get_label() → str

Accessor for the line label :return the line label

get_x() → List[float]

Accessor for the x-values :return the x values

get_y() → List[float]

Accessor for the y-values :return the y values

class `tc_python.utils.TemperatureProfile`

Bases: `object`

Represents a time-temperature profile used by non-isothermal calculations.

Note: The total simulation time can differ from the defined temperature profile. Constant temperature is assumed for any timepoint after the end of the defined profile.

add_time_temperature(*time: float, temperature: float*)

Adds a time-temperature point to the non-isothermal temperature profile.

Parameters

- **time** – The time [s]
- **temperature** – The temperature [K]

Returns

This *TemperatureProfile* object

`tc_python.utils.convert_java_value`(*value*)

Recursively convert Java arrays or maps into Python types. Handles arbitrarily nested Java arrays such as `double[][][]`.

`tc_python.utils.get_result_class_from_string(java_class_name)`

Returns the appropriate result class for a given Java class name.

Parameters

java_class_name – The simple name of the Java class

Returns

The corresponding Python result class

6.7 Module “propertymodel_sdk”

`class tc_python.propertymodel_sdk.AddPrefixToWarning(name=“”)`

Bases: `Filter`

filter(*record*)

Determine if the specified record is to be logged.

Returns True if the record should be logged, or False otherwise. If deemed appropriate, the record may be modified in-place.

`class tc_python.propertymodel_sdk.CCTResult(quantity_id: str, description: str, *, include_in_property_model_wizard: bool = True)`

Bases: `ResultQuantity`

Represents a Continuous Cooling (CCT) result.

Parameters

- **quantity_id** – The id of this result
- **description** – The description of this result

add_time_temperature(*time_temperature_id: str, description: str*)

Adds a time-temperature pair to the result.

Parameters

- **time_temperature_id** – The id of the time-temperature pair
- **description** – The description of the time-temperature pair

temperature_suffix = ' (T)'

The temperature suffix of a `CCTResult`

time_suffix = ' (t)'

The time suffix of a `CCTResult`

`class tc_python.propertymodel_sdk.CCTResultValues(cooling_rate: float = -1.0, cooling_rate_start_temperature: float = -1.0, cooling_rate_end_temperature: float = -1.0)`

Bases: `object`

Represents Continuous Cooling (CCT) result values.

Parameters

- **cooling_rate** – The cooling rate [K/s]
- **cooling_rate_start_temperature** – The start temperature of cooling [K]
- **cooling_rate_end_temperature** – The end temperature of cooling [K]

set_result_time_temperature(*time_temperature_id: str, time: float, temperature: float*)

Sets a time-temperature pair of the result.

Parameters

- **time_temperature_id** – The id of the time-temperature pair
- **time** – The time [s]
- **temperature** – The temperature [K]

class `tc_python.propertymodel_sdk.CalculationContext`(*system: System, model_utils=None*)

Bases: object

Represents the interface of the Property Model with the Thermo-Calc application and the rest of the TC-Python functionality.

Parameters

- **system** – The system object of this calculation
- **model_utils** – The model utils object

get_argument_ids() → Set[str]

Returns a list with the arguments of the models. Including arguments created from dynamic parameters.

get_dependent_component() → str

Obtains the dependent component from the UI

Note: The dependent component is that which has no composition specified explicitly, typically this is the major element of the material (such as Fe, Al, Ni, ...)

Returns

The dependent component

get_element_names_in_camel_case()

Obtains the elements in the system. The dependent component is not included.

Returns

A list of the elements in the system, each written in camel case.

get_mass_fractions() → Dict[str, float]

Obtains the current composition from the UI as mass-fraction.

Note: In case of stepping over one or multiple axis, the returned data will represent the composition at the current step.

Returns

The composition (key: component, value: content) [mass-fraction]

get_mass_percents() → Dict[str, float]

Obtains the current composition from the UI in mass-percent.

Note: In case of stepping over one or multiple axis, the returned data will represent the composition at the current step.

Returns

The composition (key: component, value: content) [mass-percent]

get_model_path() → str

Obtains the current path to the Property Models folder defined by the user.

Returns

The absolute path to the Property Models folder defined by the user.

get_mole_fractions() → Dict[str, float]

Obtains the current composition from the UI as mole-fraction.

Note: In case of stepping over one or multiple axis, the returned data will represent the composition at the current step.

Returns

The composition (key: component, value: content) [mole-fraction]

get_mole_percents() → Dict[str, float]

Obtains the current composition from the UI in mole-percent.

Note: In case of stepping over one or multiple axis, the returned data will represent the composition at the current step.

Returns

The composition (key: component, value: content) [mole-percent]

get_temperature() → float

Obtains the current temperature from the UI.

Returns

The temperature [K]

get_ui_boolean_value(*component_id: str*) → bool

Obtains the value from the specified checkbox UI component.

Parameters

component_id – Id of the checkbox

Returns

The setting of the checkbox

get_ui_condition_list(*component_id: str*) → *ConditionListEntry*

Used to get the selected condition from components of type *UIConditionListComponent* :param component_id: Id of the list UI component :return: The selected condition

get_ui_float_value(*component_id: str*) → float

Obtains the value from the specified UI component.

Parameters

component_id – Id of the UI component

Returns

The value

get_ui_list_value(*component_id: str*) → str

Obtains the selected entry from a UI component list. If a special element (such as *ANY*, *NONE*, ...) is selected, the corresponding locale-independent placeholder is provided.

Parameters

component_id – Id of the list UI component

Returns

The selected entry

get_ui_string_value(*component_id: str*) → str

Obtains the selected entry from a UI component text field.

Parameters

component_id – Id of the string UI component

Returns

The selected entry

get_ui_temperature_value(*component_id: str*) → float

Obtains the temperature from the specified temperature UI component.

Parameters

component_id – Id of the temperature UI component

Returns

The temperature [K], note that input unit of the UI is specified in the model panel. If required, the temperature is automatically converted to K.

set_result_cct_values(*quantity_id: str, r: CCTResultValues*)

Sets the value of a previously defined result quantity (of type *CCTResultValues*) for further usage in the Thermo-Calc application for plotting, etc.

Parameters

- **quantity_id** – unique id of the result quantity
- **r** – the *CCTResultValues* to be set

set_result_quantity_value(*quantity_id: str, value: float, parameter: str = ""*)

Sets the value of a previously defined result quantity for further usage in the Thermo-Calc application for plotting, etc.

Note: Any result quantity that remains unset is automatically set to *NaN*.

Parameters

- **quantity_id** – Unique id of the result quantity
- **parameter** – Use if result is parameterized. f.i. “per phase”
- **value** – The value to be set

set_single_equilibrium_result(*quantity_id: str, r: SingleEquilibriumResult*)

class tc_python.propertymodel_sdk.**ConditionListEntry**

Bases: object

Used in combination with components of type *UIConditionListComponent*.

Contains the element, if the selected condition is a composition Contains the Console Mode syntax of the selected condition. Contains the unit of the selected condition

```
class tc_python.propertymodel_sdk.PropertyModel(_locale: str = 'en-US')
```

Bases: object

The abstract base class for all property models.

Note: Every Property Model needs to implement most of the abstract methods of this class. However, some abstract methods are optional and should only be implemented if required.

Note: If overwriting the constructor in a Property Model, the constructor of the implemented class must have the identical signature and should pass the parameters to this base class constructor.

Tip: It is possible to switch off **internal INFO-log messages coming from the calculation engine** by changing the log-level on the TC-Python log object like this: `logging.getLogger("tc_python").setLevel(logging.ERROR)`.

Parameters

_locale – The locale to be used, **this is an internal parameter and is of no meaning to the end-user**

Variables

logger – logger object that is connected to the Thermo-Calc UI (*INFO*- and *WARNING*-level will be printed as *INFO*, *ERROR*-level as *ERROR*), it can be accessed like this: `self.logger.info("Some message")`

```
abstract add_button_callback(component_id: str, ui_components: Dict[UIComponent, int]) →  
List[UIComponent]
```

Implement this method if you have one or more UI components on which you called `UIComponent.enable_add_button()`, which adds a + button next to the component.

This method will be executed when you press any such + button.

This method is typically used to add more UI components dynamically and the method must return a list of the UI components to be added.

This method can optionally be implemented by a Property Model.

Parameters

- **component_id** – The id of the UI component next to the pressed + button
- **ui_components** – dict with the components and the index of the current ui components of the model. Including arguments created in previous calls to `add_button_callback`.

Returns

A list of `UIComponent` objects to be added

```
abstract add_callback(component_id: str, ui_components: Dict[UIComponent, int], old_value,  
new_value)
```

TODO: docstring

abstract after_evaluations()

Called by the Thermo-Calc application immediately after the last model evaluation (using the method *PropertyModel.evaluate_model()*). Use this method for any required cleanup.

This method can optionally be implemented by a Property Model.

abstract before_evaluations(context: CalculationContext)

Called by the Thermo-Calc application immediately before the first model evaluation (using the method *PropertyModel.evaluate_model()*). Use this method for any required preparations.

This method can optionally be implemented by a Property Model.

Parameters

context – The calculation context

abstract evaluate_model(context: CalculationContext)

Called by the Thermo-Calc application when the model should be actually calculated. **This is the main-method of the Property Model that contains the actual calculation code.**

This method needs to be implemented by all property models.

Parameters

context – The calculation context, this provides access to the Thermo-Calc application and all other TC-Python modules

abstract get_license_key() → str

Provides the license key of the model.

This method can optionally be implemented by a Property Model.

abstract provide_calculation_result_quantities() → List[ResultQuantity]

Called by the Thermo-Calc application when the model should provide its result quantity objects.

This method needs to be implemented by all property models.

Returns

Result quantity objects of the model (to be filled later with results in the method *PropertyModel.evaluate_model()*)

abstract provide_model_category() → List[str]

Called by the Thermo-Calc application when the model should provide its category (shown in the Thermo-Calc model tree).

This method needs to be implemented by all property models.

Returns

Category of the model, it may be present in several categories

abstract provide_model_description() → str

Called by the Thermo-Calc application when the model should provide its detailed description.

This method needs to be implemented by all property models.

Returns

Description text for the model

provide_model_dynamic_argument_bases() → List[str]

Provides a list of ‘bases’ (argument strings without indexing suffixes) for all property model dynamic arguments.

This method can optionally be implemented by a Property Model.

Returns

List of strings corresponding to the dynamic argument ‘bases’

abstract `provide_model_name()` → str

Called by the Thermo-Calc application when the model should provide its name (shown in the Thermo-Calc model tree).

This method needs to be implemented by all property models.

Returns

Name of the model

abstract `provide_model_parameters()` → Dict[str, float]

Called by the Thermo-Calc application when the model should provide all model parameters and their current values.

This method can optionally be implemented by a Property Model.

Note: These are internal variables of the Property Model that are intended to be modified from the outside. Typically this is used to adjust their values in an optimizer during the development of the model.

Returns

The model parameter ids and their current values [unit according to the parameter meaning]

abstract `provide_ui_panel_components()` → List[*UIComponent*]

Called by the Thermo-Calc application when the model should provide its UI components for the model panel to be plotted. This happens also whenever a model gets checked in the model tree.

This method needs to be implemented by all property models.

Returns

Model UI panel components in the order to be presented in the model panel

abstract `remove_button_callback(component_id: str, ui_components: Dict[UIComponent, int])` → List[str]

Implement this method if you have one or more UI components on which you called `UIComponent.enable_remove_button()`, which adds a - button next to the component.

This method will be executed when you press any such - button.

This method is typically used to remove UI components dynamically and the method must return a list of the ids of the components that are going to be removed.

This method can optionally be implemented by a Property Model.

Parameters

- **component_id** – the id of the UI component next to the pressed - button
- **ui_components** – list with the components and the index of the current ui components of the model. Including arguments created in previous calls to `add_button_callback`.

Returns

a list of UI component ids that are required to be removed

abstract `set_model_parameter(model_parameter_id: str, value: float)`

Called by the Thermo-Calc application when a model parameter should be reset.

This method can optionally be implemented by a Property Model.

Note: These are internal variables of the Property Model that are intended to be modified from the outside. Typically this is used to adjust their values in an optimizer during the development of the model.

Parameters

- **model_parameter_id** – The parameter id
- **value** – The value [unit according to the parameter meaning]

```
class tc_python.propertymodel_sdk.ResultQuantity(quantity_id: str, description: str, quantity_type:
                                                ResultQuantityType, *,
                                                include_in_property_model_wizard: bool = True)
```

Bases: object

Defines a calculation result quantity of a Property Model that is identified by a unique id.

Parameters

- **quantity_id** – Unique id of the quantity
- **description** – Description of the quantity (shown in the Thermo-Calc UI)
- **quantity_type** – Type of the quantity (defines the unit)
- **include_in_property_model_wizard** – If False, the quantity is omitted from property model wizard metadata (default True)

get_description() → str

Obtains the description of the quantity.

Returns

Description of the quantity

get_id() → str

Obtains the id of the quantity.

Returns

Unique id of the quantity

get_include_in_property_model_wizard() → bool

Whether this quantity is listed in property model wizard metadata.

Returns

True if included in wizard metadata (default), False if hidden from wizard metadata only

get_type() → *ResultQuantityType*

Obtains the type of quantity.

Returns

Type of the quantity

```
class tc_python.propertymodel_sdk.ResultQuantityType(value, names=None, *, module=None,
                                                    qualname=None, type=None, start=1,
                                                    boundary=None)
```

Bases: Enum

Defining the type of a result quantity.

CCT_QUANTITY = 5

A cct quantity

ELASTIC_PROPERTIES = 15

A Elastic properties quantity

ENERGY_QUANTITY = 2

An energy quantity

GENERAL_QUANTITY = 0

A general quantity

LENGTH_QUANTITY = 7

A length in quantity

SINGLE_EQUILIBRIUM_QUANTITY = 6

A cct quantity

SOLIDIFICATION_RATE_QUANTITY = 12

A solidification rate quantity

STRAIN_QUANTITY = 14

A strain quantity

STRENGTH_QUANTITY = 8

A strength quantity

STRESS_QUANTITY = 13

A stress quantity

SURFACE_ENERGY_QUANTITY = 3

A surface energy quantity

TEMPERATURE_QUANTITY = 1

A temperature quantity

THERMAL_GRADIENT_QUANTITY = 11

A thermal gradient quantity

TIME_QUANTITY = 4

A time quantity

VELOCITY_QUANTITY = 10

A velocity quantity

VICKERS_HARDNESS_QUANTITY = 9

A hardness quantity

class tc_python.propertymodel_sdk.SpecialListMarkers

Bases: object

Placeholders for special list elements that are locale-dependent. They will be provided by UI list components if a special marker has been selected.

ANY_LIST_MARKER = 'ANY'

Marker that represents “Any”

NONE_LIST_MARKER = 'NONE'

Marker that represents “None”

class `tc_python.propertymodel_sdk.UIBooleanComponent`(*component_id: str, name: str, description: str, setting: bool*)

Bases: *UIComponent*

Checkbox UI component of the model panel.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **setting** – Initial setting of the checkbox

connect_component_enableability(*dependent_component_id: str*)

Connects the state enabled of any other UI component of the model panel to the value of this boolean component.

Parameters

dependent_component_id – Id of the UI element to be dependent on this boolean component

connect_component_visibility(*dependent_component_id: str*)

Connects the visibility of any other UI component of the model panel to the value of this boolean component.

Parameters

dependent_component_id – Id of the UI element to be dependent on this boolean component

enable_add_button()

Adds a + button to the right of the UI component.

Returns

This UI component

enable_remove_button()

Adds a - button to the right of the UI component.

Returns

This UI component

get_dependent_components() → List[str]

Obtains a list containing all UI elements currently connected regarding their visibility.

Returns

A list with the component id of all UI elements currently connected

get_setting() → bool

Obtains the setting of the checkbox.

Returns

The setting of the checkbox

remove_component_visibility(*dependent_component_id: str*)

Removes the visibility connection to a UI component that has been previously connected.

Parameters

dependent_component_id – Id of the previously connection UI element

set_index(*index: int = -1*)

Sets the position in the graphical user interface.

Parameters

index – The position

Returns

This UI component

class `tc_python.propertymodel_sdk.UIComponent`(*component_id: str, name: str, description: str*)

Bases: `object`

Abstract Base class for all UI components of the model panel.

Never make an instance of `UIComponent`, always use the sub-classes. For instance `UIStringComponent`.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component

get_description() → `str`

Obtains the additional description of the component.

Returns

Additional description of the component

get_id() → `str`

Obtains the unique id of the component.

Returns

Unique id of the component

get_include_in_property_model_wizard() → `bool`

Whether this component is included in wizard metadata and the property quick-start UI.

Returns

True by default

get_name() → `str`

Obtains the name of the component.

Returns

Name of the component, will be presented in the model panel

is_dynamic() → `bool`

Returns whether the component is dynamic. :return: `bool` (True or False)

mark_as_dynamic(*is_dynamic: bool = True*)

Marks the component as dynamic. :param `is_dynamic`: :return: This UI component (self)

set_enabled(*enabled*)

Sets whether the component should be enabled or not

Parameters

enabled –

Returns

This UI component

set_has_callback(*has_callback*)

set_include_in_property_model_wizard(*include: bool*)

If False, this input is omitted from property model wizard metadata and the property quick-start UI.

Parameters

include – Whether to include in wizard metadata and quick-start (default True)

Returns

This UI component

set_visible(*visible*)

Sets the visibility of the component

Parameters

visible –

Returns

This UI component

class `tc_python.propertymodel_sdk.UIConditionListComponent`(*component_id: str, name: str, description: str*)

Bases: *UIComponent*

System condition list UI component of the model panel.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component

class `tc_python.propertymodel_sdk.UIFloatComponent`(*component_id: str, name: str, description: str, value: float*)

Bases: *UIComponent*

General real value text field UI component of the model panel.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **value** – Initial setting of the text field

enable_add_button()

Adds a + button to the right of the UI component.

Returns

This UI component

enable_remove_button()

Adds a - button to the right of the UI component.

Returns

this UI component

get_value() → float

Obtains the setting of the text field.

Returns

The setting of the text field

set_index(index: int = -1)

Sets the position in the graphical user interface.

Parameters

index – The position

Returns

This UI component

```
class tc_python.propertymodel_sdk.UIGeneralListComponent(component_id: str, name: str, description: str, content: List[Tuple[str, str]], selected_entry: str = "")
```

Bases: *UIComponent*

General list UI component of the model panel that can contain any strings.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **content** – Entries of the list, they need to contain a locale-independent id and a localized content string, for example: `[("ENTRY_1_ID", "entry 1"), ("ENTRY_2_ID", "entry 2")]`
- **selected_entry** – Entry to be initially selected. If omitted, by default the first element is selected.

```
connect_component_visibility(dependent_component_id: str, selected_item_to_set_visible: str)
```

Connects the visibility of any other UI component of the model panel to the selection of a certain entry of the list.

Parameters

- **dependent_component_id** – Id of the UI element to be dependent on the chosen element
- **selected_item_to_set_visible** – Entry (locale independent id) of the list to be chosen to set the dependent component visible

```
enable_add_button()
```

Adds a + button to the right of the UI component.

Returns

This UI component

```
enable_remove_button()
```

Adds a - button to the right of the UI component.

Returns

This UI component

```
get_content() → List[Tuple[str, str]]
```

Obtains the entries of the list.

Returns

Entries of the list, they need to contain a locale-independent id and a localized content string, for example: `[("ENTRY_1_ID", "entry 1"), ("ENTRY_2_ID", "entry 2")]`

get_dependent_components() → Dict[str, List[str]]

Obtains a dictionary containing all UI elements currently connected regarding their visibility.

Returns

All UI elements currently connected (key: dependent component id, value: required list entries to set it visible)

get_selected_entry() → str

Obtains the initially selected entry.

Returns

Initially selected entry. If empty, the first element is selected.

remove_component_visibility(*dependent_component_id: str*)

Removes the visibility connection to a UI component that has been previously connected.

Parameters

dependent_component_id – Id of the previously connection UI element

set_index(*index: int = -1*)

Sets the position in the graphical user interface.

Parameters

index – The position

Returns

This UI component

```
class tc_python.propertymodel_sdk.UIPhaseListComponent(component_id: str, name: str, description: str, default_phase: str = "", any_marker_setting: bool = False)
```

Bases: *UIComponent*

Phase list UI component of the model panel.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **default_phase** – Default phase, if omitted no default phase is chosen and only initially the first element of the list is selected. If an ANY-marker is added, this is chosen as the default element.
- **any_marker_setting** – Defines if an entry “ANY PHASE” should be added to the phase list, if set to true this overrides any default phase setting

enable_add_button()

Adds a + button to the right of the UI component.

Returns

This UI component

enable_remove_button()

Adds a - button to the right of the UI component.

Returns

This UI component

get_any_marker_setting() → bool

Obtains the setting if any entry “ANY PHASE” is added to the phase list.

Returns

If an entry “ANY PHASE” is added to the phase list, if set to true this overrides any default phase setting

get_default_phase() → str

Obtains the default phase.

Returns

Default phase, if omitted no default phase is chosen and only initially the first element of the list is selected. If an ANY-marker is added, this is chosen as the default element.

set_index(index: int = -1)

Sets the position in the graphical user interface.

Parameters

index – The position

Returns

This UI component

class `tc_python.propertymodel_sdk.UISectionDividerComponent`(*component_id: str, name: str, description: str*)

Bases: *UIComponent*

General text field UI component of the model panel.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **string** – Initial setting of the text field

get_value() → str

Obtains the setting of the text field.

Returns

The setting of the text field

set_index(index: int = -1)

Sets the position in the graphical user interface.

Parameters

index – The position

Returns

This UI component

```
class tc_python.propertymodel_sdk.UIStringComponent(component_id: str, name: str, description: str,  
string: str)
```

Bases: *UIComponent*

General text field UI component of the model panel.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **string** – Initial setting of the text field

```
enable_add_button()
```

Adds a + button to the right of the UI component.

Returns

This UI component

```
enable_remove_button()
```

Adds a - button to the right of the UI component.

Returns

This UI component

```
get_value() → str
```

Obtains the setting of the text field.

Returns

The setting of the text field

```
set_index(index: int = -1)
```

Sets the position in the graphical user interface.

Parameters

index – The position

Returns

This UI component

```
class tc_python.propertymodel_sdk.UITemperatureComponent(component_id: str, name: str, description:  
str, temp: float)
```

Bases: *UIComponent*

Temperature value text field UI component of the model panel.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **temp** – Initial temperature to be set in the text field (unit defined by the user in the Thermo-Calc system)

```
enable_add_button()
```

Adds a + button to the right of the UI component.

Returns

This UI component

enable_remove_button()

Adds a - button to the right of the UI component.

Returns

This UI component

get_temp() → float

Obtains the temperature set in the text field.

Returns

The temperature to be set in the text field (unit defined by the user in the Thermo-Calc system)

set_index(index: int = -1)

Sets the position in the graphical user interface.

Parameters

index – The position

Returns

This UI component

`tc_python.propertymodel_sdk.create_boolean_ui_component(component_id: str, name: str, description: str, initial_setting: bool, *, include_in_property_model_wizard: bool = True) → UIBooleanComponent`

Creates a UI checkbox component for a boolean value. The value of that component can later be accessed during the model evaluation.

Return type

UIBooleanComponent

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **initial_setting** – Initial setting of the checkbox
- **include_in_property_model_wizard** – If False, omitted from wizard metadata and quick-start UI (default True)

Returns

The created component

`tc_python.propertymodel_sdk.create_condition_list_ui_component(component_id: str, name: str, description: str, *, include_in_property_model_wizard: bool = True) → UIConditionListComponent`

Creates a UI list component for all conditions defined in the system. The value of that component can later be accessed during the model evaluation.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel

- **description** – Additional description of the component
- **include_in_property_model_wizard** – If False, omitted from wizard metadata and quick-start UI (default True)

Returns

The created component

```
tc_python.propertymodel_sdk.create_elastic_properties_quantity(quantity_id: str, description: str,
                                                             *, in-
                                                             clude_in_property_model_wizard:
                                                             bool = True) → ResultQuantity
```

Creates a elastic properties result quantity (in s). When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_energy_quantity(quantity_id: str, description: str, *
                                                  include_in_property_model_wizard: bool =
                                                  True) → ResultQuantity
```

Creates a UI energy result quantity (in J). When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_float_ui_component(component_id: str, name: str, description:
                                                    str, value: float, *
                                                    include_in_property_model_wizard: bool =
                                                    True) → UIFloatComponent
```

Creates a UI text field component for a real number. The value of that component can later be accessed during the model evaluation.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **value** – Initial setting of the text field
- **include_in_property_model_wizard** – If False, omitted from wizard metadata and quick-start UI (default True)

Returns

The created component

```
tc_python.propertymodel_sdk.create_general_quantity(quantity_id: str, description: str, *,
                                                    include_in_property_model_wizard: bool =
                                                    True) → ResultQuantity
```

Creates a general result quantity that can contain any type of result (without a unit). When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_length_quantity(quantity_id: str, description: str, *,
                                                    include_in_property_model_wizard: bool =
                                                    True) → ResultQuantity
```

Creates a length result quantity. When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_list_ui_component(component_id: str, name: str, description: str,
                                                    entry_list: List[Tuple[str, str]], selected_entry:
                                                    str = "", *, include_in_property_model_wizard:
                                                    bool = True) → UIGeneralListComponent
```

Creates a UI list component for string entries. The value of that component can later be accessed during the model evaluation.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **entry_list** – Entries of the list, they need to contain a locale-independent id and a localized content string, for example: [(“ENTRY_1_ID”, “entry 1”), (ENTRY_2_ID”, “entry 2”)]
- **selected_entry** – Entry to be initially selected. If omitted, by default the first element is selected.
- **include_in_property_model_wizard** – If False, omitted from wizard metadata and quick-start UI (default True)

Returns

The created component

```
tc_python.propertymodel_sdk.create_phase_list_ui_component(component_id: str, name: str,
                                                         description: str, default_phase: str = "
                                                         any_marker: bool = False, *
                                                         include_in_property_model_wizard:
                                                         bool = True) →
                                                         UIPhaseListComponent
```

Creates a UI list component for all phases defined in the system. It is possible to select a default phase that is supposed to be the **expected phase selection** for that list. The value of that component can later be accessed during the model evaluation.

A **default** phase is the phase that is initially selected and re-selected as soon as a currently selected phase is removed. If the default phase is not available, a “NONE”-marker will be created and used instead of the default phase. A typical use case for the default phase setting is a phase list that expects to contain the LIQUID-phase of a system.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **default_phase** – Default phase, if omitted no default phase is chosen and only initially the first element of the list is selected. **If an ANY-marker is added, this is chosen as the default element.**
- **any_marker** – Defines if an entry “ANY PHASE” should be added to the phase list, if set to true this overrides any default phase setting
- **include_in_property_model_wizard** – If False, omitted from wizard metadata and quick-start UI (default True)

Returns

The created component

```
tc_python.propertymodel_sdk.create_section_divider_ui_component(component_id: str, name: str,
                                                             description: str, *, in-
                                                             clude_in_property_model_wizard:
                                                             bool = True) →
                                                             UISectionDividerComponent
```

Creates an empty UI component acting as a spacer. :param component_id: Unique id of the component :param include_in_property_model_wizard: If False, omitted from wizard metadata and quick-start UI (default True) :return: The created component

```
tc_python.propertymodel_sdk.create_solidification_rate_quantity(quantity_id: str, description: str,
                                                                *, in-
                                                                clude_in_property_model_wizard:
                                                                bool = True) → ResultQuantity
```

Creates a Solidification rate result quantity. When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity

- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_strain_quantity(quantity_id: str, description: str, *,
                                                  include_in_property_model_wizard: bool =
                                                  True) → ResultQuantity
```

Creates a strain result quantity. When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_strength_quantity(quantity_id: str, description: str, *,
                                                    include_in_property_model_wizard: bool =
                                                    True) → ResultQuantity
```

Creates a strength result quantity. When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_stress_quantity(quantity_id: str, description: str, *,
                                                  include_in_property_model_wizard: bool =
                                                  True) → ResultQuantity
```

Creates a stress result quantity. When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_string_ui_component(component_id: str, name: str, description:
                                                    str, string: str, *,
                                                    include_in_property_model_wizard: bool =
                                                    True) → UIStringComponent
```

Creates a UI text field component. The value of that component can later be accessed during the model evaluation.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **string** – Initial setting of the text field
- **include_in_property_model_wizard** – If False, omitted from wizard metadata and quick-start UI (default True)

Returns

The created component

```
tc_python.propertymodel_sdk.create_surface_energy_quantity(quantity_id: str, description: str, *,
                                                         include_in_property_model_wizard:
                                                         bool = True) → ResultQuantity
```

Creates an energy result quantity (in J). When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_temperature_quantity(quantity_id: str, description: str, *,
                                                       include_in_property_model_wizard: bool
                                                       = True) → ResultQuantity
```

Creates a temperature result quantity (in K). When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_temperature_ui_component(component_id: str, name: str,
                                                           description: str, initial_temp: float, *,
                                                           include_in_property_model_wizard:
                                                           bool = True) →
                                                           UITemperatureComponent
```

Creates a UI text field component for a temperature value. The value of that component can later be accessed during the model evaluation.

Parameters

- **component_id** – Unique id of the component
- **name** – Name of the component, will be presented in the model panel
- **description** – Additional description of the component
- **initial_temp** – Initial temperature to be set in the text field. (The unit of initial_temp is Kelvin. The value in the text field will be automatically converted using the unit chosen by the user.)
- **include_in_property_model_wizard** – If False, omitted from wizard metadata and quick-start UI (default True)

Returns

The created component

```
tc_python.propertymodel_sdk.create_thermal_gradient_quantity(quantity_id: str, description: str, *,  
include_in_property_model_wizard:  
bool = True) → ResultQuantity
```

Creates a Thermal gradient result quantity. When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_time_quantity(quantity_id: str, description: str, *,  
include_in_property_model_wizard: bool = True)  
→ ResultQuantity
```

Creates a time result quantity (in s). When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

```
tc_python.propertymodel_sdk.create_velocity_quantity(quantity_id: str, description: str, *,  
include_in_property_model_wizard: bool =  
True) → ResultQuantity
```

Creates a Velocity result quantity. When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity

- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

`tc_python.propertymodel_sdk.create_vickers_hardness_quantity(quantity_id: str, description: str, *, include_in_property_model_wizard: bool = True) → ResultQuantity`

Creates a Vickers hardness result quantity. When the model is evaluated, a value can be added to the quantity and it will be used to transfer the result to the Thermo-Calc plot engine.

Parameters

- **quantity_id** – Unique id of the result quantity
- **description** – Additional description of the result quantity
- **include_in_property_model_wizard** – If False, omitted from property model wizard metadata only (default True)

Returns

The created result quantity

6.8 Module “propertymodel_factory”

class `tc_python.propertymodel_factory.PropertyModelSelection`

Bases: object

Factory class providing access to the available Property Model Quantity types.

The returned values from the classmethods are *classes* (subclasses of `tc_python.quantity_factory.PropertyModelQuantity`), not instantiated objects. They are intended to be passed to APIs that accept a property model designator (for example a `PropertyModelQuantity` subclass or its name), and can also be used together with `resolve_model_class()` and `get_model_quantities()`.

The concrete model implementations are defined in `tc_python.property_model_definitions`.

classmethod `CCT_diagram()` → `type[tc_python.property_model_definitions.cct_diagram.CCTDiagram]`

Returns the CCT model class (CCT diagram).

Returns

The CCT model class.

classmethod `TTT_diagram()` → `type[tc_python.property_model_definitions.ttt_diagram.TTTDiagram]`

Returns the TTTDiagram model class (TTT diagram).

Returns

The TTTDiagram model class.

classmethod `alloy_strength_ti()` →

`type[tc_python.property_model_definitions.alloy_strength_ti.AlloyStrengthTi]`

Returns the AlloyStrengthTi model class.

Returns

The AlloyStrengthTi model class.

classmethod antiphase_boundary_energy_ni() →
type[*tc_python.property_model_definitions.antiphase_boundary_energy_ni*]

Returns the AntiphaseBoundaryEnergyNi model class.

Returns

The AntiphaseBoundaryEnergyNi model class.

classmethod bainite() → type[*tc_python.property_model_definitions.bainite.Bainite*]

Returns the Bainite model class.

Returns

The Bainite model class.

classmethod coarsening() → type[*tc_python.property_model_definitions.coarsening.Coarsening*]

Returns the Coarsening model class.

Returns

The Coarsening model class.

classmethod coarsening_ni() →
type[*tc_python.property_model_definitions.coarsening_ni.CoarseningNi*]

Returns the CoarseningNi model class.

Returns

The CoarseningNi model class.

classmethod columnar_to_equiaxed_transition() →
type[*tc_python.property_model_definitions.columnar_to_equiaxed_transition*]

Returns the ColumnarToEquiaxedTransition model class.

Returns

The ColumnarToEquiaxedTransition model class.

classmethod crack_susceptibility_coefficient() →
type[*tc_python.property_model_definitions.crack_susceptibility_coefficient*]

Returns the CrackSusceptibilityCoefficient model class.

Returns

The CrackSusceptibilityCoefficient model class.

classmethod critical_transformation_temperatures() →
type[*tc_python.property_model_definitions.critical_transformation_temperatures*]

Returns the CriticalTransformationTemperatures model class.

Returns

The CriticalTransformationTemperatures model class.

classmethod driving_force() →
type[*tc_python.property_model_definitions.driving_force.DrivingForce*]

Returns the DrivingForce model class.

Returns

The DrivingForce model class.

classmethod equilibrium() → type[*tc_python.property_model_definitions.equilibrium.Equilibrium*]

Returns the Equilibrium model class.

Returns

The Equilibrium model class.

classmethod ferrite() → type[*tc_python.property_model_definitions.ferrite.Ferrite*]

Returns the Ferrite model class.

Returns

The Ferrite model class.

classmethod freeze_in_equilibrium() →

type[*tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature*]

Returns the EquilibriumWithFreezeInTemperature model class.

Returns

The EquilibriumWithFreezeInTemperature model class.

classmethod freeze_in_equilibrium_ni() →

type[*tc_python.property_model_definitions.equilibrium_with_freeze_in_tempera*]

Returns the EquilibriumWithFreezeInTemperatureNi model class.

Returns

The EquilibriumWithFreezeInTemperatureNi model class.

classmethod interfacial_energy() →

type[*tc_python.property_model_definitions.interfacial_energy.InterfacialEnergy*]

Returns the InterfacialEnergy model class.

Returns

The InterfacialEnergy model class.

classmethod liquidus_solidus() →

type[*tc_python.property_model_definitions.liquidus_and_solidus_temperature.LiquidusAnd*]

Returns the LiquidusAndSolidusTemperature model class.

Returns

The LiquidusAndSolidusTemperature model class.

classmethod martensite() →

type[*tc_python.property_model_definitions.martensite_temperatures.MartensiteTemperatures*]

Returns the MartensiteTemperatures model class.

Returns

The MartensiteTemperatures model class.

classmethod martensite_fraction() →

type[*tc_python.property_model_definitions.martensite_fractions.MartensiteFractions*]

Returns the MartensiteFractions model class.

Returns

The MartensiteFractions model class.

classmethod martensitic_steel_strength() →

type[*tc_python.property_model_definitions.martensitic_steel_strength.Marten*]

Returns the MartensiticSteelStrength model class.

Returns

The MartensiticSteelStrength model class.

classmethod ms_temperature_ti() →

type[*tc_python.property_model_definitions.martensite_temperatures_ti.MartensiteTemper*]

Returns the MartensiteTemperaturesTi model class.

Returns

The MartensiteTemperaturesTi model class.

classmethod `optical_properties_noble()` →
type[*tc_python.property_model_definitions.optical_properties_noble.OpticalPro*]

Returns the OpticalPropertiesNoble model class.

Returns

The OpticalPropertiesNoble model class.

classmethod `pearlite()` → type[*tc_python.property_model_definitions.pearlite.Pearlite*]

Returns the Pearlite model class.

Returns

The Pearlite model class.

classmethod `phase_transition()` →
type[*tc_python.property_model_definitions.phase_transition.PhaseTransition*]

Returns the PhaseTransition model class.

Returns

The PhaseTransition model class.

classmethod `scheil()` → type[*tc_python.property_model_definitions.scheil.Scheil*]

Returns the Scheil model class.

Returns

The Scheil model class.

classmethod `solvus_for_ordered_phase_ni()` →
type[*tc_python.property_model_definitions.solvus_for_ordered_phase_ni.SolvusForOrderedPhaseNi*]

Returns the SolvusForOrderedPhaseNi model class.

Returns

The SolvusForOrderedPhaseNi model class.

classmethod `spinodal()` → type[*tc_python.property_model_definitions.spinodal.Spinodal*]

Returns the Spinodal model class.

Returns

The Spinodal model class.

classmethod `strain_age_cracking_ni()` →
type[*tc_python.property_model_definitions.strain_age_cracking_ni.StrainAgeCrack*]

Returns the StrainAgeCrackingNi model class.

Returns

The StrainAgeCrackingNi model class.

classmethod `t_zero()` →
type[*tc_python.property_model_definitions.t_zero_temperature.TZeroTemperature*]

Returns the TZero model class (T0 temperature).

Returns

The TZero model class.

classmethod `yield_strength()` →
type[*tc_python.property_model_definitions.yield_strength.YieldStrength*]

Returns the YieldStrength model class.

Returns

The YieldStrength model class.

`tc_python.propertymodel_factory.get_model_quantities(model: Union[str, type])`

Return (Arguments, Results, ArgumentOptions) classes for a given model designator corresponding to a subclass of PropertyModelQuantities

- If a particular class is not defined by the model, the returned tuple entry None
- e.g., if there is no ArgumentOptions class, return (Arguments, Results, None)
- if the model is unknown, returns (None, None, None)

Parameters

model – Name of the PropertyModelQuantity class of interest, provided as either a string or a PropertyModelNames Enum

Returns

Tuple(Union[Arguments, None], Union[Results, None], Union[ArgumentOptions, None])

`tc_python.propertymodel_factory.resolve_model_class(model: Union[str, type]) → Optional[type]`

6.9 Package “property_model_definitions”

6.9.1 Module “alloy_strength_ti”

class `tc_python.property_model_definitions.alloy_strength_ti.AlloyStrengthTi`

Bases: object

Encapsulation class for the “Alloy Strength - Ti” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of `AlloyStrengthTi_ArgumentOptions`

Arguments

alias of `AlloyStrengthTi_Arguments`

Results

alias of `AlloyStrengthTi_Results`

classmethod `get_aliases()` → list[str]

List of aliases for “Alloy Strength - Ti” property model.

classmethod `get_name()` → str

String name of “Alloy Strength - Ti” property model.

class

`tc_python.property_model_definitions.alloy_strength_ti.AlloyStrengthTi_ArgumentOptions`

Bases: object

Valid options for Alloy Strength - Ti property model arguments which require specific options to be entered.

BASE_GRADE

alias of `AlloyStrengthTi_ArgumentOptions_BASE_GRADE`

FLOW_STRESS_MODE

alias of *AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODE*

FLOW_STRESS_MODEL

alias of *AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODEL*

```
class tc_python.property_model_definitions.alloy_strength_ti.  
AlloyStrengthTi_ArgumentOptions_BASE_GRADE
```

Bases: *ArgumentBase*

Valid options for *AlloyStrengthTi.Arguments.BASE_GRADE*.

GRADE_1_35A = 'grade_1_35A'

Commercially pure titanium grade 1 (35A).

GRADE_2_50A = 'grade_2_50A'

Commercially pure titanium grade 2 (50A).

GRADE_3_65A = 'grade_3_65A'

Commercially pure titanium grade 3 (65A).

GRADE_4_75A = 'grade_4_75A'

Commercially pure titanium grade 4 (75A).

IODIDE_TITANIUM = 'iodide_titanium'

Pure titanium which excludes effects from impurities.

```
class tc_python.property_model_definitions.alloy_strength_ti.  
AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODE
```

Bases: *ArgumentBase*

Valid options for *AlloyStrengthTi.Arguments.FLOW_STRESS_MODE*.

ENGINEERING_PROPERTIES = 'Engineering properties'

Calculate engineering properties.

STRESS_VS_STRAIN = 'Stress vs. strain'

Calculate stress as a function of strain.

```
class tc_python.property_model_definitions.alloy_strength_ti.  
AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODEL
```

Bases: *ArgumentBase*

Valid options for *AlloyStrengthTi.Arguments.FLOW_STRESS_MODEL*.

RAMBERG_OSGOOD = 'Ramberg-Osgood'

Ramberg-Osgood flow stress model.

VOCE = 'Voce'

Voce flow stress model.

```
class tc_python.property_model_definitions.alloy_strength_ti.AlloyStrengthTi_Arguments
```

Bases: *ArgumentBase*

Valid entries for Alloy Strength - Ti property model arguments.

ALLOW_MARTENSITIC_TRANSFORMATION = 'Quenched alloy'

- Option to consider quenching of the alloy.

Argument options

True, False

Default value

False

ANNEALING_TEMPERATURE = 'Annealing temperature'

- Temperature at which intercritical annealing is performed.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.annealing_temperature())()`

Default value

1000.0 [K]

APPLY_STRAIN_RATE = 'Apply strain rate'

- Option to account for the effect of strain rate on flow stress.
- If False, flow stress will be calculated for quasi-static conditions only.

Argument options

True, False

Default value

False

BASE_GRADE = 'grade choice'

- Titanium base grade selection.

Argument options*AlloyStrengthTi_ArgumentOptions_BASE_GRADE***Default value***AlloyStrengthTi_ArgumentOptions_BASE_GRADE.IODIDE_TITANIUM***BURGERS_VECTOR = 'Burgers vector'**

- Burger's vector in [m].
- This argument is used if *AlloyStrengthTi_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING* is set to True.

Default value

2.5e-10 [m]

CONSTANT_STRENGTH_ADDITION = 'Constant strength addition'

- Give the value of the desired constant strength addition in MPa.

Default value

0.0 [MPa]

CRITICAL_RADIUS = 'critical radius'

- Critical radius of precipitate phase considered for strengthening contribution calculation.
- This argument is used if *AlloyStrengthTi_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING* is set to True.

Default value

1.0e-8 [m]

ELONGATION_CORRECTION = 'Elongation correction'

- Optional correction factor for the predicted elongation at fracture.
- A value of 1 will imply no correction.

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with *PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())*

Default value

298.15 [K]

FLOW_STRESS_MODE = 'Flow stress mode'

- Mode used to calculate flow stress.

Argument options*AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODE***Default value***AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODE.ENGINEERING_PROPERTIES***FLOW_STRESS_MODEL = 'Flow stress model'**

- Choose the model to be used for the calculation of flow stress.

Argument options*AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODEL***Default value***AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODEL.RAMBERG_OSGOOD***GRAIN_SIZE = 'Grain size'**

- Grain diameter used in Hall-Petch relationship.
- This argument is used if *AlloyStrengthTi_Arguments.INCLUDE_GRAIN_BOUNDARY_STRENGTHENING* is set to True.

Default value100.0 [μm]

HALL_PETCH_COEFFICIENT = 'Hall_Petch coefficient'

- User-specified coefficient to be used in the Hall-Petch relationship.
- This argument is used given the following argument settings:
 - *AlloyStrengthTi_Arguments.INCLUDE_GRAIN_BOUNDARY_STRENGTHENING* is set to True.
 - *AlloyStrengthTi_Arguments.USER_DEFINED_HALL_PETCH_COEFFICIENT* is set to True.

Default value

1.0

HARDENING_RATE_VOCE = 'Hardening rate (Voce)'

- The rate at which strain hardening progresses according to the Voce model.
- This argument is used if *AlloyStrengthTi_Arguments.FLOW_STRESS_MODEL* is set to *AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODEL.VOCE*.

Default value

90.0

INCLUDE_GRAIN_BOUNDARY_STRENGTHENING = 'grain_str_selection'

- Option to include strengthening contribution from grain boundaries in calculation.

Argument options

True, False

Default value

False

INCLUDE_PRECIPITATION_STRENGTHENING = 'precipitation'

- Option to include strengthening contribution from precipitation in calculation.

Argument options

True, False

Default value

False

PRECIPITATE_PHASE = 'precipitate phase list'

- Precipitate phase considered for strengthening contribution calculation.
- This argument is used if *AlloyStrengthTi_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING* is set to True.

Default value

none

PRECIPITATE_RADIUS = 'precipitate radius'

- Mean radius of precipitate phase considered for strengthening contribution calculation.
- This argument is used if *AlloyStrengthTi_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING* is set to True.

Default value

1.0e-8 [m]

PRE_STRAINING = 'Pre-straining'

- Specify the plastic strain the material is exposed to before calculation.
- Used to calculate effects of prior deformation on the calculated flow stress.
- The value specified here will not affect the calculated hardness.

Default value

0.0

QUENCH_TEMPERATURE = 'Quench temperature'

- Temperature the material is quenched to after solution treatment or intercritical annealing.
- i.e., from *AlloyStrengthTi_Arguments.ANNEALING_TEMPERATURE*.

Default value

273.15 [K]

REFERENCE_STRAIN_RATE = 'Reference strain rate'

- Specify the reference strain rate in 1/s.
- This should correspond to the strain rate at quasi-static conditions, i.e., in the range of 1e-4 to 1e-3.

Default value

1e-4

SATURATION_STRESS_VOCE = 'Saturation stress'

- The stress value in MPa approached asymptotically with increasing strain.
- This argument is used if *AlloyStrengthTi_Arguments.FLOW_STRESS_MODEL* is set to *AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODEL.VOCE*.

Default value

1850.0 [MPa]

SHEAR_MODULUS = 'Shear modulus'

- Shear modulus of the matrix phase in [Pa].
- Typing the keyword “calculated” (not case-sensitive) allows for calculating the shear modulus using parameters from the thermodynamic database (compatible with TCTI version 6 and higher).
- This argument is used if *AlloyStrengthTi_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING* is set to True.

Default value

calculated

STRAIN_HARDENING_EXPONENT_RAMBERG_OSGOOD = 'Strain hardening exponent Ramberg-Osgood'

- Strain hardening exponent used in Ramberg-Osgood flow stress model.
- This argument is used if *AlloyStrengthTi_Arguments.FLOW_STRESS_MODEL* is set to *AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODEL.RAMBERG_OSGOOD*.

Default value

0.08

STRAIN_RATE = 'Strain rate'

- Specify the strain rate.
- This argument is used if *AlloyStrengthTi_Arguments.APPLY_STRAIN_RATE* is set to True.

Default value

1e-4

STRAIN_RATE_SENSITIVITY = 'Strain rate sensitivity'

- Specify the strain rate sensitivity exponent.
- This argument is used if *AlloyStrengthTi_Arguments.USER_DEFINED_STRAIN_RATE_SENSITIVITY* is set to True.

Default value

0.01

TAYLOR_FACTOR = 'Taylor factor'

- Taylor factor which accounts for texture in the material.
- Normally, this factor is between 2.24 and 3.06 for random orientations.
- This argument is used if *AlloyStrengthTi_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING* is set to True.

Default value

3.0

TRUE_STRAIN = 'True strain [%]'

- Strain value (elastic + plastic strains) at which to evaluate stress.

Default value

0.2

USER_DEFINED_FLOW_STRESS_PARAMETERS = 'User-defined flow stress parameters (true/false)'

- Option to manually define parameters related to the flow stress calculation.

Argument options

True, False

Default value

True

USER_DEFINED_HALL_PETCH_COEFFICIENT = 'User_Hall_Petch_selection'

- Option to use a user-specified coefficient in the Hall-Petch relationship.
- This argument is used if *AlloyStrengthTi_Arguments.INCLUDE_GRAIN_BOUNDARY_STRENGTHENING* is set to True.

Argument options

True, False

Default value

False

USER_DEFINED_STRAIN_RATE_SENSITIVITY = 'User-defined strain rate sensitivity'

- Option to apply a user-defined strain rate sensitivity.
- If set to “False”, the strain rate sensitivity exponent will be estimated by the model.

Argument options

True, False

Default value

False

YOUNGS_MODULUS_GPA_RAMBERG_OSGOOD = "Young's modulus [GPa] Ramberg-Osgood"

- Value of the Young’s modulus in gigapascals.
- This argument is used if *AlloyStrengthTi_Arguments.FLOW_STRESS_MODEL* is set to *AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODEL.RAMBERG_OSGOOD*.

Default value

200.0 [GPa]

YOUNGS_MODULUS_GPA_VOCE = "Young's modulus [GPa] Voce"

- Value of the Young’s modulus in gigapascals.
- This argument is used if *AlloyStrengthTi_Arguments.FLOW_STRESS_MODEL* is set to *AlloyStrengthTi_ArgumentOptions_FLOW_STRESS_MODEL.VOCE*.

Default value

200.0 [GPa]

class tc_python.property_model_definitions.alloy_strength_ti.AlloyStrengthTi_ResultsBases: *ArgumentBase*

Valid entries for Alloy Strength - Ti property model results.

ALPHA_SOLID_SOLUTION_HARDENING = 'Solid Solution Hardening in Alpha Phase'

Solid solution hardening contribution in alpha (Vickers).

AMOUNT_OF_PHASES = 'Amount of Phase'

Amount of phases at evaluation state.

BETA_SOLID_SOLUTION_HARDENING = 'Solid Solution Hardening in Beta Phase'

Solid solution hardening contribution in beta (Vickers).

CONSTANT_STRENGTH_ADDITION = 'Constant strength addition'

Constant strength contribution [MPa].

ELONGATION_AT_FRACTURE = 'Elongation at fracture'

Elongation at fracture

ENGINEERING_STRAIN = 'Engineering strain'

Engineering strain

ENGINEERING_STRESS = 'Engineering stress'

Engineering stress

FRACTURE_STRENGTH = 'Fracture strength'

Fracture strength

GRAIN_BOUNDARY_HARDENING = 'Grain boundary hardening'

Grain boundary hardening contribution (Vickers).

INTRINSIC_HARDNESS = 'Intrinsic Hardness'

Intrinsic hardness (Vickers).

PRECIPITATION_HARDENING = 'Precipitation hardening'

Precipitation hardening contribution (Vickers).

TOTAL_HARDNESS = 'Total Hardness'

Total hardness (Vickers).

TOTAL_SOLID_SOLUTION_HARDENING = 'Total Solid Solution Hardening'

Total solid solution hardening (Vickers).

TRUE_STRESS = 'True stress'

True stress

ULTIMATE_TENSILE_STRENGTH = 'Ultimate tensile strength'

Ultimate tensile strength

UNIFORM_ELONGATION = 'Uniform elongation'

Uniform elongation

YIELD_STRAIN = 'Yield strain'

Yield strain

YIELD_STRENGTH = 'Yield strength'

Yield strength

YOUNGS_MODULUS = 'Youngs modulus [GPa]'

Young's modulus in Gigapascals

6.9.2 Module “antiphase_boundary_energy_ni”

class `tc_python.property_model_definitions.antiphase_boundary_energy_ni.
AntiphaseBoundaryEnergyNi`

Bases: `object`

Encapsulation class for the “Antiphase Boundary Energy - Ni” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of `AntiphaseBoundaryEnergyNi_ArgumentOptions`

Arguments

alias of `AntiphaseBoundaryEnergyNi_Arguments`

Results

alias of `AntiphaseBoundaryEnergyNi_Results`

classmethod `get_aliases()` → `list[str]`

List of aliases for “Antiphase Boundary Energy - Ni” property model.

classmethod `get_name()` → `str`

String name of “Antiphase Boundary Energy - Ni” property model.

class `tc_python.property_model_definitions.antiphase_boundary_energy_ni.
AntiphaseBoundaryEnergyNi_ArgumentOptions`

Bases: `object`

Valid options for Antiphase Boundary Energy - Ni property model arguments which requires specific options to be entered.

MINIMIZATION_STRATEGY

alias of `ArgumentOptions_MinimizationStrategy`

PHASE_GROUP_SELECTION

alias of `ArgumentOptions_PhaseGroupSelection`

class `tc_python.property_model_definitions.antiphase_boundary_energy_ni.
AntiphaseBoundaryEnergyNi_ArgumentOptions_MINIMIZATION_STRATEGY`

Bases: `ArgumentBase`

Valid options for `AntiphaseBoundaryEnergyNi_Arguments.MINIMIZATION_STRATEGY`.

GLOBAL_MINIMIZATION_ONLY = 'Global minimization only'

Perform full global minimization only.

GLOBAL_TEST_PREFERRED = 'Global test preferred'

Perform global test initially; try global test and full global minimization upon global test failure.

LOCAL_MINIMIZATION_ONLY = 'Local minimization only'

Only perform local equilibrium minimization.

LOCAL_MINIMIZATION_PREFERRED = 'Local minimization preferred'

- Perform local equilibrium initially; try global test and full global minimization upon local eq. failure.
- Also performs global test in case the stable phases at equilibrium change from the previous model evaluation.

`class tc_python.property_model_definitions.antiphase_boundary_energy_ni.
AntiphaseBoundaryEnergyNi_Arguments`

Bases: *ArgumentBase*

Valid entries for Antiphase Boundary Energy - Ni property model arguments.

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`.

Default value
1000.0 [K]

FREEZE_IN_TEMPERATURE = 'Freeze-in temperature'

- Freeze-in temperature where the equilibrium is calculated.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.freeze_in_temperature())()`.

Default value
623.15 [K]

MAX_NUM_GLOBAL_GRIDPOINTS = 'Max number of global gridpoints'

- The maximum number of gridpoints used with global minimization.

Default value
20000

MINIMIZATION_STRATEGY = 'Minimization strategy'

- Minimization strategy ensures that the most stable minimum under the specified conditions is computed.

Argument options
AntiphaseBoundaryEnergyNi_ArgumentOptions_MINIMIZATION_STRATEGY

Default value
*AntiphaseBoundaryEnergyNi_ArgumentOptions_MINIMIZATION_STRATEGY.
GLOBAL_TEST_PREFERRED*

PHASE_GROUP_SELECTION = 'phase group list'

- Select a subset of the phases to enter in the calculation.

Argument options
AntiphaseBoundaryEnergyNi_ArgumentOptions_PHASE_GROUP_SELECTION

Default value
*AntiphaseBoundaryEnergyNi_ArgumentOptions_PHASE_GROUP_SELECTION.
INCLUDE_TYPICAL_NI_SUPERALLOY*

```
class tc_python.property_model_definitions.antiphase_boundary_energy_ni.
AntiphaseBoundaryEnergyNi_Results
```

Bases: *ArgumentBase*

Valid entries for Antiphase Boundary Energy - Ni property model results.

```
APBE_100_PLANE_1 = 'APBE (100) plane 1'
```

The antiphase boundary energy for the 100-plane for the first gamma prime phase.

```
APBE_100_PLANE_2 = 'APBE (100) plane 2'
```

The antiphase boundary energy for the 100-plane for the second gamma prime phase in the case more than one FCC_L12 composition set is identified as gamma prime.

```
APBE_111_PLANE_1 = 'APBE (111) plane 1'
```

The antiphase boundary energy for the 111-plane for the first gamma prime phase.

```
APBE_111_PLANE_2 = 'APBE (111) plane 2'
```

The antiphase boundary energy for the 111-plane for the second gamma prime phase in the case more than one FCC_L12 composition set is identified as gamma prime.

```
APBE_AVERAGE_1 = 'APBE average 1'
```

The average of the antiphase boundary energy for the 100- and 111-plane for the first gamma prime phase.

```
APBE_AVERAGE_2 = 'APBE average 2'
```

The average of the antiphase boundary energy for the 100- and 111-plane for the second gamma prime phase in the case more than one FCC_L12 composition set is identified as gamma prime.

```
DELTA_APBE_WRT_NI3AL = 'Delta APBE w.r.t. Ni3Al'
```

The antiphase boundary energy of the 111-plane for the current gamma prime relative to 'pure' Ni3Al gamma prime.

6.9.3 Module “argument_base_classes”

```
class tc_python.property_model_definitions.argument_base_classes.ArgumentBase
```

Bases: object

Abstract base class for Property Model arguments. Inheriting from this class automatically makes all string attributes behave as StaticArgument objects.

```
class tc_python.property_model_definitions.argument_base_classes.ArgumentMetaClass(name,
                                                                                    bases,
                                                                                    attrs)
```

Bases: type

Metaclass that automatically wraps Class string attributes into StaticArgument objects if not otherwise specified. Docstrings are automatically mapped to StaticArgument and DynamicArgument objects based on position.

```
class tc_python.property_model_definitions.argument_base_classes.DynamicArgument(value: str,
                                                                                    doc: str =
                                                                                    ")
```

Bases: str

```
get_base_id()
```

```
class tc_python.property_model_definitions.argument_base_classes.StaticArgument(value: str,
                                                                              doc: str =
                                                                              )
```

Bases: str

6.9.4 Module “bainite”

```
class tc_python.property_model_definitions.bainite.Bainite
```

Bases: object

Encapsulation class for the “Bainite” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *Bainite_ArgumentOptions*

Arguments

alias of *Bainite_Arguments*

Results

alias of *Bainite_Results*

```
classmethod get_aliases() → list[str]
```

List of aliases for “Bainite” property model.

```
classmethod get_name() → str
```

String name of “Bainite” property model.

```
class tc_python.property_model_definitions.bainite.Bainite_ArgumentOptions
```

Bases: object

Valid options for Bainite property model arguments which requires specific options to be entered.

AUSTENITE_COMPOSITION

alias of *Bainite_ArgumentOptions_AUSTENITE_COMPOSITION*

```
class tc_python.property_model_definitions.bainite.
```

```
Bainite_ArgumentOptions_AUSTENITE_COMPOSITION
```

Bases: *ArgumentBase*

Valid options for *Bainite_Arguments.AUSTENITE_COMPOSITION*.

```
EQUILIBRIUM = 'Equilibrium composition'
```

Use the equilibrium composition at the specified austenitizing temperature as the austenite composition.

```
NOMINAL = 'Nominal composition'
```

Use the nominal alloy composition as the austenite composition.

```
class tc_python.property_model_definitions.bainite.Bainite_Arguments
```

Bases: *ArgumentBase*

Valid entries for Bainite property model arguments.

```
AUSTENITE_COMPOSITION = 'Austenite composition from'
```

- Sets the composition of the austenite phase.

Argument options

Bainite_ArgumentOptions_AUSTENITE_COMPOSITION

Default value

Bainite_ArgumentOptions_AUSTENITE_COMPOSITION.NOMINAL

AUSTENITIZING_TEMPERATURE = 'Annealing temperature'

- Austenitizing temperature used when Equilibrium composition is selected as source.
- This argument is used if *Bainite_Arguments.AUSTENITE_COMPOSITION* is set to *Bainite_ArgumentOptions_AUSTENITE_COMPOSITION.EQUILIBRIUM*.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.annealing_temperature())()`.

Default value

1000 [K]

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`.

Default value

1000.0 [K]

GRAIN_SIZE = 'GrainSize'

- Grain size of austenite in micrometers.

Default value

100.0 [μm]

class tc_python.property_model_definitions.bainite.**Bainite_Results**

Bases: *ArgumentBase*

Valid entries for Bainite property model results.

CEMENTITE_FRACTION = 'Cementite fraction in bainite'

Fraction of cementite in bainite.

FINISH_TIME = 'Finish time (98% bainite)'

Time to reach 98% bainite (finish time).

HALF_TIME = 'Half time (50% bainite)'

Time to reach 50% bainite (half time).

LENGTHENING_RATE = 'Bainite lengthening rate'

Lengthening rate of bainite plates.

RETAINED_AUSTENITE_FRACTION = 'Retained austenite fraction when bainite stops'

Fraction of retained austenite when bainite transformation finishes (i.e., at the *Bainite_Results.FINISH_TIME*).

START_TEMPERATURE = 'Bainite start temperature'

Temperature at which bainite transformation starts.

START_TIME = 'Start time (2% bainite)'

Time to reach 2% bainite (start time).

6.9.5 Module “cct_diagram”

class tc_python.property_model_definitions.cct_diagram.CCTDiagram

Bases: object

Encapsulation class for the “CCT Diagram” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *CCT_ArgumentOptions*

Arguments

alias of *CCT_Arguments*

Results

alias of *CCT_Results*

classmethod get_aliases() → list[str]

List of aliases for “CCT Diagram” property model.

classmethod get_name() → str

String name of “CCT Diagram” property model.

class tc_python.property_model_definitions.cct_diagram.CCT_ArgumentOptions

Bases: object

Valid options for CCT Diagram property model arguments which requires specific options to be entered.

AUSTENITE_COMPOSITION

alias of *CCT_ArgumentOptions_AUSTENITE_COMPOSITION*

CALCULATION_SETTING

alias of *CCT_ArgumentOptions_CALCULATION_SETTING*

CARBIDE_IN_BAINITE

alias of *CCT_ArgumentOptions_CARBIDE_IN_BAINITE*

CARBIDE_IN_PEARLITE

alias of *CCT_ArgumentOptions_CARBIDE_IN_PEARLITE*

COOLING_PROFILE

alias of *CCT_ArgumentOptions_COOLING_PROFILE*

FERRITE_MODE

alias of *CCT_ArgumentOptions_FERRITE_MODE*

PEARLITE_CRITERION

alias of *CCT_ArgumentOptions_PEARLITE_CRITERION*

PEARLITE_MODE

alias of *CCT_ArgumentOptions_PEARLITE_MODE*

class tc_python.property_model_definitions.cct_diagram.CCT_ArgumentOptions_AUSTENITE_COMPOSITION

Bases: *ArgumentBase*

Valid options for *CCT_Arguments.AUSTENITE_COMPOSITION*.

EQUILIBRIUM = 'Equilibrium composition'

Use equilibrium composition at the specified austenitizing temperature.

NOMINAL = 'Nominal composition'

Use nominal alloy composition as austenite composition.

class

`tc_python.property_model_definitions.cct_diagram.CCT_ArgumentOptions_CALCULATION_SETTING`

Bases: *ArgumentBase*

Valid options for *CCT_Arguments.CALCULATION_SETTING*.

ACCURATE = 'Accurate'

Accurate calculation preset.

CUSTOM = 'Custom'

Custom settings.

QUICK = 'Quick'

Quick calculation preset.

class

`tc_python.property_model_definitions.cct_diagram.CCT_ArgumentOptions_CARBIIDE_IN_BAINITE`

Bases: *ArgumentBase*

Valid options for *CCT_Arguments.CARBIIDE_IN_BAINITE*.

CEMENTITE = 'CEMENTITE'

Bainite carbide: CEMENTITE_D011.

M7C3 = 'M7C3'

Bainite carbide: M7C3.

class

`tc_python.property_model_definitions.cct_diagram.CCT_ArgumentOptions_CARBIIDE_IN_PEARLITE`

Bases: *ArgumentBase*

Valid options for *CCT_Arguments.CARBIIDE_IN_PEARLITE*.

CEMENTITE = 'CEMENTITE'

Pearlite carbide: CEMENTITE_D011.

M23C6 = 'M23C6'

Pearlite carbide: M23C6.

M7C3 = 'M7C3'

Pearlite carbide: M7C3.

class

`tc_python.property_model_definitions.cct_diagram.CCT_ArgumentOptions_COOLING_PROFILE`

Bases: *ArgumentBase*

Valid options for *CCT_Arguments.COOLING_PROFILE*.

CONSTANT = 'Constant cooling rate'

Cooling profile with constant cooling rate.

NEWTONIAN = 'Newtonian cooling profile'

Newtonian (exponential) cooling profile.

```
class tc_python.property_model_definitions.cct_diagram.CCT_ArgumentOptions_FERRITE_MODE
```

Bases: *ArgumentBase*

Valid options for *CCT_Arguments.FERRITE_MODE*.

OE_ONLY = 'OE only'

Orthoequilibrium (OE) mode considers local equilibrium conditions.

PE_IF_POSSIBLE = 'PE if possible, otherwise OE'

Use Paraequilibrium (PE) mode if the PE driving force is positive; otherwise use Orthoequilibrium (OE) mode.

PE_ONLY = 'PE only'

Paraequilibrium (PE) mode for ferrite transformation.

```
class
```

```
tc_python.property_model_definitions.cct_diagram.CCT_ArgumentOptions_PEARLITE_CRITERION
```

Bases: *ArgumentBase*

Valid options for *CCT_Arguments.PEARLITE_CRITERION*.

MAXIMIZE_GIBBS DISSIPATION_RATE = 'MaximizeGibbsEnergyDissipationRate'

Maximize the Gibbs energy dissipation rate of the pearlite transformation.

MAXIMIZE_GROWTH_RATE = 'MaximizeGrowthRate'

Maximize the growth rate of the pearlite transformation.

```
class tc_python.property_model_definitions.cct_diagram.CCT_ArgumentOptions_PEARLITE_MODE
```

Bases: *ArgumentBase*

Valid options for *CCT_Arguments.PEARLITE_MODE*.

OPTIMAL = 'OptimalPearlite'

Optimal mode for pearlite transformation selected between PE and OE.

ORTHO = 'Ortho-pearlite'

Orthoequilibrium (OE) mode for pearlite transformation. Orthoequilibrium (OE) mode considers local equilibrium conditions.

PARA = 'Para-pearlite'

Paraequilibrium (PE) mode for pearlite transformation.

```
class tc_python.property_model_definitions.cct_diagram.CCT_Arguments
```

Bases: *ArgumentBase*

Valid entries for CCT Diagram property model arguments.

ALLOW_COMPETING MORPHOLOGY_GROWTH = 'Allow competing morphology growth'

- Choose whether to allow all transformations or limit phase growth beyond key transformation temperatures.
- If True: all phases can grow competitively until the end of the calculation.
- If False: restricts ferrite, pearlite, and bainite growth beyond Bs (2% Bainite fraction) and Ms (2% Martensite fraction).

Argument options

True, False

Default value

True

AUSTENITE_COMPOSITION = 'Austenite composition from'

- Choose the source for austenite composition.

Argument options*CCT_ArgumentOptions_AUSTENITE_COMPOSITION***Default value***CCT_ArgumentOptions_AUSTENITE_COMPOSITION.NOMINAL***AUSTENITIZING_TEMPERATURE = 'Annealing temperature'**

- Austenitizing temperature used when equilibrium composition is selected as source.
- This argument is used if *CCT_Arguments.AUSTENITE_COMPOSITION* is set to *CCT_ArgumentOptions_AUSTENITE_COMPOSITION.EQUILIBRIUM*.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.annealing_temperature())()`.

Default value

1000.0 [K]

CALCULATION_SETTING = 'Calculation setting'

- Setting for transformation products and numerical settings for time integration.

Argument options*CCT_ArgumentOptions_CALCULATION_SETTING***Default value***CCT_ArgumentOptions_CALCULATION_SETTING.QUICK***CARBIDE_IN_BAINITE = 'Carbide in bainite'**

- Select the carbide to be present in bainite, which usually depends on Cr content.

Argument options*CCT_ArgumentOptions_CARBIDE_IN_BAINITE***Default value***CCT_ArgumentOptions_CARBIDE_IN_BAINITE.CEMENTITE***CARBIDE_IN_PEARLITE = 'Carbide in pearlite'**

- Select the carbide to be present in pearlite, which usually depends on Cr content.
- If M23C6 is selected, parameters optimized for stainless steels will be invoked.

Argument options*CCT_ArgumentOptions_CARBIDE_IN_PEARLITE***Default value***CCT_ArgumentOptions_CARBIDE_IN_PEARLITE.CEMENTITE*

COOLING_PROFILE = 'Cooling profile'

- Select the temperature-time function for cooling.

Argument options

CCT_ArgumentOptions_COOLING_PROFILE

Default value

CCT_ArgumentOptions_COOLING_PROFILE.CONSTANT

END_TEMPERATURE = 'End temperature'

- Ending temperature of the calculation.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.end_temperature())()`.

Default value

500.0 [K]

ERROR_TOLERANCE_XA = 'Error tolerance for austenite volume fraction'

- Tolerance controlling integration error of austenite volume fraction.
- Time-integration error for austenite fraction cannot exceed this value.

Default value

5e-4

FERRITE_MODE = 'Ferrite mode'

- Mode for ferrite transformation.

Argument options

CCT_ArgumentOptions_FERRITE_MODE

Default value

CCT_ArgumentOptions_FERRITE_MODE.PE_IF_POSSIBLE

GRAIN_SIZE = 'GrainSize'

- Grain size of the austenite phase in micrometers.

Default value

100.0 [μm]

INTERPOLATION_ERROR_TOLERANCE = 'Interpolation error tolerance'

- Relative error tolerance used for interpolation grids.
- This argument is used if *CCT_Arguments.USE_INTERPOLATION* is set to “True”.
- Large error tolerance leads to quick but less accurate calculations, small error tolerance does the opposite.

Default value

0.1

LOG_10_COOLING_RATE = 'Log10(cooling rate)'

- Log10 of cooling rate in K/s.

Default value

0.0 [K/s]

MAX_DELTA_X_ABS = 'Maximum change of phase fraction (absolute)'

- Absolute maximum change of phase fraction allowed per time step.

Default value

5e-3

MAX_DELTA_X_REL = 'Maximum change of phase fraction (relative)'

- Relative maximum change of phase fraction allowed per time step.

Default value

5e-3

PEARLITE_CRITERION = 'Pearlite criterion'

- Criterion to determine pearlite growth rate and lamellar spacing.

Argument options

CCT_ArgumentOptions_PEARLITE_CRITERION

Default value

CCT_ArgumentOptions_PEARLITE_CRITERION.MAXIMIZE_GROWTH_RATE

PEARLITE_MODE = 'Pearlite Mode'

- Mode for pearlite transformation.

Argument options

CCT_ArgumentOptions_PEARLITE_MODE

Default value

CCT_ArgumentOptions_PEARLITE_MODE.OPTIMAL

SELECT_BAINITE = 'Bainite'

- Option to include bainite in CCT calculation.

Argument options

True, False

Default value

True

SELECT_FERRITE = 'Ferrite'

- Option to include ferrite in CCT calculation.

Argument options

True, False

Default value

True

SELECT_MARTENSITE = 'Martensite'

- Option to include martensite in CCT calculation.

Argument options

True, False

Default value

True

SELECT_PEARLITE = 'Pearlite'

- Option to include pearlite in CCT calculation.

Argument options

True, False

Default value

True

START_TEMPERATURE = 'Start temperature'

- Starting temperature of the calculation.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.start_temperature())()`.

Default value

1000.0 [K]

USE_INTERPOLATION = 'Use interpolation when necessary'

- Enable/disable interpolation of growth/nucleation rates based on error tolerance.

Argument options

True, False

Default value

True

class tc_python.property_model_definitions.cct_diagram.CCT_ResultsBases: *ArgumentBase*

Valid entries for CCT property model results.

AUSTENITE_10 = '10% austenite transformed'

Time-temperature point at which 10% of the austenite phase has transformed.

AUSTENITE_90 = '90% austenite transformed'

Time-temperature point at which 90% of the austenite phase has transformed.

AUSTENITE_FINISH = '98% austenite transformed'

Time-temperature point at which 98% of the austenite phase has transformed (austenite “finish”).

AUSTENITE_HALF = '50% austenite transformed'

Time-temperature point at which 50% of the austenite phase has transformed.

AUSTENITE_START = '2% austenite transformed'

Time-temperature point at which 2% of the austenite phase has transformed (austenite “start”).

BAINITE_START = 'Bainite start (2%)'

Time-temperature point at which 2% of bainite phase has transformed (bainite “start”).

CCT = 'cct result'

Composite CCT result containing time-temperature pairs for key events.

FERRITE_START = 'Ferrite start (2%)'

Time-temperature point at which 2% of the ferrite phase has transformed (transformation “start”).

MARTENSITE_START = 'Martensite start'

Time-temperature point at which martensite begins to form (martensite “start”).

PEARLITE_START = 'Pearlite start (2%)'

Time-temperature point at which 2% of pearlite phase has transformed (pearlite “start”).

TERMINAL_FRACTION_BAINITE = 'Terminal fraction of bainite'

Terminal fraction of bainite phase.

TERMINAL_FRACTION_FERRITE = 'Terminal fraction of ferrite'

Terminal fraction of ferrite phase.

TERMINAL_FRACTION_MARTENSITE = 'Terminal fraction of martensite'

Terminal fraction of martensite phase.

TERMINAL_FRACTION_PEARLITE = 'Terminal fraction of pearlite'

Terminal fraction of pearlite phase.

TERMINAL_FRACTION_TOTAL_FERRITE = 'Terminal fraction of total ferrite'

Terminal fraction of total ferrite.

TERMINAL_FRACTION_TOTAL_FERRITE_CEMENTITE = 'Terminal fraction of total ferrite+cementite'

Terminal fraction of total ferrite + cementite.

TOTAL_FERRITE_CEMENTITE_FINISH = 'Total ferrite+cementite finish (98%)'

Time-temperature point at which 98% of austenite has transformed to ferrite, pearlite, and bainite phases (i.e., transformation “finishes”).

TOTAL_FERRITE_CEMENTITE_START = 'Total ferrite+cementite start (2%)'

Time-temperature point at which 2% of the sum of pearlite and cementite-containing bainite phases have transformed (i.e., transformation “starts”).

TOTAL_FERRITE_START = 'Total ferrite start (2%)'

Time-temperature point at which 2% of the sum of polygonal ferrite and bainitic ferrite phases have transformed (transformation “start”).

6.9.6 Module “coarsening”

class `tc_python.property_model_definitions.coarsening.Coarsening`

Bases: `object`

Encapsulation class for the “Coarsening” property model Arguments and Results.

Arguments

alias of `Coarsening_Arguments`

Results

alias of `Coarsening_Results`

classmethod `get_aliases()` → `list[str]`

List of aliases for “Coarsening” property model.

classmethod `get_name()` → `str`

String name of “Coarsening” property model.

class `tc_python.property_model_definitions.coarsening.Coarsening_Arguments`

Bases: `ArgumentBase`

Valid entries for Coarsening property model arguments.

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`

Default value

1000.0 [K]

MATRIX_PHASE = 'matrixPhase'

- Matrix phase used for the calculation.
- Specify argument value with string of a valid phase name.

PRECIPITATE_PHASE = DynamicArgument('precipitatePhase')

- Precipitate phase used for the calculation.
- Specify argument value with string of a valid phase name.

Default value

None

Note: This is a dynamic argument and must be called with an index (e.g., `Coarsening_Arguments.PRECIPITATE_PHASE(0)`). Index values start at ‘0’ for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

class `tc_python.property_model_definitions.coarsening.Coarsening_Results`

Bases: `ArgumentBase`

Valid entries for Coarsening property model results.

COARSENING_RATE_COEFFICIENT = 'coarseningRate'

Coarsening rate coefficient of the precipitate phase in the matrix.

INTERFACIAL_ENERGY = 'interfacialEnergy'

Interfacial energy between the matrix and the precipitate phase.

6.9.7 Module “coarsening_ni”

class tc_python.property_model_definitions.coarsening_ni.CoarseningNi

Bases: object

Encapsulation class for the “Coarsening - Ni” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *CoarseningNi_ArgumentOptions*

Arguments

alias of *CoarseningNi_Arguments*

Results

alias of *CoarseningNi_Results*

classmethod get_aliases() → list[str]

List of aliases for “Coarsening - Ni” property model.

classmethod get_name() → str

String name of “Coarsening - Ni” property model.

class tc_python.property_model_definitions.coarsening_ni.CoarseningNi_ArgumentOptions

Bases: object

Valid entries for Coarsening - Ni property model arguments which requires a specific option to be entered.

MATRIX_SELECTION

alias of *CoarseningNi_ArgumentOptions_MATRIX_PHASE*

MINIMIZATION_STRATEGY

alias of *CoarseningNi_ArgumentOptions_MINIMIZATION_STRATEGY*

PHASE_GROUP_SELECTION

alias of *CoarseningNi_ArgumentOptions_PHASE_GROUP_SELECTION*

PRECIPITATE_PHASE

alias of *CoarseningNi_ArgumentOptions_PRECIPITATE_PHASE*

class tc_python.property_model_definitions.coarsening_ni.

CoarseningNi_ArgumentOptions_MATRIX_PHASE

Bases: *ArgumentBase*

Valid entries for *CoarseningNi_Arguments.MATRIX_PHASE* which requires a specific option to be entered.

GAMMA = 'gamma'

class tc_python.property_model_definitions.coarsening_ni.

CoarseningNi_ArgumentOptions_MINIMIZATION_STRATEGY

Bases: *ArgumentBase*

Valid options for *CoarseningNi_Arguments.MINIMIZATION_STRATEGY*.

GLOBAL_MINIMIZATION_ONLY = 'Global minimization only'

Perform full global minimization only.

GLOBAL_TEST_PREFERRED = 'Global test preferred'

Perform global test initially; try global test and full global minimization upon global test failure.

LOCAL_MINIMIZATION_ONLY = 'Local minimization only'

Only perform local equilibrium minimization.

LOCAL_MINIMIZATION_PREFERRED = 'Local minimization preferred'

- Perform local equilibrium initially; try global test and full global minimization upon local eq. failure.
- Also performs global test in case the stable phases at equilibrium change from the previous model evaluation.

**class tc_python.property_model_definitions.coarsening_ni.
CoarseningNi_ArgumentOptions_PHASE_GROUP_SELECTION**

Bases: *ArgumentBase*

Valid entries for *CoarseningNi_Arguments.PHASE_GROUP_SELECTION* which requires a specific option to be entered.

INCLUDE_ALL_PHASES = '1'

- Includes all phases entered by User in the System.

INCLUDE_GAMMA_AND_SELECTED_PRECIPITATES = '6'

- Includes Gamma (“FCC_L12”) and selected precipitates.

INCLUDE_TYPICAL_NI_SUPERALLOY = '3'

Phases included in this option:

- **Oxide and metal liquid phases:** “IONIC_LIQ”, “IONIC_LIQ#2”, “LIQUID”
- **Gamma (#1) and Gamma-Prime(#2):** “DIC_FCC_A1”, “FCC_A1”, “FCC_A1#2”, “FCC_L12”, “FCC_L12#2”
- **Carbides/Nitrides:** “FCC_L12#3”, “HCP_A3#1”, “HCP_A3#2”, “M23C6”, “M6C”, “M7C3”
- **B2 phases:** “BCC_A2”, “BCC_A2#2”, “BCC_B2”, “BCC_B2#2”
- **Gamma Double-Prime:** “BCT_D022”
- **Additional Phases:** “PI”, “NI3B_D011”, “M2B_TETR”, “D5A_M3B2”, “M3B2”, “MB_B33”, “MB2_C32”, “G_PHASE”, “NI5ZR”, “NI7ZR2”, “CR3NI5SI2”, “CR3NI5SI2”, “SPINEL”, “AL-PHA_SPINEL”, “CORUNDUM”

INCLUDE_TYPICAL_PLUS_ETA_DELTA = '4'

Phases included in this option:

- **All phases from:** `ArgumentOptions_PhaseGroupSelection.
INCLUDE_TYPICAL_NI_SUPERALLOY`
- **Delta phase:** “NI3TA_D0A”
- **Eta phase:** “NI3TI_D024”

INCLUDE_TYPICAL_PLUS_TCP = '5'

Phases included in this option:

- **All phases from:** `ArgumentOptions_PhaseGroupSelection.
INCLUDE_TYPICAL_NI_SUPERALLOY`

- **TCP phases:** “C14_LAVES”, “SIGMA”, “MU_PHASE”, “R_PHASE”, “P_PHASE”, “Z_PHASE”, “CR3SI_A15”

```
class tc_python.property_model_definitions.coarsening_ni.  
CoarseningNi_ArgumentOptions_PRECIPITATE_PHASE
```

Bases: *ArgumentBase*

Valid entries for `CoarseningNi.Arguments.PRECIPITATE_PHASE` which requires a specific option to be entered.

DELTA = 'delta'

- Delta precipitate.

ETA = 'eta'

- Eta precipitate.

FCC_CARBO_NITRIDE = 'FCC carbo-nitride'

- FCC carbonitride precipitate.

GAMMA_DOUBLE_PRIME = 'gamma-biss'

- Gamma double-prime precipitate.

GAMMA_PRIME = 'gamma-prime'

- Gamma-prime precipitate.

HCP_CARBO_NITRIDE = 'HCP carbo-nitride'

- HCP carbonitride precipitate.

M23C6 = 'M23C6'

- M23C6 carbide precipitate.

M6C = 'M6C'

- M6C carbide precipitate.

M7C3 = 'M7C3'

- M7C3 carbide precipitate.

```
class tc_python.property_model_definitions.coarsening_ni.CoarseningNi_Arguments
```

Bases: *ArgumentBase*

Valid entries for Coarsening - Ni property model arguments.

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`

Default value

1000.0 [K]

MATRIX_PHASE = 'matrixPhase Ni'

- Matrix phase selection. Use 'gamma' for Ni-base alloys.

Argument options

CoarseningNi_ArgumentOptions_MATRIX_PHASE

Default value

None

MAX_NUM_GLOBAL_GRIDPOINTS = 'Max number of global gridpoints'

- Max number of gridpoints used in global minimization (if selected).

Default value

20000

MINIMIZATION_STRATEGY = 'Minimization strategy'

- Minimization strategy ensures that the most stable minimum under the specified conditions is computed.

Argument options

CoarseningNi_ArgumentOptions_MINIMIZATION_STRATEGY

Default value

*CoarseningNi_ArgumentOptions_MINIMIZATION_STRATEGY.
GLOBAL_TEST_PREFERRED*

PHASE_GROUP_SELECTION = 'phase group list'

- A preselected subset of phases used in the calculation.

Argument options

CoarseningNi_ArgumentOptions_PHASE_GROUP_SELECTION

Default value

*CoarseningNi_ArgumentOptions_PHASE_GROUP_SELECTION.
INCLUDE_GAMMA_AND_SELECTED_PRECIPITATES*

PRECIPITATE_PHASE = DynamicArgument('precipitatePhase Ni')

- Precipitate phase to evaluate.
- Specify argument value with string of a valid phase name.

Argument options

CoarseningNi_ArgumentOptions.PRECIPITATE_PHASE

Default value

None

Note: This is a dynamic argument and must be called with an index (e.g., `CoarseningNi.Arguments.PRECIPITATE_PHASE(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

class `tc_python.property_model_definitions.coarsening_ni.CoarseningNi_Results`

Bases: *ArgumentBase*

Valid entries for Coarsening - Ni property model results.

COARSENING_RATE_COEFFICIENT = 'coarseningRate Ni'

- Coarsening rate coefficient for the selected precipitate [m^3/s].

INTERFACIAL_ENERGY = 'interfacialEnergy Ni'

- Interfacial energy between matrix and precipitate [J/m^2].

6.9.8 Module “columnar_to_equiaxed_transition”

class `tc_python.property_model_definitions.columnar_to_equiaxed_transition.`

ColumnarToEquiaxedTransition

Bases: `object`

Encapsulation class for the “Columnar to Equiaxed Transition” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *ColumnarToEquiaxedTransition_ArgumentOptions*

Arguments

alias of *ColumnarToEquiaxedTransition_Arguments*

Results

alias of *ColumnarToEquiaxedTransition_Results*

classmethod `get_aliases()` → list[str]

List of aliases for “Columnar to Equiaxed Transition” property model.

classmethod `get_name()` → str

String name of “Columnar to Equiaxed Transition” property model.

class `tc_python.property_model_definitions.columnar_to_equiaxed_transition.`

ColumnarToEquiaxedTransition_ArgumentOptions

Bases: `object`

Valid entries for Columnar to Equiaxed Transition property model arguments which requires a specific option to be entered.

SOLIDIFICATION_RATE_SCALING

alias of *ColumnarToEquiaxedTransition_ArgumentOptions_SOLIDIFICATION_RATE_SCALING*

SOLVE_FOR_METHOD

alias of *ColumnarToEquiaxedTransition_ArgumentOptions_SOLVE_FOR_METHOD*

class `tc_python.property_model_definitions.columnar_to_equiaxed_transition.`

ColumnarToEquiaxedTransition_ArgumentOptions_SOLIDIFICATION_RATE_SCALING

Bases: *ArgumentBase*

Valid entries for *ColumnarToEquiaxedTransition_Arguments.SOLIDIFICATION_RATE_SCALING* which requires a specific option to be entered.

LINEAR = 'linear_v'

- Specify solidification rate with linear scaling.
- If selected, solidification rate will be specified by *ColumnarToEquiaxedTransition_Arguments.SOLIDIFICATION_RATE_LINEAR*.

LOG10 = 'log10(v)'

- Specify solidification rate with logarithmic (log10) scaling.
- If selected, solidification rate will be specified by *ColumnarToEquiaxedTransition_Arguments.SOLIDIFICATION_RATE_LOG10*.

class tc_python.property_model_definitions.columnar_to_equiaxed_transition.
ColumnarToEquiaxedTransition_ArgumentOptions_SOLVE_FOR_METHOD

Bases: *ArgumentBase*

Valid entries for *ColumnarToEquiaxedTransition_Arguments.SOLVE_FOR_METHOD* which requires a specific option to be entered.

EQUIAXED_FRACTION = 'Equiaxed fraction'

- Solve for the equiaxed fraction given the thermal gradient.

THERMAL_GRADIENT = 'Thermal gradient'

- Solve for the thermal gradient given target equiaxed fraction(s).

class tc_python.property_model_definitions.columnar_to_equiaxed_transition.
ColumnarToEquiaxedTransition_Arguments

Bases: *ArgumentBase*

Valid entries for Columnar to Equiaxed Transition property model arguments.

CONSIDER_SOLUTE_TRAPPING = 'Solute trapping'

- When selected, enables solute trapping at the dendrite tip interface.

Argument options

True, False

Default value

False

EQUIAXED_EXPONENT = 'EquiaxedExponent'

- Exponent in equation of calculating fraction of equiaxed grains.
- Usually a value between 3 and 5.

Default value

3.4

EQUIAXED_FRACTIONS = 'Equiaxed fractions'

- Input of equiaxed fraction(s) used to solve for thermal gradient(s) with a given solidification rate.
- This argument is used if *ColumnarToEquiaxedTransition_Arguments.SOLVE_FOR_METHOD* is set to *ColumnarToEquiaxedTransition_ArgumentOptions_SOLVE_FOR_METHOD.THERMAL_GRADIENT*.

- Specify value(s) as a space-delimited string (i.e., with one space between each value).
- Values specified should be between 0.001 and 0.99.

Default value

“0.0066 0.49 0.99”

INTERFACIAL_ENERGY = 'InterfacialEnergy'

- Interfacial energy between liquid and primary solid phase (*ColumnarToEquiaxedTransition_Arguments.PRIMARY_PHASE*).

Default value

0.25 [J/m²]

NUCLEATION_UNDERCOOLING = 'NucleationUndercooling'

- Critical undercooling for nucleation of equiaxed grains.

Default value

2.5 [K]

NUMBER_OF_NUCLEATION_SITES = 'NbNucleationSites'

- Number of nucleation sites for equiaxed grains per cubic meter.

Default value

2.0e15 [/m³]

PRIMARY_PHASE = 'primaryPhase'

- Selection of the primary solid phase to form the dendrite during solidification.
- Specify argument value with string of a valid phase name (i.e., “FCC_A1”).

Default value

“FCC_A1”

SOLIDIFICATION_RATE_LINEAR = 'SolidificationGrowthRate'

- The solidification rate with linear(velocity) scaling.
- This argument is used if *ColumnarToEquiaxedTransition_Arguments.SOLIDIFICATION_RATE_SCALING* is set to *ColumnarToEquiaxedTransition_ArgumentOptions_SOLIDIFICATION_RATE_SCALING_LINEAR*.

Default value

0.1 [m/s]

SOLIDIFICATION_RATE_LOG10 = 'Log10(v)'

- The solidification rate with log10(velocity) scaling.
- This argument is used if *ColumnarToEquiaxedTransition_Arguments.SOLIDIFICATION_RATE_SCALING* is set to *ColumnarToEquiaxedTransition_ArgumentOptions_SOLIDIFICATION_RATE_SCALING_LOG10*.

Default value

-1.0 [m/s]

SOLIDIFICATION_RATE_SCALING = 'Growth rate'

- Select the scale of the solidification rate (velocity) as either linear-v or log10(v).

Argument options*ColumnarToEquiaxedTransition_ArgumentOptions_SOLIDIFICATION_RATE_SCALING***Default value**ColumnarToEquiaxedTransition_ArgumentOptions_SOLIDIFICATION_RATE_SCALING.
LINEAR_V**SOLVE_FOR_METHOD = 'Solve for'**

- Select quantity for which to solve.

Argument options*ColumnarToEquiaxedTransition_ArgumentOptions_SOLVE_FOR_METHOD***Default value***ColumnarToEquiaxedTransition_ArgumentOptions_SOLVE_FOR_METHOD.*
*THERMAL_GRADIENT***TEMPERATURE_GRADIENT = 'TemperatureGradient'**

- Temperature gradient of the liquid phase ahead of dendrite tip.
- This argument is used if *ColumnarToEquiaxedTransition_Arguments.SOLVE_FOR_METHOD* is set to *ColumnarToEquiaxedTransition_ArgumentOptions_SOLVE_FOR_METHOD.EQUIAXED_FRACTION*.

Default value

1000.0 [K/m]

`class tc_python.property_model_definitions.columnar_to_equiaxed_transition.``ColumnarToEquiaxedTransition_Results`Bases: *ArgumentBase*

Valid entries for Columnar to Equiaxed Transition property model results.

FRACTION_EQUIAXED_GRAINS = 'fractionEquiaxedGrains'

- Fraction of equiaxed grains when solidification is complete.
- Quantity value is either calculated or specified by user, depending on calculation setup.

LIQUIDUS = 'liquidus'

- Liquidus temperature.

SOLIDIFICATION_RATE = 'Solidification rate'

- Solidification rate of the calculation.

THERMAL_GRADIENT = 'Thermal gradient'

- The thermal gradient(s) of the liquid phase ahead of dendrite tip.
- Quantity value is either calculated or specified by user, depending on calculation setup.

TIP_RADIUS = 'Tip radius'

- Calculated radius of the dendrite tip.

UNDERCOOLING = 'Dendrite tip undercooling'

- Dendrite tip undercooling.

6.9.9 Module “`crack_susceptibility_coefficient`”

class `tc_python.property_model_definitions.crack_susceptibility_coefficient.CrackSusceptibilityCoefficient`

Bases: `object`

Encapsulation class for the “Crack Susceptibility Coefficient” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of `CrackSusceptibilityCoefficient_ArgumentOptions`

Arguments

alias of `CrackSusceptibilityCoefficient_Arguments`

Results

alias of `CrackSusceptibilityCoefficient_Results`

classmethod `get_aliases()` → list[str]

List of aliases for “Crack Susceptibility Coefficient” property model.

classmethod `get_name()` → str

String name of “Crack Susceptibility Coefficient” property model.

class `tc_python.property_model_definitions.crack_susceptibility_coefficient.CrackSusceptibilityCoefficient_ArgumentOptions`

Bases: `object`

Valid entries for Crack Susceptibility Coefficient property model arguments which requires specific options to be entered.

CSC_MODEL

alias of `CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL`

SCHEIL_CALCULATION_TYPE

alias of `CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE`

THERMAL_MODE

alias of `CrackSusceptibilityCoefficient_ArgumentOptions_THERMAL_MODE`

class `tc_python.property_model_definitions.crack_susceptibility_coefficient.CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL`

Bases: `ArgumentBase`

Valid options for `CrackSusceptibilityCoefficient_Arguments.CSC_MODEL`.

CLYNE_AND_DAVIES = 'Clyne and Davies'

Clyne and Davies CSC model.

EASTON = 'Easton'

Easton CSC model.

KOU = 'Kou'

Kou CSC model.

**class tc_python.property_model_definitions.crack_susceptibility_coefficient.
CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE**

Bases: *ArgumentBase*

Valid options for *CrackSusceptibilityCoefficient_Arguments.SCHEIL_CALCULATION_TYPE*.

BACK_DIFFUSION = 'Back diffusion'

Scheil calculation considering back diffusion in primary phase.

CLASSIC = 'Classic'

Classic Scheil calculation.

SOLUTE_TRAPPING = 'Solute trapping'

Scheil calculation considering solute trapping.

**class tc_python.property_model_definitions.crack_susceptibility_coefficient.
CrackSusceptibilityCoefficient_ArgumentOptions_THERMAL_MODE**

Bases: *ArgumentBase*

Valid options for *CrackSusceptibilityCoefficient_Arguments.THERMAL_MODE*.

CONSTANT_COOLING = 'Constant cooling rate, dT/dt = constant'

Constant cooling ($dT/dt = \text{constant}$).

CONSTANT_HEAT_FLOW = 'Constant heat flow, dQ/dt = constant'

Constant heat flow ($dQ/dt = \text{constant}$).

INV_SQRT_TIME_HEAT_FLOW = 'Heat flow prop 1/sqrt(time)'

Heat flow proportional to the inverse square root of time ($dQ/dt \propto 1/\text{sqrt}(\text{time})$).

**class tc_python.property_model_definitions.crack_susceptibility_coefficient.
CrackSusceptibilityCoefficient_Arguments**

Bases: *ArgumentBase*

Valid entries for Crack Susceptibility Coefficient property model arguments.

ACCURACY = 'accuracy'

- Required relative accuracy for equilibrium calculations.
- Larger values normally converge quicker but provide less accuracy.

Default value

1e-6

ADVANCED_SCHEIL_OPTIONS = 'Show advanced Scheil options'

- Toggle visibility of advanced Scheil options.

Argument options

True, False

Default value

False

ALPHA = 'Alpha'

- The angle (in degrees) between the solid/liquid boundary and scanning direction, used as an input to calculate solidification speed, calculated as: $SOLIDIFICATION_SPEED = SCANNING_SPEED * \cos(\text{ALPHA})$
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE* *SOLUTE_TRAPPING* is specified for *CrackSusceptibilityCoefficient_Arguments*. *SCHEIL_CALCULATION_TYPE*.

Default value

45.0 [degrees]

APPROX_DRIVING_FORCE_METASTABLE = 'Approximate driving force for metastable phases'

- If enabled, driving forces for metastable phases may be approximated in calculation iterations.
- If disabled, the calculation is forced to converge for the metastable phases.

Argument options

True, False

Default value

True

COOLING_RATE = 'Cooling rate [m/s]'

- Cooling rate in Kelvin per second.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE* *BACK_DIFFUSION* is specified for *CrackSusceptibilityCoefficient_Arguments*. *SCHEIL_CALCULATION_TYPE*.

Default value

1.0 [K/s]

CSC_MODEL = 'CSC Model'

- Choose the model used to calculate Crack Susceptibility Coefficient.

Argument options*CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL***Default value***CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL*.
*CLYNE_AND_DAVIES***DELTA_FERRITE_TO_AUSTENITE_BACK_DIFFUSION = 'Allow delta ferrite to austenite transition in steel'**

- Allow delta-ferrite to austenite transition for *BACK_DIFFUSION* Scheil calculation type.

Argument options

True, False

Default value

False

DELTA_FERRITE_TO_AUSTENITE_CLASSIC = 'Allow delta ferrite to austenite transition in steel'

- Allow delta-ferrite to austenite transition for CLASSIC Scheil calculation type.

Argument options

True, False

Default value

False

FAST_DIFFUSERS_BACK_DIFFUSION = 'Fast diffusers back diffusion'

- Fast diffusing elements for BACK_DIFFUSION Scheil calculation type.
- Specify value(s) as a space-delimited string (i.e., with one space between each value).

Default value

"C N"

FAST_DIFFUSERS_CLASSIC = 'Fast diffusers classic'

- Fast diffusing elements for CLASSIC Scheil calculation type.
- Specify value(s) as a space-delimited string (i.e., with one space between each value).

Default value

"C N"

GLOBAL_TEST_INTERVAL = 'Global test interval'

- Specify the interval for global equilibrium testing (i.e., perform global test every Nth step).

Default value

10.0

LIQUID_PHASE = 'Liquid phase'

- Phase treated as liquid in Scheil calculation.

Default value

"LIQUID"

LIQ_FRAC_SMALLEST_FOR_VULNERABILITY = 'Liquid fraction smallest for vulnerability'

- Smallest liquid fraction for vulnerability.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL.CLYNE_AND_DAVIES* is the specified value for *CrackSusceptibilityCoefficient_Arguments.CSC_MODEL*.

Default value

0.01

LIQ_FRAC_START_RELAXATION = 'Liquid fraction for start of relaxation'

- Liquid fraction for start of relaxation.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL.CLYNE_AND_DAVIES* is the specified value for *CrackSusceptibilityCoefficient_Arguments.CSC_MODEL*.

Default value

0.6

LIQ_FRAC_TRANSITION_VULNERABILITY = 'Liquid fraction for start of vulnerability'

- Liquid fraction threshold for vulnerability transition.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL.CLYNE_AND_DAVIES* is the specified value for *CrackSusceptibilityCoefficient_Arguments.CSC_MODEL*.

Default value

0.1

MAX_NUM_ITERATIONS = 'Max number of iterations'

- Maximum number of iterations performed per equilibrium calculation.

Default value

500.0

PRIMARY_PHASE_BACK_DIFFUSION = 'Primary phase back diffusion'

- Primary phase for Scheil simulation considering back diffusion.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE.BACK_DIFFUSION* is specified for *CrackSusceptibilityCoefficient_Arguments.SCHEIL_CALCULATION_TYPE*.
- Specify argument value with string of valid phase name (i.e., "FCC_A1").
- If the value "ANY" is specified, the primary phase will be automatically selected.

Default value

"ANY"

PRIMARY_PHASE_SOLUITE_TRAPPING = 'Primary phase solute trapping'

- Primary phase for Scheil simulation considering solute trapping.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE.SOLUITE_TRAPPING* is specified for *CrackSusceptibilityCoefficient_Arguments.SCHEIL_CALCULATION_TYPE*.
- Specify argument value with string of valid phase name (i.e., "FCC_A1").
- If the value "ANY" is specified, the primary phase will be automatically selected.

Default value

"ANY"

SCANNING_SPEED = 'Scanning speed'

- Laser scanning speed in meters per second, used as an input to calculate solidification speed, calculated as: $SOLIDIFICATION_SPEED = SCANNING_SPEED * \cos(\text{ALPHA})$
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE* *SOLUTE_TRAPPING* is specified for *CrackSusceptibilityCoefficient_Arguments.SCHEIL_CALCULATION_TYPE*.

Default value
1.0 [m/s]

SCHEIL_CALCULATION_TYPE = 'Scheil calculation type'

- Select the calculation type to use for the Scheil calculation.

Argument options

CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE

Default value

CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE.
CLASSIC

SDAS_C = 'Sec arm spacing c'

- The parameter c for calculating the secondary dendrite arm spacing with equation: $c * \text{cooling-rate}^{-n}$.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE* *BACK_DIFFUSION* is specified for *CrackSusceptibilityCoefficient_Arguments.SCHEIL_CALCULATION_TYPE*.

Default value
5e-5 [m]

SDAS_N = 'sec arm spacing n'

- The parameter n for calculating the secondary dendrite arm spacing with equation: $c * \text{cooling-rate}^{-n}$.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_SCHEIL_CALCULATION_TYPE* *BACK_DIFFUSION* is specified for *CrackSusceptibilityCoefficient_Arguments.SCHEIL_CALCULATION_TYPE*.

Default value
0.33

SMALLEST_FRACTION = 'Smallest fraction'

- Smallest fraction assigned to unstable constituents. It is normally only in the gas phase where such low fractions are found.

Default value
1e-12

SOLID_FRACTION_FOR_LIQUIDUS = 'Solid fraction for liquidus evaluation'

- Solid fraction threshold for evaluating the liquidus temperature.

Default value

0.001

SOL_FRAC_COALESCENCE = 'Solid fraction for coalescence'

- Solid fraction for coalescence of the dendrite structure.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL.EASTON* is the specified value for *CrackSusceptibilityCoefficient_Arguments.CSC_MODEL*.

Default value

0.98

SOL_FRAC_COHERENCY = 'Solid fraction for coherency'

- Solid fraction for a coherent dendrite structure.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL.EASTON* is the specified value for *CrackSusceptibilityCoefficient_Arguments.CSC_MODEL*.

Default value

0.7

START_TEMPERATURE = 'Start temperature'

- The start temperature for the Scheil simulation.
- The value selected should be higher than the liquidus temperature of the specified composition.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.start_temperature())()`

Default value

2500.15 [K]

TEMPERATURE_STEP = 'Temperature step during Scheil'

- Temperature step for Scheil calculation.

Default value

1.0 [K]

TERMINATE_AT_LIQUID_AMOUNT = 'Terminate at liquid amount'

- Terminate Scheil simulation at fraction of liquid phase amount (i.e., consider the simulation completed).

Default value

0.01

THERMAL_MODE = 'Thermal mode selection'

- Select the thermal model for the solidification simulation.
- This argument is used when *CrackSusceptibilityCoefficient_ArgumentOptions_CSC_MODEL.CLYNE_AND_DAVIES* is the specified value for *CrackSusceptibilityCoefficient_Arguments.CSC_MODEL*.

Argument options*CrackSusceptibilityCoefficient_ArgumentOptions_THERMAL_MODE***Default value***CrackSusceptibilityCoefficient_ArgumentOptions_THERMAL_MODE.
INV_SQRT_TIME_HEAT_FLOW***USE_GLOBAL_MINIMIZATION = 'Use global minimization'**

- Perform global minimization when calculating equilibrium.

Argument options

True, False

Default value

True

class `tc_python.property_model_definitions.crack_susceptibility_coefficient.CrackSusceptibilityCoefficient_Results`

Bases: *ArgumentBase*

Valid entries for Crack Susceptibility Coefficient property model results.

CSC = 'Crack Susceptibility Coefficient'

- Crack Susceptibility Coefficient for selected model.

FREEZING_RANGE = 'Freezing range [K]'

- Freezing range (Liquidus-Solidus) in Kelvin.

LIQUIDUS = 'Liquidus temperature'

- Liquidus temperature.

SOLIDUS = 'Solidus temperature'

- Solidus temperature.

6.9.10 Module “critical_transformation_temperatures”

class `tc_python.property_model_definitions.critical_transformation_temperatures.CriticalTransformationTemperatures`

Bases: `object`

Encapsulation class for the “Critical Transformation Temperatures” property model Arguments and Results.

Argumentsalias of *CriticalTransformationTemperatures_Arguments***Results**alias of *CriticalTransformationTemperatures_Results***classmethod** `get_aliases()` → list[str]

List of aliases for “Critical Transformation Temperatures” property model.

classmethod `get_name()` → str

String name of “Critical Transformation Temperatures” property model.

```
class tc_python.property_model_definitions.critical_transformation_temperatures.  
CriticalTransformationTemperatures_Arguments
```

Bases: *ArgumentBase*

Valid entries for Critical Transformation Temperatures (steel) model arguments.

CALCULATE_AX_TEMPERATURES = 'Calculate Ax temperatures'

- Option to calculate A0, A1, A2, A3, A4, Acem, and Agraph.
- Typically only one temperature of A3, Acem, and Agraph exists.

Argument options

True, False

Default value

True

CALCULATE_SOL_AND_LIQ = 'Calculate solidus and liquidus'

- Option to calculate solidus and liquidus temperatures.

Argument options

True, False

Default value

True

HIGH_LIMIT_TEMPERATURE = 'High temperature limit'

- Upper temperature limit used for transformation temperature search.
- This argument is used if *CriticalTransformationTemperatures_Arguments.MANUAL_TEMPERATURE_SEARCH_LIMITS* is “True”.
- This argument can also be set with *PropertyModelCalculation.set_temperature(PropertyModelQuantity.high_limit_temperature())()*

Default value

2000.0 [K]

LOW_LIMIT_TEMPERATURE = 'Low temperature limit'

- Lower temperature limit used for transformation temperature search.
- This argument is used if *CriticalTransformationTemperatures_Arguments.MANUAL_TEMPERATURE_SEARCH_LIMITS* is “True”.
- This argument can also be set with *PropertyModelCalculation.set_temperature(PropertyModelQuantity.low_limit_temperature())()*

Default value

900.0 [K]

MANUAL_TEMPERATURE_SEARCH_LIMITS = 'Manual temperature search limits'

- Option to enable manual temperature search limits and maximum temperature step size.

Argument options

True, False

Default value

False

MAX_TEMPERATURE_STEP = 'Max temperature step'

- Maximum temperature step used during transformation temperature search.

Default value

100.0

SUSPEND_GAS = 'Suspend gas'

- Option to suspend the gas phase.

Argument options

True, False

Default value

True

SUSPEND_GRAPHITE = 'Suspend graphite'

- Option to suspend the graphite phase.
- If calculating Agraph, set this option to “False”.

Argument options

True, False

Default value

True

class tc_python.property_model_definitions.critical_transformation_temperatures.
CriticalTransformationTemperatures_Results

Bases: *ArgumentBase*

Valid entries for Critical Transformation Temperatures (steel) model results.

A0 = 'A0'

- Curie temperature of cementite phase (A0).

A1 = 'A1'

- A1 transformation temperature.

A2 = 'A2'

- Curie temperature of ferrite phase (A2).

A3 = 'A3'

- A3 transformation temperature.

A4 = 'A4'

- A4 transformation temperature.

ACEM = 'Acem'

- Austenite to cementite transformation temperature (requires graphite suspended).

AGRAPH = 'Agraph'

- Austenite to graphite transformation temperature (requires graphite enabled).

LIQUIDUS = 'Liquidus'

- Liquidus temperature in Kelvin.

SOLIDUS = 'Solidus'

- Solidus temperature in Kelvin.

6.9.11 Module “driving_force”

class tc_python.property_model_definitions.driving_force.**DrivingForce**

Bases: object

Encapsulation class for the “Driving Force” property model Arguments and Results.

Arguments

alias of *DrivingForce_Arguments*

Results

alias of *DrivingForce_Results*

classmethod **get_aliases()** → list[str]

List of aliases for “Driving Force” property model.

classmethod **get_name()** → str

String name of “Driving Force” property model.

class tc_python.property_model_definitions.driving_force.**DrivingForce_Arguments**

Bases: *ArgumentBase*

Valid entries for Driving Force property model arguments.

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`

Default value

1000.0 [K]

MATRIX_PHASE = 'matrix'

- Matrix phase selection. Use the special ‘Any phase’ option to rely on phases from the initial equilibrium.

PRECIPITATE_PHASE = `DynamicArgument('precipitate')`

- Precipitate phase whose driving force is evaluated.

Note: This is a dynamic argument and must be called with an index (e.g., `DrivingForce.Arguments.PRECIPITATE_PHASE(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

class `tc_python.property_model_definitions.driving_force.DrivingForce_Results`

Bases: *ArgumentBase*

Valid entries for Driving Force property model results.

DRIVING_FORCE = 'drivingForce'

- Thermodynamic driving force, J/mol, computed as $R*T*DGM(\text{phase})$.

NORMALIZED_DRIVING_FORCE = 'normalizedDrivingForce'

- Normalized driving force $DGM(\text{phase})$, dimensionless (relative to $R*T$).

6.9.12 Module “equilibrium”

class `tc_python.property_model_definitions.equilibrium.Equilibrium`

Bases: object

Encapsulation class for the “Equilibrium” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *Equilibrium_ArgumentOptions*

Arguments

alias of *Equilibrium_Arguments*

Results

alias of *Equilibrium_Results*

classmethod `get_aliases()` → list[str]

List of aliases for “Equilibrium” property model.

classmethod `get_name()` → str

String name of “Equilibrium” property model.

class `tc_python.property_model_definitions.equilibrium.Equilibrium_ArgumentOptions`

Bases: object

Valid entries for Equilibrium property model arguments which requires specific options to be entered.

MINIMIZATION_STRATEGY

alias of *ArgumentOptions_MinimizationStrategy*

class `tc_python.property_model_definitions.equilibrium.`

Equilibrium_ArgumentOptions_MINIMIZATION_STRATEGY

Bases: *ArgumentBase*

Valid options for *Equilibrium_Arguments.MINIMIZATION_STRATEGY*.

GLOBAL_MINIMIZATION_ONLY = 'Global minimization only'

Perform full global minimization.

GLOBAL_TEST_PREFERRED = 'Global test preferred'

Perform global test but tries full global minimization at failure.

LOCAL_MINIMIZATION_ONLY = 'Local minimization only'

Only perform local equilibrium minimization.

LOCAL_MINIMIZATION_PREFERRED = 'Local minimization preferred'

Perform local equilibrium but tries global test and full global minimization at failure. Also performs global test in case the stable phases at equilibrium changes from the previous model evaluation.

class tc_python.property_model_definitions.equilibrium.**Equilibrium_Arguments**

Bases: *ArgumentBase*

Valid entries for Equilibrium property model arguments.

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`

Default value

1000.0 [K]

MAX_NUM_GLOBAL_GRIDPOINTS = 'Max number of global gridpoints'

- Max number of gridpoints in global minimization.

Default value

2000

MINIMIZATION_STRATEGY = 'Minimization strategy'

- Minimization strategy ensures that the most stable energy minimum under the specified conditions is computed.

Argument options

Equilibrium_ArgumentOptions_MINIMIZATION_STRATEGY

Default value

Equilibrium_ArgumentOptions_MINIMIZATION_STRATEGY.

GLOBAL_TEST_PREFERRED

class tc_python.property_model_definitions.equilibrium.**Equilibrium_Results**

Bases: *ArgumentBase*

Valid entries for Equilibrium property model results.

SINGLE_EQUILIBRIUM = 'singleEquilibrium'

- Container result for a single equilibrium calculation.

6.9.13 Module “equilibrium_with_freeze_in_temperature”

class `tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature.EquilibriumWithFreezeInTemperature`

Bases: `object`

Encapsulation class for the “Equilibrium with Freeze-In Temperature” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of `EquilibriumWithFreezeInTemperature_ArgumentOptions`

Arguments

alias of `EquilibriumWithFreezeInTemperature_Arguments`

Results

alias of `EquilibriumWithFreezeInTemperature_Results`

classmethod `get_aliases()` → `list[str]`

List of aliases for “Equilibrium with Freeze-In Temperature” property model.

classmethod `get_name()` → `str`

String name of “Equilibrium with Freeze-In Temperature” property model.

class `tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature.EquilibriumWithFreezeInTemperature_ArgumentOptions`

Bases: `object`

Valid entries for Equilibrium with Freeze-In Temperature property model arguments which requires specific options to be entered.

HOMOGENIZATION_FUNCTION

alias of `EquilibriumWithFreezeInTemperature_ArgumentOptions_HOMOGENIZATION_FUNCTION`

MINIMIZATION_STRATEGY

alias of `EquilibriumWithFreezeInTemperature_ArgumentOptions_MINIMIZATION_STRATEGY`

class `tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature.EquilibriumWithFreezeInTemperature_ArgumentOptions_HOMOGENIZATION_FUNCTION`

Bases: `ArgumentBase`

Valid options for `EquilibriumWithFreezeInTemperature_Arguments.HOMOGENIZATION_FUNCTION`.

HASHIN_SHTRIKMAN_MAJORITY_AS_MATRIX = 'Hashin-Shtrikman bound with majority phase as matrix phase'

Hashin-Shtrikman with majority phase as matrix.

INVERSE_RULE_OF_MIXTURES = 'Inverse rule of mixtures (lower Wiener bound)'

Inverse rule of mixtures (lower Wiener bound).

LOWER_HASHIN_SHTRIKMAN = 'General lower Hashin-Shtrikman bound'

General lower Hashin-Shtrikman bound.

RULE_OF_MIXTURES = 'Rule of mixtures (upper Wiener bound)'

Rule of mixtures (upper Wiener bound).

UPPER_HASHIN_SHTRIKMAN = 'General upper Hashin-Shtrikman bound'

General upper Hashin-Shtrikman bound.

```
class tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature.  
EquilibriumWithFreezeInTemperature_ArgumentOptions_MINIMIZATION_STRATEGY
```

Bases: *ArgumentBase*

Valid options for *EquilibriumWithFreezeInTemperature_Arguments.MINIMIZATION_STRATEGY*.

GLOBAL_MINIMIZATION_ONLY = 'Global minimization only'

Perform full global minimization.

GLOBAL_TEST_PREFERRED = 'Global test preferred'

Perform global test but tries full global minimization at failure.

LOCAL_MINIMIZATION_ONLY = 'Local minimization only'

Only perform local equilibrium minimization.

LOCAL_MINIMIZATION_PREFERRED = 'Local minimization preferred'

Perform local equilibrium but tries global test and full global minimization at failure. Also performs global test in case the stable phases at equilibrium changes from the previous model evaluation.

```
class tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature.  
EquilibriumWithFreezeInTemperature_Arguments
```

Bases: *ArgumentBase*

Valid entries for Freeze-in Equilibrium property model arguments.

ACCOUNT_FOR_PHASE_INTERFACE_SCATTERING = 'Account for GB scattering'

- Option to evaluate electrical resistivity when accounting for phase interface scattering.

Argument options

True, False

Default value

True

CTE_REFERENCE_TEMPERATURE = 'Reference temperature for technical CTE'

- Reference temperature for coefficient of thermal expansion (CTE).

Default value

293.15 [K]

ENABLE_USER_DEFINED_FUNCTIONS = 'enableUserDefinedFunctions'

- Option to enable the entry of up to two user-defined functions.

Argument options

True, False

Default value

False

EQUILIBRIUM_ABOVE_FREEZE_IN = 'Equilibrium above freeze-in temperature'

- Option to calculate equilibrium above freeze-in temperature (when enabled).
- Deselect this setting when evaluating the frozen-in structure at higher temperatures than freeze-in temperature.

Argument options

True, False

Default value

True

EVALUATE_FOR_SINGLE_PHASE = 'Evaluate for a single phase only'

- Option to evaluate properties for a single selected phase (when selected).
- If deselected, properties are evaluated for all phases in the calculated system.

Argument options

True, False

Default value

False

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`

Default value

1000.0 [K]

FREEZE_IN_TEMPERATURE = 'Freeze-in temperature'

- Freeze-in temperature at which equilibrium is calculated.

Default value

623.15 [K]

HOMOGENIZATION_FUNCTION = 'Homogenization function'

- Homogenization function used to represent a material microstructure.
- This function is used when evaluating thermal and electrical properties of the system.

Argument options*EquilibriumWithFreezeInTemperature_ArgumentOptions_HOMOGENIZATION_FUNCTION***Default value***EquilibriumWithFreezeInTemperature_ArgumentOptions_HOMOGENIZATION_FUNCTION.
INVERSE_RULE_OF_MIXTURES***MINIMIZATION_STRATEGY = 'Minimization strategy'**

- Minimization strategy ensures that the most stable energy minimum under the specified conditions is computed.

Argument options*EquilibriumWithFreezeInTemperature_ArgumentOptions_MINIMIZATION_STRATEGY***Default value***EquilibriumWithFreezeInTemperature_ArgumentOptions_MINIMIZATION_STRATEGY.
GLOBAL_TEST_PREFERRED*

PHASE_FOR_EVALUATION = 'Phase for evaluation'

- Select the phase for which properties are evaluated.
- This argument is used if *EquilibriumWithFreezeInTemperature_Arguments.EVALUATE_FOR_SINGLE_PHASE* is set to True.

PHASE_INTERFACE_SCATTERING_CONSTANT = 'gb scattering constant'

- Constant used for phase interface scattering term when calculating electrical resistivity.
- This argument is used if *EquilibriumWithFreezeInTemperature_Arguments.ACCOUNT_FOR_PHASE_INTERFACE_SCATTERING* is set to “True”.

Default value

4.0e-8 [ohm-m]

USER_FUNCTION_1 = 'User-defined function'

- First user-defined function.
- This argument is used if *EquilibriumWithFreezeInTemperature_Arguments.ENABLE_USER_DEFINED_FUNCTIONS* is set to True.
- Enter function using Thermo-Calc Console syntax.

USER_FUNCTION_2 = 'Second user-defined function'

- Second user-defined function.
- This argument is used if *EquilibriumWithFreezeInTemperature_Arguments.ENABLE_USER_DEFINED_FUNCTIONS* is set to True.
- Enter function using Thermo-Calc Console syntax.

class tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature.
EquilibriumWithFreezeInTemperature_Results

Bases: *ArgumentBase*

Valid entries for Equilibrium with Freeze-In Temperature property model results.

Note: All result quantities will correspond to either the system or a selected phase. If *EquilibriumWithFreezeInTemperature_Arguments.EVALUATE_FOR_SINGLE_PHASE* is False, results correspond to the system. If *EquilibriumWithFreezeInTemperature_Arguments.EVALUATE_FOR_SINGLE_PHASE* is True, results correspond to the phase specified by *EquilibriumWithFreezeInTemperature_Arguments.PHASE_FOR_EVALUATION*.

DENSITY = 'Density (g/cm3)'

Density [g/cm³].

ELASTIC_CONSTANTS = 'Elastic constants'

- Elastic constants.
- For BCC and FCC phases, the constants “C11”, “C12”, “C44” are available.
- For HCP phases, the constants “C11”, “C12”, “C13”, “C33”, and “C44” are available.

Note: This quantity is only available when using a database which includes elastic properties.

ELASTIC_MODULI = 'Elastic moduli'

Elastic moduli (Young's, shear, bulk).

Note: This quantity is only available when using a database which includes elastic properties.

ELECTRIC_CONDUCTIVITY = 'Electric conductivity (S/m)'

Electrical conductivity [S/m].

ELECTRIC_RESISTIVITY = 'Electric resistivity (ohm m)'

Electrical resistivity [ohm-m].

HEAT_CAPACITY = 'Heat capacity (J/(mol K))'

Heat capacity [J/(mol-K)].

LINEAR_CTE = 'Linear thermal expansion (1/K)'

- Linear coefficient of thermal expansion (CTE) [1/K].
- The linear CTE is calculated as the slope of linear CTE between a reference temperature (set with [EquilibriumWithFreezeInTemperature_Arguments.CTE_REFERENCE_TEMPERATURE](#)) and a specific temperature.

TECHNICAL_LINEAR_CTE = 'Technical thermal expansion (1/K)'

- Technical linear coefficient of thermal expansion (CTE) [1/K].
- The “technical” linear CTE is calculated at a specific temperature.

THERMAL_CONDUCTIVITY = 'Thermal conductivity (W/(mK))'

Thermal conductivity [W/(m-K)].

THERMAL_DIFFUSIVITY = 'Thermal diffusivity (m²/s)'

Thermal diffusivity [(m²)/s].

THERMAL_RESISTIVITY = 'Thermal resistivity (mK/W)'

Thermal resistivity [(m-K)/W].

USER_FUNCTION_1 = 'User-defined function'

Value of the first user-defined function.

USER_FUNCTION_2 = '2nd user-defined function'

Value of the second user-defined function.

VOLUME = 'Volume (m³/mol)'

Volume [m³/mol].

VOLUMETRIC_CTE = 'Thermal expansion (1/K)'

- Volumetric coefficient of thermal expansion (CTE) [1/K].
- The volumetric CTE is calculated as the slope of volumetric CTE between a reference temperature (set with [EquilibriumWithFreezeInTemperature_Arguments.CTE_REFERENCE_TEMPERATURE](#)) and a specific temperature.

6.9.14 Module “equilibrium_with_freeze_in_temperature_ni”

class `tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature_ni.EquilibriumWithFreezeInTemperatureNi`

Bases: `object`

Encapsulation class for the Equilibrium with Freeze-In Temperature (Ni) property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of `EquilibriumWithFreezeInTemperatureNi_ArgumentOptions`

Arguments

alias of `EquilibriumWithFreezeInTemperatureNi_Arguments`

Results

alias of `EquilibriumWithFreezeInTemperatureNi_Results`

classmethod `get_aliases()` → `list[str]`

List of aliases for “Equilibrium with Freeze-In Temperature - Ni” property model.

classmethod `get_name()` → `str`

String name of “Equilibrium with Freeze-In Temperature - Ni” property model.

class `tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature_ni.EquilibriumWithFreezeInTemperatureNi_ArgumentOptions`

Bases: `object`

Valid entries for Equilibrium with Freeze-In Temperature (Ni) property model arguments which requires specific options to be entered.

HOMOGENIZATION_FUNCTION

alias of `EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_HOMOGENIZATION_FUNCTION`

MINIMIZATION_STRATEGY

alias of `EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_MINIMIZATION_STRATEGY`

PHASE_GROUP_SELECTION

alias of `EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_PHASE_GROUP_SELECTION`

class `tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature_ni.EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_HOMOGENIZATION_FUNCTION`

Bases: `ArgumentBase`

Valid options for `EquilibriumWithFreezeInTemperatureNi_Arguments.HOMOGENIZATION_FUNCTION`.

HASHIN_SHTRIKMAN_MAJORITY_AS_MATRIX = 'Hashin-Shtrikman bound with majority phase as matrix phase'

- Hashin-Shtrikman with majority phase as matrix.

INVERSE_RULE_OF_MIXTURES = 'Inverse rule of mixtures (lower Wiener bound)'

- Inverse rule of mixtures (lower Wiener bound).

LOWER_HASHIN_SHTRIKMAN = 'General lower Hashin-Shtrikman bound'

- General lower Hashin-Shtrikman bound.

RULE_OF_MIXTURES = 'Rule of mixtures (upper Wiener bound)'

- Rule of mixtures (upper Wiener bound).

UPPER_HASHIN_SHTRIKMAN = 'General upper Hashin-Shtrikman bound'

- General upper Hashin-Shtrikman bound.

**class tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature_ni.
EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_MINIMIZATION_STRATEGY**

Bases: *ArgumentBase*

Valid options for *EquilibriumWithFreezeInTemperatureNi_Arguments.MINIMIZATION_STRATEGY*.

GLOBAL_MINIMIZATION_ONLY = 'Global minimization only'

- Perform full global minimization.

GLOBAL_TEST_PREFERRED = 'Global test preferred'

- Perform global test but tries full global minimization at failure.

LOCAL_MINIMIZATION_ONLY = 'Local minimization only'

- Only perform local equilibrium minimization.

LOCAL_MINIMIZATION_PREFERRED = 'Local minimization preferred'

- Perform local equilibrium but tries global test and full global minimization at failure.
- Also performs global test in case the stable phases at equilibrium changes from the previous model evaluation.

**class tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature_ni.
EquilibriumWithFreezeInTemperatureNi_Arguments**

Bases: *ArgumentBase*

Valid entries for Equilibrium with Freeze-In Temperature (Ni) property model arguments.

ACCOUNT_FOR_PHASE_INTERFACE_SCATTERING = 'Account for GB scattering'

- Option to evaluate electrical resistivity when accounting for phase interface scattering.

Argument options

True, False

Default value

True

CTE_REFERENCE_TEMPERATURE = 'Reference temperature for technical CTE'

- Reference temperature for coefficient of thermal expansion (CTE).

Default value

293.15 [K]

ENABLE_USER_DEFINED_FUNCTIONS = 'Defined user_functions'

- Option to enable the entry of up to two user-defined functions.

Argument options

True, False

Default value

False

EQUILIBRIUM_ABOVE_FREEZE_IN = 'Equilibrium above freeze-in temperature'

- Option to calculate equilibrium above freeze-in temperature (when enabled).
- Deselect this setting when evaluating the frozen-in structure at higher temperatures than freeze-in temperature.

Argument options

True:, :const:`False`

Default value

True

EVALUATE_FOR_SINGLE_PHASE = 'Evaluate for a single phase only'

- Option to evaluate properties for a single selected phase (when selected).
- If deselected, properties are evaluated for all phases in the calculated system.

Argument options

True:, :const:`False`

Default value

False

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`.

Default value

1000.0 [K]

FREEZE_IN_TEMPERATURE = 'Freeze-in temperature'

- Freeze-in temperature at which equilibrium is calculated.

Default value

1273.15 [K]

HOMOGENIZATION_FUNCTION = 'Homogenization function'

- Homogenization function used to represent a material microstructure.
- This function is used when evaluating thermal and electrical properties of the system.

Argument options*EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_HOMOGENIZATION_FUNCTION***Default value***EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_HOMOGENIZATION_FUNCTION.INVERSE_RULE_OF_MIXTURES*

MAX_NUM_GLOBAL_GRIDPOINTS = 'Max number of global gridpoints'

- Max number of gridpoints in global minimization.

Default value

20000

MINIMIZATION_STRATEGY = 'Minimization strategy'

- Minimization strategy ensures that the most stable energy minimum under the specified conditions is computed.

Argument options

EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_MINIMIZATION_STRATEGY

Default value

*EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_MINIMIZATION_STRATEGY.
GLOBAL_TEST_PREFERRED*

PHASE_FOR_EVALUATION = 'Phase for evaluation'

- Select the phase for which properties are evaluated.
- This argument applies when *EquilibriumWithFreezeInTemperatureNi_Arguments.EVALUATE_FOR_SINGLE_PHASE* is set to True.

PHASE_GROUP_SELECTION = 'phase group list'

- Select a subset of the phases to enter in the calculation.

Argument options

EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_PHASE_GROUP_SELECTION

Default value

*EquilibriumWithFreezeInTemperatureNi_ArgumentOptions_PHASE_GROUP_SELECTION.
INCLUDE_TYPICAL_NI_SUPERALLOY*

PHASE_INTERFACE_SCATTERING_CONSTANT = 'gb scattering constant'

- Constant used for phase interface scattering term when calculating electrical resistivity.
- This argument is used if *EquilibriumWithFreezeInTemperatureNi_Arguments.ACCOUNT_FOR_PHASE_INTERFACE_SCATTERING* is set to True.

Default value

4.0e-8 [ohm-m]

USER_FUNCTION_1 = 'User-defined function'

- First user-defined function.
- This argument is used if *EquilibriumWithFreezeInTemperatureNi_Arguments.ENABLE_USER_DEFINED_FUNCTIONS* is set to True.
- Enter function using Thermo-Calc Console syntax.

USER_FUNCTION_2 = 'Second user-defined function'

- Second user-defined function.
- This argument is used if *EquilibriumWithFreezeInTemperatureNi_Arguments.ENABLE_USER_DEFINED_FUNCTIONS* is set to True.
- Enter function using Thermo-Calc Console syntax.

**class tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature_ni.
EquilibriumWithFreezeInTemperatureNi_Results**

Bases: *ArgumentBase*

Valid entries for Equilibrium with Freeze-In Temperature (Ni) property model results.

Note: All result quantities will correspond to either the system or a selected phase.

- If *EquilibriumWithFreezeInTemperatureNi_Arguments.EVALUATE_FOR_SINGLE_PHASE* is False, results correspond to the system.
- If *EquilibriumWithFreezeInTemperatureNi_Arguments.EVALUATE_FOR_SINGLE_PHASE* is True, results correspond to the phase specified by *EquilibriumWithFreezeInTemperatureNi_Arguments.PHASE_FOR_EVALUATION*.

DENSITY = 'Density (g/cm3)'

- Density [g/cm³].

ELASTIC_CONSTANTS = 'Elastic constants'

- Elastic constants.
- For BCC and FCC phases, the constants “C11”, “C12”, “C44” are available.
- For HCP phases, the constants “C11”, “C12”, “C13”, “C33”, and “C44” are available.

Note: This quantity is only available when using a database which includes elastic properties.

ELASTIC_MODULI = 'Elastic moduli'

- Elastic moduli (Young’s, shear, bulk).

Note: This quantity is only available when using a database which includes elastic properties.

ELECTRIC_CONDUCTIVITY = 'Electric conductivity (S/m)'

- Electrical conductivity [S/m].

ELECTRIC_RESISTIVITY = 'Electric resistivity (ohm m)'

- Electrical resistivity [ohm-m].

HEAT_CAPACITY = 'Heat capacity (J/(mol K))'

- Heat capacity [J/(mol-K)].

LATTICE_MISMATCH = 'Lattice mismatch between Gamma/Gamma-Prime [%]'

- Unconstrained lattice mismatch between Gamma and Gamma-prime [%].

LATTICE_PARAMETER_GAMMA = 'Lattice parameter Gamma'

- Lattice parameter for Gamma phase.

LATTICE_PARAMETER_GAMMA_PRIME = 'Lattice parameter Gamma-Prime'

- Lattice parameter for Gamma-prime phase.

LINEAR_CTE = 'Linear thermal expansion (1/K)'

- Linear coefficient of thermal expansion (CTE) [1/K].
- The linear CTE is calculated as the slope of linear CTE between a reference temperature (set with *EquilibriumWithFreezeInTemperatureNi_Arguments.CTE_REFERENCE_TEMPERATURE*) and a specific temperature.

TECHNICAL_LINEAR_CTE = 'Technical thermal expansion (1/K)'

- Technical linear coefficient of thermal expansion (CTE) [1/K].
- The “technical” linear CTE is calculated at a specific temperature.

THERMAL_CONDUCTIVITY = 'Thermal conductivity (W/(mK))'

- Thermal conductivity [W/(m-K)].

THERMAL_DIFFUSIVITY = 'Thermal diffusivity (m²/s)'

- Thermal diffusivity [(m²)/s].

THERMAL_RESISTIVITY = 'Thermal resistivity (mK/W)'

- Thermal resistivity [(m-K)/W].

USER_FUNCTION_1 = 'User-defined function'

- Value of the first user-defined function.

USER_FUNCTION_2 = '2nd user-defined function'

- Value of the second user-defined function.

VOLUME = 'Volume (m³/mol)'

- Volume [m³/mol].

VOLUMETRIC_CTE = 'Thermal expansion (1/K)'

- Volumetric coefficient of thermal expansion (CTE) [1/K].
- The volumetric CTE is calculated as the slope of volumetric CTE between a reference temperature (set with *EquilibriumWithFreezeInTemperatureNi_Arguments.CTE_REFERENCE_TEMPERATURE*) and a specific temperature.

```
class tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature_ni.  
EquilibriumWithFreezeInTemperature_ArgumentOptions_PHASE_GROUP_SELECTION
```

Bases: *ArgumentBase*

Valid options for *EquilibriumWithFreezeInTemperatureNi_Arguments.PHASE_GROUP_SELECTION*.

INCLUDE_ALL_PHASES = '1'

- Includes all phases entered by the user in the system.

INCLUDE_GAMMA_GAMMA_PRIME_ONLY = '2'

- Includes Gamma (“FCC_L12”) and Gamma-Prime (“FCC_L12#2”) phases.

INCLUDE_TYPICAL_NI_SUPERALLOY = '3'

Phases included in this option:

- **Oxide and metal liquid phases:** “IONIC_LIQ”, “IONIC_LIQ#2”, “LIQUID”
- **Gamma (#1) and Gamma-Prime(#2):** “DIC_FCC_A1”, “FCC_A1”, “FCC_A1#2”, “FCC_L12”, “FCC_L12#2”
- **Carbides/Nitrides:** “FCC_L12#3”, “HCP_A3#1”, “HCP_A3#2”, “M23C6”, “M6C”, “M7C3”
- **B2 phases:** “BCC_A2”, “BCC_A2#2”, “BCC_B2”, “BCC_B2#2”
- **Gamma Double-Prime:** “BCT_D022”
- **Additional Phases:** “PI”, “NI3B_D011”, “M2B_TETR”, “D5A_M3B2”, “M3B2”, “MB_B33”, “MB2_C32”, “G_PHASE”, “NI5ZR”, “NI7ZR2”, “CR3NI5SI2”, “CR3NI5SI2”, “SPINEL”, “ALPHA_SPINEL”, “CORUNDUM”

INCLUDE_TYPICAL_PLUS_ETA_DELTA = '4'

Phases included in this option:

- **All phases from:** `ArgumentOptions_PhaseGroupSelection.INCLUDE_TYPICAL_NI_SUPERALLOY`
- **Delta phase:** “NI3TA_D0A”
- **Eta phase:** “NI3TI_D024”

INCLUDE_TYPICAL_PLUS_TCP = '5'

Phases included in this option:

- **All phases from:** `ArgumentOptions_PhaseGroupSelection.INCLUDE_TYPICAL_NI_SUPERALLOY`
- **TCP phases:** “C14_LAVES”, “SIGMA”, “MU_PHASE”, “R_PHASE”, “P_PHASE”, “Z_PHASE”, “CR3SI_A15”

6.9.15 Module “ferrite”

`class tc_python.property_model_definitions.ferrite.Ferrite`

Bases: `object`

Encapsulation class for the “Ferrite” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of `Ferrite_ArgumentOptions`

Arguments

alias of `Ferrite_Arguments`

Results

alias of `Ferrite_Results`

classmethod `get_aliases()` → list[str]

List of aliases for “Ferrite” property model.

classmethod `get_name()` → str

String name of “Ferrite” property model.

class `tc_python.property_model_definitions.ferrite.Ferrite_ArgumentOptions`

Bases: object

Valid entries for Ferrite property model arguments which requires specific options to be entered.

AUSTENITE_COMPOSITION

alias of *Ferrite_ArgumentOptions_AUSTENITE_COMPOSITION*

GROWTH_MODE

alias of *Ferrite_ArgumentOptions_GROWTH_MODE*

class `tc_python.property_model_definitions.ferrite.`

Ferrite_ArgumentOptions_AUSTENITE_COMPOSITION

Bases: *ArgumentBase*

Valid options for *Ferrite_Arguments.AUSTENITE_COMPOSITION*.

EQUILIBRIUM = 'Equilibrium composition'

- Use equilibrium composition at the specified austenitizing temperature.

NOMINAL = 'Nominal composition'

- Use nominal alloy composition as austenite composition.

class `tc_python.property_model_definitions.ferrite.Ferrite_ArgumentOptions_GROWTH_MODE`

Bases: *ArgumentBase*

Valid options for *Ferrite_Arguments.GROWTH_MODE*.

NPLE = 'Negligible-partitioning local equilibrium (NPLE)'

- Negligible-partitioning local equilibrium (NPLE).

OE = 'Orthoequilibrium (OE)'

- Orthoequilibrium (OE).

OP = 'Orthoprecipitate (OP)'

- Orthoprecipitate (OP).
- Austenite interfacial composition being the bulk composition, ferrite interfacial composition from the maximum driving force condition (parallel tangent construction in Gibbs energy-composition diagram).

PE = 'Paraequilibrium (PE)'

- Paraequilibrium (PE).

PP = 'Paraprecipitate (PP)'

- Paraprecipitate (PP).
- Only carbon is allowed to partition, otherwise the same as OP.

class `tc_python.property_model_definitions.ferrite.Ferrite_Arguments`

Bases: *ArgumentBase*

Valid entries for Ferrite property model arguments.

AUSTENITE_COMPOSITION = 'Austenite composition from'

- Choose the source for austenite composition.

Argument options

Ferrite_ArgumentOptions_AUSTENITE_COMPOSITION

Default value

Ferrite_ArgumentOptions_AUSTENITE_COMPOSITION.NOMINAL

AUSTENITIZING_TEMPERATURE = 'Annealing temperature'

- Austenitizing temperature used when equilibrium composition is selected as source.
- This argument is used when *Ferrite_ArgumentOptions_AUSTENITE_COMPOSITION.EQUILIBRIUM* is specified for *Ferrite_Arguments.AUSTENITE_COMPOSITION*.

Default value

1000.0 [K]

CUSTOM_PARAMETERS = 'Custom parameters'

- Option to apply custom parameters for nucleation rate model and interfacial mobility model.

Argument options

True, False

Default value

False

EDGE_ENERGY = 'Edge surface energy [J/m^2]'

- Surface energy of pillbox edge (see reference for details).

Default value

0.02 [J/m^2]

EPSILON = 'Epsilon [J/m^2]'

- A term of surface energy change (see reference for details).

Default value

0.007 [J/m^2]

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with: `meth:PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation`

Default value

1000.0 [K]

GRAIN_SIZE = 'GrainSize'

- Grain size of the austenite phase in micrometers.

Default value
100.0 [μm]

GROWTH_MODE = 'Growth mode'

- This argument defines how ferrite and austenite compositions at the interface are solved.

Argument options
Ferrite_ArgumentOptions_GROWTH_MODE

Default value
Ferrite_ArgumentOptions_GROWTH_MODE.OE

MAX_DELTA_X_ABS = 'Maximum change of phase fraction (absolute)'

- Absolute maximum change of phase fraction allowed per time step.

Default value
5e-3

MAX_DELTA_X_REL = 'Maximum change of phase fraction (relative)'

- Relative maximum change of phase fraction allowed per time step.

Default value
5e-3

MOBILITY_ACTIVATION_ENERGY = 'Interfacial mobility activation energy [J/mol]'

- Activation energy in an Arrhenius equation for interfacial mobility.

Default value
0.0

MOBILITY_PREFACTOR = 'Interfacial mobility prefactor [m mol/(J s)]'

- Pre-exponential factor in the Arrhenius equation for interfacial mobility.

Default value
"Infinity"

PHASE_ADDITION = 'Phase addition'

- Gibbs energy addition applied to ferrite phase [J/mol] (substitutional elements).

Default value
0.0 [J/mol]

SITE_DENSITY = 'Site density [1/m²]'

- Number of ferrite nucleation sites per unit area of austenite grain boundary.

Default value

1e6 [1/m²]

SKIP_TIME_INTEGRATION = 'Skip time integration'

- Option to skip time integration which is usually time-consuming.
- If True, ferrite start/half/finish times will not be solved for.

Argument options

True, False

Default value

False

class tc_python.property_model_definitions.ferrite.Ferrite_Results

Bases: *ArgumentBase*

Valid entries for Ferrite property model results.

ALPHA = 'Parabolic growth rate constant [m/s^(1/2)]'

- Parabolic growth rate constant [m/s^(1/2)].

DRIVING_FORCE = 'Driving force [J/mol]'

- Driving force for ferrite transformation.

FINISH_TIME = 'Ferrite finish'

- Time to reach 98% ferrite fraction (absolute).

FINISH_TIME_REL = 'Ferrite finish (relative)'

- Time to reach 98% of final ferrite fraction (relative).

HALF_TIME = 'Ferrite half'

- Time to reach 50% ferrite fraction (absolute).

HALF_TIME_REL = 'Ferrite half (relative)'

- Time to reach 50% of final ferrite fraction (relative).

MOLE_FRACTION_FERRITE = 'Ferrite molar fraction (OE or PE)'

- Ferrite mole fraction calculated using selected growth mode.

NUCLEATION_RATE = 'Nucleation rate [1/(m² s)]'

- Nucleation rate on austenite grain boundaries.

START_TIME = 'Ferrite start'

- Time to reach 2% ferrite fraction (absolute).

START_TIME_REL = 'Ferrite start (relative)'

- Time to reach 2% of final ferrite fraction (relative).

6.9.16 Module “interfacial_energy”

class `tc_python.property_model_definitions.interfacial_energy.InterfacialEnergy`

Bases: `object`

Encapsulation class for the “Interfacial Energy” property model Arguments and Results.

Arguments

alias of `InterfacialEnergy_Arguments`

Results

alias of `InterfacialEnergy_Results`

classmethod `get_aliases()` → `list[str]`

List of aliases for “Interfacial Energy” property model.

classmethod `get_name()` → `str`

String name of “Interfacial Energy” property model.

class `tc_python.property_model_definitions.interfacial_energy.InterfacialEnergy_Arguments`

Bases: `ArgumentBase`

Valid entries for InterfacialEnergy property model arguments.

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`.

Default value

1000.0 [K]

MATRIX = 'matrix'

- Choose a matrix phase.

Default value

“None”

PRECIPITATE = 'precipitate'

- Choose a precipitate phase.

Default value

“None”

class `tc_python.property_model_definitions.interfacial_energy.InterfacialEnergy_Results`

Bases: `ArgumentBase`

Valid entries for InterfacialEnergy property model results.

INTERFACIAL_ENERGY = 'interfacialEnergy'

- Calculated interfacial energy between the selected matrix and precipitate phases.

6.9.17 Module “liquidus_and_solidus_temperature”

class `tc_python.property_model_definitions.liquidus_and_solidus_temperature.LiquidusAndSolidusTemperature`

Bases: `object`

Encapsulation class for the “Liquidus and Solidus Temperature” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of `LiquidusAndSolidusTemperature_ArgumentOptions`

Arguments

alias of `LiquidusAndSolidusTemperature_Arguments`

Results

alias of `LiquidusAndSolidusTemperature_Results`

classmethod `get_aliases()` → `list[str]`

List of aliases for “Liquidus and Solidus Temperature” property model.

classmethod `get_name()` → `str`

String name of “Liquidus and Solidus Temperature” property model.

class `tc_python.property_model_definitions.liquidus_and_solidus_temperature.LiquidusAndSolidusTemperature_ArgumentOptions`

Bases: `object`

Valid entries for Liquidus and Solidus Temperature property model arguments which requires specific options to be entered.

LOGGER_CHOICE

alias of `LiquidusAndSolidusTemperature_ArgumentOptions_LOGGER_CHOICE`

class `tc_python.property_model_definitions.liquidus_and_solidus_temperature.LiquidusAndSolidusTemperature_ArgumentOptions_LOGGER_CHOICE`

Bases: `ArgumentBase`

Valid entries for `LiquidusAndSolidusTemperature_Arguments.LOGGER_CHOICE`.

FULL_LIST = 'fullList'

- Full list for each iteration in logger.

SINGLE_ROW = 'singleRow'

- Single row output in logger.

class `tc_python.property_model_definitions.liquidus_and_solidus_temperature.LiquidusAndSolidusTemperature_Arguments`

Bases: `ArgumentBase`

Valid entries for Liquidus and Solidus Temperature property model arguments.

GAS_PHASE = 'gasPhase'

- Gas phase to suspend/consider when the gas phase is included.
- This argument is used if `LiquidusAndSolidusTemperature_Arguments.SUSPEND_GAS_PHASE` is set to True.

Default value

"GAS"

GLOBAL_MIN_FOR_LIQUIDUS = 'globalMinForLiq'

- Option to enable global minimization when determining liquidus.

Argument options

True, False

Default value

True

GLOBAL_MIN_FOR_SOLIDUS = 'globalMinForSol'

- Option to enable global minimization when determining solidus.

Argument options

True, False

Default value

True

HIGH_LIMIT_TEMPERATURE = 'High temperature limit'

- Upper temperature limit used for transformation temperature search.

Default value

2000.0 [K]

LIQUID_PHASE = 'liquidPhase'

- Liquid phase to use as reference when multiple liquid phases are possible.

Default value

"LIQ"

LOGGER_CHOICE = 'loggerChoice'

- Select logger output type.

Argument options*LiquidusAndSolidusTemperature_ArgumentOptions_LOGGER_CHOICE***Default value***LiquidusAndSolidusTemperature_ArgumentOptions_LOGGER_CHOICE.
SINGLE_ROW***LOGGER_OUT = 'loggerOut'**

- Option to print results to the logger.

Argument options

True, False

Default value

True

LOW_LIMIT_TEMPERATURE = 'Low temperature limit'

- Lower temperature limit used for transformation temperature search.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.low_limit_temperature())()`.

Default value
900.0 [K]

MAX_NUM_ITERATIONS = 'maxNumberOfIterations'

- Maximum number of phase transition iterations performed during the search.

Default value
10

ONLY_LIQUIDUS = 'calculateOnlyLiquidus'

- Option to calculate only the Liquidus temperature to reduce computation time.

Argument options
True, False

Default value
False

SOLID_FRACTION = 'solidFraction'

- Solid fraction threshold used when evaluating the liquidus temperature.

Default value
0.0

SUSPEND_GAS_PHASE = 'suspendGasPhase'

- Option to suspend the gas phase during calculations to avoid misleading equilibria.

Argument options
True, False

Default value
True

`class tc_python.property_model_definitions.liquidus_and_solidus_temperature.LiquidusAndSolidusTemperature_Results`

Bases: [*ArgumentBase*](#)

Valid entries for Liquidus and Solidus Temperature property model results.

LIQUIDUS = 'Liquidus temperature'

- Liquidus temperature.

SOLIDUS = 'Solidus temperature'

- Solidus temperature.

6.9.18 Module “martensite_fractions”

class `tc_python.property_model_definitions.martensite_fractions.MartensiteFractions`

Bases: `object`

Encapsulation class for the “Martensite Fractions” property model Arguments and Results.

Arguments

alias of `MartensiteFractions_Arguments`

Results

alias of `MartensiteFractions_Results`

classmethod `get_aliases()` → `list[str]`

List of aliases for “Martensite Fractions” property model.

classmethod `get_name()` → `str`

String name of “Martensite Fractions” property model.

class

`tc_python.property_model_definitions.martensite_fractions.MartensiteFractions_Arguments`

Bases: `ArgumentBase`

Valid entries for Martensite Fraction property model arguments.

ANNEALING_TEMPERATURE = 'Annealing temperature'

- Intercritical annealing temperature.
- This argument is used if `MartensiteFractions_Arguments.USE_INTERCRITICAL_ANNEALING` is set to `True`.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.annealing_temperature())()`.

Default value

1273.15 [K]

GIBBS_ADDITION = 'Parent phase Gibbs energy addition'

- Parent phase Gibbs energy addition.

Default value

0.0 [J/mol]

GRAIN_SIZE = 'GrainSize'

- Grain size of the austenite phase.

Default value

100.0 [μm]

QUENCH_TEMPERATURE = 'Quench temperature'

- Temperature to which material is quenched.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.quench_temperature())()`.

Default value

298.15 [K]

USE_INTERCRITICAL_ANNEALING = 'Intercritical annealing'

- Option to consider intercritical annealing.
- If True: Calculate equilibrium at the annealing temperature and use the austenite phase composition for property model calculation.
- If False: Use the nominal composition for the property model calculation.

Argument options

True, False

Default value

False

class`tc_python.property_model_definitions.martensite_fractions.MartensiteFractions_Results`Bases: *ArgumentBase*

Valid entries for Martensite Fraction property model results.

MARTENSITE_PERCENTAGE = 'MartensitePct'

- Martensite percentage.

RETAINED_AUSTENITE_PERCENTAGE = 'RetainedAustenitePct'

- Retained austenite percentage.

6.9.19 Module “martensite_temperatures”

class `tc_python.property_model_definitions.martensite_temperatures.MartensiteTemperatures`

Bases: object

Encapsulation class for the “Martensite Temperatures” property model Arguments and Results.

Argumentsalias of *MartensiteTemperatures_Arguments***Results**alias of *MartensiteTemperatures_Results***classmethod** `get_aliases()` → list[str]

List of aliases for “Martensite Temperatures” property model.

classmethod `get_name()` → str

String name of “Martensite Temperatures” property model.

class `tc_python.property_model_definitions.martensite_temperatures.`**MartensiteTemperatures_Arguments**Bases: *ArgumentBase*

Valid entries for Martensite Temperatures property model arguments.

ANNEALING_TEMPERATURE = 'Annealing temperature'

- Intercritical annealing temperature.
- This argument is used if *MartensiteTemperatures_Arguments*. *USE_INTERCRITICAL_ANNEALING* is set to True.
- This argument can also be set with *PropertyModelCalculation*. *set_temperature(PropertyModelQuantity.annealing_temperature())()*.

Default value

1273.15 [K]

GIBBS_ADDITION = 'Parent phase Gibbs energy addition'

- Parent phase Gibbs energy addition.

Default value

0.0 [J/mol]

GRAIN_SIZE = 'GrainSize'

- Grain size of the austenite phase.

Default value

100.0 [μm]

USE_INTERCRITICAL_ANNEALING = 'Intercritical annealing'

- Option to consider intercritical annealing.
- If True: Calculate equilibrium at the annealing temperature and use the austenite phase composition for property model calculation.
- If False: Use the nominal composition for the property model calculation.

Argument options

True, False

Default value

False

class `tc_python.property_model_definitions.martensite_temperatures.`

MartensiteTemperatures_Results

Bases: *ArgumentBase*

Valid entries for Martensite Temperatures property model results.

EPSILON_MS = 'EpsilonMs'

- Martensite start temperature of the epsilon morphology.

LATH_MS = 'LathMs'

- Martensite start temperature of the lath morphology.

M50 = 'M50'

- 50% Martensite temperature.

M90 = 'M90'

- 90% Martensite temperature.

M99 = 'M99'

- Martensite finish temperature (assumed as 99% martensite temperature).

MS = 'Ms'

- Martensite start temperature.

PLATE_MS = 'PlateMs'

- Martensite start temperature of the plate morphology.

6.9.20 Module “martensite_temperatures_ti”

class

`tc_python.property_model_definitions.martensite_temperatures_ti.MartensiteTemperaturesTi`

Bases: object

Encapsulation class for the “Martensite Temperatures - Ti” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *MartensiteTemperaturesTi_ArgumentOptions*

Arguments

alias of *MartensiteTemperaturesTi_Arguments*

Results

alias of *MartensiteTemperaturesTi_Results*

classmethod `get_aliases()` → list[str]

List of aliases for “Martensite Temperatures - Ti” property model.

classmethod `get_name()` → str

String name of “Martensite Temperatures - Ti” property model.

class `tc_python.property_model_definitions.martensite_temperatures_ti.`

MartensiteTemperaturesTi_ArgumentOptions

Bases: object

Valid entries for Martensite Temperatures - Ti property model arguments which requires specific options to be entered.

MARTENSITE_PHASE

alias of *MartensiteTemperaturesTi_ArgumentOptions_MARTENSITE_PHASE*

class `tc_python.property_model_definitions.martensite_temperatures_ti.`

MartensiteTemperaturesTi_ArgumentOptions_MARTENSITE_PHASE

Bases: *ArgumentBase*

Valid options for *MartensiteTemperaturesTi_Arguments.MARTENSITE_PHASE*.

B19_ORTHO = 'B19_ORTHO'

- Orthorhombic B19 martensite phase (useful for TiNiCu-based shape-memory alloys).

B19_PRIME = 'B19_PRIME'

- B19' martensite phase (common in TiNi shape-memory alloys).

HCP_A3 = 'HCP_A3'

- HCP_A3-based martensite phases (alpha/alpha'/alpha'').

**class tc_python.property_model_definitions.martensite_temperatures_ti.
MartensiteTemperaturesTi_Arguments**

Bases: *ArgumentBase*

Valid entries for Martensite Temperatures - Ti property model arguments.

ANNEALING_TEMPERATURE = 'Annealing temperature'

- Intercritical annealing temperature.
- This argument is only used if *MartensiteTemperaturesTi_Arguments.USE_ANNEALING* is set to True.
- This argument can also be set with *PropertyModelCalculation.set_temperature(PropertyModelQuantity.annealing_temperature())()*.

Default value
1000.0 [K]

GIBBS_ADDITION = 'gibbs'

- Parent phase energy addition.
- This should normally only be used for calculating T-Zero since it might produce unpredictable results for Ms.
- The expression can be a function of temperature, T, and composition, w(el) or x(el), e.g., $50 * T / 1000 + 10 * x(\text{Cr}) + 5 * x(\text{Cr})^2$.

Default value
0.0 [J/mol]

MARTENSITE_PHASE = 'mode'

- Select martensite phase for Ti alloys.

Argument options

MartensiteTemperaturesTi_ArgumentOptions_MARTENSITE_PHASE

Default value

MartensiteTemperaturesTi_ArgumentOptions_MARTENSITE_PHASE.HCP_A3

USE_ANNEALING = 'UseAnnealing'

- Toggle to use annealing procedure for composition selection.

Argument options

True, False

Default value

False

```
class tc_python.property_model_definitions.martensite_temperatures_ti.  
MartensiteTemperaturesTi_Results
```

Bases: *ArgumentBase*

Valid entries for Martensite Temperatures - Ti property model results.

AF = 'Af temperature'

- Austenite finish temperature.

AS = 'As temperature'

- Austenite start temperature.

MF = 'Mf temperature'

- Martensite finish temperature.

MS = 'Ms temperature'

- Martensite start temperature.

PARENT_PHASE_COMPOSITION = 'Parent phase composition'

- Composition of parent phase (in mole percent) at the evaluation state.

STABLE_PHASES_AT_ANNEALING = 'Stable phase (Volume percent)'

- List of stable phases and their volume fractions at the annealing temperature.

T_ZERO_TEMPERATURE = 'T-Zero temperature'

- T-Zero temperature where Gibbs energies of the parent phase and selected martensite phase are equal.

6.9.21 Module “martensitic_steel_strength”

```
class
```

```
tc_python.property_model_definitions.martensitic_steel_strength.MartensiticSteelStrength
```

Bases: object

Encapsulation class for the “Martensitic Steel Strength” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *MartensiticSteelStrength_ArgumentOptions*

Arguments

alias of *MartensiticSteelStrength_Arguments*

Results

alias of *MartensiticSteelStrength_Results*

classmethod get_aliases() → list[str]

List of aliases for “Martensitic Steel Strength” property model.

classmethod get_name() → str

String name of “Martensitic Steel Strength” property model.

```
class tc_python.property_model_definitions.martensitic_steel_strength.
MartensiticSteelStrength_ArgumentOptions
```

Bases: object

Valid entries for Martensitic Steel Strength property model arguments which requires specific options to be entered.

BCC_STATUS

alias of *MartensiticSteelStrength_ArgumentOptions_BCC_STATUS*

CEMENTITE_STATUS

alias of *MartensiticSteelStrength_ArgumentOptions_CEMENTITE_STATUS*

FCC_STATUS

alias of *MartensiticSteelStrength_ArgumentOptions_FCC_STATUS*

FLOW_STRESS_MODE

alias of *MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODE*

FLOW_STRESS_MODEL

alias of *MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODEL*

```
class tc_python.property_model_definitions.martensitic_steel_strength.
MartensiticSteelStrength_ArgumentOptions_BCC_STATUS
```

Bases: *ArgumentBase*

Valid options for *MartensiticSteelStrength_Arguments.BCC_STATUS*.

ENTERED = 'entered'

- Include the phase in the tempering calculation.

SUSPENDED = 'suspended'

- Suspend the phase from the tempering calculation.

```
class tc_python.property_model_definitions.martensitic_steel_strength.
MartensiticSteelStrength_ArgumentOptions_CEMENTITE_STATUS
```

Bases: *ArgumentBase*

Valid options for *MartensiticSteelStrength_Arguments.CEMENTITE_STATUS*.

ENTERED = 'entered'

- Include the phase in the tempering calculation.

SUSPENDED = 'suspended'

- Suspend the phase from the tempering calculation.

```
class tc_python.property_model_definitions.martensitic_steel_strength.
MartensiticSteelStrength_ArgumentOptions_FCC_STATUS
```

Bases: *ArgumentBase*

Valid options for *MartensiticSteelStrength_Arguments.FCC_STATUS*.

ENTERED = 'entered'

- Include the phase in the tempering calculation.

SUSPENDED = 'suspended'

- Suspend the phase from the tempering calculation.

**class tc_python.property_model_definitions.martensitic_steel_strength.
MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODE**

Bases: *ArgumentBase*

Valid options for *MartensiticSteelStrength_Arguments.FLOW_STRESS_MODE*.

ENGINEERING_PROPERTIES = 'Engineering properties'

- Engineering properties mode (E, yield strength, and UTS).

STRESS_VS_STRAIN = 'Stress vs. strain'

- Stress vs. strain curve mode.

**class tc_python.property_model_definitions.martensitic_steel_strength.
MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODEL**

Bases: *ArgumentBase*

Valid options for *MartensiticSteelStrength_Arguments.FLOW_STRESS_MODEL*.

RAMBERG_OSGOOD = 'Ramberg-Osgood'

The Ramberg-Osgood flow stress model.

VOCE = 'Voce'

The Voce flow stress model.

**class tc_python.property_model_definitions.martensitic_steel_strength.
MartensiticSteelStrength_Arguments**

Bases: *ArgumentBase*

Valid entries for Martensite Steel Strength property model arguments.

ANNEALING_TEMPERATURE = 'Annealing temperature'

- Temperature at which austenitization or intercritical annealing is performed before quenching.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.annealing_temperature())()`.

Default value

1273.15 [K]

APPLY_STRAIN_RATE = 'Apply strain rate'

- Option to account for the effect of strain rate on flow stress.
- If `False`, flow stress will be calculated for quasi-static conditions only.

Argument options

True, False

Default value

False

BCC_STATUS = 'SetStatusBCC'

- Option to suspend the BCC_A2 phase from the tempering calculation.

Argument options

MartensiticSteelStrength_ArgumentOptions_BCC_STATUS

Default value

MartensiticSteelStrength_ArgumentOptions_BCC_STATUS.ENTERED

CEMENTITE_STATUS = 'SetStatusCementite'

- Option to suspend the CEMENTITE_DO11 phase from the tempering calculation.

Argument options

MartensiticSteelStrength_ArgumentOptions_CEMENTITE_STATUS

Default value

MartensiticSteelStrength_ArgumentOptions_CEMENTITE_STATUS.ENTERED

CONSTANT_STRENGTH_ADDITION = 'ConstantStrengthAddition'

- Give the value of the desired constant strength addition in MPa.

Default value

0.0 [MPa]

ELONGATION_CORRECTION = 'Elongation correction'

- Optional correction factor for the predicted elongation at fracture.
- A value of 1 will imply no correction.

ENABLE_MORE_OPTIONS = 'MoreOptions'

- Option to enable more property model options.

Argument options

True, False

Default value

False

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`.

Default value

1000.0 [K]

FCC_STATUS = 'SetStatusFCC'

- Option to suspend the FCC_A1 phase from the tempering calculation.

Argument options

MartensiticSteelStrength_ArgumentOptions_FCC_STATUS

Default value

MartensiticSteelStrength_ArgumentOptions_FCC_STATUS.ENTERED

FLOW_STRESS_MODE = 'Flow stress mode'

- Mode used to calculate flow stress.

Argument options

MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODE

Default value

MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODE.STRESS_VS_STRAIN

FLOW_STRESS_MODEL = 'Flow stress model'

- Choose the model to be used for the calculation of flow stress.

Argument options

MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODEL

Default value

MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODEL.RAMBERG_OSGOOD

GIBBS_ADDITION = 'Parent phase Gibbs energy addition'

- Parent phase Gibbs energy addition.

Default value

0.0 [J/mol]

GRAIN_SIZE = 'GrainSize'

- Grain size of the microstructure in micrometers.

Default value

100.0 [μm]

HARDENING_RATE_VOCE = 'Hardening rate (Voce)'

- The rate at which strain hardening progresses according to the Voce model.
- This argument is used if *MartensiticSteelStrength_Arguments.FLOW_STRESS_MODEL* is set to *MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODEL.VOCE*.

Default value

90.0

PRE_STRAINING = 'Pre-straining'

- Specify the plastic strain the material is exposed to before calculation.
- Used to calculate effects of prior deformation on the calculated flow stress.
- The value specified here will not affect the calculated hardness.

Default value

0.0

QUENCH_TEMPERATURE = 'Quench temperature'

- Temperature material is quenched to after austenitization or intercritical annealing (i.e., from *MartensiticSteelStrength_Arguments.ANNEALING_TEMPERATURE*).

Default value

273.15 [K]

REFERENCE_STRAIN_RATE = 'Reference strain rate'

- Specify the reference strain rate in 1/s.
- This should correspond to the strain rate at quasi-static conditions, i.e., in the range of 1e-4 to 1e-3.

Default value

1e-4

SATURATION_STRESS_VOCE = 'Saturation stress'

- The stress value in MPa approached asymptotically with increasing strain.
- This argument is used if *MartensiticSteelStrength_Arguments.FLOW_STRESS_MODEL* is set to *MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODEL.VOCE*.

Default value

1850.0 [MPa]

STRAIN_HARDENING_EXPONENT_RAMBERG_OSGOOD = 'Strain hardening exponent Ramberg-Osgood'

- Strain hardening exponent used in Ramberg-Osgood flow stress model.
- This argument is used if *MartensiticSteelStrength_Arguments.FLOW_STRESS_MODEL* is set to *MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODEL.RAMBERG_OSGOOD*.

Default value

0.08

STRAIN_RATE = 'Strain rate'

- Specify the strain rate.
- This argument is only used if *MartensiticSteelStrength_Arguments.APPLY_STRAIN_RATE* is set to True.

Default value

1e-4

STRAIN_RATE_SENSITIVITY = 'Strain rate sensitivity'

- Specify the strain rate sensitivity exponent.
- This argument is only used if *MartensiticSteelStrength_Arguments.USER_DEFINED_STRAIN_RATE_SENSITIVITY* is set to True.

Default value

0.01

SUSPEND_CORE_PHASES = 'UseSuspend'

- Option to suspend FCC, BCC, or Cementite phases from calculation.
- Austenite (FCC_A1), ferrite (BCC_A2), and Cementite all need to be selected in the system definer.
- However, for some alloys it might be necessary to suspend one or more of these from the tempering calculation.

Argument options

True, False

Default value

False

TEMPERING_TEMPERATURE = 'Tempering temperature'

- Temperature at which tempering heat treatment is performed after quenching.
- Used to estimate martensite hardness after tempering.

Default value

673.15 [K]

TEMPERING_TIME = 'TemperingTime'

- Time at which material is held at the tempering temperature.
- The time dependency of martensite hardness is predicted using a machine learning model.
- If tempering time is set to a negative value, the ML model will be disabled.

Default value

3600.0 [s]

TRUE_STRAIN = 'True strain [%]'

- Strain value (elastic + plastic strains) at which to evaluate stress.

Default value

0.2

USER_DEFINED_FLOW_STRESS_PARAMETERS = 'User-defined flow stress parameters (true/false)'

- Option to manually define parameters related to the flow stress calculation.

Argument options

True, False

Default value

True

USER_DEFINED_STRAIN_RATE_SENSITIVITY = 'User-defined strain rate sensitivity'

- Option to apply a user-defined strain rate sensitivity.
- If False, the strain rate sensitivity exponent will be estimated by the model.

Argument options

True, False

Default value

False

USE_INTERCRITICAL_ANNEALING = 'IntercriticalAnnealing'

- Option to consider intercritical annealing.
- If True: Calculate equilibrium at the annealing temperature and use the austenite phase composition for property model calculation.
- If False: Use the nominal composition for the property model calculation.

Argument options

True, False

Default value

False

YOUNGS_MODULUS_GPA_RAMBERG_OSGOOD = "Young's modulus [GPa] Ramberg-Osgood"

- Value of the Young's modulus in gigapascals.
- This argument is used if *MartensiticSteelStrength_Arguments.FLOW_STRESS_MODEL* is set to *MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODEL.RAMBERG_OSGOOD*.

Default value

200.0 [GPa]

YOUNGS_MODULUS_GPA_VOCE = "Young's modulus [GPa] Voce"

- Value of the Young's modulus in gigapascals.
- This argument is used if *MartensiticSteelStrength_Arguments.FLOW_STRESS_MODEL* is set to *MartensiticSteelStrength_ArgumentOptions_FLOW_STRESS_MODEL.VOCE*.

Default value

200.0 [GPa]

class tc_python.property_model_definitions.martensitic_steel_strength.
MartensiticSteelStrength_Results

Bases: *ArgumentBase*

Valid entries for Martensitic Steel Strength property model results.

CONSTANT_STRENGTH_ADDITION = 'ConstantStrengthAddition'

- User-specified constant strength addition (MPa).

ELONGATION_AT_FRACTURE = 'Elongation at fracture'

- Elongation at fracture.

ENGINEERING_STRAIN = 'Engineering strain'

- Engineering strain.

ENGINEERING_STRESS = 'Engineering stress'

- Engineering stress.

FRACTURE_STRENGTH = 'Fracture strength'

- Fracture strength.

MARTENSITE_HARDNESS_QUENCHED = 'MartensiteHardnessQ'

- Hardness contribution from martensite in the as-quenched state (Vickers).

MARTENSITE_HARDNESS_TEMPERED = 'MartensiteHardnessQT'

- Hardness contribution from martensite after tempering (Vickers).

MARTENSITE_PERCENT = 'MartensitePct'

- Total martensite fraction at room temperature.

PRECIPITATE_FRACTION_AFTER_TEMPERING = 'PrecipitatesAfterTempering'

- Total precipitate fraction after tempering.

PRECIPITATE_FRACTION_AT_ANNEALING = 'PrecipitatesAtAnnealingT'

- Total precipitate fraction at annealing temperature.

RETAINED_AUSTENITE_PERCENT = 'RetainedAustenitePct'

- Retained austenite fraction after quench.

SOLID_SOLUTION_HARDENING_QUENCHED = 'Solid solution hardening'

- Hardness contribution from solid solution strengthening in the as-quenched state (Vickers).

SOLID_SOLUTION_HARDENING_TEMPERED = 'SolidSolutionHardeningTempered'

- Hardness contribution from solid solution strengthening after tempering (Vickers).

TOTAL_STEEL_HARDNESS_QUENCHED = 'TotalSteelHardnessQ'

- Total hardness of the as-quenched steel (Vickers).

TOTAL_STEEL_HARDNESS_TEMPERED = 'TotalSteelHardnessQT'

- Total hardness of the tempered steel (Vickers).

TRUE_STRESS = 'True stress'

- True stress.

ULTIMATE_TENSILE_STRENGTH = 'Ultimate tensile strength'

- Ultimate tensile strength.

UNIFORM_ELONGATION = 'Uniform elongation'

- Uniform elongation.

YIELD_STRAIN = 'Yield strain'

- Yield strain.

YIELD_STRENGTH = 'Yield strength'

- Yield strength.

YOUNGS_MODULUS = 'Youngs modulus [GPa]'

- Young's modulus [GPa].

6.9.22 Module “optical_properties_noble”

class

`tc_python.property_model_definitions.optical_properties_noble.OpticalPropertiesNoble`

Bases: object

Encapsulation class for the “Optical Properties - Noble” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *OpticalPropertiesNoble_ArgumentOptions*

Arguments

alias of *OpticalPropertiesNoble_Arguments*

Results

alias of *OpticalPropertiesNoble_Results*

classmethod `get_aliases()` → list[str]

List of aliases for “Optical Properties - Noble” property model.

classmethod `get_name()` → str

String name of “Optical Properties - Noble” property model.

class `tc_python.property_model_definitions.optical_properties_noble.`

OpticalPropertiesNoble_ArgumentOptions

Bases: object

Valid entries for Optical Properties - Noble property model arguments which requires specific options to be entered.

COLOR_SPACE

alias of *OpticalPropertiesNoble_ArgumentOptions_COLOR_SPACE*

DELTA_E_METHOD

alias of *OpticalPropertiesNoble_ArgumentOptions_DELTA_E_METHOD*

ILLUMINANT

alias of *OpticalPropertiesNoble_ArgumentOptions_ILLUMINANT*

OBSERVER_ANGLE

alias of *OpticalPropertiesNoble_ArgumentOptions_OBSERVER_ANGLE*

TARGET_COLOR_SPACE

alias of *OpticalPropertiesNoble_ArgumentOptions_TARGET_COLOR_SPACE*

```
class tc_python.property_model_definitions.optical_properties_noble.  
OpticalPropertiesNoble_ArgumentOptions_COLOR_SPACE
```

Bases: *ArgumentBase*

Valid options for *OpticalPropertiesNoble_Arguments.COLOR_SPACE*.

LAB = 'LAB'

- LAB color space.

SRGB = 'sRGB'

- sRGB color space.

XYZ = 'XYZ'

- XYZ color space.

```
class tc_python.property_model_definitions.optical_properties_noble.  
OpticalPropertiesNoble_ArgumentOptions_DELTA_E_METHOD
```

Bases: *ArgumentBase*

Valid options for *OpticalPropertiesNoble_Arguments.DELTA_E_METHOD*.

CIE_1976 = 'CIE 1976'

- Delta E method CIE 1976.

CIE_1994 = 'CIE 1994'

- Delta E method CIE 1994.

CIE_2000 = 'CIE 2000'

- Delta E method CIE 2000.

```
class tc_python.property_model_definitions.optical_properties_noble.  
OpticalPropertiesNoble_ArgumentOptions_ILLUMINANT
```

Bases: *ArgumentBase*

Valid options for *OpticalPropertiesNoble_Arguments.ILLUMINANT*.

A = 'A'

- Standard illuminant A.
- Intended to represent typical, domestic, tungsten-filament (incandescent) lighting.
- Correlated Color Temperature (CCT): 2856 K.

B = 'B'

- Standard illuminant B.
- Intended to represent direct noon daylight.
- Correlated Color Temperature (CCT): 4874 K.

C = 'C'

- Standard illuminant C.
- Intended to represent average noon daylight.
- Correlated Color Temperature (CCT): 6774 K.

D50 = 'D50'

- Standard illuminant D50.
- D series illuminant standards represent natural daylight along the daylight locus.
- Correlated Color Temperature (CCT): 5000 K.

D55 = 'D55'

- Standard illuminant D55.
- D series illuminant standards represent natural daylight along the daylight locus.
- Correlated Color Temperature (CCT): 5503 K.

D60 = 'D60'

- Standard illuminant D60.
- D series illuminant standards represent natural daylight along the daylight locus.
- Correlated Color Temperature (CCT): 6003 K.

D65 = 'D65'

- Standard illuminant D65.
- D series illuminant standards represent natural daylight along the daylight locus.
- Correlated Color Temperature (CCT): 6504 K.

D75 = 'D75'

- Standard illuminant D75.
- D series illuminant standards represent natural daylight along the daylight locus.
- Correlated Color Temperature (CCT): 7504 K.

E = 'E'

- Standard illuminant E.
- Theoretical reference illuminant with equal weighting for all wavelengths across the spectral power distribution.
- Correlated Color Temperature (CCT): 5455 K.

FL1 = 'FL1'

- Standard illuminant FL-1.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 6430 K.

FL10 = 'FL10'

- Standard illuminant FL-10.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 5000 K.

FL11 = 'FL11'

- Standard illuminant FL-11.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 4000 K.

FL2 = 'FL2'

- Standard illuminant FL-2.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 4230 K.

FL3 = 'FL3'

- Standard illuminant FL-3.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 3450 K.

FL4 = 'FL4'

- Standard illuminant FL-4.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 2940 K.

FL5 = 'FL5'

- Standard illuminant FL-5.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 6350 K.

FL6 = 'FL6'

- Standard illuminant FL-6.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 4150 K.

FL7 = 'FL7'

- Standard illuminant FL-7.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 6500 K.

FL8 = 'FL8'

- Standard illuminant FL-8.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 5000 K.

FL9 = 'FL9'

- Standard illuminant FL-9.
- FL series illuminant standards represent typical fluorescent lamps.
- Correlated Color Temperature (CCT): 4150 K.

LED_B1 = 'LED-B1'

- Standard illuminant LED-B1, representing blue excited phosphor LEDs.
- Correlated Color Temperature (CCT): 2733 K.

LED_B2 = 'LED-B2'

- Standard illuminant LED-B2, representing blue excited phosphor LEDs.
- Correlated Color Temperature (CCT): 2998 K.

LED_B3 = 'LED-B3'

- Standard illuminant LED-B3, representing blue excited phosphor LEDs.
- Correlated Color Temperature (CCT): 4103 K.

LED_B4 = 'LED-B4'

- Standard illuminant LED-B4, representing blue excited phosphor LEDs.
- Correlated Color Temperature (CCT): 5109 K.

LED_B5 = 'LED-B5'

- Standard illuminant LED-B5, representing blue excited phosphor LEDs.
- Correlated Color Temperature (CCT): 6598 K.

LED_BH1 = 'LED-BH1'

- Standard illuminant LED-BH1, representing a blue excited phosphor LED with added red.
- Correlated Color Temperature (CCT): 2851 K.

LED_RGB1 = 'LED-RGB1'

- Standard illuminant LED-RGB1, representing tri-color LEDs.
- Correlated Color Temperature (CCT): 2840 K.

LED_V1 = 'LED-V1'

- Standard illuminant LED-V1, representing violet-enhanced blue excited phosphor LEDs.
- Correlated Color Temperature (CCT): 2724 K.

LED_V2 = 'LED-V2'

- Standard illuminant LED-V2, representing violet-enhanced blue excited phosphor LEDs.
- Correlated Color Temperature (CCT): 4070 K.

SINGLE_WAVELENGTH = 'Single wavelength'

- Use a single wavelength value.
- If selected, specify the single wavelength as the value of *OpticalPropertiesNoble_Arguments.SINGLE_WAVELENGTH*.

```
class tc_python.property_model_definitions.optical_properties_noble.  
OpticalPropertiesNoble_ArgumentOptions_OBSERVER_ANGLE
```

Bases: *ArgumentBase*

Valid options for *OpticalPropertiesNoble_Arguments.OBSERVER_ANGLE*.

CIE_1931 = 'CIE 1931 2 Degree Standard Observer'

- CIE 1931 2 degree standard observer angle.

CIE_1964 = 'CIE 1964 10 Degree Standard Observer'

- CIE 1964 10 degree standard observer angle.

```
class tc_python.property_model_definitions.optical_properties_noble.  
OpticalPropertiesNoble_ArgumentOptions_TARGET_COLOR_SPACE
```

Bases: *ArgumentBase*

Valid options for *OpticalPropertiesNoble_Arguments.TARGET_COLOR_SPACE*.

LAB = 'LAB'

- LAB targeting color space.

SRGB = 'sRGB'

- sRGB targeting color space.

XYZ = 'XYZ'

- XYZ targeting color space.

```
class tc_python.property_model_definitions.optical_properties_noble.  
OpticalPropertiesNoble_Arguments
```

Bases: *ArgumentBase*

Valid entries for Cosmetic property model arguments.

ANNEALING_TEMPERATURE = 'Annealing temperature'

- Intercritical annealing temperature.
- This argument is only used if *OpticalPropertiesNoble_Arguments.INTERCRITICAL_ANNEALING* is set to True.

Default value

1000 [K]

COLOR_SPACE = 'Color space'

- Color space used for results.

Argument options

OpticalPropertiesNoble_ArgumentOptions_COLOR_SPACE

Default value

OpticalPropertiesNoble_ArgumentOptions_COLOR_SPACE.LAB

DELTA_E_CALCULATION = 'Delta E calculation'

- Option to calculate the Delta E value to measure the color difference between predicted alloy color and specified target color.

Argument options

True, False

Default value

False

DELTA_E_METHOD = 'Delta E method'

- Method for Delta E calculation.
- This argument is only used if *OpticalPropertiesNoble_Arguments.DELTA_E_CALCULATION* is set to True.

Argument options

OpticalPropertiesNoble_ArgumentOptions_DELTA_E_METHOD

Default value

OpticalPropertiesNoble_ArgumentOptions_DELTA_E_METHOD.CIE_2000

ILLUMINANT = 'Illuminant'

- Incident light power distribution.
- Argument options encompass a set of standard illuminant light distributions.

Argument options

OpticalPropertiesNoble_ArgumentOptions_ILLUMINANT

Default value

OpticalPropertiesNoble_ArgumentOptions_ILLUMINANT.D65

INCIDENT_ANGLE = 'Incident angle'

- Incident light angle in degrees (0 to 90).
- The surface normal corresponds to an angle of 0 degrees.

Default value

0

INTERCRITICAL_ANNEALING = 'Use annealing'

- Option to consider intercritical annealing.
- If True: Calculate equilibrium at the annealing temperature and use full composition for property model calculation.
- If False: Take the nominal composition and assume a single phase FCC microstructure.

Argument options

True, False

Default value

True

OBSERVER_ANGLE = 'View angle of observer'

- View angle of observer.

Argument options

OpticalPropertiesNoble_ArgumentOptions_OBSERVER_ANGLE

Default value

OpticalPropertiesNoble_ArgumentOptions_OBSERVER_ANGLE.CIE_1931

SINGLE_WAVELENGTH = 'Single wavelength'

- A single integer wavelength (in nanometers) for n and k evaluation.
- This argument is only used if *OpticalPropertiesNoble_Arguments_ILLUMINANT* is set to *OpticalPropertiesNoble_Arguments_ILLUMINANT.SINGLE_WAVELENGTH*.

Default value

500.0 [nm]

TARGET_COLOR_INDEX_1 = 'Targeting color index 1'

- First index of targeting color (i.e., index a in [a, b, c]).

Default value

0.0

TARGET_COLOR_INDEX_2 = 'Targeting color index 2'

- Second index of targeting color (i.e., index b in [a, b, c]).

Default value

0.0

TARGET_COLOR_INDEX_3 = 'Targeting color index 3'

- Third index of targeting color (i.e., index c in [a, b, c]).

Default value

0.0

TARGET_COLOR_SPACE = 'Targeting color space'

- Color space of target color value.
- This argument is only used if *OpticalPropertiesNoble_Arguments.DELTA_E_CALCULATION* is set to True.

Argument options

OpticalPropertiesNoble_ArgumentOptions_TARGET_COLOR_SPACE

Default value

OpticalPropertiesNoble_ArgumentOptions_TARGET_COLOR_SPACE.LAB

THICKNESS = 'Material thickness (nm)'

- Material thickness in nm.

Default value

10000.0 [nm]

class tc_python.property_model_definitions.optical_properties_noble.
OpticalPropertiesNoble_Results

Bases: *ArgumentBase*

Valid entries for Optical Properties - Noble property model results.

COLOR_24_BIT = '24-bit color'

- 24-bit color packed value.

COLOR_INDEX_1 = 'Result quantity color 1'

- Color space index 1.

COLOR_INDEX_2 = 'Result quantity color 2'

- Color space index 2.

COLOR_INDEX_3 = 'Result quantity color 3'

- Color space index 3.

DELTA_E = 'Result quantity Delta E'

- Delta E color difference relative to specified target color.

K_SINGLE_WAVELENGTH = 'k for single wavelength'

- Extinction coefficient k of selected single wavelength.

N_SINGLE_WAVELENGTH = 'n for single wavelength'

- Refractive index n of selected single wavelength.

6.9.23 Module “pearlite”

class tc_python.property_model_definitions.pearlite.**Pearlite**

Bases: object

Encapsulation class for the “Pearlite” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *Pearlite_ArgumentOptions*

Arguments

alias of *Pearlite_Arguments*

Results

alias of *Pearlite_Results*

classmethod **get_aliases()** → list[str]

List of aliases for “Pearlite” property model.

classmethod `get_name()` → str
String name of “Pearlite” property model.

class `tc_python.property_model_definitions.pearlite.Pearlite_ArgumentOptions`

Bases: `object`

Valid options for Pearlite property model arguments which requires specific options to be entered.

AUSTENITE_COMPOSITION

alias of `Pearlite_ArgumentOptions_AUSTENITE_COMPOSITION`

PEARLITE_CRITERION

alias of `Pearlite_ArgumentOptions_PEARLITE_CRITERION`

PEARLITE_MODE

alias of `Pearlite_ArgumentOptions_PEARLITE_MODE`

class `tc_python.property_model_definitions.pearlite.`

`Pearlite_ArgumentOptions_AUSTENITE_COMPOSITION`

Bases: `ArgumentBase`

Valid options for `Pearlite_Arguments.AUSTENITE_COMPOSITION`.

EQUILIBRIUM = 'Equilibrium composition at annealing temperature'

Use equilibrium composition at the specified austenitizing temperature.

NOMINAL = 'Nominal composition'

Use nominal alloy composition as austenite composition.

class

`tc_python.property_model_definitions.pearlite.Pearlite_ArgumentOptions_PEARLITE_CRITERION`

Bases: `ArgumentBase`

Valid options for `Pearlite_Arguments.PEARLITE_CRITERION`.

MAX_GIBBS DISSIPATION RATE = 'MaximizeGibbsEnergyDissipationRate'

Maximize the Gibbs energy dissipation rate of the pearlite transformation.

MAX_GROWTH_RATE = 'MaximizeGrowthRate'

Maximize the growth rate of the pearlite transformation.

class

`tc_python.property_model_definitions.pearlite.Pearlite_ArgumentOptions_PEARLITE_MODE`

Bases: `ArgumentBase`

Valid options for `Pearlite_Arguments.PEARLITE_MODE`.

OPTIMAL = 'OptimalPearlite'

Optimal mode for pearlite transformation selected between PE and OE.

ORTHO = 'Ortho-pearlite'

- Orthoequilibrium (OE) mode for pearlite transformation.
- Orthoequilibrium (OE) mode considers local equilibrium conditions.

PARA = 'Para-pearlite'

Paraequilibrium (PE) mode for pearlite transformation.

class `tc_python.property_model_definitions.pearlite.Pearlite_Arguments`

Bases: *ArgumentBase*

Valid entries for Pearlite property model arguments.

AUSTENITE_COMPOSITION = 'Austenite composition from'

- Choose the source for austenite composition.

Argument options

Pearlite_ArgumentOptions_AUSTENITE_COMPOSITION

Default value

Pearlite_ArgumentOptions_AUSTENITE_COMPOSITION.NOMINAL

AUSTENITIZING_TEMPERATURE = 'Annealing temperature'

- Austenitizing temperature used when equilibrium composition is selected as source.
- This argument is used if *Pearlite_Arguments.AUSTENITE_COMPOSITION* is set to *Pearlite_ArgumentOptions_AUSTENITE_COMPOSITION.EQUILIBRIUM*.

Default value

1000.0 [K]

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with *PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()*.

Default value

1000.0 [K]

GRAIN_SIZE = 'GrainSize'

- Grain size of the austenite phase.

Default value

100.0 [μm]

PEARLITE_CRITERION = 'Criterion'

- Criterion to determine pearlite growth rate and lamellar spacing.

Argument options

Pearlite_ArgumentOptions_PEARLITE_CRITERION

Default value

Pearlite_ArgumentOptions_PEARLITE_CRITERION.MAXIMIZE_GROWTH_RATE

PEARLITE_MODE = 'PearliteMode'

- Mode for Pearlite transformation.

Argument options

Pearlite_ArgumentOptions_PEARLITE_MODE

Default value*Pearlite_ArgumentOptions_PEARLITE_MODE.OPTIMAL***class** tc_python.property_model_definitions.pearlite.**Pearlite_Results**Bases: *ArgumentBase*

Valid entries for Pearlite property model results.

CEMENTITE_FRACTION = 'CementiteFraction'

Mole fraction of cementite in pearlite.

DRIVING_FORCE = 'DrivingForce'

Driving force for pearlite formation [J/mol].

FINISH_TIME = 'Finish'

Time to reach 98% transformed pearlite fraction.

GROWTH_RATE = 'GrowthRate'

Growth rate of pearlite nodules [m/s].

HALF_TIME = 'Half'

Time to reach 50% transformed pearlite fraction.

LAMELLAR_SPACING = 'LamellarSpacing'

Lamellar spacing of pearlite [m].

START_TIME = 'Start'

Time to reach 2% transformed pearlite fraction.

6.9.24 Module “phase_transition”

class tc_python.property_model_definitions.phase_transition.**PhaseTransition**

Bases: object

Encapsulation class for the “Phase Transition” property model Arguments, ArgumentOptions, and Results.

ArgumentOptionsalias of *PhaseTransition_ArgumentOptions***Arguments**alias of *PhaseTransition_Arguments***Results**alias of *PhaseTransition_Results***classmethod** **get_aliases()** → list[str]

List of aliases for “Phase Transition” property model.

classmethod **get_name()** → str

String name of “Phase Transition” property model.

classtc_python.property_model_definitions.phase_transition.**PhaseTransition_ArgumentOptions**

Bases: object

Valid options for Phase Transition property model arguments which requires specific options to be entered.

CONDITION_TO_VARY

alias of *PhaseTransition_ArgumentOptions_CONDITION_TO_VARY*

SEARCH_DIRECTION

alias of *PhaseTransition_ArgumentOptions_SEARCH_DIRECTION*

```
class tc_python.property_model_definitions.phase_transition.
PhaseTransition_ArgumentOptions_CONDITION_TO_VARY
```

Bases: *ArgumentBase*

Valid options for *PhaseTransition_Arguments_CONDITION_TO_VARY*.

COMPOSITION = 'X'

Vary Composition during phase transition search.

TEMPERATURE = 'T'

Vary Temperature during phase transition search.

```
class tc_python.property_model_definitions.phase_transition.
PhaseTransition_ArgumentOptions_SEARCH_DIRECTION
```

Bases: *ArgumentBase*

Valid options for *PhaseTransitionArguments_SEARCH_DIRECTION*.

NEGATIVE = 'NEGATIVE'

Search in the negative direction of the specified *PhaseTransition_Arguments_CONDITION_TO_VARY*.

POSITIVE = 'POSITIVE'

Search in the positive direction of the specified *PhaseTransition_Arguments_CONDITION_TO_VARY*.

POSITIVE_AND_NEGATIVE = 'POSITIVE_AND_NEGATIVE'

Search in positive direction first, then negative direction of the specified *PhaseTransition_Arguments_CONDITION_TO_VARY*.

```
class tc_python.property_model_definitions.phase_transition.PhaseTransition_Arguments
```

Bases: *ArgumentBase*

Valid entries for Phase Transition property model arguments.

COMPOSITION_CONDITION = 'Composition to vary'

- Composition condition to vary/relax during the phase transition search.
- Specify as a console mode command for the composition of a component entered in the system (e.g., "X(Fe)" or "W(Fe)").
- This argument is used if *PhaseTransition_Arguments_CONDITION_TO_VARY* is set to *PhaseTransition_ArgumentOptions_CONDITION_TO_VARY.COMPOSITION*.

CONDITION_TO_VARY = 'conditions'

- Condition to vary/relax during the phase transition search.

Argument options

PhaseTransition_ArgumentOptions_CONDITION_TO_VARY

Default value

PhaseTransition_ArgumentOptions_CONDITION_TO_VARY.TEMPERATURE

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`.

Default value
1000.0 [K]

MATRIX_PHASE = 'matrixPhase'

- Matrix phase required to be present in the initial equilibrium.
- Specify argument value with string of valid phase name (i.e., “FCC_A1”).
- If “ANY” is specified, the primary phase will be automatically selected.

Default value
“ANY”

PHASE_TO_FORM = 'phaseToForm'

- Phase expected to form at the transition.
- Specify argument value with string of valid phase name (i.e., “FCC_A1”).
- If “ANY” is specified, the primary phase will be automatically selected.

Default value
“ANY”

SEARCH_DIRECTION = 'direction'

- Direction to search when relaxing *PhaseTransition_Arguments.CONDITION_TO_VARY*.

Argument options
PhaseTransition_ArgumentOptions_SEARCH_DIRECTION

Default value
PhaseTransition_ArgumentOptions_SEARCH_DIRECTION.POSITIVE

SUSPEND_OTHER_PHASES = 'suspendOtherPhases'

- Option to suspend phases other than *PhaseTransition_Arguments.MATRIX_PHASE* and *PhaseTransition_Arguments.PHASE_TO_FORM* from calculation.
- If True, metastable equilibria may be calculated.

Argument options
True, False

Default value
True

class `tc_python.property_model_definitions.phase_transition.PhaseTransition_Results`

Bases: *ArgumentBase*

Valid entries for Phase Transition property model results.

RELAXED_CONDITION_T = 'resultQuantity'

Transition temperature [K] where the new phase forms.

RELAXED_CONDITION_X = 'resultQuantityComposition'

Transition composition (fraction) where the new phase forms.

6.9.25 Module “scheil”

class tc_python.property_model_definitions.scheil.Scheil

Bases: object

Encapsulation class for the “Scheil” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *Scheil_ArgumentOptions*

Arguments

alias of *Scheil_Arguments*

Results

alias of *Scheil_Results*

classmethod get_aliases() → list[str]

List of aliases for “Scheil” property model.

classmethod get_name() → str

String name of “Scheil” property model.

class tc_python.property_model_definitions.scheil.Scheil_ArgumentOptions

Bases: object

Valid options for Scheil property model arguments which requires specific options to be entered.

CALCULATE_TO

alias of *Scheil_ArgumentOptions_CALCULATE_TO*

SCHEIL_CALCULATION_TYPE

alias of *Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE*

class tc_python.property_model_definitions.scheil.Scheil_ArgumentOptions_CALCULATE_TO

Bases: *ArgumentBase*

Valid options for *Scheil_Arguments.CALCULATE_TO*.

END_OF_SCHEIL = 'End of Scheil'

Evaluate results at the end of the Scheil simulation.

TEMPERATURE_BELOW_SOLIDUS = 'Temperature below solidus'

Evaluate results at a fixed temperature below solidus (frozen structure).

class tc_python.property_model_definitions.scheil.
Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE

Bases: *ArgumentBase*

Valid options for *Scheil_Arguments.SCHEIL_CALCULATION_TYPE*.

BACK_DIFFUSION = 'Back diffusion'

Scheil calculation considering back diffusion in primary phase.

CLASSIC = 'Classic'

Classic Scheil calculation.

SOLUTE_TRAPPING = 'Solute trapping'

Scheil considering solute trapping.

class tc_python.property_model_definitions.scheil.Scheil_Arguments

Bases: *ArgumentBase*

Valid entries for Scheil property model arguments.

ACCURACY = 'Required accuracy'

- Required relative accuracy for equilibrium calculations.
- Larger values normally converge quicker but provide less accuracy.

Default value

1e-6

ADVANCED_SCHEIL_OPTIONS = 'Show advanced Scheil options'

- Toggle visibility of advanced Scheil options.

Argument options

True, False

Default value

False

ALPHA = 'Alpha'

- The angle between the solid/liquid boundary and scanning direction, used as an input to calculate solidification speed: $SOLIDIFICATION_SPEED = SCANNING_SPEED * \cos(ALPHA)$.
- This argument is used if *Scheil_Arguments.SCHEIL_CALCULATION_TYPE* is set to *Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE.SOLUTE_TRAPPING*.

Default value

45.0 [degrees]

APPROX_DRIVING_FORCE_METASTABLE = 'Approximate driving force for metastable phases'

- If enabled, driving forces for metastable phases may be approximated in calculation iterations.
- If disabled, the calculation is forced to converge for the metastable phases.

Argument options

True, False

Default value

True

CALCULATE_TO = 'Calculate to'

- Options for which temperature to calculate to.
- This is the evaluation temperature for:
 - Fraction of solid phases

- Thermal conductivity, resistivity and diffusivity
- Electrical conductivity and resistivity

Argument options*Scheil_ArgumentOptions_CALCULATE_TO***Default value***Scheil_ArgumentOptions_CALCULATE_TO.TEMPERATURE_BELOW_SOLIDUS***COOLING_RATE = 'Cooling rate [m/s]'**

- Cooling rate in Kelvin per second.
- This argument is used if *Scheil_Arguments.SCHEIL_CALCULATION_TYPE* is set to *Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE.BACK_DIFFUSION*.

Default value

1.0 [K/s]

DELTA_FERRITE_TO_AUSTENITE_BACK_DIFFUSION = 'Allow delta ferrite to austenite transition in steel'

- Allow delta-ferrite to austenite transition for BACK_DIFFUSION Scheil calculation type.

Argument options

True, False

Default value

False

DELTA_FERRITE_TO_AUSTENITE_CLASSIC = 'Allow delta ferrite to austenite transition in steel'

- Allow delta-ferrite to austenite transition for CLASSIC Scheil calculation type.

Argument options

True, False

Default value

False

END_TEMPERATURE = 'End temperature'

- Specify the temperature below the solidus to which solid property result quantities are evaluated.
- A frozen structure is assumed below the solidus temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.end_temperature())()`.

Default value

298.15 [K]

FAST_DIFFUSERS_BACK_DIFFUSION = 'Fast diffusers back diffusion'

- Fast diffusing elements for BACK_DIFFUSION Scheil calculation type.
- Specify value(s) as a space-delimited string (i.e., with one space between each value).

Default value

"C N"

FAST_DIFFUSERS_CLASSIC = 'Fast diffusers classic'

- Fast diffusing elements for CLASSIC Scheil calculation type.
- Specify value(s) as a space-delimited string (i.e., with one space between each value).

Default value

"C N"

GLOBAL_TEST_INTERVAL = 'Global test interval'

- Specify the interval for global equilibrium testing (i.e., perform global test every Nth step).

Default value

10.0

LIQUID_PHASE = 'Liquid phase'

- Phase treated as liquid in Scheil calculation.

Default value

"LIQUID"

MAX_NUM_ITERATIONS = 'Max number of iterations'

- Maximum number of iterations performed per equilibrium calculation.

Default value

500.0

PRIMARY_PHASE_BACK_DIFFUSION = 'Primary phase back diffusion'

- Primary phase for Scheil simulation considering back diffusion.
- This argument is used if *Scheil_Arguments.SCHEIL_CALCULATION_TYPE* is set to *Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE.BACK_DIFFUSION*.
- Specify argument value with string of valid phase name (i.e., "FCC_A1").
- If the value "ANY" is specified, the primary phase will be automatically selected.

Default value

"ANY"

PRIMARY_PHASE_SOLUTE_TRAPPING = 'Primary phase solute trapping'

- Primary phase for Scheil simulation considering solute trapping.
- This argument is used if *Scheil_Arguments.SCHEIL_CALCULATION_TYPE* is set to *Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE.SOLUTE_TRAPPING*.
- Specify argument value with string of valid phase name (i.e., "FCC_A1").
- If the value "ANY" is specified, the primary phase will be automatically selected.

Default value

“ANY”

SCANNING_SPEED = 'Scanning speed'

- Laser scanning speed, used as an input to calculate solidification speed: `SOLIDIFICATION_SPEED = SCANNING_SPEED * cos(ALPHA)`.
- This argument is used if `Scheil_Arguments.SCHEIL_CALCULATION_TYPE` is set to `Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE.SOLUTE_TRAPPING`.

Default value

1.0 [m/s]

SCHEIL_CALCULATION_TYPE = 'Calculation type'

- Select the calculation type to use for the Scheil calculation.

Argument options`Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE`**Default value**`Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE.CLASSIC`**SDAS_C = 'Sec arm spacing c'**

- The parameter `c` for calculating the secondary dendrite arm spacing with equation: $c * \text{cooling-rate}^{-n}$.
- This argument is used if `Scheil_Arguments.SCHEIL_CALCULATION_TYPE` is set to `Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE.BACK_DIFFUSION`.

Default value

5e-5 [m]

SDAS_N = 'Sec arm spacing n'

- The parameter `n` for calculating the secondary dendrite arm spacing with equation: $c * \text{cooling-rate}^{-n}$.
- This argument is used if `Scheil_Arguments.SCHEIL_CALCULATION_TYPE` is set to `Scheil_ArgumentOptions_SCHEIL_CALCULATION_TYPE.BACK_DIFFUSION`.

Default value

0.33

SMALLEST_ALLOY_FRACTION = 'Smallest fraction for alloy composition'

- Smallest value assigned to alloy mole/mass fraction in case the user gives a smaller input value for an element.

Default value

1e-9

SMALLEST_FRACTION = 'Smallest fraction in equilibrium calculations'

- Smallest fraction assigned to unstable constituents. It is normally only in the gas phase where such low fractions are found.

Default value

1e-12

SOLID_FRACTION_FOR_LIQUIDUS = 'Solid fraction for liquidus evaluation'

- Solid fraction threshold for evaluating the liquidus temperature.

Default value

0.001

START_TEMPERATURE = 'Start temperature'

- The start temperature for the Scheil simulation.
- The value selected should be higher than the liquidus temperature of the specified composition.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.start_temperature())()`.

Default value

2500.15 [K]

TEMPERATURE_STEP = 'Temperature step during Scheil'

- Temperature step for Scheil calculation.

Default value

1.0 [K]

TERMINATE_AT_LIQUID_AMOUNT = 'Terminate at liquid amount'

- Terminate Scheil simulation at fraction of liquid phase amount (i.e., consider the simulation completed).

Default value

0.01

USE_GLOBAL_MINIMIZATION = 'Use global minimization'

- Perform global minimization when calculating equilibrium.

Argument options

True, False

Default value

True

class `tc_python.property_model_definitions.scheil.Scheil_Results`

Bases: *ArgumentBase*

Valid entries for Scheil property model results.

ELECTRIC_CONDUCTIVITY = 'Electric conductivity (S/m)'
 Electrical conductivity of the solid [S/m].

ELECTRIC_RESISTIVITY = 'Electric resistivity (ohm m)'
 Electric resistivity [ohm-m].

EUTECTIC_FRACTION = 'Eutectic fraction'
 Eutectic fraction at eutectic point (per Gibbs phase rule).

FREEZING_RANGE = 'Freezing range [K]'
 Freezing range (Liquidus - Solidus) in Kelvin.

LIQUIDUS = 'Liquidus temperature'
 Liquidus temperature [K].

MOLE_FRACTION_SOLID_PHASES = 'Mole fraction of solid phases'
 Mole fraction of solid phases at evaluation temperature.

SOLIDUS = 'Solidus temperature'
 Solidus temperature [K].

THERMAL_CONDUCTIVITY = 'Thermal conductivity (W/(mK))'
 Thermal conductivity of the solid [W/(m-K)].

THERMAL_DIFFUSIVITY = 'Thermal diffusivity (m²/s)'
 Thermal diffusivity of the solid [m²/s].

THERMAL_RESISTIVITY = 'Thermal resistivity (mK/W)'
 Thermal resistivity of the solid [(m-K)/W].

TOTAL_FRACTION_SOLID_PHASES = 'Final fraction of solid phases'
 Total mole fraction of solid phases at evaluation temperature.

VOLUMETRIC_SHRINKAGE = 'Volumetric shrinkage (vol-%)'
 Volumetric shrinkage percentage. A positive value indicates contraction.

VOLUME_FRACTION_SOLID_PHASES = 'Volume fraction of solid phases'
 Volume fraction of solid phases at evaluation temperature.

6.9.26 Module “`solvus_for_ordered_phase_ni`”

class

`tc_python.property_model_definitions.solvus_for_ordered_phase_ni.SolvusForOrderedPhaseNi`

Bases: `object`

Encapsulation class for the “Solvus for Ordered Phase - Ni” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of `SolvusForOrderedPhaseNi_ArgumentOptions`

Arguments

alias of `SolvusForOrderedPhaseNi_Arguments`

Results

alias of `SolvusForOrderedPhaseNi_Results`

classmethod `get_aliases()` → list[str]

List of aliases for “Solvus for Ordered Phase - Ni” property model.

classmethod `get_name()` → str

String name of “Solvus for Ordered Phase - Ni” property model.

class `tc_python.property_model_definitions.solvus_for_ordered_phase_ni.SolvusForOrderedPhaseNi_ArgumentOptions`

Bases: `object`

Valid options for Solvus for Ordered Phase - Ni property model arguments which requires specific options to be entered.

NAMING_CONVENTION

alias of `SolvusForOrderedPhaseNi_ArgumentOptions_NAMING_CONVENTION`

PHASE_GROUP_SELECTION

alias of `SolvusForOrderedPhaseNi_ArgumentOptions_PHASE_GROUP_SELECTION`

PHASE_NAME_COMMON

alias of `SolvusForOrderedPhaseNi_ArgumentOptions_PHASE_NAME_COMMON`

class `tc_python.property_model_definitions.solvus_for_ordered_phase_ni.SolvusForOrderedPhaseNi_ArgumentOptions_NAMING_CONVENTION`

Bases: `ArgumentBase`

Valid options for `SolvusForOrderedPhaseNi_Arguments.NAMING_CONVENTION`.

COMMON_PHASE_NAMES = '1'

- If this option is selected, the value for `SolvusForOrderedPhaseNi_Arguments.PHASE_NAME_COMMON` must be specified in the calculation.
- See `SolvusForOrderedPhaseNi_ArgumentOptions_PHASE_NAME_COMMON` for valid common phase name values.

EXPLICIT_PHASE_NAMES = '2'

- If this option is selected, the value for `SolvusForOrderedPhaseNi_Arguments.PHASE_NAME_EXPLICIT` must be specified in the calculation.
- Explicit phase names are specified by using the string of a valid phase name (e.g., “FCC_A1”).

class `tc_python.property_model_definitions.solvus_for_ordered_phase_ni.SolvusForOrderedPhaseNi_ArgumentOptions_PHASE_GROUP_SELECTION`

Bases: `ArgumentBase`

Valid options for `SolvusForOrderedPhaseNi_Arguments.PHASE_GROUP_SELECTION`.

INCLUDE_ALL_PHASES = '1'

Includes all phases entered by User in the System.

INCLUDE_GAMMA_GAMMA_PRIME_ONLY = '2'

Includes Gamma (“FCC_L12”) and Gamma-Prime (“FCC_L12#2”) phases.

INCLUDE_TYPICAL_NI_SUPERALLOY = '3'

Phases included in this option:

- **Oxide and metal liquid phases:** “IONIC_LIQ”, “IONIC_LIQ#2”, “LIQUID”

- **Gamma (#1) and Gamma-Prime(#2):** “DIC_FCC_A1”, “FCC_A1”, “FCC_A1#2”, “FCC_L12”, “FCC_L12#2”
- **Carbides/Nitrides:** “FCC_L12#3”, “HCP_A3#1”, “HCP_A3#2”, “M23C6”, “M6C”, “M7C3”
- **B2 phases:** “BCC_A2”, “BCC_A2#2”, “BCC_B2”, “BCC_B2#2”
- **Gamma Double-Prime:** “BCT_D022”
- **Additional Phases:** “PI”, “NI3B_D011”, “M2B_TETR”, “D5A_M3B2”, “M3B2”, “MB_B33”, “MB2_C32”, “G_PHASE”, “NI5ZR”, “NI7ZR2”, “CR3NI5SI2”, “CR3NI5SI2”, “SPINEL”, “ALPHA_SPINEL”, “CORUNDUM”

INCLUDE_TYPICAL_PLUS_ETA_DELTA = '4'

Phases included in this option:

- **All phases from:** `ArgumentOptions_PhaseGroupSelection.INCLUDE_TYPICAL_NI_SUPERALLOY`
- **Delta phase:** “NI3TA_D0A”
- **Eta phase:** “NI3TI_D024”

INCLUDE_TYPICAL_PLUS_TCP = '5'

Phases included in this option:

- **All phases from:** `ArgumentOptions_PhaseGroupSelection.INCLUDE_TYPICAL_NI_SUPERALLOY`
- **TCP phases:** “C14_LAVES”, “SIGMA”, “MU_PHASE”, “R_PHASE”, “P_PHASE”, “Z_PHASE”, “CR3SI_A15”

```
class tc_python.property_model_definitions.solvus_for_ordered_phase_ni.  
SolvusForOrderedPhaseNi_ArgumentOptions_PHASE_NAME_COMMON
```

Bases: *ArgumentBase*

Valid options for *SolvusForOrderedPhaseNi_Arguments.PHASE_NAME_COMMON*.

DELTA = 'NI3TA_D0A'

Name for Delta phase.

ETA = 'NI3TI_D024'

Name for Eta phase.

GAMMA_DOUBLE_PRIME = 'BCT_D022'

Name for Gamma double prime phase.

GAMMA_PRIME = 'FCC_L12'

Name for Gamma prime phase.

SIGMA = 'SIGMA'

Name for Sigma phase.

```
class tc_python.property_model_definitions.solvus_for_ordered_phase_ni.  
SolvusForOrderedPhaseNi_Arguments
```

Bases: *ArgumentBase*

Valid entries for Solvus for Ordered Phase - Ni property model arguments.

ENTER_ADVANCED_SETTINGS = 'Advanced settings'

- Toggle visibility of advanced settings.

Argument options

True, False

Default value

False

INITIAL_TEMPERATURE = 'Initial temperature'

- Temperature at which the initial equilibrium state is obtained.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.initial_temperature())()`.

Default value

1000.0 [K]

LOWER_TEMPERATURE_LIMIT = 'Low temperature limit'

- Lower temperature limit for solvus temperature search.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.low_temperature())()`.

Default value

500.0 [K]

MAX_NUM_ITERATIONS = 'Max. number of iterations'

- Maximum number of iterations performed in convergence loops.
- The value specified must be greater than zero.

Default value

100.0

NAMING_CONVENTION = 'Naming convention'

- Select the naming convention to use for the property model calculation.

Argument options

SolvusForOrderedPhaseNi_ArgumentOptions_NAMING_CONVENTION

Default value

SolvusForOrderedPhaseNi_ArgumentOptions_NAMING_CONVENTION.
CONVENTIONAL_PHASE_NAMES

NUM_DECIMALS = 'Number of decimals'

- Numerical precision used to distinguish ordered and disordered phases when composition difference is small.
- Ordering reactions may be continuous and therefore the difference in site occupancy in ordered and disordered phases may be small.

Default value

7

PHASE_GROUP_SELECTION = 'Phase Subset'

- Select a subset of the phases to enter in the calculation.

Argument options

ArgumentOptions_PhaseGroupSelection

Default value

ArgumentOptions_PhaseGroupSelection.INCLUDE_ALL_PHASES

PHASE_NAME_COMMON = 'Select phase to calculate solvus for'

- Phase for which the solvus calculation should be performed, specified using its common name.
- This argument is used if *SolvusForOrderedPhaseNi_Arguments.NAMING_CONVENTION* is set to *SolvusForOrderedPhaseNi_ArgumentOptions_NAMING_CONVENTION.COMMON_PHASE_NAMES*.

Argument options*SolvusForOrderedPhaseNi_ArgumentOptions_PHASE_NAME_COMMON***Default value**

None

PHASE_NAME_EXPLICIT = 'Select phase to calculate solvus for (explicit)'

- Phase for which the solvus calculation should be performed, specified using its explicit name.
- This argument is used if *SolvusForOrderedPhaseNi_Arguments.NAMING_CONVENTION* is set to *SolvusForOrderedPhaseNi_ArgumentOptions_NAMING_CONVENTION.EXPLICIT_PHASE_NAMES*.
- Specify argument value as a string of a valid phase name (e.g., "FCC_A1").

Default value

"FCC_L12"

SUBLATTICE_1 = 'sublattice_1'

- The first sublattice used to model ordering of the phase specified with *SolvusForOrderedPhaseNi_Arguments.PHASE_NAME_COMMON*.
- Depending on the phase model, different sets of sublattices may be used to model ordering.
- For example, the ordering of FCC_L12 in TCNI occurs on sublattice 1 and 2.

Default value

1

SUBLATTICE_2 = 'sublattice_2'

- The second sublattice used to model ordering of the phase specified with *SolvusForOrderedPhaseNi_Arguments.PHASE_NAME_COMMON*.
- Depending on the phase model, different sets of sublattices may be used to model ordering.
- For example, the ordering of FCC_L12 in TCNI occurs on sublattice 1 and 2.

Default value

1

UPPER_TEMPERATURE_LIMIT = 'High temperature limit'

- Upper temperature limit for solvus temperature search.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.high_temperature())()`.

Default value

2000.0 [K]

class `tc_python.property_model_definitions.solvus_for_ordered_phase_ni.SolvusForOrderedPhaseNi_Results`Bases: *ArgumentBase*

Valid entries for Solvus for Ordered Phase - Ni property model results.

SOLVUS_TEMPERATURE = 'Solvus temperature'

Solvus temperature in [K] for the selected ordered phase.

6.9.27 Module “spinodal”

class `tc_python.property_model_definitions.spinodal.Spinodal`Bases: `object`

Encapsulation class for the “Spinodal” property model Arguments, ArgumentOptions, and Results.

ArgumentOptionsalias of *Spinodal_ArgumentOptions***Arguments**alias of *Spinodal_Arguments***Results**alias of *Spinodal_Results***classmethod** `get_aliases()` → list[str]

List of aliases for “Spinodal” property model.

classmethod `get_name()` → str

String name of “Spinodal” property model.

class `tc_python.property_model_definitions.spinodal.Spinodal_ArgumentOptions`Bases: `object`

Valid entries for Spinodal property model arguments which require specific options to be entered.

CONDITION_TO_VARYalias of *Spinodal_ArgumentOptions_CONDITION_TO_VARY***class**`tc_python.property_model_definitions.spinodal.Spinodal_ArgumentOptions_CONDITION_TO_VARY`Bases: *ArgumentBase*Valid options for `Spinodal.Arguments.CONDITION_TO_VARY`.

COMPOSITION = 'X'

Vary Composition during phase transition search.

TEMPERATURE = 'T'

Vary Temperature during phase transition search.

class tc_python.property_model_definitions.spinodal.**Spinodal_Arguments**

Bases: *ArgumentBase*

Valid entries for Spinodal property model arguments.

COMPOSITION_CONDITION = 'Composition to vary'

Composition condition to vary/relax during the phase transition search. Valid options: Console mode command for the composition of a component entered in the system (e.g., “X(Fe) or W(Fe)”). This argument is used if the value of `Arguments.CONDITION_TO_VARY` is set to `ArgumentOptions.CONDITION_TO_VARY.COMPOSITION`.

CONDITION_TO_VARY = 'varied_condition'

Condition to vary during the spinodal search (e.g., composition or temperature). Valid options: “Temperature”, or a console mode command for the composition of a component entered in the system (e.g., “X(Fe)”) Default Value: “Temperature”

EVALUATION_TEMPERATURE = 'Evaluation temperature'

Temperature at which the property evaluation occurs, corresponds to the measurement temperature. This argument can also be set with `:class: PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())` Default value: 1000.0 [K]

LOWER_CONDITION_LIMIT = 'lower_condition_limit'

Lower limit for spinodal search with manual limits. This argument is used when `Arguments.MANUAL_SEARCH_LIMITS` is set to “True. Default value: 300.0 [K]

NUM_STEPS = 'Steps in grid when localizing roots'

Number of steps to use when estimating the position(s) of spinodal(s). This argument is used when `Arguments.MANUAL_SEARCH_LIMITS` is set to “True. Default value: 20

SPINODAL_PHASE = 'matrix'

Phase for which to determine spinodal behavior.

UPPER_CONDITION_LIMIT = 'upper_condition_limit'

Upper limit for spinodal search with manual limits. This argument is used when `Arguments.MANUAL_SEARCH_LIMITS` is set to “True. Default value: 3000.0 [K]

USE_MANUAL_SEARCH_LIMITS = 'manualSearchLimits'

Option to perform Spinodal search with manual condition limits. If “False”, search limits are set automatically. Argument options: “True”, “False” Default value: “False”

class tc_python.property_model_definitions.spinodal.**Spinodal_Results**

Bases: *ArgumentBase*

Valid entries for Spinodal property model results.

SPINODAL_COMPOSITION_1 = 'Spinodal'

Spinodal composition value at the first solution point.

..note::

The result quantity corresponding to this entry is only populated with data if `Arguments.CONDITION_TO_VARY` is set to `ArgumentOptions.CONDITION_TO_VARY.COMPOSITION`.

SPINODAL_COMPOSITION_2 = 'Spinodal - 2nd solution'

Spinodal composition value at the second solution point.

..note::

The result quantity corresponding to this entry is only populated with data if `Arguments.CONDITION_TO_VARY` is set to `ArgumentOptions.CONDITION_TO_VARY.COMPOSITION`.

SPINODAL_TEMPERATURE_1 = 'Spinodal temperature'

Spinodal temperature for the first solution.

..note::

The result quantity corresponding to this entry is only populated with data if `Arguments.CONDITION_TO_VARY` is set to `ArgumentOptions.CONDITION_TO_VARY.TEMPERATURE`.

SPINODAL_TEMPERATURE_2 = 'Spinodal temperature - 2nd solution'

Spinodal temperature for the second solution (if present).

..note::

The result quantity corresponding to this entry is only populated with data if `Arguments.CONDITION_TO_VARY` is set to `ArgumentOptions.CONDITION_TO_VARY.TEMPERATURE`.

6.9.28 Module “strain_age_cracking_ni”

class `tc_python.property_model_definitions.strain_age_cracking_ni.StrainAgeCrackingNi`

Bases: `object`

Encapsulation class for the “Strain-Age Cracking - Ni” property model `Arguments`, `ArgumentOptions`, and `Results`.

ArgumentOptions

alias of `StrainAgeCrackingNi_ArgumentOptions`

Arguments

alias of `StrainAgeCrackingNi_Arguments`

Results

alias of `StrainAgeCrackingNi_Results`

classmethod `get_aliases()` → `list[str]`

List of aliases for “Strain-Age Cracking - Ni” property model.

classmethod `get_name()` → `str`

String name of “Strain-Age Cracking - Ni” property model.

class `tc_python.property_model_definitions.strain_age_cracking_ni.`

StrainAgeCrackingNi_ArgumentOptions

Bases: `object`

Valid options for Strain-Age Cracking - Ni property model arguments which requires specific options to be entered.

EVALUATION_METHOD

alias of `StrainAgeCrackingNi_ArgumentOptions_EVALUATION_METHOD`

PHASE_GROUP_SELECTION

alias of `StrainAgeCrackingNi_ArgumentOptions_PHASE_GROUP_SELECTION`

```
class tc_python.property_model_definitions.strain_age_cracking_ni.
StrainAgeCrackingNi_ArgumentOptions_EVALUATION_METHOD
```

Bases: *ArgumentBase*

Valid options for *StrainAgeCrackingNi_Arguments.EVALUATION_METHOD*.

SINGLE_TEMPERATURE = '1'

Evaluate SAC risk at the current temperature only.

TEMPERATURE_INTERVAL = '2'

Evaluate SAC risk over a temperature interval.

```
class tc_python.property_model_definitions.strain_age_cracking_ni.
StrainAgeCrackingNi_ArgumentOptions_PHASE_GROUP_SELECTION
```

Bases: *ArgumentBase*

Valid options for *StrainAgeCrackingNi_Arguments.PHASE_GROUP_SELECTION*.

INCLUDE_ALL_PHASES = '1'

Includes all phases entered by User in the System.

INCLUDE_GAMMA_GAMMA_PRIME_ONLY = '2'

Includes Gamma (“FCC_L12”) and Gamma-Prime (“FCC_L12#2”) phases.

INCLUDE_TYPICAL_NI_SUPERALLOY = '3'

Phases included in this option:

- **Oxide and metal liquid phases:** “IONIC_LIQ”, “IONIC_LIQ#2”, “LIQUID”
- **Gamma (#1) and Gamma-Prime(#2):** “DIC_FCC_A1”, “FCC_A1”, “FCC_A1#2”, “FCC_L12”, “FCC_L12#2”
- **Carbides/Nitrides:** “FCC_L12#3”, “HCP_A3#1”, “HCP_A3#2”, “M23C6”, “M6C”, “M7C3”
- **B2 phases:** “BCC_A2”, “BCC_A2#2”, “BCC_B2”, “BCC_B2#2”
- **Gamma Double-Prime:** “BCT_D022”
- **Additional Phases:** “PI”, “NI3B_D011”, “M2B_TETR”, “D5A_M3B2”, “M3B2”, “MB_B33”, “MB2_C32”, “G_PHASE”, “NI5ZR”, “NI7ZR2”, “CR3NI5SI2”, “CR3NI5SI2”, “SPINEL”, “ALPHA_SPINEL”, “CORUNDUM”

INCLUDE_TYPICAL_PLUS_ETA_DELTA = '4'

Phases included in this option:

- **All phases from:** *ArgumentOptions_PhaseGroupSelection*.
INCLUDE_TYPICAL_NI_SUPERALLOY
- **Delta phase:** “NI3TA_D0A”
- **Eta phase:** “NI3TI_D024”

INCLUDE_TYPICAL_PLUS_TCP = '5'

Phases included in this option:

- **All phases from:** *ArgumentOptions_PhaseGroupSelection*.
INCLUDE_TYPICAL_NI_SUPERALLOY
- **TCP phases:** “C14_LAVES”, “SIGMA”, “MU_PHASE”, “R_PHASE”, “P_PHASE”, “Z_PHASE”, “CR3SI_A15”

class

tc_python.property_model_definitions.strain_age_cracking_ni.**StrainAgeCrackingNi_Arguments**

Bases: *ArgumentBase*

Valid entries for Strain-Age Cracking - Ni property model arguments.

EVALUATION_METHOD = 'Choose mode'

- Select the method by which strain-age cracking (SAC) risk is evaluated.

Argument options

StrainAgeCrackingNi_ArgumentOptions_EVALUATION_METHOD

Default value

"TEMPERATURE_INTERVAL"

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`.

Default value

1000.0 [K]

INITIAL_STEP_SIZE = 'Initial step size for search'

- Initial step size for searching used by the property model.
- This argument is used if *StrainAgeCrackingNi_Arguments.EVALUATION_METHOD* is set to *StrainAgeCrackingNi_ArgumentOptions_EVALUATION_METHOD.TEMPERATURE_INTERVAL*.

Default value

50.0 [K]

LOW_LIMIT_TEMPERATURE = 'Low temperature limit'

- Lower temperature limit used for transformation temperature search.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.low_limit_temperature())()`.

Default value

900.0 [K]

MAXIMUM_TEMPERATURE = 'High temperature limit'

- The maximum temperature used by the property model.
- This argument is used given the following argument settings:
 - *StrainAgeCrackingNi_Arguments.EVALUATION_METHOD* is set to *StrainAgeCrackingNi_ArgumentOptions_EVALUATION_METHOD.TEMPERATURE_INTERVAL*.
 - *StrainAgeCrackingNi_Arguments.SET_MAXIMUM_TEMPERATURE* is set to "True".
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.high_limit_temperature())()`.

Default value
1273.0 [K]

Note: The value of this argument should be below the material gamma-prime solvus temperature.

PHASE_GROUP_SELECTION = 'Phase Subset'

- Select a subset of the phases to enter in the calculation.

Argument options
ArgumentOptions_PhaseGroupSelection

Default value
"INCLUDE_ALL_PHASES"

SET_MAXIMUM_TEMPERATURE = 'useMaximumTemperatureSetting'

- Option to set the maximum temperature for SAC risk evaluation manually.
- Set to "True" if a lower maximum temperature than the calculated gamma-prime solvus temperature is required.
- If "True", the gamma-prime solvus temperature will not be calculated by the property model.
- This argument is used if *StrainAgeCrackingNi_Arguments.EVALUATION_METHOD* is set to *StrainAgeCrackingNi_ArgumentOptions_EVALUATION_METHOD.TEMPERATURE_INTERVAL*.

Argument options
"True", "False"

Default value
"False"

class

`tc_python.property_model_definitions.strain_age_cracking_ni.StrainAgeCrackingNi_Results`

Bases: *ArgumentBase*

Valid entries for Strain-Age Cracking - Ni property model results.

GAMMA_PRIME_SOLVUS = 'gammaPrimeSolvus'

Gamma prime (FCC_L12) solvus temperature [K].

MISFIT_VALUE_AT_SINGLE_TEMP = 'lowerMisfitSignChangeTemperature'

Misfit parameter value between gamma matrix and gamma-prime precipitate at the current temperature [K].

SAC_RISK_FACTOR = 'sacRiskFactor'

SAC risk factor.

6.9.29 Module “ttd_diagram”

class tc_python.property_model_definitions.ttd_diagram.TTDDiagram

Bases: object

Encapsulation class for the “TTT Diagram” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *TTDDiagram_ArgumentOptions*

Arguments

alias of *TTDDiagram_Arguments*

Results

alias of *TTDDiagram_Results*

classmethod `get_aliases()` → list[str]

List of aliases for “TTT Diagram” property model.

classmethod `get_name()` → str

String name of “TTT Diagram” property model.

class tc_python.property_model_definitions.ttd_diagram.TTDDiagram_ArgumentOptions

Bases: object

Valid options for TTT Diagram property model arguments which requires specific options to be entered.

AUSTENITE_COMPOSITION

alias of *TTDDiagram_ArgumentOptions_AUSTENITE_COMPOSITION*

CALCULATION_SETTING

alias of *TTDDiagram_ArgumentOptions_CALCULATION_SETTING*

CARBIDE_IN_BAINITE

alias of *TTDDiagram_ArgumentOptions_CARBIDE_IN_BAINITE*

CARBIDE_IN_PEARLITE

alias of *TTDDiagram_ArgumentOptions_CARBIDE_IN_PEARLITE*

FERRITE_MODE

alias of *TTDDiagram_ArgumentOptions_FERRITE_MODE*

PEARLITE_CRITERION

alias of *TTDDiagram_ArgumentOptions_PEARLITE_CRITERION*

PEARLITE_MODE

alias of *TTDDiagram_ArgumentOptions_PEARLITE_MODE*

class tc_python.property_model_definitions.ttd_diagram.
TTDDiagram_ArgumentOptions_AUSTENITE_COMPOSITION

Bases: *ArgumentBase*

Valid options for *TTDDiagram_Arguments.AUSTENITE_COMPOSITION*.

EQUILIBRIUM = 'Equilibrium composition'

Use equilibrium composition at the specified austenitizing temperature.

NOMINAL = 'Nominal composition'

Use nominal alloy composition as austenite composition.

```
class tc_python.property_model_definitions.ttt_diagram.  
TTTDiagram_ArgumentOptions_CALCULATION_SETTING
```

Bases: *ArgumentBase*

Valid options for *TTTDiagram_Arguments.CALCULATION_SETTING*.

ACCURATE = 'Accurate'

Accurate calculation preset.

CUSTOM = 'Custom'

Custom settings.

QUICK = 'Quick'

Quick calculation preset.

```
class tc_python.property_model_definitions.ttt_diagram.  
TTTDiagram_ArgumentOptions_CARBIIDE_IN_BAINITE
```

Bases: *ArgumentBase*

Valid options for *TTTDiagram_Arguments.CARBIIDE_IN_BAINITE*.

CEMENTITE = 'CEMENTITE'

Bainite carbide: CEMENTITE.

M7C3 = 'M7C3'

Bainite carbide: M7C3.

```
class tc_python.property_model_definitions.ttt_diagram.  
TTTDiagram_ArgumentOptions_CARBIIDE_IN_PEARLITE
```

Bases: *ArgumentBase*

Valid options for *TTTDiagram_Arguments.CARBIIDE_IN_PEARLITE*.

CEMENTITE = 'CEMENTITE'

Pearlite carbide: CEMENTITE_D011 phase.

M23C6 = 'M23C6'

Pearlite carbide: M23C6.

M7C3 = 'M7C3'

Pearlite carbide: M7C3.

```
class
```

```
tc_python.property_model_definitions.ttt_diagram.TTTDiagram_ArgumentOptions_FERRITE_MODE
```

Bases: *ArgumentBase*

Valid options for *TTTDiagram_Arguments.FERRITE_MODE*.

FASTER_START = 'Faster start'

Mode between OE and PE which gives a higher initial transformation rate.

OE_ONLY = 'OE only'

Orthoequilibrium (OE) mode considers local equilibrium conditions.

PE_ONLY = 'PE only'

Paraequilibrium (PE) mode for ferrite transformation.

PE_OVER_OE = 'PE if possible, otherwise OE'

Use Paraequilibrium (PE) mode if the PE driving force positive; otherwise use Orthoequilibrium (OE) mode.

class `tc_python.property_model_definitions.ttt_diagram.`

TTDiagram_ArgumentOptions_PEARLITE_CRITERION

Bases: *ArgumentBase*

Valid options for *TTDiagram_Arguments.PEARLITE_CRITERION*.

MAXIMIZE_GIBBS DISSIPATION_RATE = 'MaximizeGibbsEnergyDissipationRate'

Maximize the Gibbs energy dissipation rate of the pearlite transformation.

MAXIMIZE_GROWTH_RATE = 'MaximizeGrowthRate'

Maximize the growth rate of the pearlite transformation.

class

`tc_python.property_model_definitions.ttt_diagram.TTDiagram_ArgumentOptions_PEARLITE_MODE`

Bases: *ArgumentBase*

Valid options for *TTDiagram_Arguments.PEARLITE_MODE*.

OPTIMAL = 'OptimalPearlite'

Optimal mode for pearlite transformation selected between PE and OE.

ORTHO = 'Ortho-pearlite'

- Orthoequilibrium (OE) mode for pearlite transformation.
- Orthoequilibrium (OE) mode considers local equilibrium conditions.

PARA = 'Para-pearlite'

Paraequilibrium (PE) mode for pearlite transformation.

class `tc_python.property_model_definitions.ttt_diagram.TTDiagram_Arguments`

Bases: *ArgumentBase*

Valid entries for TTT Diagram property model arguments.

AUSTENITE_COMPOSITION = 'Austenite composition from'

- Argument which sets the composition of the austenite phase.

Argument options

`TTDiagram.ArgumentOptions.AUSTENITE_COMPOSITION`

Default value

`TTDiagram.ArgumentOptions.AUSTENITE_COMPOSITION.NOMINAL`

AUSTENITIZING_TEMPERATURE = 'Annealing temperature'

- Austenitizing temperature.
- This argument is used if *TTDiagram_Arguments.AUSTENITE_COMPOSITION* is set to *TTDiagram_ArgumentOptions_AUSTENITE_COMPOSITION.EQUILIBRIUM*.

Default value

1000 [K]

CALCULATION_SETTING = 'Calculation setting'

- Setting for transformation products and numerical settings for time integration.

Argument options

`TTDiagram.ArgumentOptions.CALCULATION_SETTING`

Default value

`TTDiagram.ArgumentOptions.CALCULATION_SETTING.QUICK`

CARBIDE_IN_BAINITE = 'Carbide in bainite'

- Select the carbide to be present in bainite, which usually depends on Cr content.

Argument options

`TTDiagram.ArgumentOptions.CARBIDE_IN_BAINITE`

Default value

`TTDiagram.ArgumentOptions.CARBIDE_IN_BAINITE.CEMENTITE`

CARBIDE_IN_PEARLITE = 'Carbide in pearlite'

- Select the carbide to be present in pearlite, which usually depends on Cr content.
- If M23C6 is selected, parameters optimized for stainless steels will be invoked.

Argument options

`TTDiagram.ArgumentOptions.CARBIDE_IN_PEARLITE`

Default value

`TTDiagram.ArgumentOptions.CARBIDE_IN_PEARLITE.CEMENTITE`

ERROR_TOLERANCE_XA = 'Error tolerance for austenite volume fraction'

- Tolerance controlling integration error of austenite fraction.
- Time-integration error for austenite fraction cannot exceed this value.

Default value

`5e-4`

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`

Default value

`1000.0 [K]`

FERRITE_MODE = 'Ferrite mode'

- Mode for ferrite transformation.

Argument options

`TTDiagram.ArgumentOptions.FERRITE_MODE`

Default value`TTDiagram.ArgumentOptions.FERRITE_MODE.FASTER_START`**GRAIN_SIZE = 'GrainSize'**

- Grain size of austenite in micrometers.

Default value`100.0 [μm]`**INTERPOLATION_ERROR_TOLERANCE = 'Interpolation error tolerance'**

- Relative error tolerance used for interpolation grids.
- Large error tolerance leads to quick but less accurate calculations, small error tolerance does the opposite.
- This argument is used if `TTDiagram.Arguments.USE_INTERPOLATION` is set to True

Default value`0.1`**MAX_DELTA_X_ABS = 'Maximum change of phase fraction (absolute)'**

- Absolute maximum change of phase fraction allowed per time step.

Default value`5e-3`**MAX_DELTA_X_REL = 'Maximum change of phase fraction (relative)'**

- Relative maximum change of phase fraction allowed per time step.

Default value`5e-3`**PEARLITE_CRITERION = 'Pearlite criterion'**

- Criterion to determine pearlite growth rate and lamellar spacing.

Argument options`TTDiagram.ArgumentOptions.PEARLITE_CRITERION`**Default value**`TTDiagram.ArgumentOptions.PEARLITE_CRITERION.MAXIMIZE_GROWTH_RATE`**PEARLITE_MODE = 'PearliteMode'**

- Mode for pearlite transformation.

Argument options`TTDiagram.ArgumentOptions.PEARLITE_MODE`**Default value**`TTDiagram.ArgumentOptions.PEARLITE_MODE.OPTIMAL`

SELECT_BAINITE = 'Bainite'

- Option to include bainite in TTT calculation.

Argument options

True, False

Default value

True

SELECT_FERRITE = 'Ferrite'

- Option to include ferrite in TTT calculation.

Argument options

True, False

Default value

True

SELECT_MARTENSITE = 'Martensite'

- Option to include martensite in TTT calculation.

Argument options

True, False

Default value

True

SELECT_PEARLITE = 'Pearlite'

- Option to include pearlite in TTT calculation.

Argument options

True, False

Default value

True

USE_INTERPOLATION = 'Use interpolation when necessary'

- Enable/disable interpolation of growth/nucleation rates based on error tolerance.

Argument options

True, False

Default value

True

class tc_python.property_model_definitions.ttt_diagram.TTTDiagram_Results

Bases: *ArgumentBase*

Valid entries for TTT Diagram property model results.

AUSTENITE_10 = '10% austenite transformed'

Time at which 10% of the austenite phase has transformed.

AUSTENITE_90 = '90% austenite transformed'

Time at which 90% of the austenite phase has transformed.

AUSTENITE_FINISH = '98% austenite transformed'

Time at which 98% of the austenite phase has transformed (austenite “finish”).

AUSTENITE_HALF = '50% austenite transformed'

Time at which 50% of the austenite phase has transformed.

AUSTENITE_START = '2% austenite transformed'

Time at which 2% of the austenite phase has transformed (austenite “start”).

BAINITE_START = 'Bainite start (2%)'

Time at which 2% of bainite has transformed (bainite “start”).

FERRITE_START = 'Ferrite start (2%)'

Time to reach 2% ferrite transformation (ferrite “start”).

MARTENSITE_FINISH = 'Martensite 98%'

98% martensite temperature.

MARTENSITE_HALF = 'Martensite 50%'

50% martensite temperature.

MARTENSITE_START = 'Martensite start'

Time at which martensite begins to form (martensite “start”).

PEARLITE_START = 'Pearlite start (2%)'

Time at which 2% of pearlite has transformed (pearlite “start”).

TERMINAL_FRACTION_BAINITE = 'Terminal fraction of bainite'

Terminal fraction of the bainite phase.

TERMINAL_FRACTION_FERRITE = 'Terminal fraction of ferrite'

Terminal fraction of the ferrite phase.

TERMINAL_FRACTION_MARTENSITE = 'Terminal fraction of martensite'

Terminal fraction of martensite phase.

TERMINAL_FRACTION_PEARLITE = 'Terminal fraction of pearlite'

Terminal fraction of the pearlite phase.

TERMINAL_FRACTION_TOTAL_FERRITE = 'Terminal fraction of total ferrite'

Terminal fraction of total ferrite.

TERMINAL_FRACTION_TOTAL_FERRITE_CEMENTITE = 'Terminal fraction of total ferrite+cementite'

Terminal fraction of total ferrite + cementite.

TOTAL_FERRITE_CEMENTITE_FINISH = 'Total ferrite+cementite finish (98%)'

Time at which 98% of the sum of pearlite and cementite-containing bainite phases have transformed (i.e., transformation “finish”).

TOTAL_FERRITE_CEMENTITE_START = 'Total ferrite+cementite start (2%)'

Time at which 2% of the sum of polygonal ferrite and bainitic ferrite phases have transformed (i.e., transformation “start”).

TOTAL_FERRITE_START = 'Total ferrite start (2%)'

Time at which 2% of ferrite has transformed (ferrite “start”).

6.9.30 Module “t_zero_temperature”

class tc_python.property_model_definitions.t_zero_temperature.TZeroTemperature

Bases: object

Encapsulation class for the “T-Zero Temperature” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of *TZeroTemperature_ArgumentOptions*

Arguments

alias of *TZeroTemperature_Arguments*

Results

alias of *TZeroTemperature_Results*

classmethod get_aliases() → list[str]

List of aliases for “T-Zero Temperature” property model.

classmethod get_name() → str

String name of “T-Zero Temperature” property model.

class

tc_python.property_model_definitions.t_zero_temperature.TZeroTemperature_ArgumentOptions

Bases: object

Valid options for T-Zero Temperature property model arguments which requires specific options to be entered.

CONDITION_TO_VARY

alias of *TZeroTemperature_ArgumentOptions_CONDITION_TO_VARY*

class tc_python.property_model_definitions.t_zero_temperature.

TZeroTemperature_ArgumentOptions_CONDITION_TO_VARY

Bases: *ArgumentBase*

Valid options for *TZeroTemperature_Arguments.CONDITION_TO_VARY*.

COMPOSITION = 'X'

Vary Composition during phase transition search.

TEMPERATURE = 'T'

Vary Temperature during phase transition search.

class tc_python.property_model_definitions.t_zero_temperature.TZeroTemperature_Arguments

Bases: *ArgumentBase*

Valid entries for T-Zero Temperature property model arguments.

COMPOSITION_CONDITION = 'Composition to vary'

- Composition condition to vary/relax during the phase transition search.
- Valid options: Console mode command for the composition of a component entered in the system (e.g., “X(Fe)” or “W(Fe)”).
- This argument is used if *TZeroTemperature_Arguments.CONDITION_TO_VARY* is set to *TZeroTemperature_ArgumentOptions_CONDITION_TO_VARY.COMPOSITION*.

CONDITION_TO_VARY = 'varied_condition'

- Condition to vary during the T0 search (e.g., composition or temperature).

Argument options

`TZeroTemperature.ArgumentOptions.CONDITION_TO_VARY`

Default value

`TZeroTemperature.ArgumentOptions.CONDITION_TO_VARY.TEMPERATURE`

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())`

Default value

1000.0 [K]

FIRST_PHASE = 'First phase list'

- First phase used to evaluate T0.

Default value

"FCC_A1"

GIBBS_ADDITION_SECOND_PHASE = 'Phase addition'

- Gibbs energy shift for the second phase in units of [J/mol].
- This expression can be a function of temperature (T) and composition (w(el) or x(el)).
- E.g., $51.2+10*x(\text{Cr})+5*x(\text{Cr})^2$

Default value

0.0 [J/mol]

LOWER_CONDITION_LIMIT = 'lower_condition_limit'

- Lower limit for T0 search with manual limits.
- This argument is used if `TZeroTemperature.Arguments.MANUAL_SEARCH_LIMITS` is set to True.

Default value

300.0 [K]

MANUAL_SEARCH_LIMITS = 'Manual search limits'

- Option to perform T0 search with manual condition limits.
- If False, search limits are set automatically.

Argument options

True, False

Default value

False

NUM_STEPS = 'Steps in grid when localizing roots'

- Number of steps to use when estimating the position(s) of root(s).
- This argument is used if *TZeroTemperature.Arguments.MANUAL_SEARCH_LIMITS* is set to True

Default value

20

SECOND_PHASE = 'Second phase list'

- Second phase used to evaluate T0.

Default value

“BCC_A2”

UPPER_CONDITION_LIMIT = 'upper_condition_limit'

- Upper limit for T0 search with manual limits.
- This argument is used if *TZeroTemperature.Arguments.MANUAL_SEARCH_LIMITS* is set to True.

Default value

3000.0 [K]

class tc_python.property_model_definitions.t_zero_temperature.TZeroTemperature_Results

Bases: *ArgumentBase*

Valid entries for T-Zero Temperature property model results.

T_ZERO_TEMPERATURE = 'T-Zero temperature'

Primary T0 temperature in units of [K].

Note: The result quantity corresponding to this entry is only populated with data if *TZeroTemperature.Arguments.CONDITION_TO_VARY* is set to *TZeroTemperature.ArgumentOptions.CONDITION_TO_VARY.TEMPERATURE*.

T_ZERO_TEMPERATURE_2 = 'T-Zero temperature - 2nd solution'

Second T0 temperature (if present) in units of [K].

Note: The result quantity corresponding to this entry is only populated with data if *TZeroTemperature.Arguments.CONDITION_TO_VARY* is set to *TZeroTemperature.ArgumentOptions.CONDITION_TO_VARY.TEMPERATURE*.

VARIED_CONDITION_ROOT = 'Varied condition'

Root of the varied condition for T0.

Note: The result quantity corresponding to this entry is only populated with data if *TZeroTemperature.Arguments.CONDITION_TO_VARY* is set to *TZeroTemperature.ArgumentOptions.CONDITION_TO_VARY.COMPOSITION*.

VARIED_CONDITION_ROOT_2 = 'Varied condition - 2nd solution'

Second root (if present) of the varied condition.

Note: The result quantity corresponding to this entry is only populated with data if `TZeroTemperature.Arguments.CONDITION_TO_VARY` is set to `TZeroTemperature.ArgumentOptions.CONDITION_TO_VARY.COMPOSITION`.

6.9.31 Module “yield_strength”

class `tc_python.property_model_definitions.yield_strength.YieldStrength`

Bases: `object`

Encapsulation class for the “Yield Strength” property model Arguments, ArgumentOptions, and Results.

ArgumentOptions

alias of `YieldStrengthArgumentOptions`

Arguments

alias of `YieldStrengthArguments`

Results

alias of `YieldStrengthResults`

classmethod `get_aliases()` → `list[str]`

List of aliases for “Yield Strength” property model.

classmethod `get_name()` → `str`

String name of “Yield Strength” property model.

class `tc_python.property_model_definitions.yield_strength.YieldStrengthArgumentOptions`

Bases: `object`

Valid options for Yield Strength property model arguments which requires specific options to be entered.

MINIMIZATION_STRATEGY

alias of `YieldStrengthArgumentOptions_MINIMIZATION_STRATEGY`

MODE

alias of `YieldStrengthArgumentOptions_MODE`

PRECIPITATION_MODEL

alias of `YieldStrengthArgumentOptions_PRECIPITATION_MODEL`

class `tc_python.property_model_definitions.yield_strength.YieldStrengthArgumentOptions_MINIMIZATION_STRATEGY`

Bases: `ArgumentBase`

Valid options for `YieldStrengthArguments.MINIMIZATION_STRATEGY`.

GLOBAL_MINIMIZATION_ONLY = 'Global minimization only'

Perform full global minimization only.

GLOBAL_TEST_PREFERRED = 'Global test preferred'

Perform global test but tries full global minimization at failure.

LOCAL_MINIMIZATION_ONLY = 'Local minimization only'

Only perform local equilibrium minimization.

LOCAL_MINIMIZATION_PREFERRED = 'Local minimization preferred'

Perform local equilibrium but tries global test and full global minimization at failure. Also performs global test in case the stable phases at equilibrium changes from the previous model evaluation.

class

`tc_python.property_model_definitions.yield_strength.YieldStrength_ArgumentOptions_MODE`

Bases: *ArgumentBase*

Valid options for *YieldStrength_Arguments.MODE*.

ADVANCED = 'Advanced'

Allows the user to set a large number of model parameters.

SIMPLIFIED = 'Simplified'

- Reduces the number of parameters requiring user input to a minimum.
- The model provides necessary information by dynamically evaluating the required settings.

class `tc_python.property_model_definitions.yield_strength.`

`YieldStrength_ArgumentOptions_PRECIPITATION_MODEL`

Bases: *ArgumentBase*

Valid options for *YieldStrength_Arguments.PRECIPITATION_MODEL*.

DESCHAMPS = 'Deschamps model'

Deschamps precipitation strengthening model.

REPPICH = 'Reppich model'

Reppich precipitation strengthening model.

SEIDMAN = 'Seidman model'

Seidman precipitation strengthening model.

SIMPLIFIED = 'Simplified model'

Simplified precipitation strengthening model.

class `tc_python.property_model_definitions.yield_strength.YieldStrength_Arguments`

Bases: *ArgumentBase*

Valid entries for Yield Strength property model arguments.

ANNEALING_TEMPERATURE = 'Annealing temperature'

- Temperature at which austenitization or intercritical annealing is performed.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.annealing_temperature())`

Default value

1000 [K]

BURGERS_VECTOR = 'Burgers vector'

- Burger's vector in [m].
- This argument is used given the following argument settings:

- *YieldStrength_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING* is set to True.
- *YieldStrength_Arguments.USE_ADDITIONAL_PRECIPITATION_PARAMETERS* is set to True.

Default value

none

CONSTANT_STRENGTH_ADDITION = 'Constant strength addition'

- Give the value of the desired constant strength addition in MPa in advanced calculation mode.
- This argument is used when *YieldStrength_Arguments.MODE* is set to *YieldStrength_ArgumentOptions_MODE.ADVANCED*

Default value

0.0 [MPa]

**CONSTANT_STRENGTH_ADDITION_SIMPLIFIED_MODE =
'constant_strength_addition_simplified_mode'**

- Give the value of the desired constant strength addition in MPa in simplified calculation mode.
- This argument is used when *YieldStrength_Arguments.MODE* is set to *YieldStrength_ArgumentOptions_MODE.SIMPLIFIED*

Default value

0.0 [MPa]

CRITICAL_RADIUS_SIMPLIFIED_MODE = 'critical_radius_simplified_mode'

- Precipitate critical radius [m].
- Used for precipitation strengthening in the simplified mode of the calculation.
- This argument is used given the following argument settings:
 - *YieldStrength_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
 - *YieldStrength_Arguments.PRECIPITATION_MODEL* is set to *YieldStrength_ArgumentOptions_PRECIPITATION_MODEL.SIMPLIFIED*.

Default value

3.547e-9 [m]

DESCHAMPS_BETA = DynamicArgument('beta_deschamps')

- Parameter used when evaluating dislocation line tension.
- Used in the Deschamps model (Al-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - *YieldStrength_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
 - *YieldStrength_Arguments.PRECIPITATION_MODEL* is set to *YieldStrength_ArgumentOptions_PRECIPITATION_MODEL.DESCHAMPS*.

Default value

0.43

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.DESCHAMPS_BETA(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

DESCHAMPS_CRITICAL_RADIUS = DynamicArgument('Critical radius deschamps model')

- Critical radius of precipitate phase.
- Used in the Deschamps model (Al-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to `True`.
 - `YieldStrength.Arguments.PRECIPITATION_MODEL` is set to `YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.DESCHAMPS`.

Default value

3.547e-9 [m]

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.DESCHAMPS_CRITICAL_RADIUS(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

DESCHAMPS_MEAN_RADIUS = DynamicArgument('Precipitate radius deschamps')

- Precipitate mean radius [m].
- Used in the Deschamps model (Al-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to `True`.
 - `YieldStrength.Arguments.PRECIPITATION_MODEL` is set to `YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.DESCHAMPS`.

Default value

1.0e-8 [m]

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.DESCHAMPS_MEAN_RADIUS(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

DESCHAMPS_USE_KOCKS_STATISTICS = DynamicArgument('use_kocks_statistics_deschamps')

- Option to use Kocks' statistics. Friedel statistics is used by default.
- Used in the Deschamps model (AI-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - *YieldStrength_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
 - *YieldStrength_Arguments.PRECIPITATION_MODEL* is set to *YieldStrength_ArgumentOptions_PRECIPITATION_MODEL.DESCHAMPS*.

Argument options

True, False

Default value

False

Note: This is a dynamic argument and must be called with an index (e.g., *YieldStrength_Arguments.DESCHAMPS_USE_KOCKS_STATISTICS(0)*). Index values start at '0' for the first entry. To specify subsequent index values, you must first call *PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())*.

EVALUATE_SOLID_SOLUTION_AT_HIGHER_TEMPERATURE = 'sol_str_temp_selection'

- Option to evaluate the strengthening contribution from solid solution at a higher temperature than room temperature.
- This argument is used if *YieldStrength_Arguments.MODE* is set to *YieldStrength_ArgumentOptions_MODE.ADVANCED*.

Argument options

True, False

Default value

False

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument is used if *YieldStrength_Arguments.EVALUATE_SOLID_SOLUTION_AT_HIGHER_TEMPERATURE* is True.
- This argument can also be set with *PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())*

Default value

293.15 [K]

GRAIN_SIZE = 'Grain size in mu'

- Grain diameter used in Hall-Petch relationship.
- This argument is used given the following argument settings:

- *YieldStrength_Arguments.MODE* is set to *YieldStrength_ArgumentOptions.MODE.ADVANCED*.
- *YieldStrength_Arguments.INCLUDE_GRAIN_BOUNDARY_STRENGTHENING* is set to True.

Default value100.0 [μm]**GRAIN_SIZE_SIMPLIFIED_MODE = 'grain_size_in_mu_simplified_mode'**

- Grain diameter used in Hall-Petch relationship in simplified calculation mode.
- This argument is used given the following argument settings:
 - *YieldStrength_Arguments.MODE* is set to *YieldStrength_ArgumentOptions.MODE.SIMPLIFIED*.
 - *YieldStrength_Arguments.INCLUDE_GRAIN_BOUNDARY_STRENGTHENING_SIMPLIFIED_MODE* is set to True.

Default value100.0 [μm]**HALL_PETCH_COEFFICIENT = 'Hall_Petch constant'**

- User-specified coefficient to be used in the Hall-Petch relationship.
- This argument is used given the following argument settings:
 - *YieldStrength_Arguments.MODE* is set to *YieldStrength_ArgumentOptions.MODE.ADVANCED*.
 - *YieldStrength_Arguments.INCLUDE_GRAIN_BOUNDARY_STRENGTHENING* is set to True.
 - *YieldStrength_Arguments.USER_DEFINED_HALL_PETCH_COEFFICIENT* is set to True.

Default value

1.0

INCLUDE_GRAIN_BOUNDARY_STRENGTHENING = 'grain_str_selection'

- Option to include strengthening contribution from grain boundaries in calculation.
- This argument is used if *YieldStrength_Arguments.MODE* is set to *YieldStrength_ArgumentOptions.MODE.ADVANCED*.

Argument options

True, False

Default value

False

INCLUDE_GRAIN_BOUNDARY_STRENGTHENING_SIMPLIFIED_MODE = 'grain_str_selection_simplified_mode'

- Option to include strengthening contribution from grain boundaries in calculation.
- This argument is used if *YieldStrength_Arguments.MODE* is set to *YieldStrength_ArgumentOptions.MODE.SIMPLIFIED*.

Argument options

True, False

Default value

False

INCLUDE_PRECIPITATION_STRENGTHENING = 'precip_str_selection'

- Option to include strengthening contribution from precipitation in calculation.
- This argument is used if *YieldStrengthArguments.MODE* is set to *YieldStrengthArgumentOptions.MODE.ADVANCED*.

Argument options

True, False

Default value

False

**INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE =
'precipitation_str_selection_simplified_mode'**

- Option to include strengthening contribution from precipitation in calculation in simplified mode.
- This argument is used if *YieldStrengthArguments.MODE* is set to *YieldStrengthArgumentOptions.MODE.SIMPLIFIED*.

Argument options

True, False

Default value

False

INCLUDE_SOLID_SOLUTION_STRENGTHENING = 'sol_str_selection'

- Option to include strengthening contribution from solid solution in calculation.
- This argument is used if *YieldStrengthArguments.MODE* is set to *YieldStrengthArgumentOptions.MODE.ADVANCED*.

Argument options

True, False

Default value

False

**INCLUDE_SOLID_SOLUTION_STRENGTHENING_SIMPLIFIED_MODE =
'sol_str_selection_simplified_mode'**

- Option to include strengthening contribution from solid solution in calculation in simplified mode.
- This argument is used if *YieldStrengthArguments.MODE* is set to *YieldStrengthArgumentOptions.MODE.SIMPLIFIED*.

Argument options

True, False

Default value

False

MATRIX_PHASE = 'Matrix'

- The matrix phase to be used by the property model.
- Specify argument value with string of a valid phase name (i.e., “FCC_A1”).
- This argument is used if *YieldStrengthArguments.MODE* is set to *YieldStrengthArgumentOptions.MODE.ADVANCED*.

Default value

“FCC_A1”

MATRIX_PHASE_SIMPLIFIED_MODE = 'matrix_simplified_mode'

- The matrix phase to be used by the property model in simplified mode.
- Specify argument value with string of a valid phase name (i.e., “FCC_A1”).
- This argument is used if *YieldStrengthArguments.MODE* is set to *YieldStrengthArgumentOptions.MODE.SIMPLIFIED*.

Default value

“FCC_A1”

MEAN_RADIUS_SIMPLIFIED_MODE = 'precipitate_radius_simplified_mode'

- Precipitate mean radius [m].
- Used for precipitation strengthening in the simplified mode of the calculation.
- This argument is used given the following argument settings:
 - *YieldStrengthArguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
 - *YieldStrengthArguments.PRECIPITATION_MODEL* is set to *YieldStrengthArgumentOptions.PRECIPITATION_MODEL.SIMPLIFIED*.

Default value

1.0e-8 [m]

MINIMIZATION_STRATEGY = 'Minimization strategy'

- Minimization strategy ensures that the most stable minimum under the specified conditions is computed.

Argument options

YieldStrengthArgumentOptions.MINIMIZATION_STRATEGY

Default value

YieldStrengthArgumentOptions.MINIMIZATION_STRATEGY.GLOBAL_TEST_PREFERRED

MODE = 'Select mode'

- Calculation mode.

Argument options

YieldStrength.ArgumentOptions.MODE

Default value

`YieldStrength.ArgumentOptions.MODE.SIMPLIFIED`

PRECIPITATE_PHASE = DynamicArgument('Precipitate')

- Precipitate phase considered for strengthening contribution calculation.
- **This argument is used given the following argument settings:**
 - `YieldStrength.Arguments.MODE` is set to `YieldStrength.ArgumentOptions.MODE.ADVANCED`.
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING` is set to `True`.

Default value

`none`

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.PRECIPITATE_PHASE(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

PRECIPITATE_PHASE_SIMPLIFIED_MODE = 'precipitate_simplified_mode'

- Precipitation phase considered for strengthening contribution calculation in simplified mode.
- **This argument is used given the following argument settings:**
 - `YieldStrength.Arguments.MODE` is set to `YieldStrength.ArgumentOptions.MODE.SIMPLIFIED`.
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to `True`.

Default value

`none`

PRECIPITATION_MODEL = DynamicArgument('Precipitation model list')

- Select the model used for to evaluate precipitate strength.
- **This argument is used given the following argument settings:**
 - `YieldStrength.Arguments.MODE` is set to `YieldStrength.ArgumentOptions.MODE.ADVANCED`.
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING` is set to `True`

Argument options

`YieldStrength.ArgumentOptions.PRECIPITATION_MODEL`.

Default value

`YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.SIMPLIFIED`.

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.PRECIPITATION_MODEL(0)`). Index values start at '0' for the first entry.

To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

REPPICH_A = DynamicArgument('A factor')

- Numerical factor reflecting particle morphology (0.72 for spherical).
- Used in the Reppich model (Ni-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to `True`.
 - `YieldStrength.Arguments.PRECIPITATION_MODEL` is set to `YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.REPPICH`.

Default value

0.7639

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.REPPICH_A(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

REPPICH_APBE = DynamicArgument('Anti_phase boundary energy Reppich')

- Energy cost for creating anti-phase boundaries.
- Used by the Reppich model (Ni-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to `True`.
 - `YieldStrength.Arguments.PRECIPITATION_MODEL` is set to `YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.REPPICH`.

Default value

0.46 [J/m²]

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.REPPICH_APBE(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

REPPICH_C = DynamicArgument('C correction factor Reppich')

- Correction factor for the Labusch hardening regime, i.e., for Gamma-prime hardened Ni-base alloys.
- Should be larger than or equal to unity.
- Set to 0 to disable correction.
- This argument is used given the following argument settings;

- *YieldStrength_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
- *YieldStrength_Arguments.PRECIPITATION_MODEL* is set to *YieldStrength_ArgumentOptions_PRECIPITATION_MODEL.REPPICH*.

Default value

0.0

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.REPPICH_C(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

REPPICH_CALCULATE_APBE = DynamicArgument('Calculated Anti_phase boundary energy Reppich')

- Option to calculate the anti-phase boundary energy value automatically.
- Used by the Reppich model (Ni-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - *YieldStrength_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
 - *YieldStrength_Arguments.PRECIPITATION_MODEL* is set to *YieldStrength_ArgumentOptions_PRECIPITATION_MODEL.REPPICH*.

Argument options

True, False

Default value

False

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.REPPICH_CALCULATE_APBE(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

REPPICH_MEAN_RADIUS = DynamicArgument('Precipitate radius repp')

- Precipitate mean radius [m].
- Used in the Reppich model (Ni-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - *YieldStrength_Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
 - *YieldStrength_Arguments.PRECIPITATION_MODEL* is set to *YieldStrength_ArgumentOptions_PRECIPITATION_MODEL.REPPICH*.

Default value

1.0e-8 [m]

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.REPPICH_MEAN_RADIUS(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

REPPICH_W = DynamicArgument('w factor')

- Parameter reflecting elastic repulsion between strongly coupled dislocations.
- Used in the Reppich model (Ni-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to `True`.
 - `YieldStrength.Arguments.PRECIPITATION_MODEL` is set to `YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.REPPICH`.

Default value

0.2919

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.REPPICH_W(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

SEIDMAN_ALPHA = DynamicArgument('seidman alpha')

- Prefactor used to evaluate the strengthening contribution from coherency stress.
- Used in the Seidman model (Al-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to `True`.
 - `YieldStrength.Arguments.PRECIPITATION_MODEL` is set to `YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.SEIDMAN`.

Default value

2.6

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.SEIDMAN_ALPHA(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

SEIDMAN_APBE = DynamicArgument('Anti_phase boundary energy Seidman')

- Energy cost for creating anti-phase boundaries.
- Used in the Seidman model (Al-base) for precipitation strengthening.

- This argument is used given the following argument settings:
 - *YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
 - *YieldStrength.Arguments.PRECIPITATION_MODEL* is set to *YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.SEIDMAN*.

Default value0.46 [J/m²]

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.SEIDMAN_APBE(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

SEIDMAN_M = DynamicArgument('prefactor 'm')

- Exponent used to evaluate the strengthening contribution from shear modulus mismatch.
- Used in the Seidman model (Al-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - *YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
 - *YieldStrength.Arguments.PRECIPITATION_MODEL* is set to *YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.SEIDMAN*.

Default value

0.85

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.SEIDMAN_M(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

SEIDMAN_MEAN_RADIUS = DynamicArgument('Precipitate radius seid')

- Precipitate mean radius [m].
- Used in the Seidman model (Al-base) for precipitation strengthening.
- This argument is used given the following argument settings:
 - *YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE* is set to True.
 - *YieldStrength.Arguments.PRECIPITATION_MODEL* is set to *YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.SEIDMAN*.

Default value

1.0e-8 [m]

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.SEIDMAN_MEAN_RADIUS(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

SHEAR_MODULUS = 'Shear modulus'

- Shear modulus of the matrix phase in [Pa].
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING` is set to True.
 - `YieldStrength.Arguments.USE_ADDITIONAL_PRECIPITATION_PARAMETERS` is set to True.

Default value

none

SIMPLIFIED_CRITICAL_RADIUS = DynamicArgument('Critical radius simplified model')

- Critical radius of precipitate phase.
- Used in the Simplified model (general) for precipitation strengthening.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to True.
 - `YieldStrength.Arguments.PRECIPITATION_MODEL` is set to `YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.SIMPLIFIED`.

Default value

3.547e-9 [m]

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.SIMPLIFIED_CRITICAL_RADIUS(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

SIMPLIFIED_MEAN_RADIUS = DynamicArgument('Precipitate radius simp')

- Precipitate mean radius [m].
- Used in the Simplified model (general) for precipitation strengthening.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to True.
 - `YieldStrength.Arguments.PRECIPITATION_MODEL` is set to `YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.SIMPLIFIED`.

Default value

1.0e-8 [m]

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.SIMPLIFIED_MEAN_RADIUS(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`.

SIMPLIFIED_SHEARING_PREFACTOR = DynamicArgument('prefactor simplified model')

- Shearing prefactor of precipitate phase.
- Used in the Simplified model (general) for precipitation strengthening.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING_SIMPLIFIED_MODE` is set to `True`.
 - `YieldStrength.Arguments.PRECIPITATION_MODEL` is set to `YieldStrength.ArgumentOptions.PRECIPITATION_MODEL.SIMPLIFIED`.

Default value

7.59e-6

Note: This is a dynamic argument and must be called with an index (e.g., `YieldStrength.Arguments.SIMPLIFIED_SHEARING_PREFACTOR(0)`). Index values start at '0' for the first entry. To specify subsequent index values, you must first call `PropertyModelCalculation.invoke_dynamic_argument(argument_id=<this_dynamic_argument>())`

TAYLOR_FACTOR = 'Taylor factor'

- Taylor factor which accounts for texture in the material.
- Normally, this factor is between 2.24 and 3.06 for random orientations.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.INCLUDE_PRECIPITATION_STRENGTHENING` is set to `True`.
 - `YieldStrength.Arguments.USE_ADDITIONAL_PRECIPITATION_PARAMETERS` is set to `True`.

Default value

none

USER_DEFINED_HALL_PETCH_COEFFICIENT = 'User_Hall_Petch_selection'

- Option to use a user-specified coefficient in the Hall-Petch relationship.
- This argument is used given the following argument settings:
 - `YieldStrength.Arguments.MODE` is set to `YieldStrength.ArgumentOptions.MODE.ADVANCED`.
 - `YieldStrength.Arguments.INCLUDE_GRAIN_BOUNDARY_STRENGTHENING` is set to `True`.

Argument options

True, False

Default value

False

USE_ADDITIONAL_PRECIPITATION_PARAMETERS = 'Use user input for b, G and M'

-Option to set user-defined values for Taylor factor, Shear modulus, and Burgers vector.

Argument options

True, False

Default value

False

USE_CONSTANT_STRENGTH = 'Use constant strength contribution'

- Option to enable a constant strength addition in advanced calculation mode.
- This argument is used when *YieldStrengthArguments.MODE* is set to *YieldStrengthArgumentOptions.MODE.ADVANCED*

Argument Options

True, False

Default value

False

**USE_CONSTANT_STRENGTH_SIMPLIFIED_MODE =
'use_constant_strength_contribution_simplified_mode'**

- Option to enable a constant strength addition in simplified calculation mode.
- This argument is used when *YieldStrengthArguments.MODE* is set to *YieldStrengthArgumentOptions.MODE.SIMPLIFIED*

Argument Options

True, False

Default value

False

USE_EXPLICIT_MATRIX = 'use_explicit_matrix'

- Option to specify a matrix phase explicitly.
- If “False”, the matrix phase will be selected automatically by the property model.
- This argument is used if *YieldStrengthArguments.MODE* is set to *YieldStrengthArgumentOptions.MODE.ADVANCED*

Argument options

True, False

Default value

False

class tc_python.property_model_definitions.yield_strength.YieldStrength_Results

Bases: *ArgumentBase*

Valid entries for Yield Strength property model results.

AMOUNT_OF_PHASES = 'Amount of phase'

Amount of phases.

CONSTANT_HARDNESS_ADDITION = 'Constant hardness addition'
Constant hardness addition.

CONSTANT_STRENGTH_ADDITION = 'Constant strength addition'
Constant strength addition.

GRAIN_BOUNDARY_HARDENING = 'Grain boundary hardening'
Grain boundary hardening.

GRAIN_BOUNDARY_STRENGTHENING = 'Grain boundary strengthening'
Grain boundary strengthening.

INTRINSIC_HARDNESS = 'Intrinsic hardness'
Intrinsic hardness.

INTRINSIC_STRENGTH = 'Intrinsic strength'
Intrinsic strength.

PRECIPITATION_HARDENING_PER_PHASE = 'Precipitation hardening per phase'
Precipitation hardening per phase.

PRECIPITATION_STRENGTHENING_PER_PHASE = 'Precipitation strengthening per phase'
Precipitation strengthening per phase.

SOLID_SOLUTION_HARDENING_BCC = 'Solid solution hardening BCC'
Solid solution hardening in BCC.

SOLID_SOLUTION_HARDENING_FCC = 'Solid solution hardening FCC'
Solid solution hardening in FCC.

SOLID_SOLUTION_HARDENING_HCP = 'Solid solution hardening HCP'
Solid solution hardening in HCP.

SOLID_SOLUTION_STRENGTHENING_BCC = 'Solid solution strengthening BCC'
Solid solution strengthening in BCC.

SOLID_SOLUTION_STRENGTHENING_FCC = 'Solid solution strengthening FCC'
Solid solution strengthening in FCC.

SOLID_SOLUTION_STRENGTHENING_HCP = 'Solid solution strengthening HCP'
Solid solution strengthening in HCP.

TOTAL_HARDNESS = 'Total Hardness'
Total hardness.

TOTAL_PRECIPITATION_HARDENING = 'Total precipitation hardening'
Total precipitation hardening.

TOTAL_PRECIPITATION_STRENGTHENING = 'Total precipitation strengthening'
Total precipitation strengthening.

TOTAL_SOLID_SOLUTION_HARDENING = 'Solid solution hardening'
Total solid solution hardening.

TOTAL_SOLID_SOLUTION_STRENGTHENING = 'Solid solution strengthening'
Total solid solution strengthening.

TOTAL_YIELD_STRENGTH = 'Total yield strength'

Total yield strength.

VOLUME_FRACTION_PRECIPITATE = 'Volume fraction precipitate per phase'

Volume fraction of precipitate.

6.9.32 Module “shared_definitions”

6.9.32.1 Submodule “homogenization_function”

**class tc_python.property_model_definitions.shared_definitions.homogenization_function.
ArgumentOptions_HomogenizationFunction**

Bases: *ArgumentBase*

Valid options for *HomogenizationFunction_Arguments.HOMOGENIZATION_FUNCTION*.

HASHIN_SHTRIKMAN_MAJORITY_AS_MATRIX = 'Hashin-Shtrikman bound with majority phase as matrix phase'

Hashin-Shtrikman with majority phase as matrix.

INVERSE_RULE_OF_MIXTURES = 'Inverse rule of mixtures (lower Wiener bound)'

Inverse rule of mixtures (lower Wiener bound).

LOWER_HASHIN_SHTRIKMAN = 'General lower Hashin-Shtrikman bound'

General lower Hashin-Shtrikman bound.

RULE_OF_MIXTURES = 'Rule of mixtures (upper Wiener bound)'

Rule of mixtures (upper Wiener bound).

UPPER_HASHIN_SHTRIKMAN = 'General upper Hashin-Shtrikman bound'

General upper Hashin-Shtrikman bound.

**class tc_python.property_model_definitions.shared_definitions.homogenization_function.
HomogenizationFunction_Arguments**

Bases: *ArgumentBase*

Valid entries for shared arguments related to homogenization function.

HOMOGENIZATION_FUNCTION = 'Homogenization function'

- Homogenization function used to represent a material microstructure.

Argument options

ArgumentOptions_HomogenizationFunction

6.9.32.2 Submodule “minimization_strategy”

**class tc_python.property_model_definitions.shared_definitions.minimization_strategy.
ArgumentOptions_MinimizationStrategy**

Bases: *ArgumentBase*

Valid options for *MinimizationStrategy_Arguments.MINIMIZATION_STRATEGY*.

GLOBAL_MINIMIZATION_ONLY = 'Global minimization only'

Perform full global minimization only.

GLOBAL_TEST_PREFERRED = 'Global test preferred'

Perform global test initially; try global test and full global minimization upon global test failure.

LOCAL_MINIMIZATION_ONLY = 'Local minimization only'

Only perform local equilibrium minimization.

LOCAL_MINIMIZATION_PREFERRED = 'Local minimization preferred'

- Perform local equilibrium initially; try global test and full global minimization upon local eq. failure.
- Also performs global test in case the stable phases at equilibrium change from the previous model evaluation.

class tc_python.property_model_definitions.shared_definitions.minimization_strategy.
MinimizationStrategy_Arguments

Bases: *ArgumentBase*

Valid entries for shared arguments related to minimization strategy.

MINIMIZATION_STRATEGY = 'Minimization strategy'

- Minimization strategy ensures that the most stable minimum under the specified conditions is computed.

Argument options

ArgumentOptions_MinimizationStrategy

6.9.32.3 Submodule “phase_selection_ni”

class tc_python.property_model_definitions.shared_definitions.phase_selection_ni.
ArgumentOptions_PhaseGroupSelection

Bases: *ArgumentBase*

Valid options for *PhaseGroupSelection_Arguments.PHASE_GROUP_SELECTION*.

INCLUDE_ALL_PHASES = '1'

Includes all phases entered by User in the System.

INCLUDE_GAMMA_AND_SELECTED_PRECIPITATES = '6'

- Includes Gamma (“FCC_L12”) and selected precipitates.

INCLUDE_GAMMA_GAMMA_PRIME_ONLY = '2'

Includes Gamma (“FCC_L12”) and Gamma-Prime (“FCC_L12#2”) phases.

INCLUDE_TYPICAL_NI_SUPERALLOY = '3'

Phases included in this option:

- **Oxide and metal liquid phases:** “IONIC_LIQ”, “IONIC_LIQ#2”, “LIQUID”
- **Gamma (#1) and Gamma-Prime(#2):** “DIC_FCC_A1”, “FCC_A1”, “FCC_A1#2”, “FCC_L12”, “FCC_L12#2”
- **Carbides/Nitrides:** “FCC_L12#3”, “HCP_A3#1”, “HCP_A3#2”, “M23C6”, “M6C”, “M7C3”
- **B2 phases:** “BCC_A2”, “BCC_A2#2”, “BCC_B2”, “BCC_B2#2”
- **Gamma Double-Prime:** “BCT_D022”

- **Additional Phases:** “PI”, “NI3B_D011”, “M2B_TETR”, “D5A_M3B2”, “M3B2”, “MB_B33”, “MB2_C32”, “G_PHASE”, “NI5ZR”, “NI7ZR2”, “CR3NI5SI2”, “CR3NI5SI2”, “SPINEL”, “ALPHA_SPINEL”, “CORUNDUM”

INCLUDE_TYPICAL_PLUS_ETA_DELTA = '4'

Phases included in this option:

- **All phases from:** *ArgumentOptions_PhaseGroupSelection*.
INCLUDE_TYPICAL_NI_SUPERALLOY
- **Delta phase:** “NI3TA_D0A”
- **Eta phase:** “NI3TI_D024”

INCLUDE_TYPICAL_PLUS_TCP = '5'

Phases included in this option:

- **All phases from:** *ArgumentOptions_PhaseGroupSelection*.
INCLUDE_TYPICAL_NI_SUPERALLOY
- **TCP phases:** “C14_LAVES”, “SIGMA”, “MU_PHASE”, “R_PHASE”, “P_PHASE”, “Z_PHASE”, “CR3SI_A15”

```
class tc_python.property_model_definitions.shared_definitions.phase_selection_ni.  
PhaseGroupSelection_Arguments
```

Bases: *ArgumentBase*

Valid entries for shared arguments related to phase group selection for Ni-based alloys.

PHASE_GROUP_SELECTION = 'phase group list'

- Select a subset of the phases to enter in the calculation.

Argument options

ArgumentOptions_PhaseGroupSelection

6.9.32.4 Submodule “temperatures”

```
class tc_python.property_model_definitions.shared_definitions.temperatures.  
Temperature_Arguments
```

Bases: *ArgumentBase*

Valid entries for shared arguments related to temperatures.

ANNEALING_TEMPERATURE = 'Annealing temperature'

- Temperature at which intercritical annealing is performed.
- This argument can also be set with *PropertyModelCalculation*.
set_temperature(PropertyModelQuantity.annealing_temperature())()

END_TEMPERATURE = 'End temperature'

- Ending temperature of the calculation.
- This argument can also be set with *PropertyModelCalculation*.
set_temperature(PropertyModelQuantity.end_temperature())()

EVALUATION_TEMPERATURE = 'Evaluation temperature'

- Temperature at which the property evaluation occurs, corresponds to the measurement temperature.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.evaluation_temperature())()`

FREEZE_IN_TEMPERATURE = 'Freeze-in temperature'

- Freeze-in temperature at which equilibrium is calculated.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.freeze_in_temperature())()`

HIGH_LIMIT_TEMPERATURE = 'High temperature limit'

- Upper temperature limit used for transformation temperature search in Kelvin.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.high_limit_temperature())()`

INITIAL_TEMPERATURE = 'Initial temperature'

- Temperature at which the initial equilibrium state is obtained.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.initial_temperature())()`

LOW_LIMIT_TEMPERATURE = 'Low temperature limit'

- Lower temperature limit used for transformation temperature search in Kelvin.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.low_limit_temperature())()`

QUENCH_TEMPERATURE = 'Quench temperature'

- Temperature material is quenched to after austenitization or intercritical annealing (i.e., from *ANNEALING_TEMPERATURE*).
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.quench_temperature())()`

START_TEMPERATURE = 'Start temperature'

- Starting temperature of the calculation.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.start_temperature())()`

TEMPERING_TEMPERATURE = 'Tempering temperature'

- Temperature at which tempering heat treatment is performed after quenching.
- Used to estimate martensite hardness after tempering.
- This argument can also be set with `PropertyModelCalculation.set_temperature(PropertyModelQuantity.tempering_temperature())()`

6.10 Module “exceptions”

exception `tc_python.exceptions.APIServerException`

Bases: *GeneralException*

An exception that occurred during the communication with the API-server. It is normally not related to an error in the user program.

exception `tc_python.exceptions.CalculationException`

Bases: *TCEException*

An exception that occurred during a calculation.

exception `tc_python.exceptions.ComponentNotExistingException`

Bases: *GeneralException*

The selected component is not existing.

exception `tc_python.exceptions.DatabaseException`

Bases: *CalculationException*

Error loading a thermodynamic or kinetic database, typically due to a misspelled database name or a database missing in the system.

exception `tc_python.exceptions.DegreesOfFreedomNotZeroException`

Bases: *CalculationException*

The degrees of freedom in the system are not zero, i.e. not all required conditions have been defined. Please check the conditions given in the exception message.

exception `tc_python.exceptions.EquilibriumException`

Bases: *CalculationException*

An equilibrium calculation has failed, this might happen due to inappropriate conditions or a very difficult problem that can not be solved.

exception `tc_python.exceptions.GeneralCalculationException`

Bases: *CalculationException*

General error occurring while a calculation is performed.

exception `tc_python.exceptions.GeneralException`

Bases: *TCEException*

A general exception that might occur in different situations.

exception `tc_python.exceptions.InvalidCalculationConfigurationException`

Bases: *CalculationException*

Thrown when errors are detected in the configuration of the calculation.

exception `tc_python.exceptions.InvalidCalculationStateException`

Bases: *CalculationException*

Trying to access an invalid calculation object that was invalidated by calling *invalidate* on it.

exception `tc_python.exceptions.InvalidNumberOfResultGroupsException`

Bases: *ResultException*

A calculation result contains several result groups, which is not supported for the used method.

exception `tc_python.exceptions.InvalidResultConfigurationException`

Bases: [ResultException](#)

A calculation result configuration is invalid.

exception `tc_python.exceptions.InvalidResultStateException`

Bases: [CalculationException](#)

Trying to access an invalid result (for example a `SingleEquilibriumTempResult` object that got already invalidated by condition changes or a result that was invalidated by calling `invalidate` on it).

exception `tc_python.exceptions.LicenseException`

Bases: [GeneralException](#)

No valid license for the API or any Thermo-Calc product used by it found.

exception `tc_python.exceptions.NoDataForPhaseException`

Bases: [ResultException](#)

There is no result data available for a selected phase.

exception `tc_python.exceptions.NotAllowedOperationException`

Bases: [CalculationException](#)

The called method or operation is not allowed in the current mode of operation (i.e. debug or production mode). *Production mode* means that the Property Model is only present as an `*.py.encrypted`-file, while in *debug mode* it is available as `*.py`-file. Certain methods for obtaining internal model parameters are not available for encrypted models.

exception `tc_python.exceptions.PhaseNotExistingException`

Bases: [GeneralException](#)

The selected phase is not existing, so no data can be provided for it.

exception `tc_python.exceptions.ResultException`

Bases: [TCException](#)

An exception that occurred during the configuration of a calculation result.

exception `tc_python.exceptions.SyntaxException`

Bases: [CalculationException](#)

Syntax error in a Console Mode expression.

exception `tc_python.exceptions.TCException`

Bases: `Exception`

The root exception of TC-Python.

exception `tc_python.exceptions.UnrecoverableCalculationException`

Bases: [CalculationException](#)

The calculation reached a state where no further actions are possible, this happens most often due to a FORTRAN-hard crash in the API server backend.

Note: It is possible to catch that exception outside of the *with*-clause context and to continue by setting up a new context (i.e. by a new *with* `TCPython() as session`).

`tc_python.exceptions.handle_exception(e) → NoReturn`

6.11 Module “abstract_base”

class tc_python.abstract_base.**AbstractCalculation**(*calculator*)

Bases: object

Abstract base class for calculations.

calculate(*timeout_in_minutes: float = 0.0*)

get_configuration_as_string() → str

Returns detailed information about the current state of the calculation object.

Warning: The structure of the calculator objects is an implementation detail and might change between releases without notice. **Therefore do not rely on the internal object structure.**

get_system_data() → *SystemData*

Returns the content of the database for the currently loaded system. This can be used to modify the parameters and functions and to change the current system by using *with_system_modifications()*.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as *.tdb-file.

Returns

The system data

invalidate()

Invalidates the object and frees the disk space used by it. *This is only required if the disk space occupied by the object needs to be released during the calculation.* No data can be retrieved from the object afterwards.

with_system_modifications(*system_modifications: SystemModifications*)

Updates the system of this calculator with the supplied system modification (containing new phase parameters and system functions).

Note: This is only possible if the system has been read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Parameters

system_modifications – The system modification to be performed

Returns

class tc_python.abstract_base.**AbstractResult**(*result*)

Bases: object

Abstract base class for results. This can be used to query for specific values .

invalidate()

Invalidates the object and frees the disk space used by it. *This is only required if the disk space occupied by the object needs to be released during the calculation.* No data can be retrieved from the object afterwards.

```
class tc_python.abstract_base.DesignVariable(initial_value: float, lower_bound: float, upper_bound: float, name: str = "")
```

Bases: object

Represents a design variable for optimization.

```
class tc_python.abstract_base.PhaseParameter(parameter_name: Union[str, object])
```

Bases: object

Database phase parameter expression used by `SystemModifications.set()`.

Parameters

parameter_name – The phase parameter name

```
get_intervals() → List[TemperatureInterval]
```

Returns the list of all defined intervals.

Returns

The defined temperature intervals

```
get_lower_temperature_limit() → float
```

Returns the lower temperature limit.

Returns

The lower temperature limit in K

```
get_name() → str
```

Returns the name of the phase parameter.

Returns

The name of the phase parameter.

```
remove_all_intervals()
```

Removes all previously defined temperature intervals.

Returns

This *PhaseParameter* object

```
remove_interval_with_upper_limit(upper_temperature_limit: float)
```

Removes a previously defined temperature interval with matching upper temperature limit.

If no such interval exists, an exception is thrown.

Returns

This *PhaseParameter* object

```
set_expression_with_upper_limit(parameter_expression: str, upper_temperature_limit: float = 6000.0)
```

Adds/overwrites a parameter expression for a temperature interval.

Default value of the upper limit of the interval: 6000 K

Note: The lower temperature limit is either defined by the lower temperature limit given with `PhaseParameter.set_lower_temperature_limit()` or by the upper temperature limit of the adjacent interval.

Note: If there is an existing interval with exactly the same `upper_temperature_limit`, that interval is overwritten, otherwise the interval is added.

Parameters

- **parameter_expression** – The parameter expression, example:
 $+V34*T*LN(T)+V35*T**2+V36*T**(-1)+V37*T**3$)
- **upper_temperature_limit** – The upper temperature limit for which the expression should be used

Returns

This *PhaseParameter* object

set_interval(*interval*: *TemperatureInterval*)

Adds/overwrites a temperature interval.

Note: The lower temperature limit is either defined by the lower temperature limit given with *PhaseParameter.set_lower_temperature_limit()* or by the upper temperature limit of the adjacent interval.

Note: If there is an existing interval with exactly the same *upper_temperature_limit*, that interval is overwritten, otherwise the interval is added.

Returns

This *PhaseParameter* object

set_lower_temperature_limit(*lower_temperature_limit*: *float* = 298.15)

Sets the lower temperature limit of the phase parameter.

Default: 298.15 K

Parameters

lower_temperature_limit – The lower temperature limit in K

Returns

This *PhaseParameter* object

class `tc_python.abstract_base.SystemData`(*system_data*)

Bases: `object`

Provides information about the parameters and functions of a user database. The obtained objects can be used to modify the database using `with_system_modifications()` of all calculators.

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as **.tdb*-file.

get_phase_parameter(*parameter*: *str*) → *PhaseParameter*

Returns a phase parameter.

Example:

```
system_data.get_phase_parameter('G(HCP_A3,FE:VA;0)')
```

Note: Parameters can only be read from unencrypted (i.e. *user*) databases loaded as a **.tdb*-file.

Note: For details about the syntax search the Thermo-Calc help for *GES* (the name for the Gibbs Energy System module in Console Mode).

Parameters

parameter – The name of the phase parameter (for example: “*G(LIQUID,FE;0)*”)

Returns

The phase parameter

get_phase_parameter_names() → List[str]

Returns all phase parameters present in the current system.

Returns

The list of phase parameters

get_system_function(*f*: str) → *SystemFunction*

Returns a system function.

Note: The parameter ‘f’ was previously called ‘function’ but was renamed.

Example:

```
system_data.get_system_function('GHSERCR')
```

Note: Functions can only be read from unencrypted (i.e. *user*) databases loaded as a *.tdb-file.

Note: For details about the syntax search the Thermo-Calc help for *GES* (the name for the Gibbs Energy System module in Console Mode).

Parameters

f – The name of the system function (for example: “*GHSERCR*”)

Returns

The system function

get_system_function_names() → List[str]

Returns all system functions present in the current system.

Returns

The list of system functions

class tc_python.abstract_base.**SystemFunction**(*function_name*: Union[str, object])

Bases: object

Database function expression used by *SystemModifications.set()*.

Parameters

function_name – The function name

get_intervals() → List[*TemperatureInterval*]

Returns the list of all defined intervals.

Returns

The defined temperature intervals

get_lower_temperature_limit() → float

Returns the lower temperature limit.

Returns

The lower temperature limit in K

get_name() → str

Returns the name of the system function.

Returns

The name of the system function

remove_all_intervals()

Removes all previously defined temperature intervals.

Returns

This *SystemFunction* object

remove_interval_with_upper_limit(*upper_temperature_limit*: float)

Removes a previously defined temperature interval with matching upper temperature limit.

If no such interval exists, an exception is thrown.

Returns

This *SystemFunction* object

set_expression_with_upper_limit(*function_expression*: str, *upper_temperature_limit*: float = 6000.0)

Adds/overwrites a function expression for a temperature interval.

Default value of the upper limit of the interval: 6000 K

Note: The lower temperature limit is either defined by the lower temperature limit given with *SystemFunction.set_lower_temperature_limit()* or by the upper temperature limit of the adjacent interval.

Note: If there is an existing interval with exactly the same *upper_temperature_limit*, that interval is overwritten, otherwise the interval is added.

Parameters

- **function_expression** – The function expression, example:
+V34*T*LN(T)+V35*T**2+V36*T**(-1)+V37*T**3”
- **upper_temperature_limit** – The upper temperature limit for which the expression should be used

Returns

This *SystemFunction* object

set_interval(*interval*: TemperatureInterval)

Adds/overwrites a temperature interval.

Note: The lower temperature limit is either defined by the lower temperature limit given with `SystemFunction.set_lower_temperature_limit()` or by the upper temperature limit of the adjacent interval.

Note: If there is an existing interval with exactly the same `upper_temperature_limit`, that interval is over-written, otherwise the interval is added.

Returns

This `SystemFunction` object

`set_lower_temperature_limit(lower_temperature_limit: float = 298.15)`

Sets the lower temperature limit of the system function.

Default: 298.15 K

Parameters

`lower_temperature_limit` – The lower limit in K

Returns

This `SystemFunction` object

class `tc_python.abstract_base.SystemModifications`

Bases: `object`

Functionality to modify a user database during a calculation by changing phase parameters and system functions.

The actual changes are **only applied** by using `tc_python.abstract_base.AbstractCalculation.with_system_modifications()` on a calculator object.

`run_ges_command(ges_command: str)`

Sends a GES-command. **This is actually applied when running `with_system_modifications` on a calculator object.**

Example: `run_ges_command("AM-PH-DE FCC_A1 C_S 2 Fe:C")` for adding a second composition set to the FCC_A1 phase with *Fe* as major constituent on first sublattice and *C* as major constituent on second sublattice.

Note: For details about the syntax search the Thermo-Calc help for *GES* (the name for the Gibbs Energy System module in Console Mode).

Note: It should not be necessary for most users to use this method, try to use the corresponding method implemented in the API instead.

Warning: As this method runs raw GES-commands directly in the engine, it may hang the program in case of spelling mistakes (e.g. forgotten parenthesis, ...).

Parameters

`ges_command` – The GES-command (for example: `"AM-PH-DE FCC_A1 C_S 2 Fe:C"`)

Returns

This *SystemModifications* object

set(*parameter_or_function*: Union[PhaseParameter, SystemFunction])

Overwrites or creates a phase parameter or system function.

Example: `system_modifications.set(PhaseParameter('G(LIQUID,FE;0')).set_expression_with_upper_limit('+1.2*GFELIQ`

Example: `system_modifications.set(SystemFunction("DGDEF")).set_expression_with_upper_limit('+10.0-R*T', 1000).set_expression_with_upper_limit('+20.0-R*T', 3000))`

Note: The old parameter/function is **overwritten** and any temperature intervals not defined are lost.

Note: Please consult the Thermo-Calc GES-system documentation for details about the syntax.

Parameters

parameter_or_function – The PhaseParameter or SystemFunction to be set

Returns

This *SystemModifications* object

set_optimization_variable(*variable_name*: str, *value*: float = 0.0)

Sets a database optimization variable (V1, V2, ..., V99).

Note: The corresponding optimization variables need to be defined in the user database.

Parameters

- **variable_name** – The name of the optimization variable to be set (for example: "V1")
- **value** – The value of the parameter to be set, **default: 0.0**

Returns

This *SystemModifications* object

class tc_python.abstract_base.**TemperatureInterval**(*expression*: Union[str, object],
upper_temperature_limit: float)

Bases: object

Temperature interval expression used by the classes *SystemFunction* and *PhaseParameter*.

Parameters

- **expression** – The temperature function expressed in Thermo-Calc database syntax.
- **upper_temperature_limit** – The upper temperature limit in K

get_expression() → str

Returns the function expression of this temperature interval.

Returns

The temperature function expression

get_upper_temperature_limit() → float

Returns the upper limit of this temperature interval.

Returns

The upper temperature limit in K

set_expression(*expression: str*)

Sets the function expression of this temperature interval.

Parameters

expression – The temperature function expression

set_upper_temperature_limit(*upper_temperature_limit: float*)

Sets the upper limit of this temperature interval.

Parameters

upper_temperature_limit – The upper temperature limit in K

6.12 Module “license”

class `tc_python.license.LicenseManager`(*license_manager*)

Bases: object

Manages the license operations for Thermo-calc licenses for TC-Python, including login, activation, and proxy settings.

activate(*user: str, password: str*)

Activates the license.

Parameters

- **user** – The username
- **password** – The password

activate_offline(*user: str, password: str, path: str = ""*)

Activate the license with an offline activation response file.

Parameters

- **user** – The username
- **password** – The password
- **path** – Optional path to folder where the activation response file is located

create_offline_activation_file(*user: str, password: str, path: str = ""*)

Create a file for offline activation.

Parameters

- **user** – The username
- **password** – The password
- **path** – Optional path to folder where the activation file is created

deactivate()

Deactivates the license if the license was activated using online method.

Raises

LicenseException – If not logged in or license was activated using *activate_offline()*.

deactivate_offline(*path: str = ""*)

Deactivates the license if the license was activated using *activate_offline()*.

Parameters

path – Optional path to folder where the deactivation file is located

Raises

LicenseException – If not logged in

get_info() → str

Retrieves the current license information.

Returns

The license information

proxy_settings_remove()

Disables the proxy settings.

proxy_settings_set(*host: str, port: int, user: str, password: str*)

Sets the proxy settings with the given host, port, username, and password.

Parameters

- **host** – The proxy host
- **port** – The proxy port
- **user** – The proxy username
- **password** – The proxy password

update()

Updates the license.

TROUBLESHOOTING

This section provides an FAQ for common problems that occur when using TC-Python.

7.1 Diagnostics script

If you have problems running TC-Python, run the diagnostics script below.

On Linux you can alternatively download the script directly into your current working directory by:

```
curl -O https://download.thermocalc.com/downloads/support/diagnostics-py/2026b/tc-python-  
↪diagnostic-script-2026b.py
```

```
"""  
Run this script when troubleshooting TC-Python  
  
It is important to run this script EXACTLY the same way as you run your TC-Python script  
(In the same IDE, same project, same Python environment, same Jupyter notebook e.t.c)  
"""  
  
version = '2026b'  
  
print('Testing TC-Python version: ' + version)  
print('Please make sure that the variable "version" above, matches the release that you  
↪want to test, if not change it and re-run this script.')  
# below this line, nothing needs to be manually updated.  
  
import sys  
print('Python version (needs to be the same version, or higher, as the one bundled with,  
↪your Thermo-Calc installation).')print('Your current Python version is:')  
print(sys.version)  
  
print('')  
print('Python executable path: (gives a hint about the used virtual / conda environment,  
↪in case of Anaconda the corresponding \n'  
↪environment name can be found by running `conda env list` on the Anaconda command,  
↪prompt, '
```

(continues on next page)

(continued from previous page)

```

    'TC-Python must be installed into \nEACH separate environment used!')')
print(sys.executable)

import os
print('')
print('Thermo-Calc ' + version + ' installation directory: (must be a valid path to a
↳complete installation of ' + version + ')')
tc_env_variable = 'TC' + version[2:].upper() + '_HOME'
try:
    print(os.environ[tc_env_variable])
except:
    print('No Thermo-calc environment variable for ' + version + ' was found. (' + tc_
↳env_variable + ')')

import tc_python
numerical_version = version[:-1]
if version[-1] == 'a':
    numerical_version += '.1.*'
elif version[-1] == 'b':
    numerical_version += '.2.*'
print('')
print('TC-Python version: (needs to be ' + numerical_version + ')')
print(tc_python.__version__)

user_based_license_var = os.environ.get('TC_LICENSE_SPRING', None)
user_based_license = False
if user_based_license_var is not None:
    user_based_license = user_based_license_var.upper() == 'Y'

if not user_based_license:
    print('Url of license server: (if license server is NO-NET, you need a local license_
↳file)')
    try:
        print(os.environ['LSHOST'])
    except:
        print('No Thermo-calc license server url was found. (LSHOST)')

    print('')
    print('Path to local license file: (only necessary if not using license server)')
    try:
        print(os.environ['LSERVRC'])
    except:
        print('No path to local license file was found. (LSERVRC)')
else:
    print('')
    print('User/password based licenses is enabled')
    print("License Information:")
    with tc_python.TCPython() as session:
        license_manager = session.get_license_manager()
        print(license_manager.get_info())

```

(continues on next page)

(continued from previous page)

```
with tc_python.TCPython() as session:
    print('')
    print('Lists the databases (should be a complete list of the installed databases_
↳that you have license for or do not require license):')
    print(session.get_databases())
```

7.2 “No module named tc_python” error on first usage

This problem occurs because your used Python interpreter cannot find the TC-Python package. We expect that you have installed the TC-Python package in your **Python system interpreter** following the instructions in the *Installation Guide*.

Normally the error message “*No module named tc_python*” is caused by unintentionally configuring a PyCharm project to use a so-called **Virtual Environment**. This happens unfortunately by default when creating a new PyCharm project with not changing the default settings.

Note: A Virtual Environment is basically a separate and completely independent copy of the system-wide Python interpreter. It does not contain any packages.

On Windows systems we recommend to use the Anaconda Python Distribution as Python interpreter. However, the instructions given here are valid for any operating system and distribution.

Since TC-Python 2018b we do recommend to **not use Virtual Environments** unless there is a reasonable use case for that.

There are two possible solutions to fix the problem:

1. The quick fix for your problem is to run

```
pip install <path to the TC-Python folder>/TC_Python-<version>-py3-none-any.whl
```

within the *Terminal window* of the opened PyCharm project. This *Terminal window* automatically runs within the *Virtual Environment* configured for the project (if any). You can see the name of the *Virtual Environment* at the beginning of each command prompt line (here it is called *venv*):

```
Microsoft Windows [Version 10.0.16299.431]
(c) 2017 Microsoft Corporation. All rights reserved.

(venv) C:\Users\User\Documents\>
```

The command will consequently **install TC-Python also within that Virtual Environment automatically**. The Terminal window can be found at the bottom of the IDE. Note that it might be necessary to enable these buttons first by selecting the menu entry **View**→**Tool Buttons**.

2. The better fix is to change your project **to use the system interpreter**. This is described in detail in the section *Fixing potential issues with the environment* in Step 5 of the *Installation Guide*.

It is recommendable to use that approach also for all your future projects.

Both fixes will only change the configuration of the opened project. Further useful information can be found in the section *Python Virtual Environments*.

7.3 “pip install” fails with “Failed to establish a new network connection” or similar

If *pip install* fails with a network related error (might also be “*socket not available*”, “*retrying after connection broken*”, ...) it is often due to the computer being behind a proxy-server, this is common in large organizations. Of course also the network connection might be broken.

TC-Python has dependencies to a few other packages:

- *py4j*
- *jproperties*
- *six* (transient dependency of *jproperties*)

1. The recommended approach is to simply use *pip*. It will resolve the dependencies automatically by downloading them from the *PyPI*-repository server (<https://pypi.org>). If your computer is located behind a proxy-server, the connection to the repository will fail. In that case it is necessary to configure *pip* with the detailed configuration of the proxy server:

```
pip install -proxy user:password@proxy_ip:port py4j jproperties
```

2. Another alternative is to manually download the latest *.whl-file of each dependency from the repository server (<https://pypi.org> -> *Search projects*) and to install it manually using:

```
pip install py4j-#.#.#-py2.py3-none-any.whl
...
```

The actual actual version number needs to be inserted into the file name. The downside of this approach is that updates to that package have to be fully manual also in the future. Additionally it is also necessary to install all transient dependencies in that way.

PYTHON MODULE INDEX

t

tc_python.abstract_base, 521
 tc_python.am, 255
 tc_python.batch_equilibrium, 58
 tc_python.diffusion, 142
 tc_python.entities, 316
 tc_python.exceptions, 519
 tc_python.license, 528
 tc_python.material_to_material, 192
 tc_python.precipitation, 63
 tc_python.process_metallurgy.base, 219
 tc_python.process_metallurgy.equilibrium, 225
 tc_python.process_metallurgy.process, 235
 tc_python.property_model_definitions.alloy_strength, 379
 tc_python.property_model_definitions.antiphase_boundary_energy, 388
 tc_python.property_model_definitions.argument_base_classes, 390
 tc_python.property_model_definitions.bainite, 391
 tc_python.property_model_definitions.cct_diagram, 393
 tc_python.property_model_definitions.coarsening, 401
 tc_python.property_model_definitions.coarsening_ni, 402
 tc_python.property_model_definitions.columnar_to_equiaxed_transition, 406
 tc_python.property_model_definitions.crack_susceptibility_coefficient, 410
 tc_python.property_model_definitions.critical_transformation_temperatures, 417
 tc_python.property_model_definitions.driving_force, 420
 tc_python.property_model_definitions.equilibrium, 421
 tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature, 423
 tc_python.property_model_definitions.equilibrium_with_freeze_in_temperature_ni, 428
 tc_python.property_model_definitions.ferrite, 434
 tc_python.property_model_definitions.interfacial_energy, 439
 tc_python.property_model_definitions.liquidus_and_solidus, 440
 tc_python.property_model_definitions.martensite_fractions, 443
 tc_python.property_model_definitions.martensite_temperature, 444
 tc_python.property_model_definitions.martensite_temperature_ni, 446
 tc_python.property_model_definitions.martensitic_steel_strength, 448
 tc_python.property_model_definitions.optical_properties_ni, 457
 tc_python.property_model_definitions.pearlite, 465
 tc_python.property_model_definitions.phase_transition, 468
 tc_python.property_model_definitions.scheil, 471
 tc_python.property_model_definitions.shared_definitions.hoc, 515
 tc_python.property_model_definitions.shared_definitions.mi, 515
 tc_python.property_model_definitions.shared_definitions.ph, 516
 tc_python.property_model_definitions.shared_definitions.te, 517
 tc_python.property_model_definitions.solvus_for_ordered_phase, 477
 tc_python.property_model_definitions.spinodal, 482
 tc_python.property_model_definitions.strain_age_cracking_rate, 484
 tc_python.property_model_definitions.t_zero_temperature, 495
 tc_python.property_model_definitions.ttt_diagram, 488
 tc_python.property_model_definitions.yield_strength, 498
 tc_python.propertymodel, 187

`tc_python.propertymodel_factory`, 375
`tc_python.propertymodel_sdk`, 352
`tc_python.quantity_factory`, 329
`tc_python.scheil`, 95
`tc_python.server`, 321
`tc_python.single_equilibrium`, 43
`tc_python.step_or_map_diagrams`, 111
`tc_python.system`, 307
`tc_python.utils`, 349